


## **SECTION 7 ELECTRICAL SYSTEM**

Group 1 Component Location .....	7-1
Group 2 Electrical Circuit .....	7-3
Group 3 Monitoring System .....	7-22
Group 4 Switches .....	7-27
Group 5 Electrical Component Specification .....	7-35
Group 6 Connectors .....	7-41
Group 7 Troubleshooting .....	7-60

# SECTION 7 ELECTRICAL SYSTEM

## GROUP 1 COMPONENT LOCATION


### 1. LOCATION 1

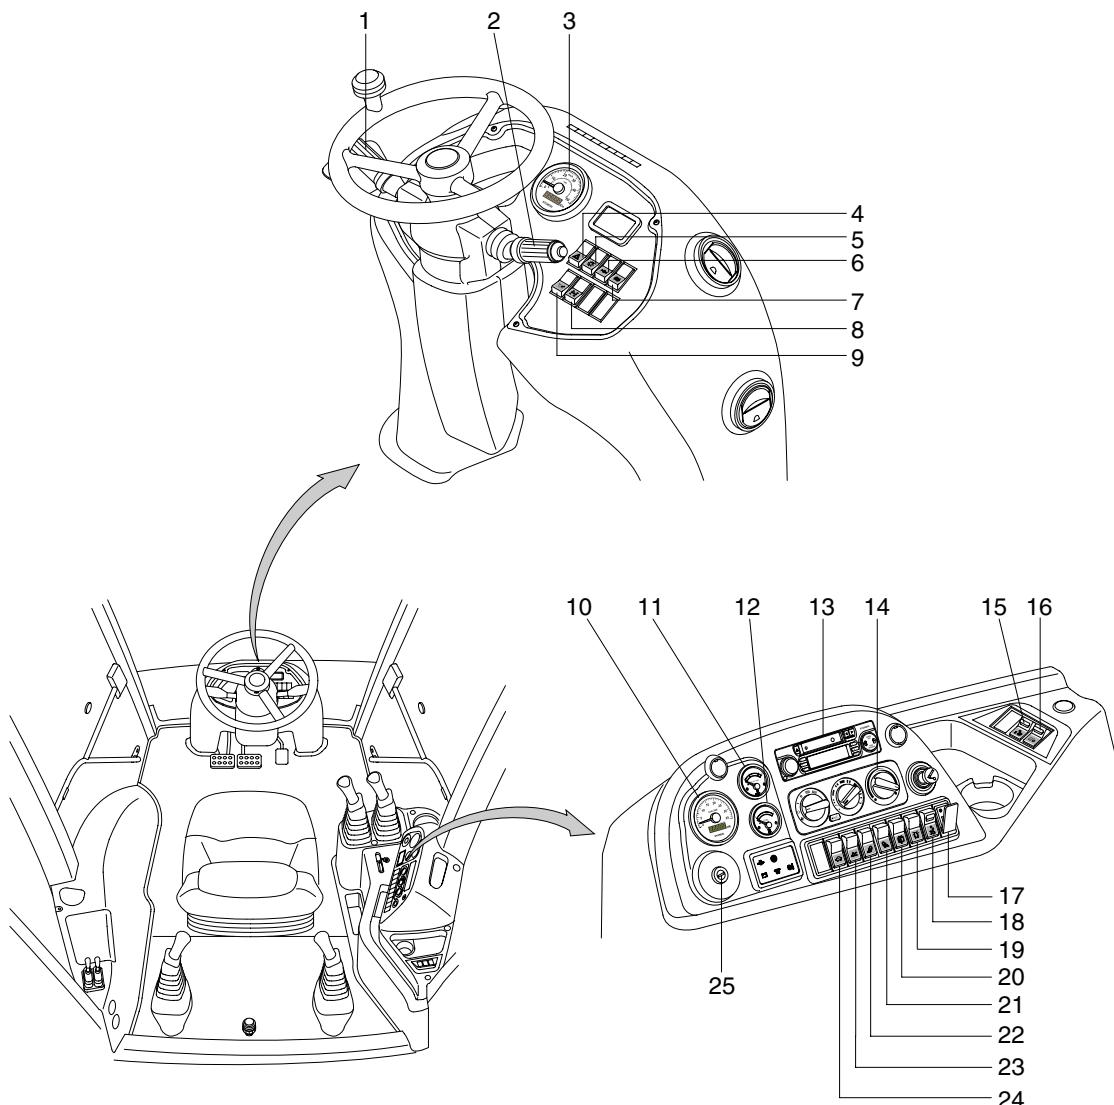

HB100EL02

- |                               |  |                             |
|-------------------------------|--|-----------------------------|
| 1 Gear selector               | 10 RPM gauge                           | 19 Beacon switch            |
| 2 Multi-function switch       | 11 Coolant temp gauge                  | 20 Rear wiper switch        |
| 3 Speed meter                 | 12 Fuel level gauge                    | 21 Rear work lights switch  |
| 4 Hazard warning switch       | 13 Radio & MP3 player                  | 22 Front work lights switch |
| 5 Side and head light switch  | 14 Air conditioner & heater switch     | 23 Return to dig switch     |
| 6 Differential lock switch    | 15 Control pattern change switch (opt) | 24 Low speed control switch |
| 7 Parking brake switch        | 16 Safety switch                       | 25 Starting switch          |
| 8 4 Wheel drive select switch | 17 USB & socket assy                   |                             |
| 9 Ride control switch         | 18 Side shift lock switch              |                             |

## 2. LOCATION 2

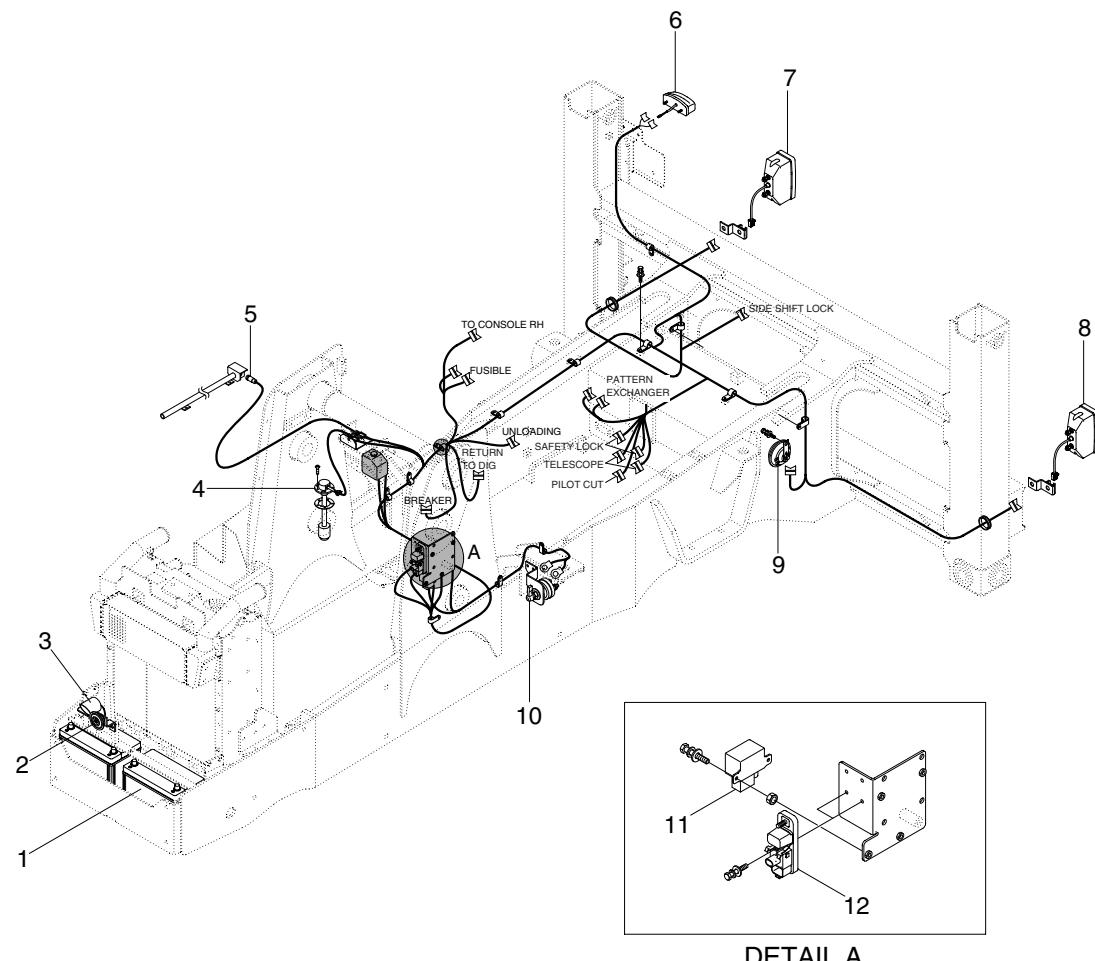

HB100EL02-1

- |               |                         |                  |
|---------------|-------------------------|------------------|
| 1 Battery     | 5 Proximity switch      | 9 Horn           |
| 2 Horn        | 6 License lamp          | 10 Master switch |
| 3 Back buzzer | 7 Combination lamp - LH | 11 Grid relay    |
| 4 Fuel sender | 8 Combination lamp - RH | 12 Power relay   |