


# SECTION 7 ELECTRICAL SYSTEM


## GROUP 1 COMPONENT LOCATION

### 1. LOCATION 1

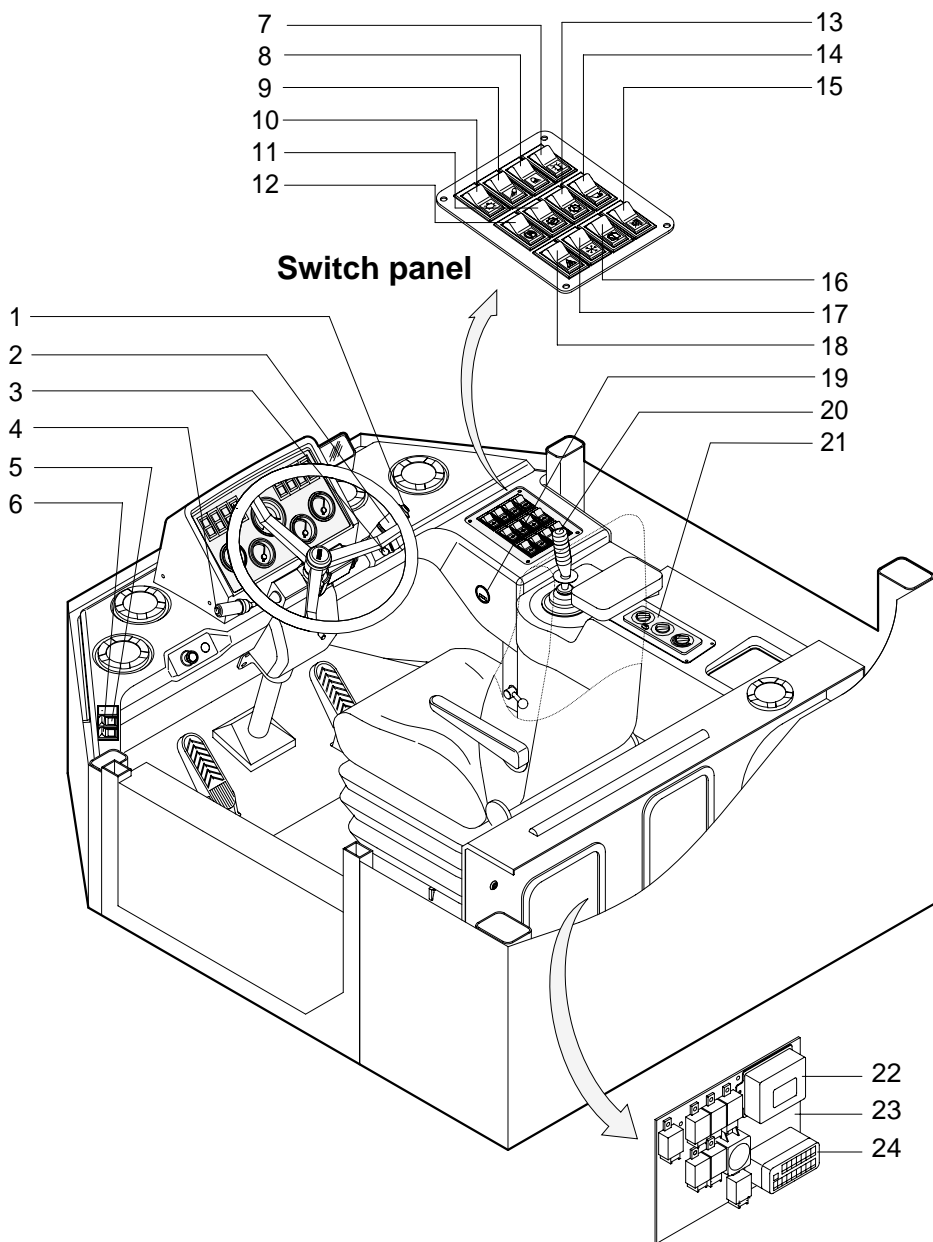

- |   |                             |    |                               |    |                        |
|---|-----------------------------|----|-------------------------------|----|------------------------|
| 1 | Horn button                 | 9  | Front work lamp switch        | 17 | Aircon switch          |
| 2 | Multi function switch       | 10 | Main light switch             | 18 | Hazard switch          |
| 3 | Starting switch             | 11 | Clutch cut off switch         | 19 | Service meter          |
| 4 | Kick down switch            | 12 | Parking brake switch          | 20 | Kick down switch       |
| 5 | Attachment engage switch    | 13 | Full automatic switch         | 21 | Aircon & heater switch |
| 6 | Attachment disengage switch | 14 | Ride control switch(Optional) | 22 | Check unit             |
| 7 | Beacon switch(Optional)     | 15 | Buzzer stop switch            | 23 | Relay board            |
| 8 | Rear work lamp switch       | 16 | Rear wiper/washer switch      | 24 | Fuse box               |

## 2. LOCATION 2

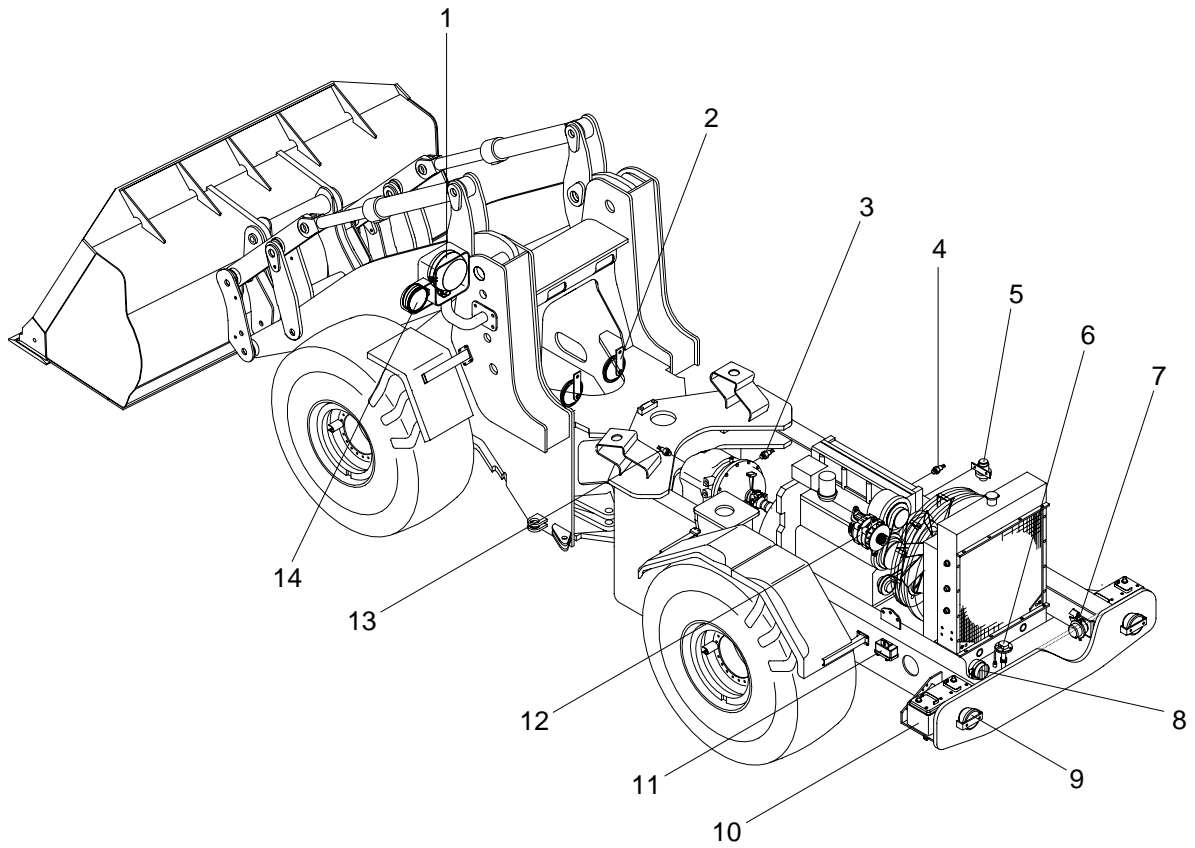

- |   |                          |    |                       |    |                         |
|---|--------------------------|----|-----------------------|----|-------------------------|
| 1 | Head lamp                | 6  | Fuel sender           | 11 | Glow timer              |
| 2 | Horn                     | 7  | Battery relay         | 12 | Alternator              |
| 3 | T/M temperature sender   | 8  | Back up buzzer        | 13 | T/M oil pressure switch |
| 4 | Water temperature switch | 9  | Rear combination lamp | 14 | Front combination lamp  |
| 5 | Start relay              | 10 | Battery               |    |                         |