


## **SECTION 7 ELECTRICAL SYSTEM**

Group 1 Component Location .....	7-1
Group 2 Electrical Circuit .....	7-3
Group 3 Monitoring System .....	7-21
Group 4 Electrical Component Specification .....	7-51
Group 5 Connectors .....	7-58
Group 6 Troubleshooting .....	7-78

# SECTION 7 ELECTRICAL SYSTEM

## GROUP 1 COMPONENT LOCATION


### 1. LOCATION 1

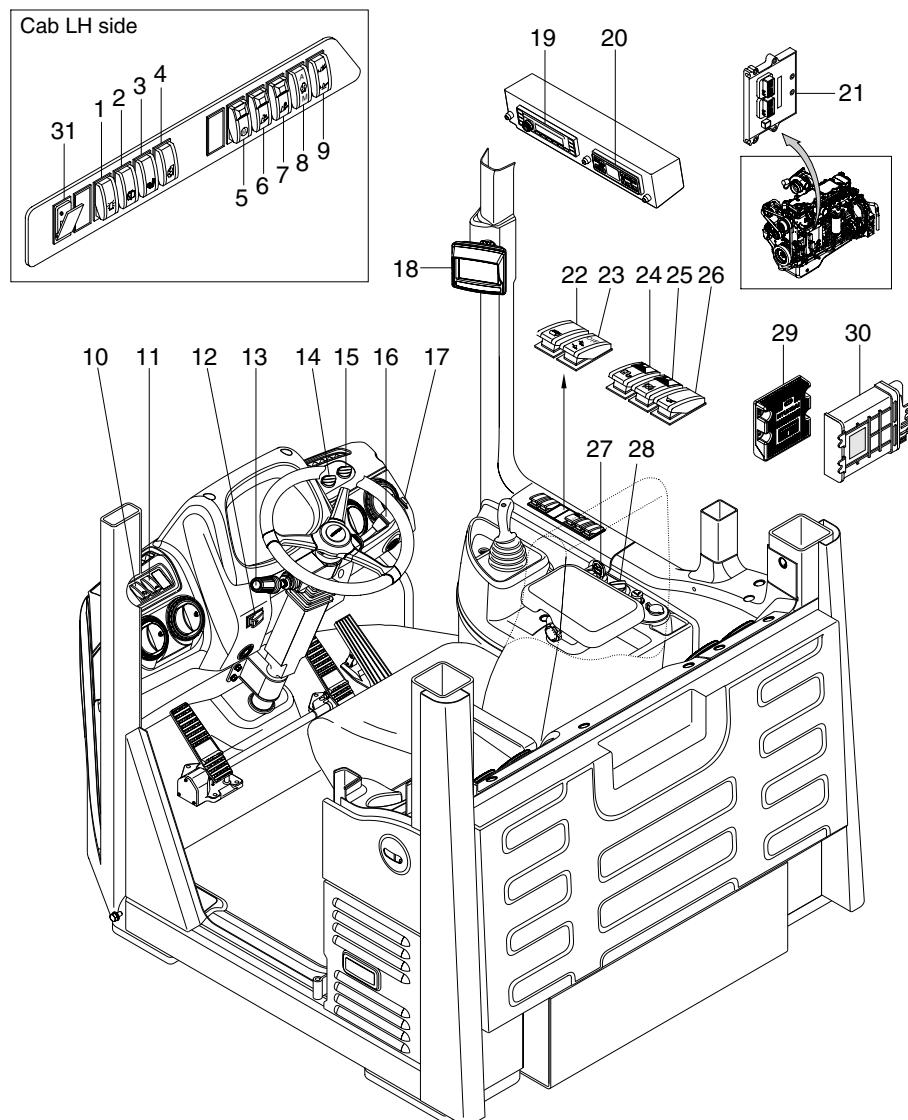

74097EL00

1	Beacon switch (opt)	11	Work lamp switch	22	Workload switch
2	Rear wiper / washer switch	12	Kick down switch	23	Detent enable switch
3	Heated seat switch	13	Hazard switch	24	Starting switch
4	Mirror defrost switch	14	T/M shift mode switch	25	Engine mode switch
5	Emergency test switch (opt)	15	Clutch cut off mode switch	26	Pilot cut off switch
6	Attachment unlock switch (opt)	16	Multi function switch	27	Parking brake switch
7	Attachment lock switch (opt)	17	Horn switch	28	Ride control switch (opt)
8	Fan control switch	18	Monitor	29	Machine control unit (MCU)
9	Boom kickout & bucket leveler set switch	19	Radio & USB/MP3 player	30	T/M control unit (TCU)
10	Main light switch	20	Aircon & heater switch	31	USB socket
		21	Engine control unit (ECU)		

## 2. LOCATION 2

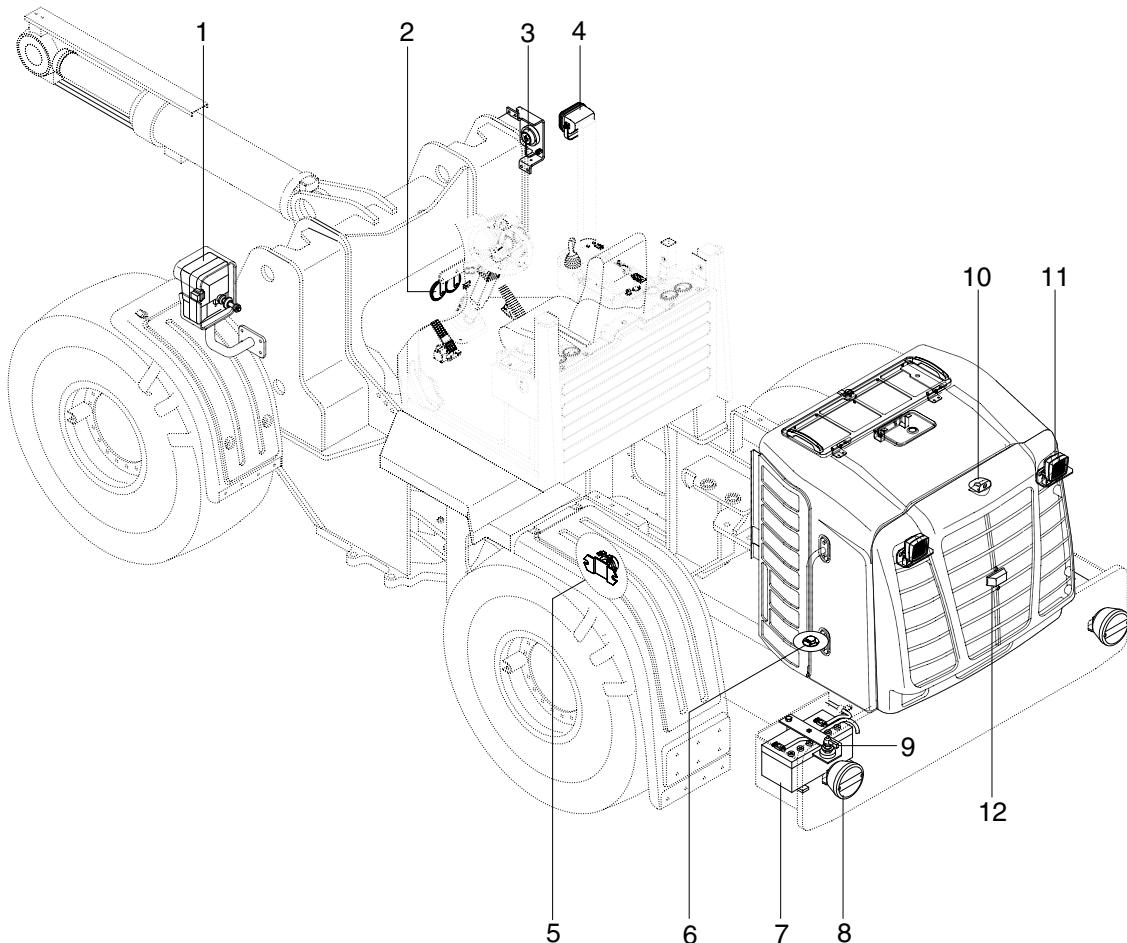

74097EL02-1

- |                |                   |                      |
|----------------|-------------------|----------------------|
| 1 Head lamp    | 5 Start relay     | 9 Master switch      |
| 2 Horn         | 6 Fuel sender     | 10 Camera (opt)      |
| 3 Angle sensor | 7 Battery         | 11 Work lamp         |
| 4 Work lamp    | 8 Rear combi lamp | 12 Number plate lamp |