


SECTION 7 ELECTRICAL SYSTEM

Group 1 Component Location	7-1
Group 2 Electrical Circuit	7-3
Group 3 Monitoring System	7-21
Group 4 Electrical Component Specification	7-59
Group 5 Connectors	7-66
Group 6 Troubleshooting	7-87

SECTION 7 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION


1. LOCATION 1

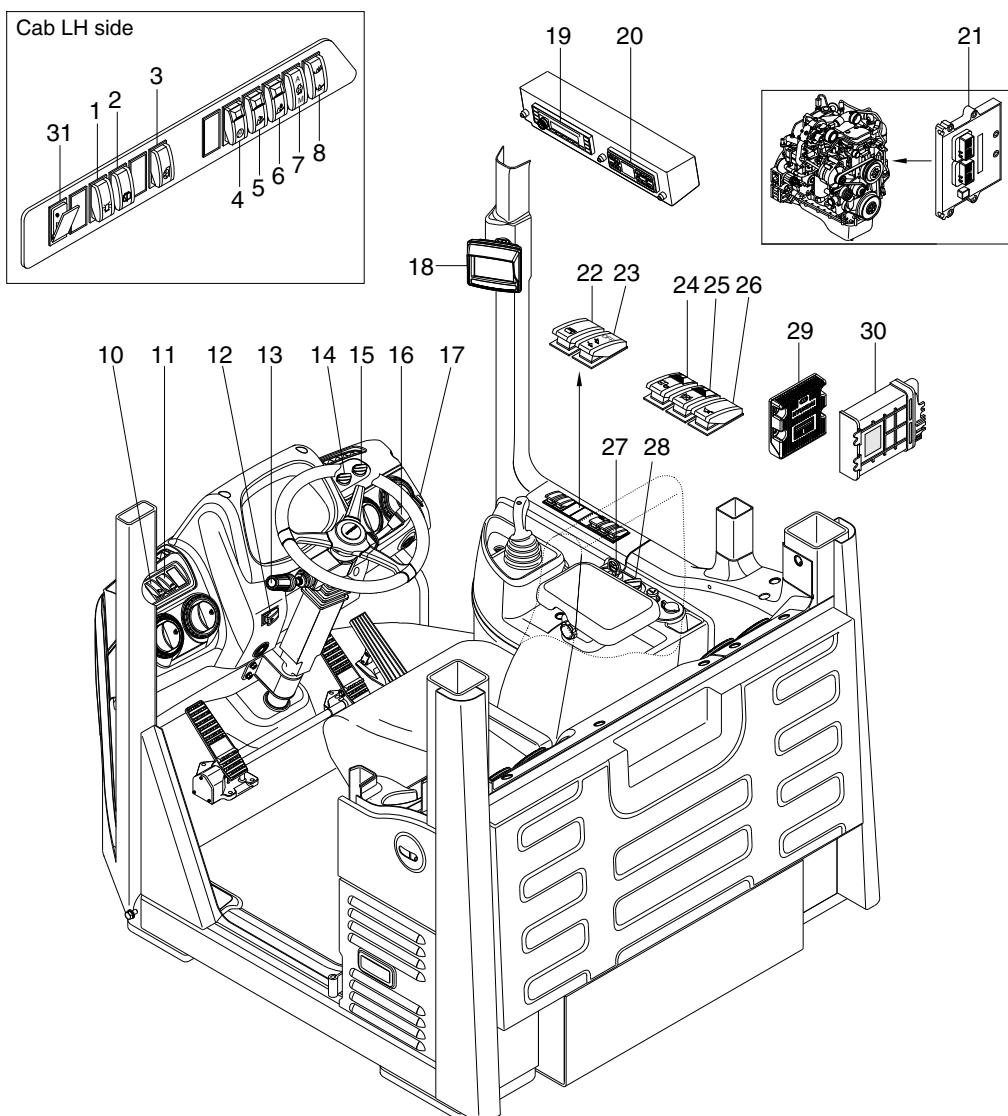

7309A7EL01

1	Beacon switch (opt)	11	Work lamp switch	22	Workload switch
2	Rear wiper / washer switch	12	Kick down switch	23	Detent enable switch
3	Heated seat switch	13	Hazard switch	24	Starting switch
4	Mirror defrost switch	14	T/M shift mode switch	25	Engine mode switch
5	Emergency test switch (opt)	15	Clutch cut off mode switch	26	Pilot cut off switch
6	Attachment unlock switch (opt)	16	Multi function switch	27	Parking brake switch
7	Attachment lock switch (opt)	17	Horn switch	28	Ride control switch (opt)
8	Fan control switch	18	Monitor	29	Machine control unit (MCU)
9	Boom kickout & bucket leveler set switch	19	Radio & USB player	30	T/M control unit (TCU)
10	Main light switch	20	Aircon & heater switch	31	USB socket
		21	Engine control unit (ECU)		

2. LOCATION 2

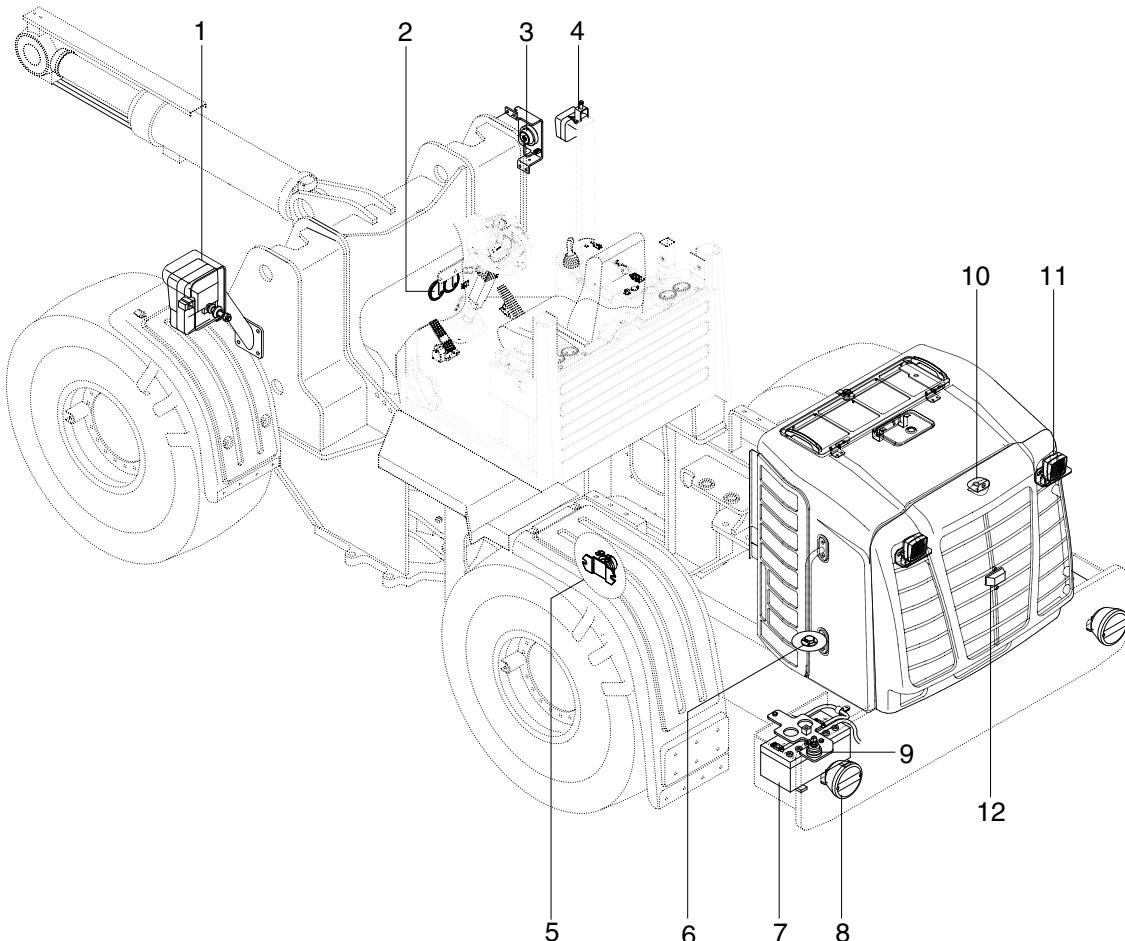

7409A7EL002

- | | | |
|----------------|-------------------|----------------------|
| 1 Head lamp | 5 Start relay | 9 Master switch |
| 2 Horn | 6 Fuel sender | 10 Camera (opt) |
| 3 Angle sensor | 7 Battery | 11 Work lamp |
| 4 Work lamp | 8 Rear combi lamp | 12 Number plate lamp |