


SECTION 7 ELECTRICAL SYSTEM

Group 1 Component Location	7-1
Group 2 Electrical Circuit	7-3
Group 3 Monitoring System	7-21
Group 4 Electrical Component Specification	7-51
Group 5 Connectors	7-58
Group 6 Troubleshooting	7-78

SECTION 7 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION


1. LOCATION 1

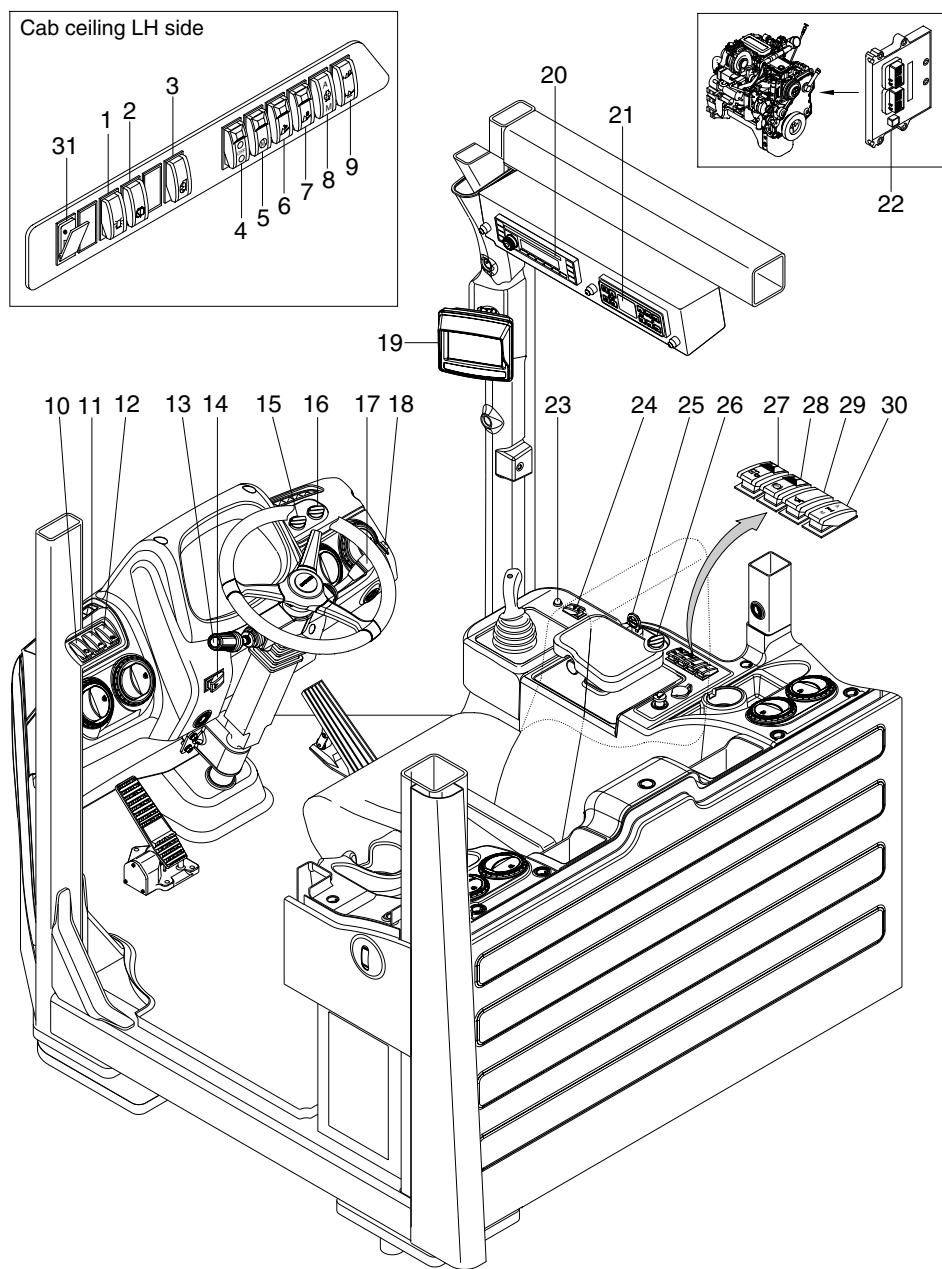

7709A7EL02

1	Beacon switch (opt)	11	Work lamp switch	22	Engine control unit (ECU)
2	Rear wiper / washer switch	12	Lock up switch (opt)	23	Work load button
3	Mirror defrost switch	13	Kick down switch	24	Detent enable switch
4	DPF switch	14	Hazard switch	25	Starting switch
5	Emergency test switch (opt)	15	T/M shift mode switch		Starting button (opt)
6	Attachment unlock switch (opt)	16	Clutch cut off mode switch	26	Engine mode switch
7	Attachment lock switch (opt)	17	Multi function switch	27	Pilot cut off switch
8	Fan control switch	18	Horn switch	28	Parking brake switch
9	Boom kickout & bucket leveler set switch	19	Monitor	29	Ride control switch (opt)
10	Main light switch	20	Radio & USB player	30	Differential lock switch (opt)
		21	Aircon & heater switch	31	USB socket

2. LOCATION 2

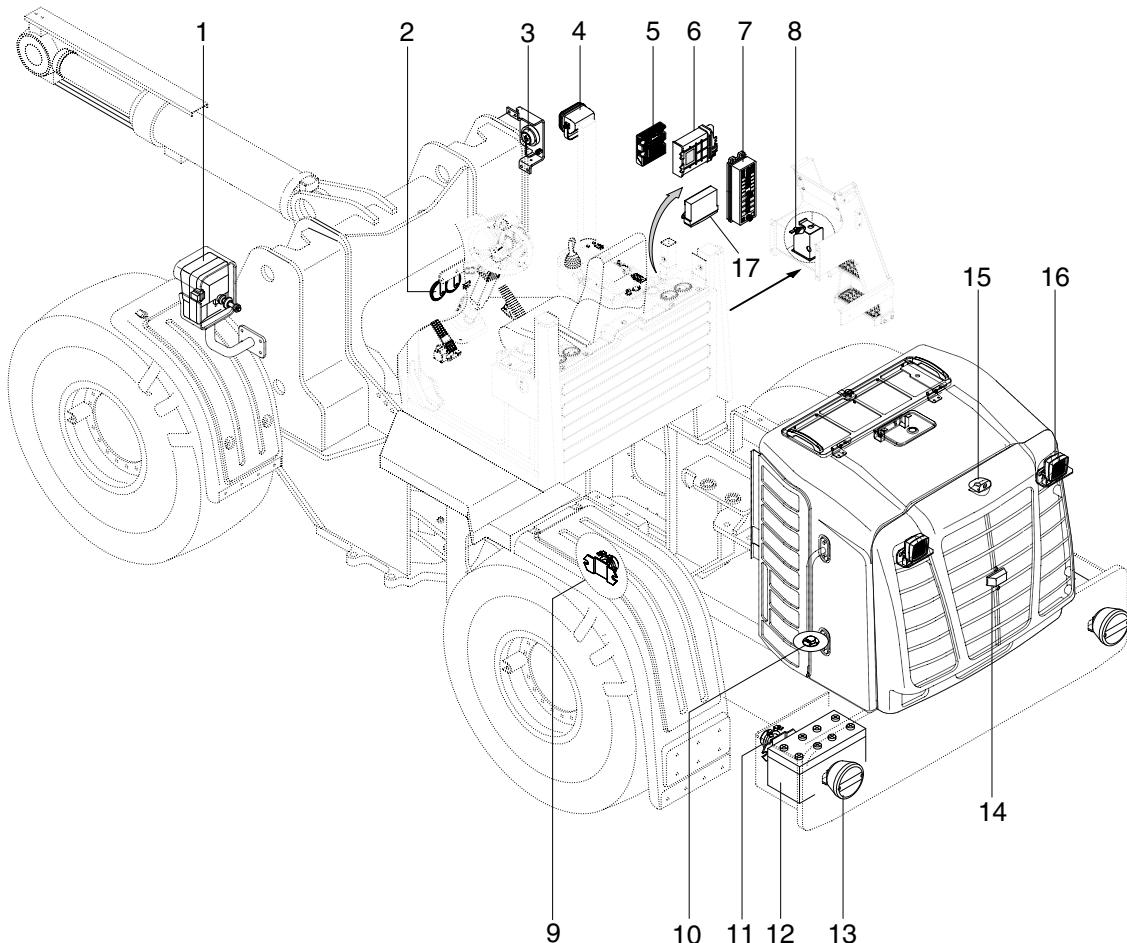

7609A7EL02-1

1	Head lamp	7	Fuse and relay box	13	Rear combi lamp
2	Horn	8	Master switch	14	Camera (opt)
3	Angle sensor	9	Start relay	15	Work lamp
4	Work lamp	10	Fuel sender	16	Number plate lamp
5	Machine control unit (MCU)	11	Battery relay	17	Steering control unit (SCU), opt
6	Transmission control unit (TCU)	12	Battery		