


SECTION 7 ELECTRICAL SYSTEM


GROUP 1 COMPONENT LOCATION

1. LOCATION 1

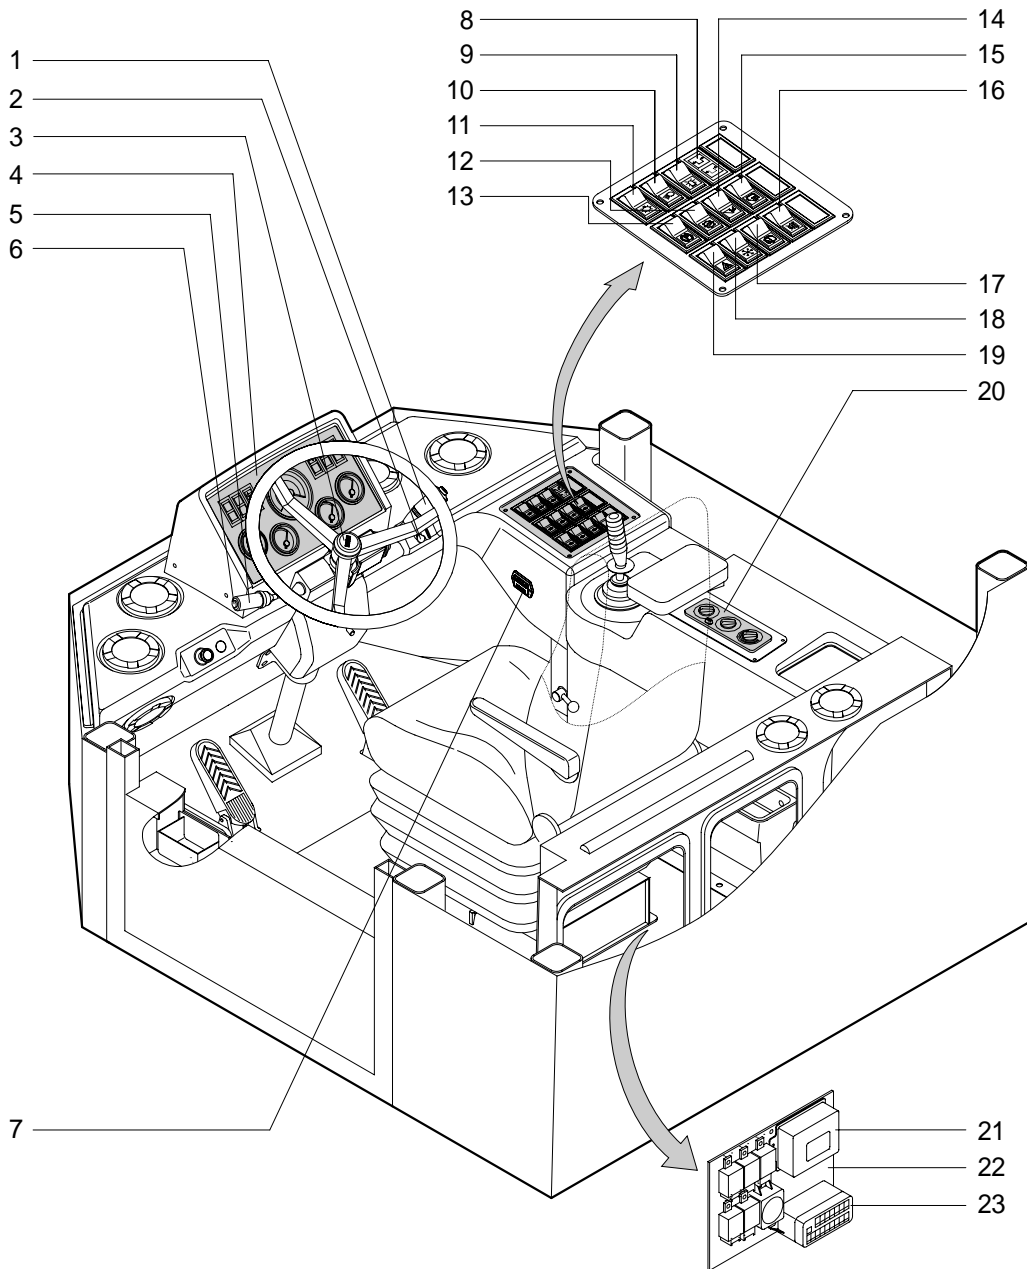

- | | | | | | |
|---|------------------------------------|----|--------------------------|----|--------------------------|
| 1 | Multi function switch | 9 | Beacon switch(Opt) | 17 | Rear wiper/washer switch |
| 2 | Starting switch | 10 | Work lamp switch | 18 | Air conditioner switch |
| 3 | Horn button | 11 | Main light switch | 19 | Hazard switch |
| 4 | Cluster | 12 | Clutch cut off switch | 20 | Aircon & heater switch |
| 5 | EGS lever | 13 | Parking brake switch | 21 | Check unit |
| 6 | Kick down switch | 14 | Ride control switch(Opt) | 22 | Relay board |
| 7 | Service meter | 15 | Cold start switch(Opt) | 23 | Fuse box |
| 8 | Emergency steering pilot lamp(Opt) | 16 | Buzzer stop switch | | |

2. LOCATION 2

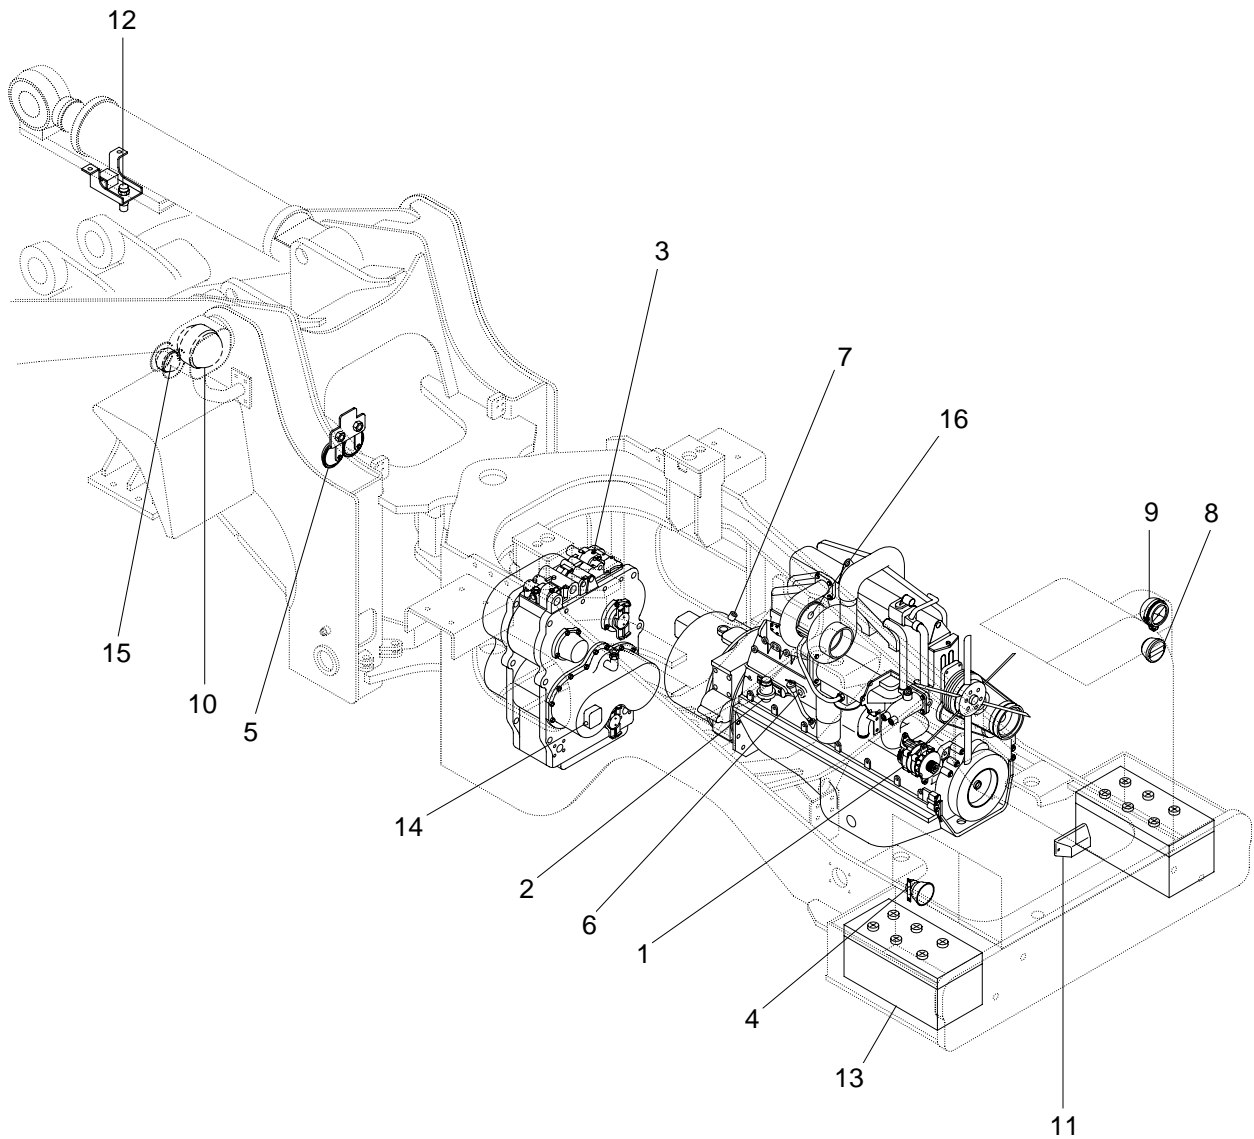

- | | | | | | |
|---|-------------------------|----|------------------------|----|--------------------|
| 1 | Alternator | 7 | Oil temp sender | 13 | Battery |
| 2 | Start relay | 8 | Tail stop flasher lamp | 14 | Speed meter sender |
| 3 | Clutch oil press switch | 9 | Work lamp | 15 | Front turn lamp |
| 4 | Back up buzzer | 10 | Head lamp | 16 | Air cleaner switch |
| 5 | Horn | 11 | Number plate lamp | | |
| 6 | Coolant temp sender | 12 | Proximate switch | | |