


## **SECTION 7 ELECTRICAL SYSTEM**

Group 1 Component Location .....	7-1
Group 2 Electrical Circuit .....	7-3
Group 3 Monitoring System .....	7-22
Group 4 Electrical Component Specification .....	7-64
Group 5 Connectors .....	7-71
Group 6 Troubleshooting .....	7-92

# SECTION 7 ELECTRICAL SYSTEM

## GROUP 1 COMPONENT LOCATION


### 1. LOCATION 1

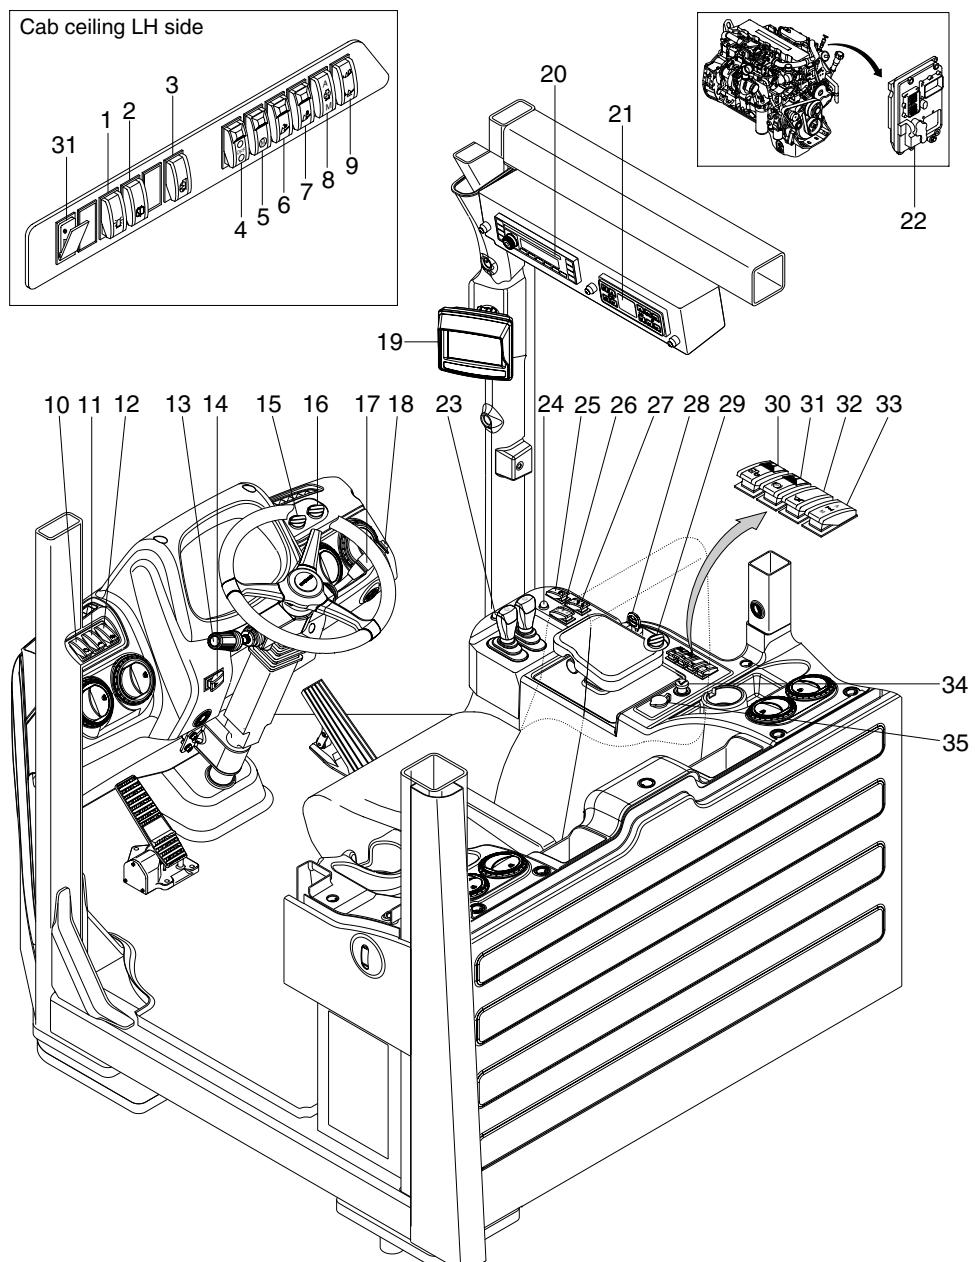

7809A7EL02

1	Beacon switch (opt)	13	Kick down switch	25	Fine modulation switch
2	Rear wiper / washer switch	14	Hazard switch	26	FNR switch (opt)
3	Mirror defrost switch	15	T/M shift mode switch	27	Detent enable switch
4	DPF switch	16	Clutch cut off mode switch	28	Starting switch
5	Emergency test switch (opt)	17	Multi function switch		Starting button (opt)
6	Attachment unlock switch (opt)	18	Horn switch	29	Engine mode switch
7	Attachment lock switch (opt)	19	Monitor	30	Pilot cut off switch
8	Fan control switch	20	Radio & USB player	31	Parking brake switch
9	Boom kickout & bucket leveler set switch	21	Aircon & heater switch	32	Ride control switch (opt)
10	Main light switch	22	Engine control unit (ECU)	33	Differential lock switch (opt)
11	Work lamp switch	23	Work load button	34	Cigar lighter
12	Lock up switch (opt)	24	FNR select button (opt)	35	USB socket

## 2. LOCATION 2

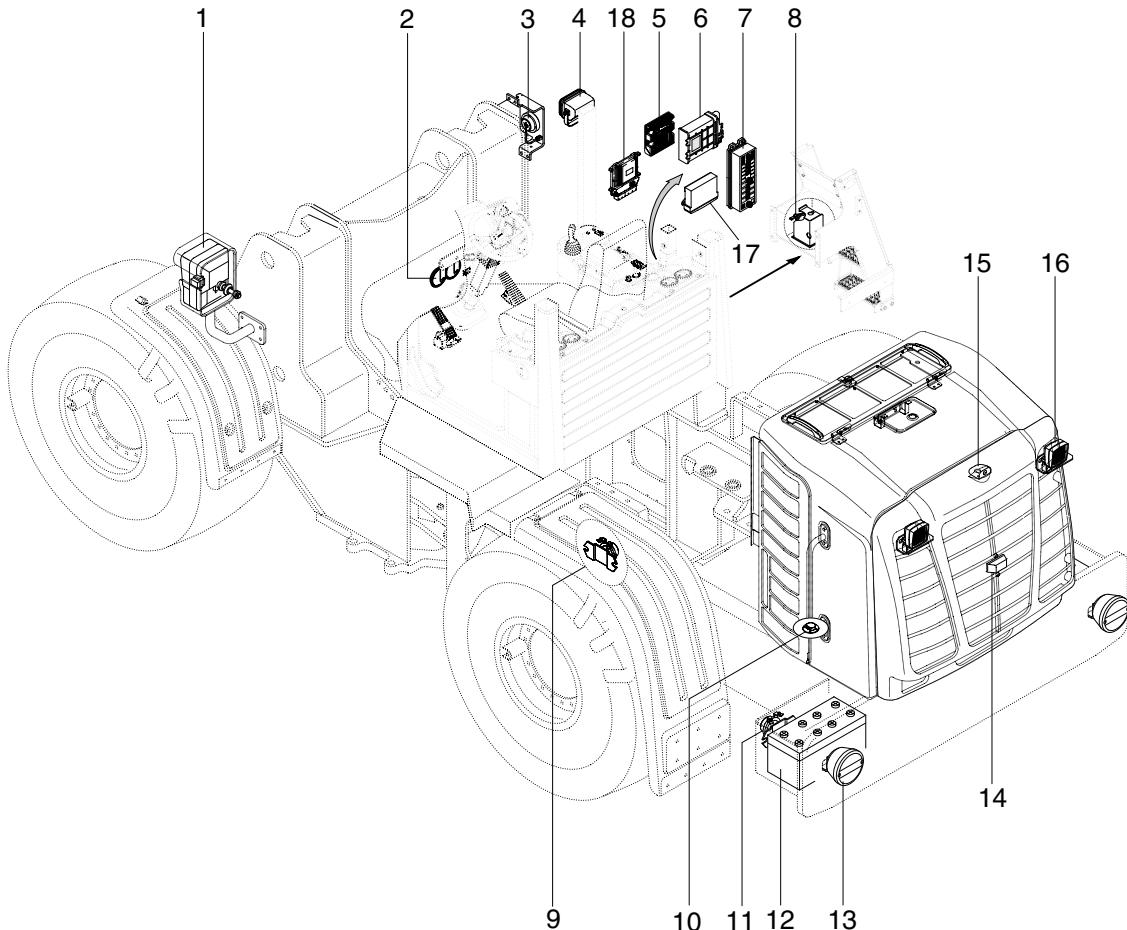

7809A7EL02-1

1 Head lamp	7 Fuse and relay box	13 Rear combi lamp
2 Horn	8 Master switch	14 Camera (opt)
3 Angle sensor	9 Start relay	15 Work lamp
4 Work lamp	10 Fuel sender	16 Number plate lamp
5 Machine control unit (MCU)	11 Battery relay	17 Steering control unit (SCU), opt
6 Transmission control unit (TCU)	12 Battery	18 Electro hydraulic control unit (EHCU)