

**HS120V**

# **INDEX**

**CHAPTER 7**

---

**INDEX**

		<b>NUMBER</b>	
SAFETY FIRST			Cabin & Chassis..... 5-39
		1 Speed model [HS120V / HS120V-L]..... 3-13	Cabin components..... 6-3
		2 Speed model [HS120V-LQ / HS120V-LQF]... 3-13	Cabin components disassembly & Assembly ... 6-49
		4 CYL..... 2-76	Cabin removal ..... 6-46
		<b>A</b>	Cabin system inspection..... 6-27
ENGINE		A/C hose (Refrigerant)..... 6-72	Camshaft ..... 2-34
		Acceleration system ..... 2-55	Cause for blown fuse..... 5-9
		Accelerator pedal sensor..... 5-44	Cautions for high pressure hoses..... 1-5
		Air cleaner check..... 1-31	Cautions when handling the battery ..... 1-5
		Air conditioner..... 6-11	Cautions when handling tires ..... 1-8
		Air conditioner & Heater disassembly..... 6-61	CCRT (Catalyzed Continuously Regenerating Trap) ..... 2-62
		Air conditioner controller..... 6-3	Chain box oil change ..... 1-30
		Air control vavle ..... 2-61	Charging pump pressure ..... 4-107
		Air inlet/vent..... 6-18	Check & Adjustment ..... 3-10
		Air intrusion into cycle..... 6-24	Check & Adjustment ..... 4-105
DRIVING & CHASSIS		Alert symbols ..... 1-2	Circuit and component location ..... 5-3
		Alternator ..... 5-14	Circuit diagram for hydraulic system ..... 4-9
		American standard screws, bolts and nuts with unc or unf threads ..... 1-40	Clean working area..... 1-3
		Antenna ..... 6-6	Clutch fan ..... 2-44
HYDRAULIC SYSTEM		Assembling the engine ..... 2-118	Common rail (Fuel rail)..... 2-52
		Assembly and disassembly ..... 1-35	Components ..... 2-7
		Assignment standard for engine model code .... 2-4	Components ..... 6-8
		Avoid fires..... 1-4	Composition..... 2-210
		Axle case disassembly, assembly ..... 3-35	Compressor ..... 6-8
ELECTRIC SYSTEM		Axle disassembly..... 3-40	Compressor assembly..... 6-71
	<b>B</b>		Compressor disassembly ..... 6-69
		Battery ..... 5-11	Condenser ..... 6-10
		Bleeding the fuel system ..... 2-49	Condenser disassembly ..... 6-67
		Body and power train system ..... 2-32	Connecting lines by hydraulic system groups ... 4-11
CABIN		Boom disassembly ..... 3-43	Connecting lines for hydraulic valves ..... 4-25
		Boom operation (Down)..... 4-96	Connecting rod ..... 2-34
		Boom operation (Up) ..... 4-95	Control system..... 3-23
		Brake (Parking brake)..... 3-12	Coolant check..... 1-25
		Brake horse power (HP)..... 2-9	Coolant flow route..... 2-41
		Brake lamp (Rear lamp) / Turn signal lamp ..... 5-96	Coolant temperature sensor ..... 5-16
		Bubble test for radiator ..... 2-78	Cooling cycle ..... 6-21
		Bucket operation (Dump)..... 4-100	Cooling operation ..... 6-20
		Bucket operation (Roll back) ..... 4-99	Cooling system..... 2-14
			Cooling system..... 2-41
INDEX	<b>C</b>		Crankshaft ..... 2-33
		Cabin ..... 6-2	CRDI (Common Rail Direct Injection) system ... 2-16

Cross sectional area of wiring .....	5-8	Engine removal.....	2-103
Cylinder block.....	2-33	Engine room .....	5-11
Cylinder head .....	2-32	Engine serial number.....	1-16
Cylinder head .....	2-145	Error code & action.....	2-211
Cylinder honing.....	2-33	Escort unit.....	5-40
<b>D</b>		Excessive refrigerant and insufficient condenser cooling performance .....	6-24
Daily check .....	1-24	Exploded view .....	3-4
Defective expansion valve.....	6-25	Exploded view .....	2-80
Description for symbols and abbreviations.....	1-15	EH5-G111001 Cylinder block group .....	2-80
Diagnosis.....	2-184	EH5-G113003 Cylinder head group .....	2-81
Diagnostic program .....	2-184	EH5-G114002 Gear case group.....	2-82
Dimensions.....	1-19	EH5-G121001 Crank shaft group.....	2-83
Disassembly, service and assembly.....	2-103	EH5-G122001 Piston connecting rod group...	2-84
Disposal of environmental waste.....	1-8	EH5-G123001 Camshaft group.....	2-85
Driving chain tension adjustment.....	3-10	EH5-G124002 Idle gear group .....	2-86
Driving hydraulic system/brake.....	3-16	EH5-G125001 Rocker arm valve group .....	2-87
Driving system .....	3-2	EH5-G131001 Intake manifold group.....	2-88
DTC (Diagnostic Trouble Code) .....	2-210	EH5-G134001 Turbo group .....	2-89
<b>E</b>		EH5-G135001 Turbo pipe group .....	2-90
ECU .....	5-18	EH5-G141001 Oil pump group.....	2-91
ECU(Electronic Control Unit).....	2-18	EH5-G144001 Oil filter group .....	2-92
EGR cooler .....	2-59	EH5-G151001 Fuel equipment group .....	2-93
EGR valve .....	2-59	EH5-G162001 Water flange group .....	2-94
Electric circuit diagram .....	5-3	EH5-G163003 Water pump group.....	2-95
Electric components .....	5-11	EH5-G171001 EGR group .....	2-96
Electric device diagnosis .....	5-10	EH5-G172001 EGR cooler group.....	2-97
Electric fan motor.....	6-18	EH5-G191002 Glow plug group .....	2-98
Engine accelerator dial.....	5-43	EH5-G192001 Engine electrical group.....	2-99
Engine body.....	2-11	EH5-G194001 ECU group.....	2-100
Engine component removal.....	2-135	LF1-G012002 Cooling fan group.....	2-101
Engine dimension.....	2-6	LF1-G014001 Aftertreatment group .....	2-102
Engine disassembly.....	2-141	Exploded view .....	3-24
Engine EPA decal (A) .....	2-3	LF1-G111003 Drive chain group.....	3-24
Engine identification .....	2-3	LF1-G112003 Axle group .....	3-25
Engine number .....	2-3	LF1-G121002 Clutch housing group .....	3-26
Engine oil check .....	1-27	LF1-G4D2001 Lever guide group.....	3-27
Engine oil flow .....	2-37	LF1-G431003 Fuel tank group .....	3-28
Engine oil flow chart .....	2-38	LF1-G432001 Fuel cooler group .....	3-29
Engine oil pressure switch.....	5-18	LF1-G461001 Main frame group .....	3-30
Engine performance curve .....	2-8	LF1-G462001 Boom frame group .....	3-31
Engine performance curve analysis .....	2-9	LF1-G463001 Rotation frame group .....	3-32

SAFETY FIRST

ENGINE

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX

SAFETY FIRST

ENGINE

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX

LF1-G465001 Quick attach group ..... 3-33

LF1-G472001 Rear door group ..... 3-34

Exploded view ..... 4-112

LF1-G211004 Oil tank sub group ..... 4-112

LF1-G213002 Hydraulic pump group ..... 4-113

LF1-G214002 Oil cooler group ..... 4-114

LF1-G221003 Main control valve group ... 4-115

LF1-G221504 Joystick group ..... 4-116

LF1-G222005 Auxiliary hydraulic group ... 4-117

LF1-G223003 Lift cylinder group ..... 4-118

LF1-G224502 Tilt cylinder group ..... 4-119

LF1-G225505 External hydraulic group ... 4-120

LF1-G226002 Drain vavle group ..... 4-121

LF1-G231004 HST group ..... 4-122

Exploded view ..... 5-116

LF1-G311007 Engine electrical group ..... 5-116

LF1-G327001 Light control group ..... 5-117

LF1-G328002 Power socket group ..... 5-118

LF1-G331001 Wire harness group ..... 5-119

LF1-G332001 Cluster control group ..... 5-120

LF1-G332501 Fuel sender group ..... 5-121

LF1-G333501 Vehicle control group ..... 5-122

Exploded view ..... 6-36

LF1-G334001 Speaker antenna group ..... 6-36

LF1-G335501 Wiper motor group ..... 6-37

LF1-G4A1001 Door group ..... 6-38

LF1-G4E1001 Wiper group ..... 6-39

LF1-G451001 Air conditioner drive group ... 6-40

LF1-G466001 Cabin support group ..... 6-41

LF1-G491001 Cabin frame group ..... 6-42

LF1-G4B1001 Air conditioner group ..... 6-43

LF1-G4B2001 Air conditioner duct group ... 6-44

Exterior devices ..... 6-2

Exterior view ..... 1-17

Exterior view & interior cabin ..... 1-17

External hydraulic group ..... 4-24

External implement ..... 4-102

**F**

Fan belt ..... 2-75

Fan belt tension adjustment ..... 1-30

Fan motor disassembly ..... 6-69

Fault diagnosis code description ..... 2-225

Fitting fixing screw ..... 1-40

Flasher ..... 5-41

Fluid oil check ..... 1-28

Flywheel ..... 2-36

Flywheel and crankshaft ..... 2-165

For safety ..... 1-2

Fuel cooler disassembly ..... 3-46

Fuel filter ..... 2-48

Fuel filter ..... 2-180

Fuel flow route ..... 2-46

Fuel gauge operation ..... 5-107

Fuel heater and fuel cooler ..... 2-54

Fuel rail(Common rail) ..... 2-28

Fuel system ..... 2-46

Fuel system check ..... 1-24

Fuel tank disassembly ..... 3-44

Function of lubricating system ..... 2-39

Fuse ..... 5-9

Fuse box ..... 5-11

Fuse replacement ..... 1-33

**G**

Gear case ..... 2-150

Gear pump (Main+Charge+High flow pump) ... 4-51

Gears in gear case ..... 2-151

General precautions ..... 1-35

General specifications ..... 2-5

General use screws, bolts and nuts ..... 1-39

Glow plug ..... 5-16

Glow plug and injector ..... 2-142

Grease lubrication (Applying port) ..... 1-34

**H**

Handling of hazardous materials ..... 1-6

Handling of rotating blade, shaft and driving belt 1-7

Handling precautions for electrical parts and wiring ..... 1-36

Head cover ..... 2-141

Heat hose/air conditioner hose assembly ..... 6-72

Heater hose ..... 6-72

Heating & Cooling system ..... 6-7

High flow group ..... 4-22

High flow valve .....	4-64	Hydraulic system overview .....	4-5
High flow valve detach & Disassembly.....	4-159	<b>I</b>	
High pressure fuel pump .....	2-50	Identification number .....	1-16
High pressure fuel pump .....	2-149	Ignition switch .....	5-39
High pressure fuel pump (for injection).....	2-27	Illumination .....	1-3
High pressure hose union nut.....	1-40	Implement holder (Quick coupler) disassembly ...	3-41
Horn.....	5-93	Injector [C3I (Calibration Improved Individual Injector)] .....	2-53
Hose connecting lines for a driving system and circulation system.....	4-33	Injector [C3I] .....	2-28
Hour meter operation.....	5-109	Inspection .....	5-9
HST (Driving) pump flow rate .....	4-109	Inspection and adjustment.....	6-23
HST (Driving) pump pressure.....	4-108	Inspection with gauge.....	6-23
HST filter.....	4-79	Instrument panel.....	5-47
HST filter replacement.....	4-169	Insufficient refrigerant.....	6-23
HST group .....	4-11	Intake & exhaust system .....	2-57
HST motor .....	4-87	Intake and exhaust valves .....	2-35
HST motor (Driving moter) .....	4-54	Intake and exhaust valves .....	2-147
HST motor disassembly .....	4-133	Intercooler disassembly.....	3-47
HST pump (Driving pump) .....	4-49	Interior cabin.....	1-18
HST pump detach.....	4-124	Interior devices .....	6-2
HVAC system flow diagram.....	6-7	<b>L</b>	
Hydraulic cylinder .....	4-74	Lamps (Bulb replacement) .....	5-95
Hydraulic filter.....	4-77	Leakage test.....	6-27
Hydraulic hose - Charge (LF13-0323C) .....	4-33	Led work lamp .....	5-95
Hydraulic hose - HST A(LH) (LF13-0700A).....	4-39	Lift cylinder .....	4-74
Hydraulic hose - HST A(RH) (LF13-0703A) .....	4-37	Lift cylinder disassembly.....	4-172
Hydraulic hose - HST B(LH) (LF13-0702A).....	4-38	Lift cylinder group .....	4-21
Hydraulic hose - HST T (LF13-0204C).....	4-46	Location of decals.....	1-9
Hydraulic hose - Motor(LH) T (LF13-0201C)....	4-44	Location of electronic components .....	5-5
Hydraulic hose - Parking P (LF13-0102B).....	4-35	Lubricant.....	1-36
Hydraulic hose - Parking T (LF13-0089C).....	4-48	Lubricating system.....	2-14
Hydraulic hose - Parking(LH) (LF13-0087B)....	4-43	Lubricating system.....	2-37
Hydraulic hose - Parking(RH) (LF13-0088B)....	4-42	Lubrication list.....	1-23
Hydraulic hose - Shift motor(LH) (LF13-0397B)...	4-41	<b>M</b>	
Hydraulic hose - Shift motor(RH) (LF13-0396B)...	4-40	Main components .....	4-49
Hydraulic hose - Shift P (LF13-0110B) .....	4-34	Main control valve (LF13-0028).....	4-30
Hydraulic hose - Shift T (LF13-0199C).....	4-47	Main control valve (MCV) .....	4-59
Hydraulic hose -HST B(RH) (LF13-0701A) .....	4-36	Main control valve (MCV) system pressure....	4-105
Hydraulic hose- Motor(RH) T (LF13-0203C) .....	4-45	Main control valve detach & Disassembly .....	4-135
Hydraulic pump group .....	4-18	Main pump detach .....	4-123
Hydraulic system layout.....	4-5	Main pump flow rate .....	4-106
Hydraulic system maintenance.....	4-123		

SAFETY FIRST

ENGINE

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX

Main pump, charge pump, high flow pump disassembly .....	4-128
Maintenance .....	1-22
Maintenance .....	3-35
Maintenance .....	6-45
Maintenance schedule chart.....	1-22
Major specification.....	3-3

MCU (Micro Controller Unit) .....	5-74
Measurement and adjustment .....	2-75
MLS cylinder head gasket .....	2-36
Moisture intrusion into cooling cycle.....	6-26

**N**

Normal condition.....	6-23
-----------------------	------

**O**

Oil cooler .....	4-85
Oil cooler group .....	4-19
Oil filter .....	2-174
Oil pressure measurement .....	2-78
Oil pump .....	2-175
Oil strainer .....	4-81
Oil tank group .....	4-17
Oil temperature sensor .....	5-93
Opening the cabin (Lifting up) .....	6-45
Operating principle .....	2-16
Operating principle .....	4-86
Operating principle .....	6-20
O-ring face type screw.....	1-40
Overview.....	2-57
Overview.....	3-2
Overview & Operating principle .....	3-12
Overview for fuel supply .....	2-46

**P**

Parking valve .....	4-67
Parking valve (LF13-0090) .....	4-27
Parking valve detach & Disassembly .....	4-156
Part number assignment standard for HYUNDAI bolts .....	1-41
Part number assignment standard for HYUNDAI bolts and nuts .....	1-41
Part number assignment standard for HYUNDAI nuts.....	1-42
Pilot lock valve .....	4-61

Pilot lock valve (LF13-0094).....	4-25
Pilot lock valve detach & Disassembly .....	4-150
Piston and connecting rod .....	2-160
Piston and piston ring .....	2-33
Piston compression pressure measurement ....	2-75
Poor compressor compression.....	6-25
Poor cooling performance .....	6-33
Poor heating .....	6-35
Poor recirculation of refrigerant .....	6-26
Power transfer system.....	3-5
Prevention of scald .....	1-7
Principle of power transfer & Specifications of components.....	3-5

**Q**

Quick attachment .....	4-101
Quick attachment check .....	3-10
Quick attachment cylinder .....	4-76
Quick attachment cylinder disassembly .....	4-177
Quick attachment cylinder group .....	4-23
Quick attachment valve .....	4-69
Quick attachment valve (LF13-0307) .....	4-29
Quick attachment valve detach & Disassembly .....	4-166
Quick coupler (External hydraulic).....	4-83

**R**

Radiator .....	2-43
Radiator cap .....	2-43
RCV (R/H) .....	4-94
RCV assembly & Oil tank disassembly .....	4-178
RCV assembly (LH).....	4-70
RCV assembly (LH) (LF13-0055).....	4-32
RCV assembly (LH) (RH) .....	5-90
RCV assembly (RH) .....	4-72
RCV assembly (RH) (LF13-0056) .....	4-31
Rear door operation check .....	3-11
Receiver-drier .....	6-9
Refrigerant and refrigeration oil .....	6-22
Relay box.....	5-46
Relief pressure setting .....	4-110
Return filter .....	4-77
Return filter replacement .....	4-171
Ride control .....	4-98

Ride control valve ..... 4-68

Ride control valve detach & Disassembly ..... 4-163

Rocker arm assembly ..... 2-34

Rocker arm assembly ..... 2-143

Room lamp ..... 5-97

**S**

S.F.C (Specific Fuel Consumption)  
(for reference only) ..... 2-10

Safe working place ..... 1-3

Safety decals ..... 1-9

Safety equipment ..... 1-3

Safety gear ..... 1-3

Safety instructions when preparing tractor ..... 1-4

Safety sensor (safety bar) ..... 5-91

Safety tips ..... 1-3

Seat switch ..... 5-92

Self level valve ..... 4-90

Self level valve ..... 4-62

Self level valve (LF13-0218) ..... 4-28

Self level valve detach & Disassembly ..... 4-145

Self leveling ..... 4-97

Sensor ..... 2-68

Sensors and relays ..... 5-19

Sensors as input/output for ECU ..... 2-71

Servicing specifications ..... 2-11

Skid loader serial number ..... 1-16

Soft shift valve ..... 4-66

Soft shift valve (LF13-0259) ..... 4-26

Soft shift valve detach & Disassembly ..... 4-153

Speaker ..... 6-6

Specifications ..... 1-20

Specifications ..... 2-5

Specifications ..... 3-7

Specifications ..... 4-3

Specifications ..... 5-2

Specifications ..... 6-7

Starter motor ..... 5-13

Stereo (Bluetooth) ..... 6-6

Structure & Components ..... 3-12

Stud bolts ..... 1-39

Suction line group ..... 4-17

Switch panel ..... 5-41

Symbols for electric components ..... 5-8

**T**

Telematics controller ..... 5-88

Temperature gauge operation ..... 5-108

Thermostat ..... 2-42

Thermostat ..... 2-177

Tightening torque ..... 1-39

Tightening torques for engine ..... 2-15

Tilt cylinder ..... 4-75

TILT cylinder disassembly ..... 4-175

Tilt cylinder group ..... 4-20

Timing gear ..... 2-35

Tire check ..... 1-32

Torque ..... 2-9

Troubleshooting ..... 2-72

Troubleshooting ..... 3-16

Troubleshooting ..... 4-111

Troubleshooting ..... 5-98

Troubleshooting ..... 6-31

Troubleshooting by symptoms ..... 6-32

Troubleshooting poor cooling/heating  
performance ..... 6-33

Tubes and rubbers ..... 1-36

Turbo charger ..... 2-67

Turbo charger ..... 2-180

Turbo charger wastegate pressure check ..... 2-79

Turn signal lamp ..... 5-95

**U**

Unit conversion table ..... 1-43

Use of appropriate tools and equipment ..... 1-6

**V**

Valve clearance ..... 2-76

Valve lift (Deflection and worn condition of  
valve cam, tappet, push rod, rocker arm, etc.)... 2-77

Ventilating system ..... 1-3

Visual and auditory inspection ..... 6-31

**W**

Washer tank ..... 6-6

Water pump ..... 2-42

Water pump ..... 2-178

When assembling ..... 6-27

When the engine cannot be started ..... 5-98

SAFETY FIRST

ENGINE

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX

SAFETY FIRST

When the system is not charged ..... 5-100

When the system is not preheated automatically... 5-102

When work lamp cannot be operated..... 5-105

Wiper motor ..... 5-94

Wiper notor ..... 6-5

Wiper/Washer fluid switch ..... 6-6

ENGINE

    Wiring color identification ..... 5-7

    Wiring diagram ..... 5-111

    Main..... 5-111

    MCU update ..... 5-115

Wiring identification ..... 5-7

Work place ..... 1-3

DRIVING & CHASSIS

Working system ..... 3-14

Working system holder (Quick Coupler)..... 3-14

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX