

HT100V

INDEX

CHAPTER 7

INDEX

		NUMBER	
SAFETY FIRST	4 CYL.....	2-76	Cabin removal
			6-46
ENGINE	A		Cabin system inspection.....
	A/C hose (Refrigerant).....	6-73	6-27
	Acceleration system	2-55	Camshaft
	Accelerator pedal sensor.....	5-45	2-34
	Air cleaner check.....	1-31	Cause for blown fuse.....
	Air conditioner.....	6-11	5-9
	Air conditioner & Heater disassembly.....	6-62	Cautions for high pressure hoses.....
	Air conditioner controller.....	6-3	1-5
	Air control valve.....	2-61	Cautions when handling the battery
	Air inlet/vent.....	6-18	1-5
DRIVING & CHASSIS	Air intrusion into cycle.....	6-24	CCRT (Catalyzed Continuously Regenerating Trap).....
	Alert symbols	1-2	2-62
	Alternator	5-14	Charging pump pressure
	American standard screws, bolts and nuts with unc or unf threads	1-40	4-104
	Antenna	6-6	Check & Adjustment
	Assembling the engine	2-118	3-9
	Assembly and disassembly	1-35	Check & Adjustment
	Assignment standard for engine model code	2-4	4-102
	Avoid fires.....	1-4	Circuit and component location
			5-3
HYDRAULIC SYSTEM	B		Circuit diagram for hydraulic system
	Battery	5-11	4-9
	Bleeding the fuel system	2-49	Clean working area.....
	Body and power train system	2-32	1-3
	Boom disassembly	3-39	Clutch fan
	Boom operation (Down).....	4-93	2-44
	Boom operation (Up).....	4-92	Common rail (Fuel rail).....
	Brake (Parking brake).....	3-11	2-52
	Brake horse power (HP).....	2-9	Components
	Brake lamp (Rear lamp) / Turn signal lamp	5-97	2-7
ELECTRIC SYSTEM	Bubble test for radiator	2-78	Components
	Bucket operation (Dump).....	4-97	6-8
	Bucket operation (Roll back)	4-96	Composition.....
			2-211
	C		Compressor.....
	Cabin	5-113	6-8
	Cabin	6-2	Compressor assembly.....
	Cabin & Chassis	5-40	6-72
	Cabin components.....	6-3	Compressor disassembly
	Cabin components disassembly & Assembly ...	6-50	6-70
		Condenser	
		6-10	
		Condenser disassembly	
		6-68	
		Connecting lines by hydraulic system groups ...	
		4-11	
		Connecting lines for hydraulic valves	
		4-26	
		Connecting rod	
		2-34	
		Control system.....	
		3-20	
		Coolant check.....	
		1-25	
		Coolant flow route.....	
		2-41	
		Coolant temperature sensor	
		5-16	
		Cooling cycle	
		6-21	
		Cooling operation	
		6-20	
		Cooling system	
		2-14	
		Cooling system.....	
		2-41	
		Crankshaft	
		2-33	
		Crawler tension adjustment.....	
		3-9	
		CRDI (Common Rail Direct Injection) system ...	
		2-16	
		Cross sectional area of wiring	
		5-8	
		Cylinder block.....	
		2-33	
		Cylinder head	
		2-32	
		Cylinder head	
		2-146	

Cylinder honing..... 2-33

D

Daily check 1-24

Defective expansion valve..... 6-25

Description for symbols and abbreviations..... 1-15

Diagnosis..... 2-185

Diagnostic program 2-185

Dimensions..... 1-19

Disassembly, service and assembly..... 2-103

Disposal of environmental waste..... 1-8

Drive sprocket mounting bolt adjustment 1-32

Driving hydraulic system/brake..... 3-14

Driving system..... 3-2

DTC (Diagnostic Trouble Code) 2-211

E

ECU 5-18

ECU(Electronic Control Unit)..... 2-18

EGR cooler 2-59

EGR valve 2-59

Electric circuit diagram 5-3

Electric components 5-11

Electric device diagnosis 5-10

Electric fan motor..... 6-18

Engine accelerator dial..... 5-44

Engine body..... 2-11

Engine component removal..... 2-136

Engine dimension..... 2-6

Engine disassembly..... 2-142

Engine EPA decal (A) 2-3

Engine identification 2-3

Engine number 2-3

Engine oil check 1-27

Engine oil flow 2-37

Engine oil flow chart 2-38

Engine oil pressure switch..... 5-17

Engine performance curve 2-8

Engine performance curve analysis 2-9

Engine removal..... 2-103

Engine room 5-11

Engine serial number..... 1-16

Error code & action..... 2-213

Escort unit..... 5-41

Excessive refrigerant and insufficient condenser cooling performance 6-24

Exploded view 3-4

Exploded view 2-80

EH5-G111001 Cylinder block group 2-80

EH5-G113003 Cylinder head group 2-81

EH5-G114002 Gear case group 2-82

EH5-G121001 Crank shaft group..... 2-83

EH5-G122001 Piston connecting rod group... 2-84

EH5-G123001 Camshaft group..... 2-85

EH5-G124002 Idle gear group 2-86

EH5-G125001 Rocker arm valve group 2-87

EH5-G131001 Intake manifold group..... 2-88

EH5-G134001 Turbo group..... 2-89

EH5-G135001 Turbo pipe group 2-90

EH5-G141001 Oil pump group..... 2-91

EH5-G144001 Oil filter group 2-92

EH5-G151001 Fuel equipment group 2-93

EH5-G162001 Water flange group 2-94

EH5-G163003 Water pump group..... 2-95

EH5-G171001 EGR group 2-96

EH5-G172001 EGR cooler group..... 2-97

EH5-G191002 Glow plug group 2-98

EH5-G192001 Engine electrical group..... 2-99

EH5-G194001 ECU group..... 2-100

LF1-G012002 Cooling fan group..... 2-101

LF1-G014001 Aftertreatment group 2-102

Exploded view 3-21

LF1-G121003 Clutch housing group 3-21

LF1-G4D2001 Lever guide group..... 3-22

LF1-G4H1001 Undercarriage group..... 3-23

LF1-G4H2001 Track group..... 3-24

LF1-G421003 Cooling system group 3-25

LF1-G431003 Fuel tank group 3-26

LF1-G432001 Fuel cooler group 3-27

LF1-G461002 Main frame group 3-28

LF1-G462002 Boom frame group 3-29

LF1-G463001 Rotation frame group 3-30

LF1-G464001 Control frame group 3-31

LF1-G465002 Quick attach group 3-32

LF1-G472001 Rear door group 3-33

SAFETY FIRST

ENGINE

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX

SAFETY FIRST

ENGINE

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX

Exploded view 4-109

 LF1-G211003 Oil tank sub group 4-109

 LF1-G214003 Oil cooler group 4-110

 LF1-G221002 Main control valve group ... 4-111

 LF1-G221503 Joystick group 4-112

 LF1-G222003 Auxiliary hydraulic group ... 4-113

 LF1-G223002 Lift cylinder group 4-114

 LF1-G223504 Self leveling group 4-115

 LF1-G224502 Tilt cylinder group 4-116

 LF1-G225003 Quick attach cylinder group... 4-117

 LF1-G226002 Drain vavle group 4-118

 LF1-G231003 HST group 4-119

Exploded view 5-116

 LF1-G311007 Engine electrical group 5-116

 LF1-G327001 Light control group 5-117

 LF1-G328002 Power socket group 5-118

 LF1-G331001 Wire harness group 5-119

 LF1-G332002 Cluster control group 5-120

 LF1-G332501 Fuel sender group 5-121

 LF1-G333501 Vehicle control group 5-122

Exploded view 6-36

 LF1-G334001 Speaker antenna group 6-36

 LF1-G335501 Wiper motor group 6-37

 LF1-G4A1006 Door group 6-38

 LF1-G4E1001 Wiper group 6-39

 LF1-G451001 Air conditioner drive group ... 6-40

 LF1-G466001 Cabin support group 6-41

 LF1-G491001 Cabin frame group 6-42

 LF1-G4B1001 Air conditioner group 6-43

 LF1-G4B2001 Air conditioner duct group ... 6-44

Exterior devices 6-2

Exterior view 1-17

Exterior view & interior cabin 1-17

External hydraulic group 4-25

External implement 4-99

F

Fan belt 2-75

Fan belt tension adjustment 1-30

Fan motor disassembly 6-70

Fault diagnosis code description 2-227

Fitting fixing screw 1-40

Flasher 5-42

Fluid oil check 1-28

Flywheel 2-36

Flywheel and crankshaft 2-166

For safety 1-2

Fuel cooler disassembly 3-42

Fuel filter 2-48

Fuel filter 2-181

Fuel flow route 2-46

Fuel gauge operation 5-108

Fuel heater and fuel cooler 2-54

Fuel rail(Common rail) 2-28

Fuel system 2-46

Fuel system check 1-24

Fuel tank disassembly 3-40

Function of lubricating system 2-39

Fuse 5-9

Fuse box 5-11

Fuse replacement 1-32

G

Gear case 2-151

Gear pump (Main+Charge+High flow pump).... 4-52

Gears in gear case 2-152

General precautions 1-35

General specifications 2-5

General use screws, bolts and nuts 1-39

Glow plug 5-16

Glow plug and injector 2-143

Grease lubrication (Applying port) 1-33

H

Handling of hazardous materials 1-6

Handling of rotating blade, shaft and driving belt ... 1-7

Handling precautions for electrical parts and wiring ... 1-36

Head cover 2-142

Heat hose/air conditioner hose assembly 6-73

Heater hose 6-73

Heating & Cooling system 6-7

High flow group 4-23

High flow valve 4-62

High flow valve detach & Disassembly 4-156

High pressure fuel pump 2-50

High pressure fuel pump	2-150	Injector [C3I (Calibration Improved Individual Injector)]	2-53
High pressure fuel pump (for injection).....	2-27	Injector [C3I]	2-28
High pressure hose union nut.....	1-40	Inspection	5-9
Horn.....	5-94	Inspection and adjustment.....	6-23
Hose connecting lines for a driving system and circulation system	4-34	Inspection with gauge.....	6-23
Hour meter operation.....	5-110	Instrument panel.....	5-48
HST (driving) pump flow rate	4-106	Insufficient refrigerant.....	6-23
HST (driving) pump pressure	4-105	Intake & Exhaust system	2-57
HST filter.....	4-77	Intake and exhaust valves	2-35
HST filter replacement.....	4-166	Intake and exhaust valves	2-148
HST group	4-11	Intercooler disassembly.....	3-43
HST pump (driving pump)	4-50	Interior cabin.....	1-18
HST pump detach.....	4-121	Interior devices	6-2
HVAC system flow diagram.....	6-7	L	
Hydraulic cylinder	4-72	Lamps (Bulb replacement)	5-96
Hydraulic filter.....	4-75	Leakage test.....	6-27
Hydraulic hose (LF13-0022A).....	4-34	Led work lamp	5-96
Hydraulic hose (LF13-0158A).....	4-35	Lift cylinder	4-72
Hydraulic hose (LF13-0160A).....	4-36	Lift cylinder disassembly.....	4-169
Hydraulic hose (LF13-0323A).....	4-37	Lift cylinder group	4-22
Hydraulic hose (LF13-0325A).....	4-38	Location of decals.....	1-9
Hydraulic hose (LF13-0340A).....	4-39	Location of electronic components	5-5
Hydraulic hose (LF13-0341A).....	4-40	Lubricant.....	1-36
Hydraulic hose (LF13-0402A).....	4-41	Lubricating system.....	2-14
Hydraulic hose (LF13-0403A).....	4-42	Lubricating system.....	2-37
Hydraulic hose (LF13-0404A).....	4-43	Lubrication list.....	1-23
Hydraulic hose (LF13-0407A).....	4-44	M	
Hydraulic hose (LF13-0408A).....	4-45	Main.....	5-111
Hydraulic hose (LF13-0412A).....	4-46	Main components	4-50
Hydraulic hose (LF13-0414A).....	4-47	Main control valve (LF13-0028).....	4-31
Hydraulic hose (LF13-0439A).....	4-48	Main control valve (MCV)	4-57
Hydraulic hose (LF13-0576A).....	4-49	Main control valve (MCV) system pressure....	4-102
Hydraulic pump group	4-19	Main control valve detach & Disassembly	4-132
Hydraulic system layout.....	4-5	Main pump detach	4-120
Hydraulic system maintenance.....	4-120	Main pump flow rate	4-103
Hydraulic system overview	4-5	Main pump, charge pump, high flow pump disassembly.....	4-124
I		Maintenance	1-22
Identification number	1-16	Maintenance	3-34
Ignition switch	5-40	Maintenance	6-45
Illumination	1-3	Maintenance schedule chart.....	1-22

SAFETY FIRST

ENGINE

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX

SAFETY FIRST

Major specification 3-3
 MCU (Micro Controller Unit) 5-75
 MCU update 5-115
 Measurement and adjustment 2-75
 MLS cylinder head gasket 2-36
 Moisture intrusion into cooling cycle 6-26

ENGINE

N
 Normal condition 6-23

DRIVING & CHASSIS

O
 Oil cooler 4-83
 Oil cooler group 4-20
 Oil filter 2-175
 Oil pressure measurement 2-78
 Oil pump 2-176
 Oil strainer 4-79
 Oil tank group 4-18
 Oil temperature sensor 5-94
 Opening the cabin (Lifting up) 6-45

HYDRAULIC SYSTEM

Operating principle 2-16
 Operating principle 4-84
 Operating principle 6-20
 O-ring face type screw 1-40
 Overview 2-57
 Overview 3-2
 Overview for fuel supply 2-46

ELECTRIC SYSTEM

P
 Parking valve 4-65
 Parking valve (LF13-0090) 4-28
 Parking valve detach & Disassembly 4-153
 Part number assignment standard for Bolts 1-41

CABIN

Part number assignment standard for bolts and nuts 1-41
 Part number assignment standard for nuts 1-42
 Pilot lock valve 4-59
 Pilot lock valve (LF13-0284) 4-26
 Pilot lock valve detach & Disassembly 4-147

INDEX

Piston and connecting rod 2-161
 Piston and piston ring 2-33
 Piston compression pressure measurement 2-75
 Poor compressor compression 6-25

Poor cooling performance 6-33
 Poor heating 6-35
 Poor recirculation of refrigerant 6-26
 Power transfer system 3-5
 Prevention of scald 1-7
 Principle of power transfer & Specifications of components 3-5

Q
 Quick attachment 4-98
 Quick attachment check 3-9
 Quick attachment cylinder 4-74
 Quick attachment cylinder disassembly 4-174
 Quick attachment cylinder group 4-24
 Quick attachment valve 4-67
 Quick attachment valve (LF13-0307) 4-30
 Quick attachment valve detach & Disassembly... 4-163
 Quick coupler (External hydraulic) 4-81

R
 Radiator 2-43
 Radiator cap 2-43
 RCV (R/H) 4-91
 RCV assembly & Oil tank disassembly 4-175
 RCV assembly (LH) 4-68
 RCV assembly (LH) (LF13-0055) 4-33
 RCV assembly (LH) (RH) 5-91
 RCV assembly (RH) 4-70
 RCV assembly (RH) (LF13-0056) 4-32
 Rear door operation check 3-10
 Receiver-drier 6-9
 Refrigerant and refrigeration oil 6-22
 Relay box 5-47
 Relief pressure setting 4-107
 Return filter 4-75
 Return filter replacement 4-168
 Ride control [Option] 4-95
 Ride control valve [option] 4-66
 Ride control valve detach & Disassembly [OPTION] 4-160
 Rocker arm assembly 2-34
 Rocker arm assembly 2-144
 Room lamp 5-98

S

S.F.C (Specific Fuel Consumption)
(for reference only) 2-10

Safe working place 1-3

Safety decals 1-9

Safety equipment..... 1-3

Safety gear 1-3

Safety instructions when preparing tractor 1-4

Safety sensor (safety bar) 5-92

Safety tips..... 1-3

Seat switch 5-93

Self level valve..... 4-87

Self level valve 4-60

Self level valve (LF13-0218)..... 4-29

Self level valve detach & Disassembly 4-142

Self leveling 4-94

Sensor 2-68

Sensors and relays..... 5-19

Sensors as input/output for ECU 2-71

Servicing specifications 2-11

Shift valve 4-64

Shift valve (LF13-0286) 4-27

Shift valve detach & Disassembly 4-150

Skid loader serial number..... 1-16

Speaker 6-6

Specifications 1-20

Specifications 2-5

Specifications 3-7

Specifications 4-3

Specifications 5-2

Specifications 6-7

Starter motor..... 5-13

Stereo (Bluetooth) 6-6

Stud bolts..... 1-39

Suction line group..... 4-18

Switch panel 5-42

Symbols for electric components..... 5-8

T

Telematics controller..... 5-89

Temperature gauge operation 5-109

Thermostat 2-42

Thermostat 2-178

Tightening torque..... 1-39

Tightening torques for engine 2-15

Tilt cylinder 4-73

TILT cylinder disassembly 4-172

Tilt cylinder group 4-21

Timing gear..... 2-35

Torque..... 2-9

Track(HST) motor 4-55

Track(HST) motor 4-85

Track(HST) motor disassembly 4-129

Troubleshooting..... 2-72

Troubleshooting..... 3-14

Troubleshooting..... 4-108

Troubleshooting..... 5-99

Troubleshooting..... 6-31

Troubleshooting by symptoms..... 6-32

Troubleshooting poor cooling/heating
performance 6-33

Tubes and rubbers 1-36

Turbo charger 2-67

Turbo charger 2-181

Turbo charger wastegate pressure check 2-79

Turn signal lamp 5-96

U

Undercarriage disassembly, assembly 3-34

Unit conversion table 1-43

Use of appropriate tools and equipment..... 1-6

V

Valve clearance 2-76

Valve lift (Deflection and worn condition of
valve cam, tappet, push rod, rocker arm, etc.)... 2-77

Ventilating system..... 1-3

Visual and auditory inspection..... 6-31

W

Washer tank 6-6

Water pump 2-42

Water pump 2-179

When assembling..... 6-27

When the engine cannot be started..... 5-99

When the system is not charged 5-101

When the system is not preheated automatically... 5-103

SAFETY FIRST

When work lamp cannot be operated..... 5-106

Wiper motor 5-95

Wiper notor 6-5

Wiper/Washer fluid switch 6-6

Wiring color identification..... 5-7

Wiring diagram 5-111

ENGINE

Wiring identification 5-7

Work place 1-3

Working system 3-12

Working system holder (Quick Coupler)..... 3-12

DRIVING & CHASSIS

HYDRAULIC SYSTEM

ELECTRIC SYSTEM

CABIN

INDEX