

SECTION 6 TROUBLESHOOTING

| | |
|---|---------|
| Group 1 Before Troubleshooting | 6-1 |
| Group 2 Hydraulic and Mechanical System | 6-4 |
| Group 3 Electrical System | 6-25 |
| Group 4 Mechatronics System | 6-41 |
| Group 5 Air conditioner and Heater System | 6-80-41 |

SECTION 6 TROUBLESHOOTING


GROUP 1 BEFORE TROUBLESHOOTING

1. INTRODUCTION

When a trouble is occurred in the machine, this section will help an service man to repair the machine with easy.

The trouble of machine is parted Hydraulic & Mechanical system, Electrical system and Mechatronics system. At each system part, an service man can check the machine according to the troubleshooting process diagram.

※ **Before carrying out troubleshooting procedure, check monitoring menu in the cluster.**

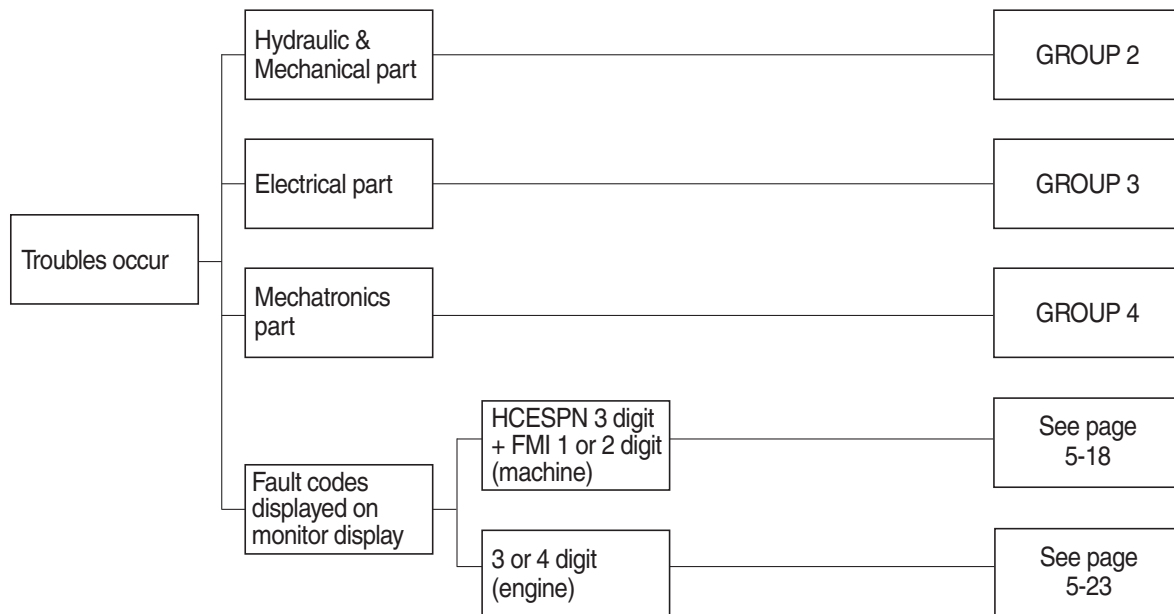


2. DIAGNOSING PROCEDURE

To carry out troubleshooting efficiently, the following steps must be observed.

STEP 1. Study the machine system

Study and know how the machine is operating, how the system is composing, what kinds of function are installed in the machine and what are specifications of the system components by the machine service manual.


Especially, deepen the knowledge for the related parts of the trouble.

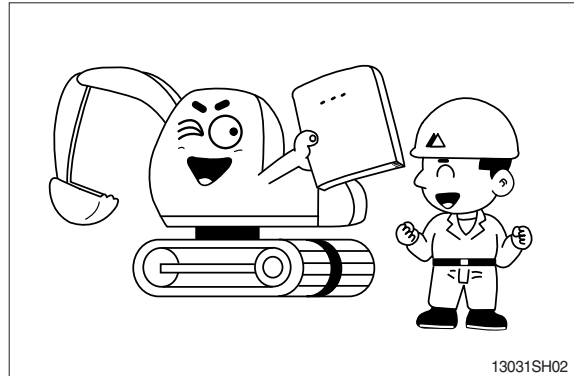

STEP 2. Ask the operator

Before inspecting, get the full story of malfunctions from a witness --- the operator.


- 1) How the machine is used and when it is serviced?
- 2) When the trouble was noticed and what work the machine was doing at that time?
- 3) What is the phenomenon of the trouble?
Was the trouble getting worse, or did it come out suddenly for the first time?
- 4) Did the machine have any troubles previously? If so, which parts were repaired before.

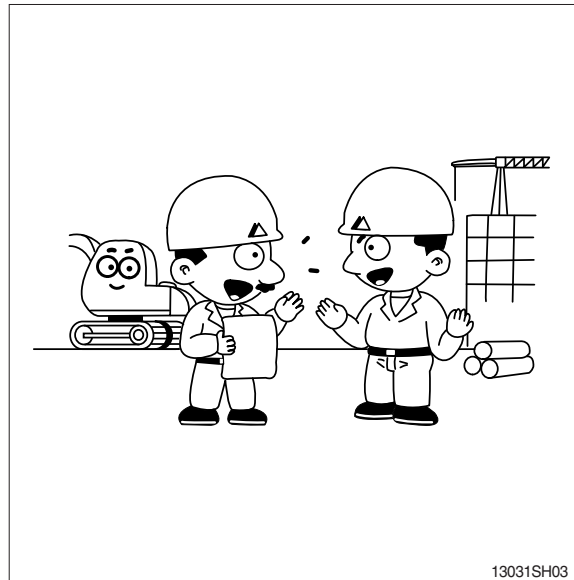

STEP 3. Inspect the machine

Before starting troubleshooting, check the machine for the daily maintenance points as shown in the operator's manual.


And also check the electrical system including batteries, as the troubles in the electrical system such as low battery voltage, loose connections and blown out fuses will result in malfunction of the controllers causing total operational failures of the machine.

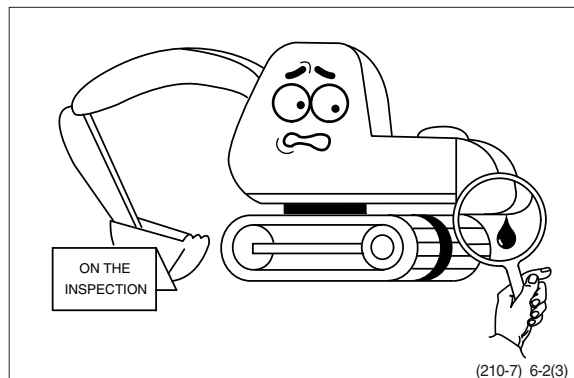

STEP 4. Inspect the trouble actually on the machine


In case that some trouble cannot be confirmed, obtain the details of the malfunction from the operator.

Also, check if there are any incomplete connections of the wire harnesses or not.

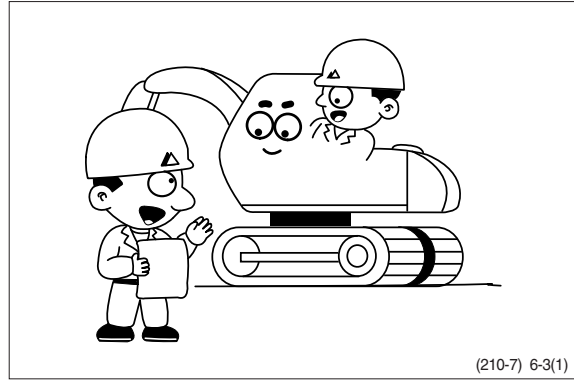

STEP 5. Perform troubleshooting


According to where the trouble parts are located, hydraulic & mechanical system part or electrical system part or mechatronics system part, perform troubleshooting the machine refer to the each system part's troubleshooting process diagram.

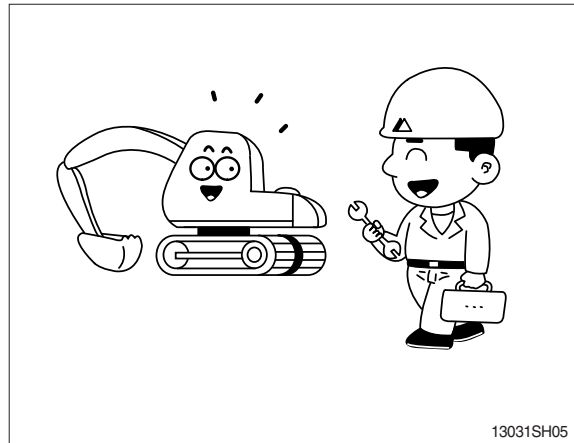

STEP 6. Trace a cause

Before reaching a conclusion, check the most susceptible causes again. Try to trace what the real cause of the trouble is.

Make a plan of the appropriate repairing procedure to avoid consequential malfunctions.

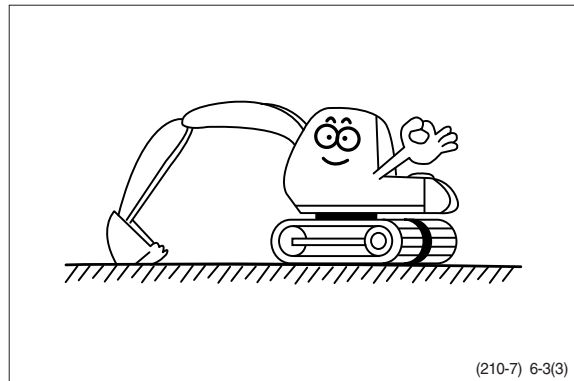

GROUP 2 HYDRAULIC AND MECHANICAL SYSTEM

1. INTRODUCTION

1) MACHINE IN GENERAL

(1) If even a minor fault is left intact and operation is continued, a fatal failure may be caused, entailing a large sum of expenses and long hours of restoration.

Therefore when even a small trouble occurs, do not rely on your intuition and experience, but look for the cause based on the troubleshooting principle and perform maintenance and adjustment to prevent major failure from occurring. Keep in mind that a fault results from a combination of different causes.

(2) The following lists up commonly occurring faults and possible causes with this machine. For the troubleshooting of the engine, refer to the coming troubleshooting and repair.

(3) When carrying out troubleshooting, do not hurry to disassemble the components. It will become impossible to find the cause of the problem.

(4) Ask user or operator the following.


- ① Was there any strange thing about machine before failure occurred?
- ② Under what conditions did the failure occur?
- ③ Have any repairs been carried out before the failure?

(5) Check before troubleshooting.


- ① Check oil and fuel level.
- ② Check for any external leakage of oil from components.
- ③ Check for loose or damage of wiring and connections.

2) MACHINE STATUS MONITORING ON THE CLUSTER

(1) The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu.

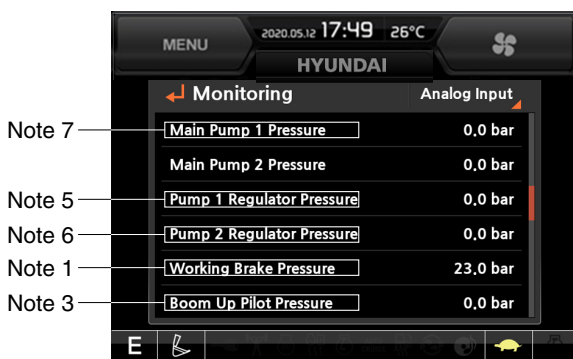

Analog 1

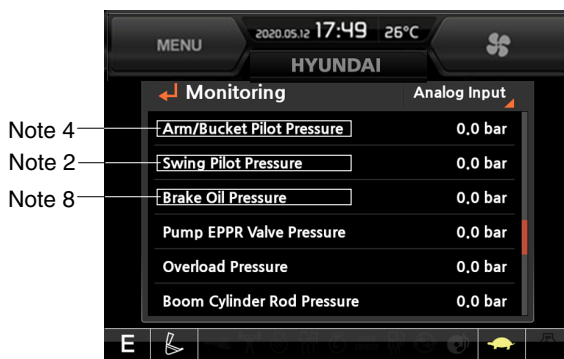

Analog 2


140WF6HS01

(2) Specification


| No. | Description | Specification |
|--------|---------------------------|--|
| Note 1 | Work pilot pressure | $40 \begin{smallmatrix} +2 \\ 0 \end{smallmatrix}$ bar |
| Note 2 | Swing pilot pressure | 0~40 bar |
| Note 3 | Boom up pilot pressure | 0~40 bar |
| Note 4 | Arm/bucket pilot pressure | 0~40 bar |
| Note 5 | Pump 1 regulator pressure | 0~50 bar |
| Note 6 | Pump 2 regulator pressure | 0~50 bar |
| Note 7 | Pump 1 pressure | 350 bar |
| Note 8 | Brake oil pressure | 60 ± 3 bar |

2. DRIVE SYSTEM

1) UNUSUAL NOISE COMES OUT OF PUMP CONNECTION

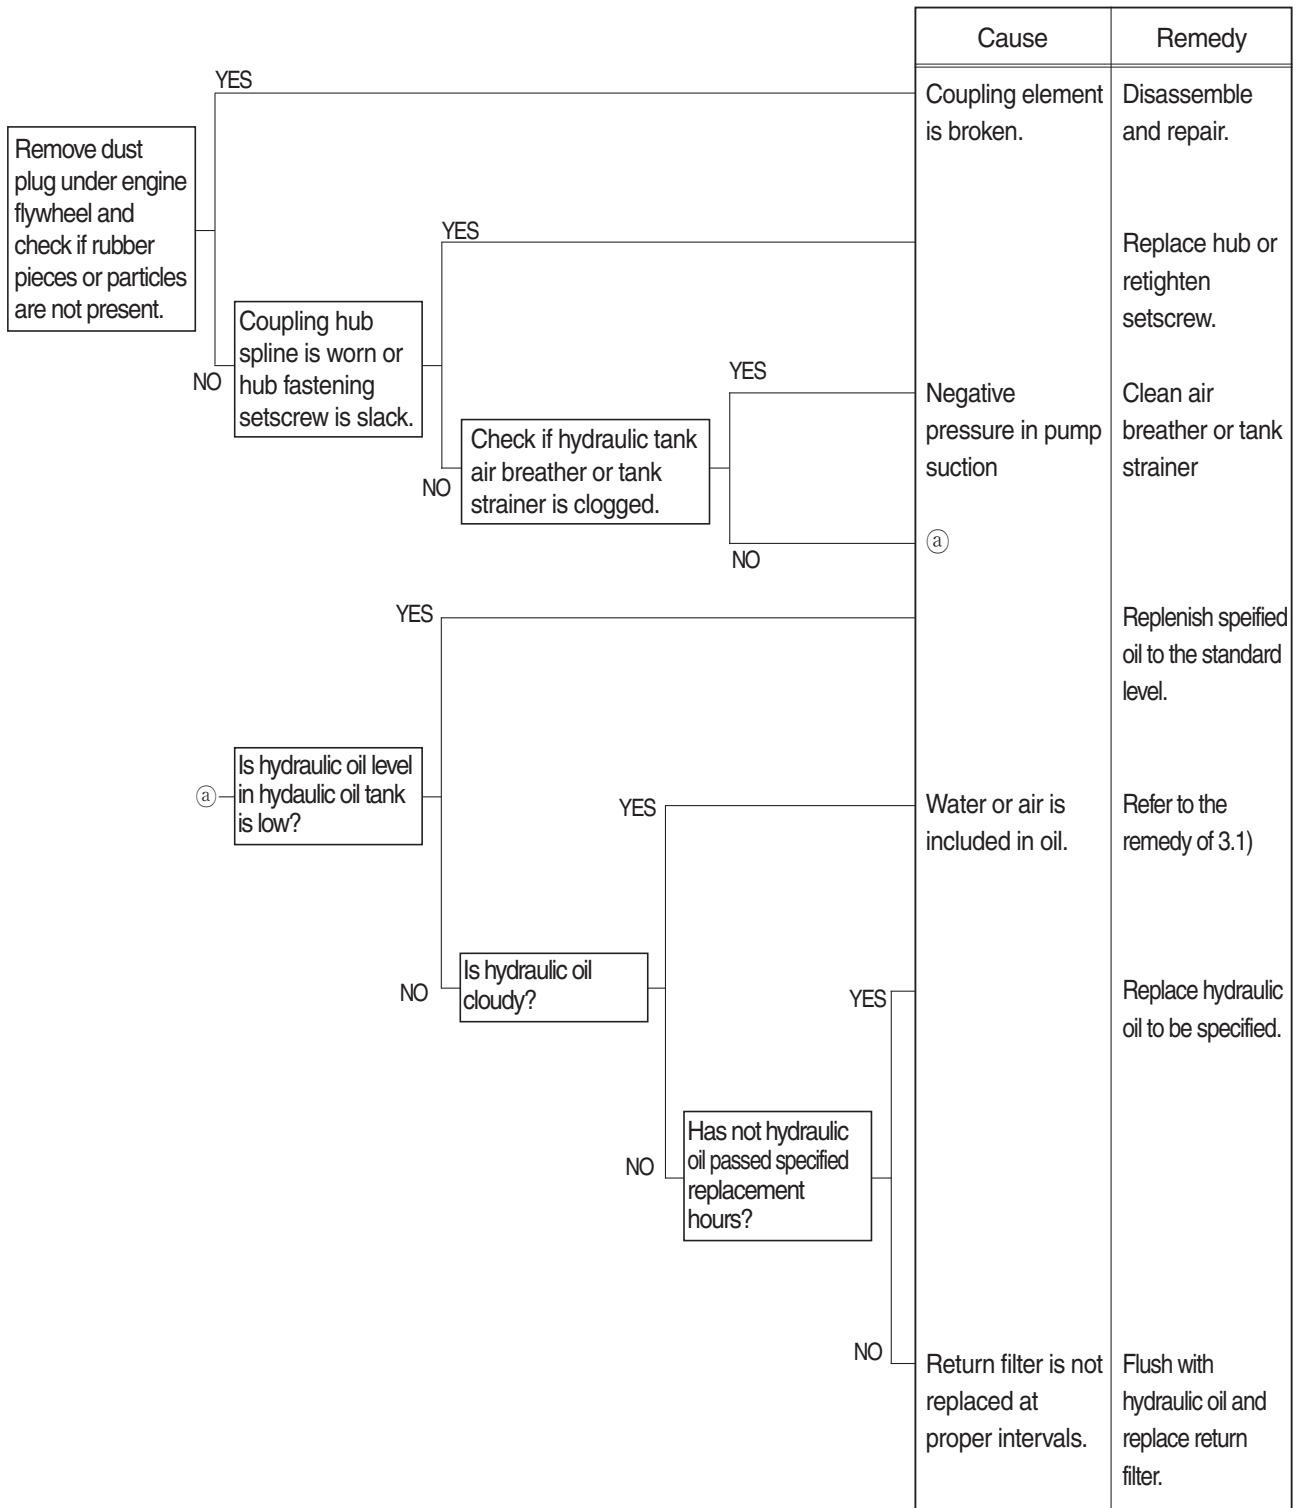


2) ENGINE STARTS BUT MACHINE DOES NOT OPERATE AT ALL

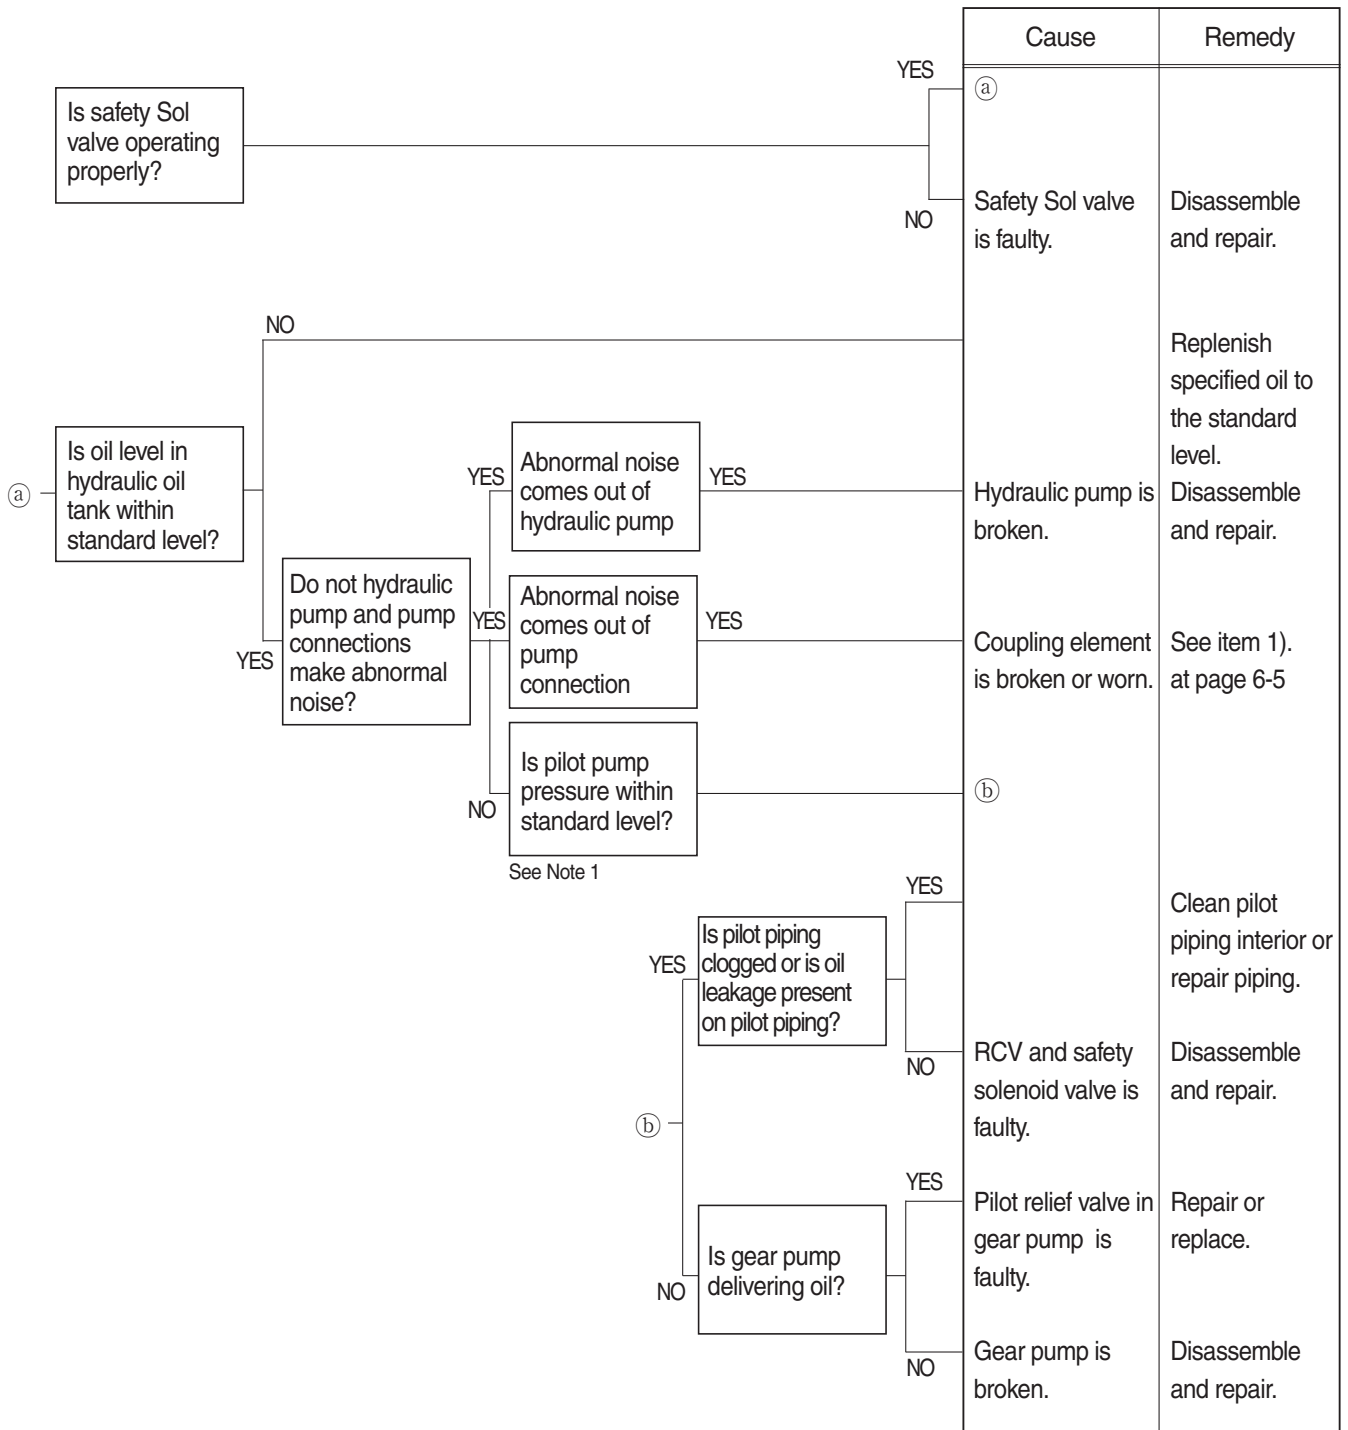


3. HYDRAULIC SYSTEM


1) HYDRAULIC OIL IS CLOUDY

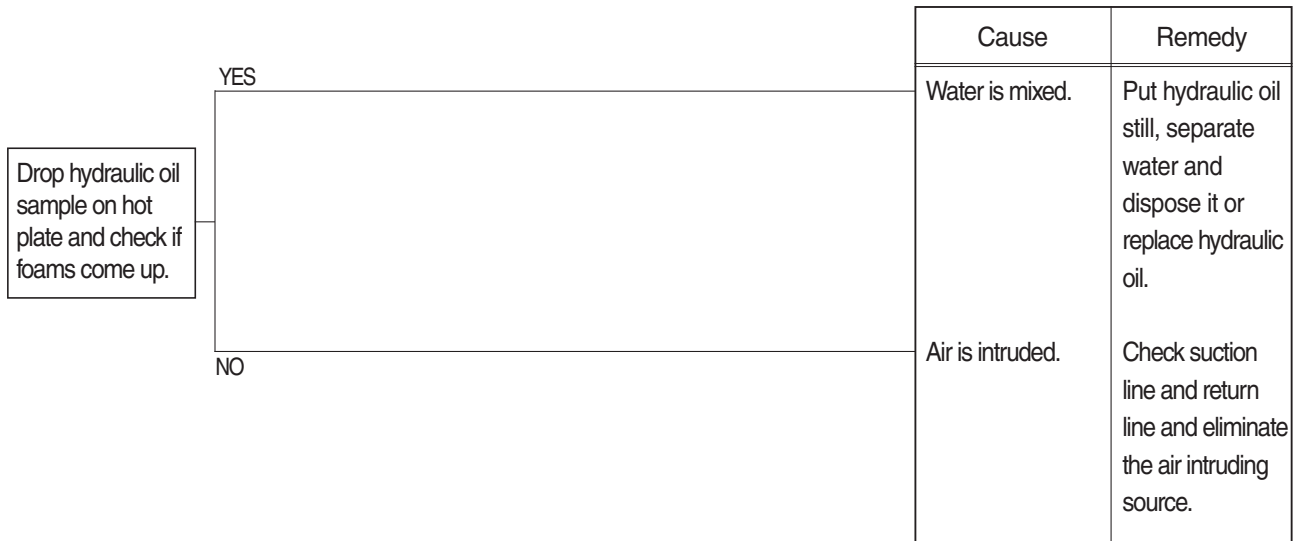


2) HYDRAULIC OIL TEMPERATURE HAS RISEN ABNORMALLY

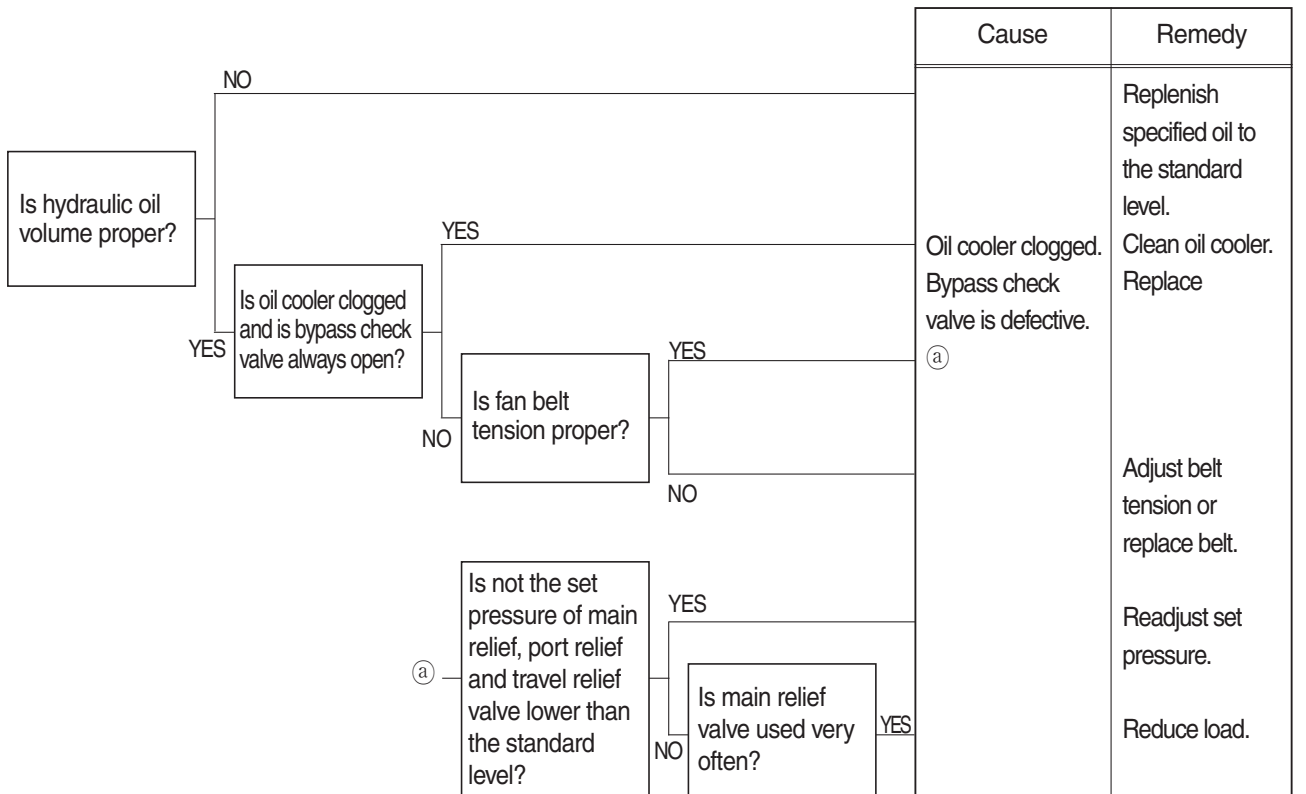


3) CAVITATION OCCURS WITH PUMP

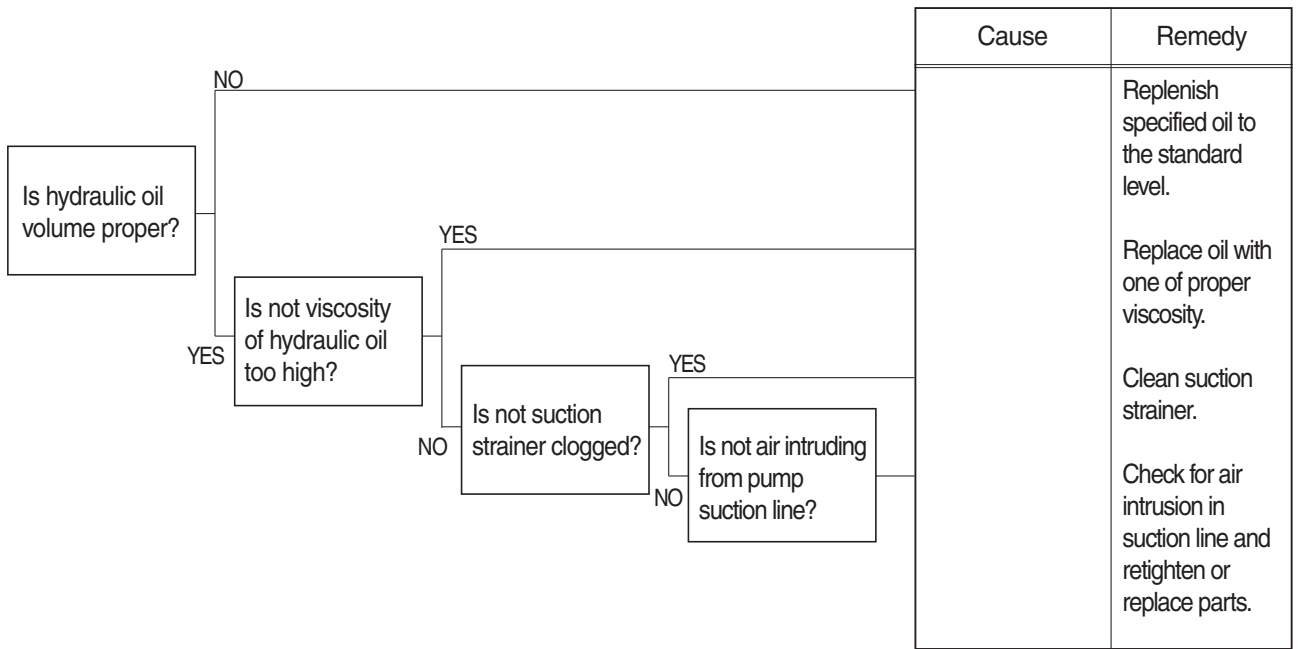


4) HYDRAULIC OIL IS CONTAMINATED

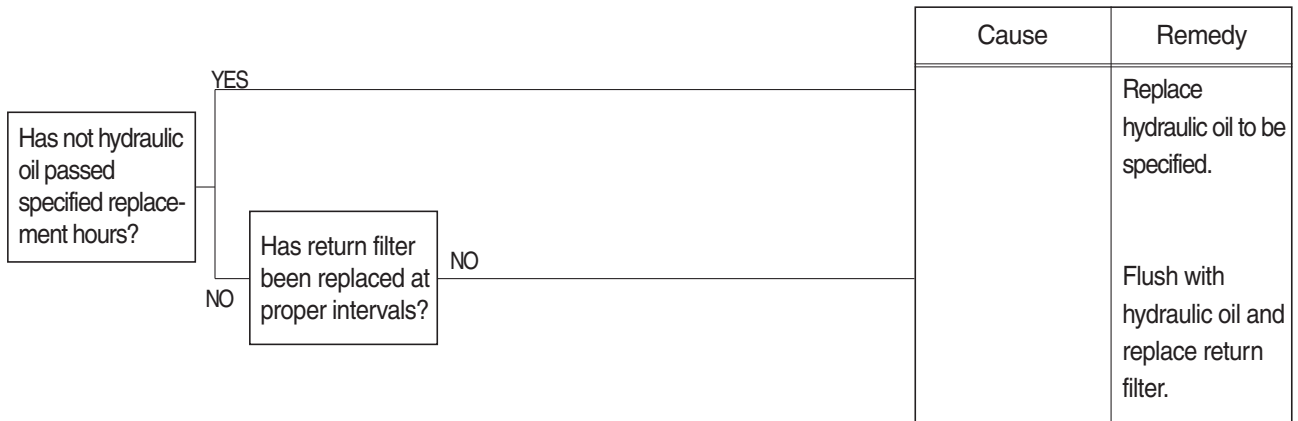


2) SWING SPEED IS LOW

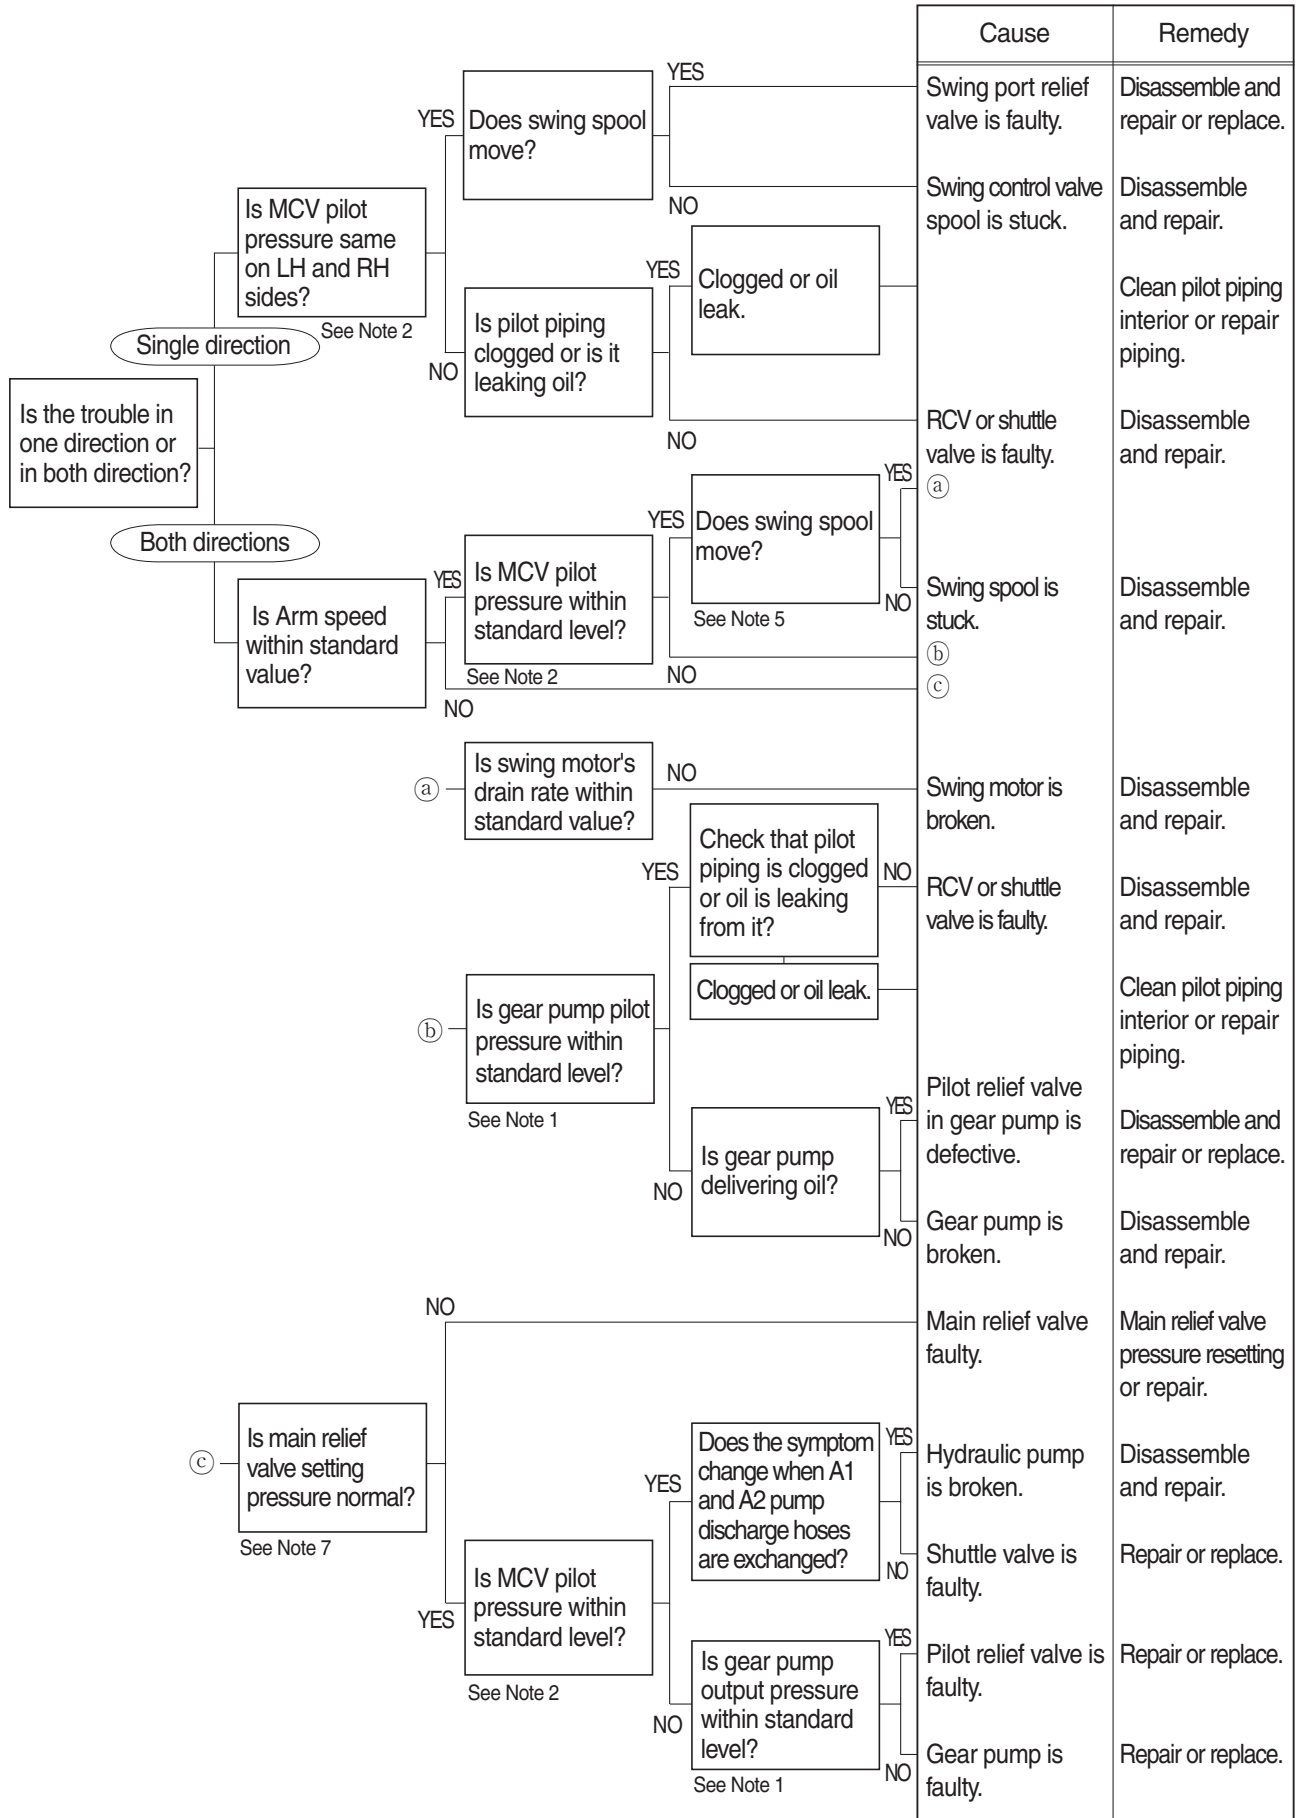


3) SWING MOTION IS IMPOSSIBLE IN ONE DIRECTION

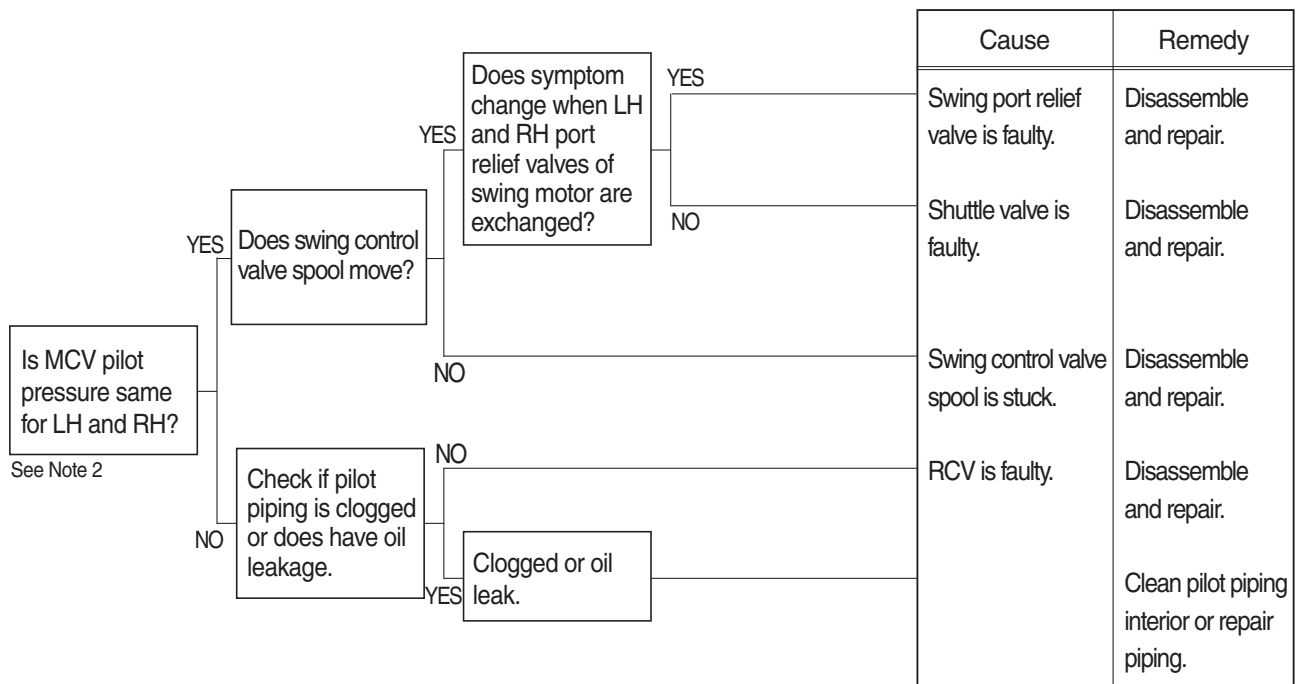


4) MACHINE SWINGS BUT DOES NOT STOP

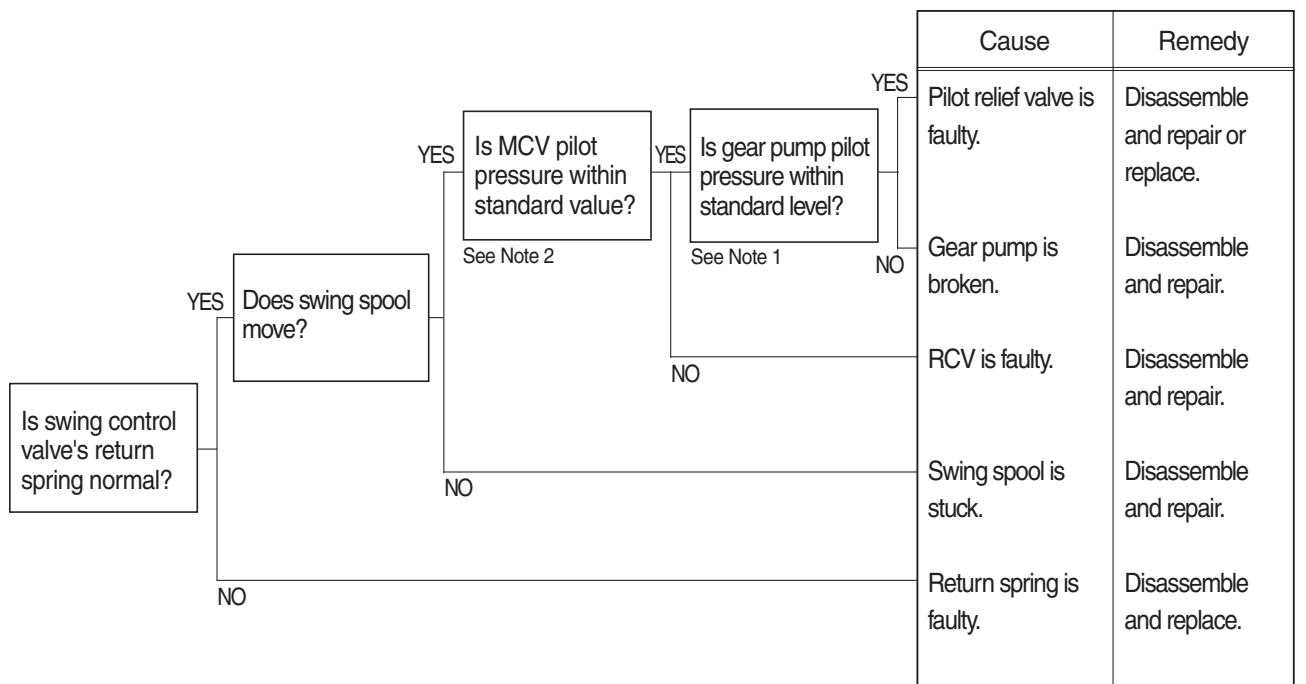


5) THE SWING UNIT DRIFTS WHEN THE MACHINE IS AT REST ON A SLOPE

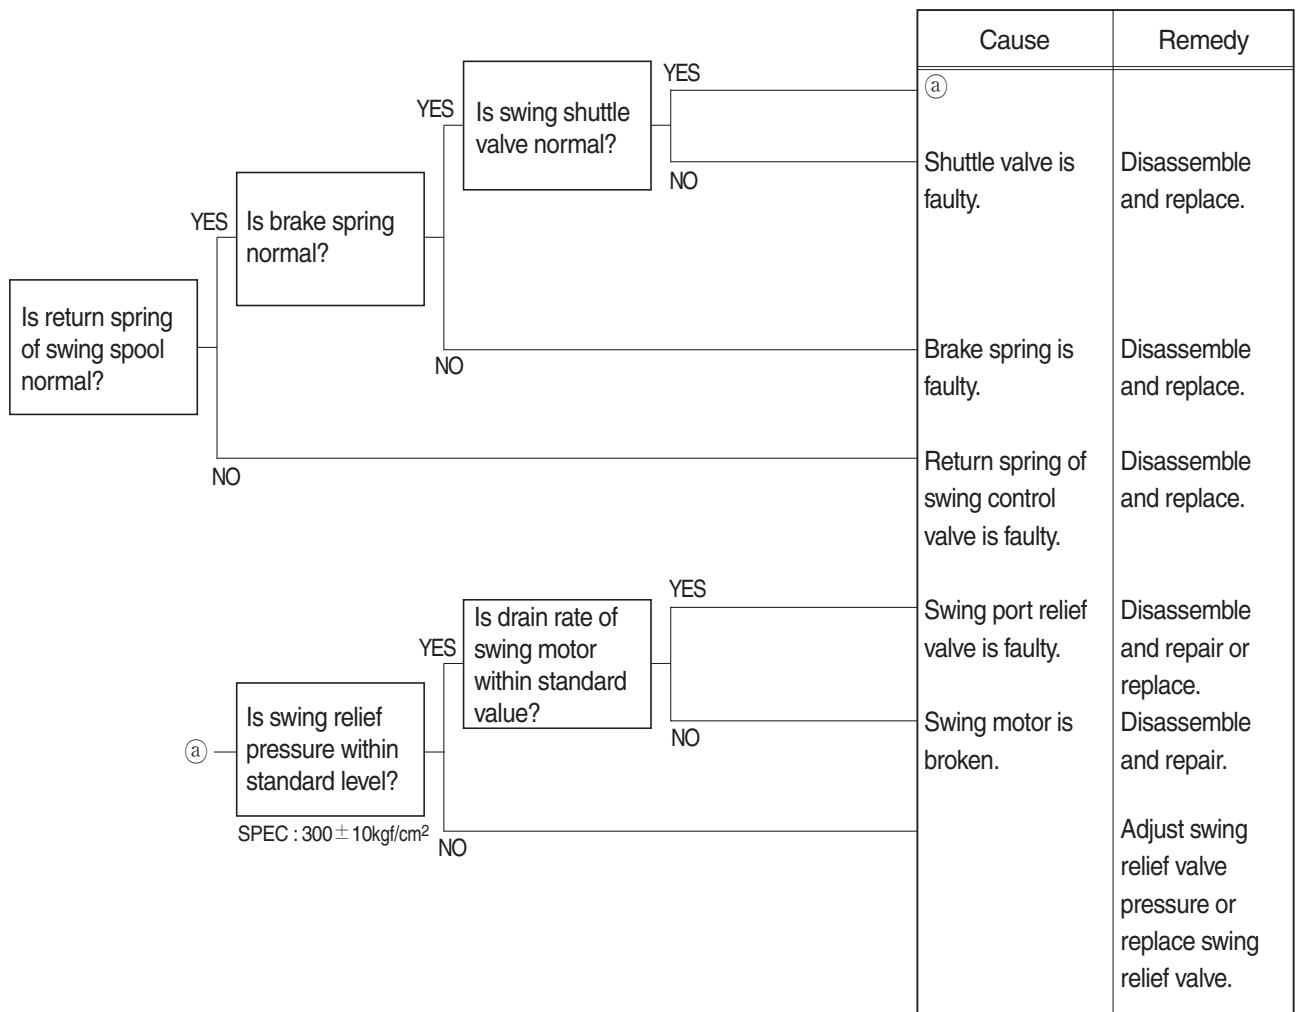

6) LARGE SHOCK OCCURS WHEN STOP SWINGING

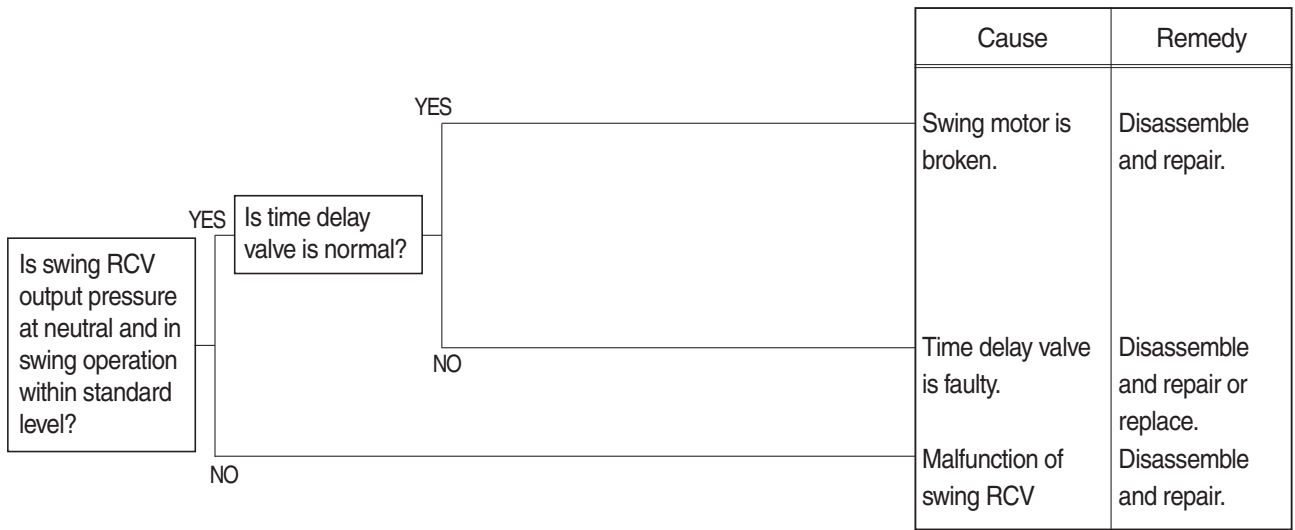


7) LARGE SOUND OCCURS WHEN STOP SWINGING

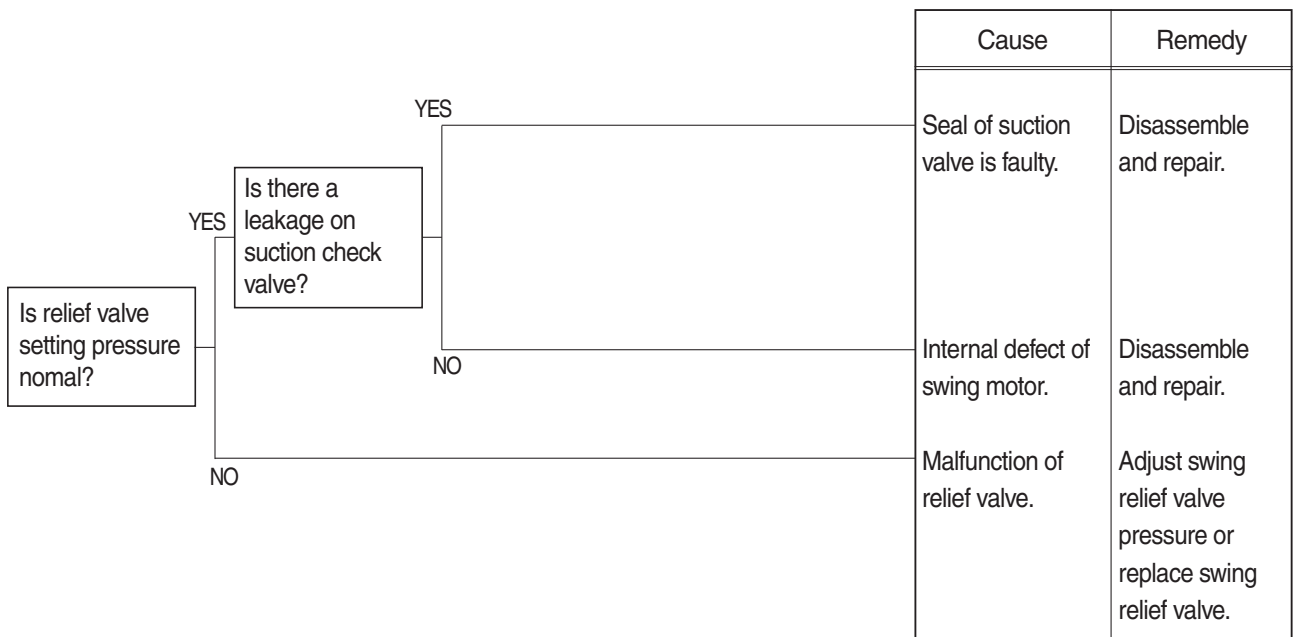


5. TRAVEL SYSTEM

1) TRAVEL DOES NOT FUNCTION

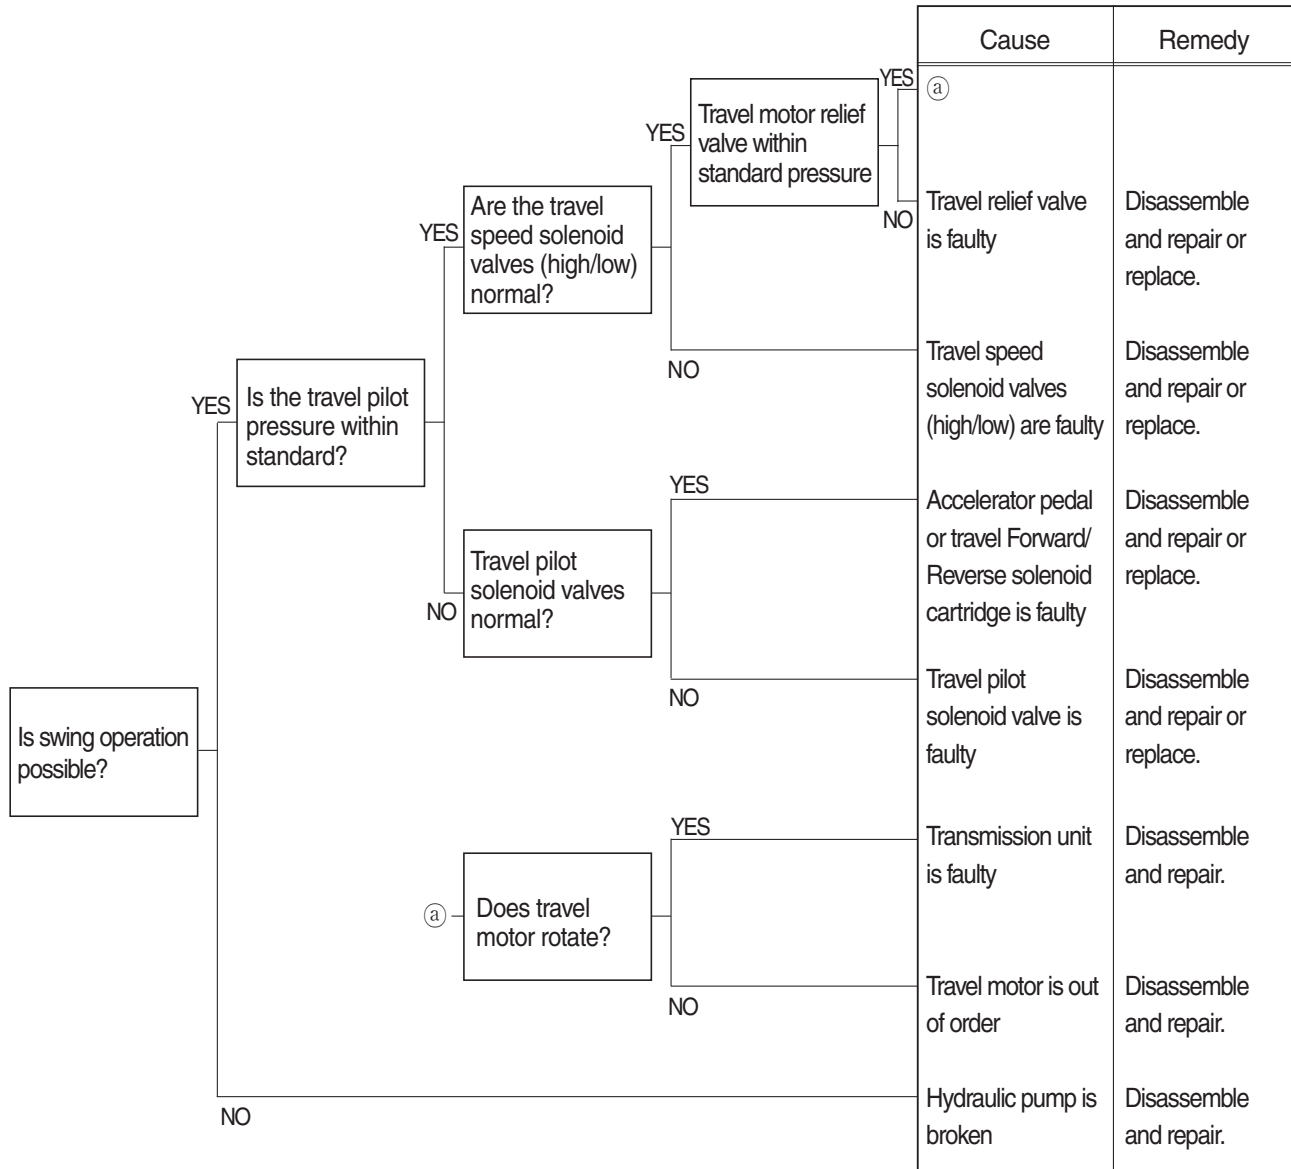

2) TRAVEL ACTION IS POWERLESS (travel only)

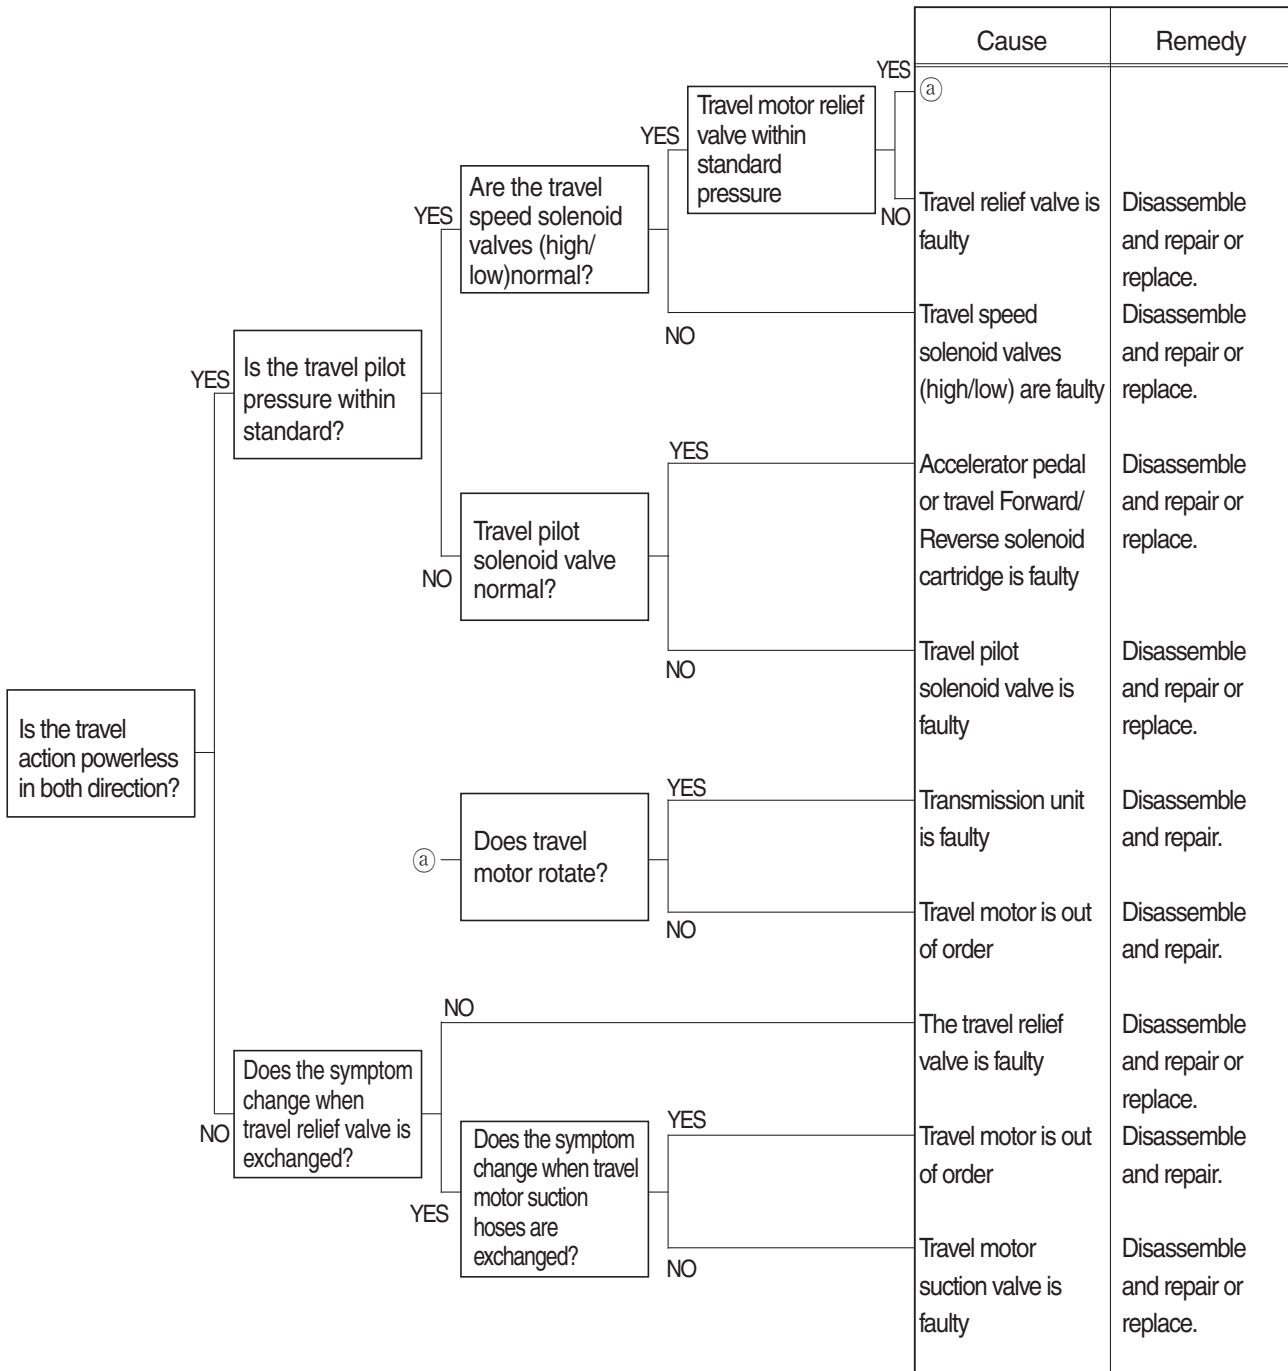

3) THE HYDRAULIC MOTOR DOES NOT GET STARTED


| | | Cause | Remedy |
|--|--|--|---|
| The hydraulic motor does not get started | | The spool does not work properly. (The spool keeps fully open) | Screw the fitting bolts one more time with correct tightening torque. If the spool turns out to be damaged, it should be repaired or the new one should be used |
| | | The anti-avitation check valve does not work properly. (The check valve is kept open.) | Ditto |

4) IT TAKES TIME TO ACCELERATE THE MOTOR

| | | Cause | Remedy |
|---------------------------------------|--|--|---|
| It takes time to accelerate the motor | | The spool does not work properly. | Screw the fitting bolts one more time with correct tightening torque. If the spool turns out to be damaged, it should be repaired, or the new one should be used. |
| | | The orifice for closing the counterbalance is clogged. | Remove the foreign matter by disassembling and cleaning. |
| | | Wrong setting of pressure of the relief valve. | Adjust at the correct value. If the relief valve turns out to be out of order, the new one should be used. |

5) IT IS NOT POSSIBLE TO REDUCE THE MOTOR SMOOTHLY

 It is not possible to reduce the motor smoothly



| Cause | Remedy |
|---|--|
| The orifice for closing the counterbalance is clogged. The opening of the neutral position of the spool is clogged. | Remove the foreign matter by disassembling and cleaning. |
| Wrong setting of pressure of the relief valve. | Adjust at the correct value. If the relief valve turns out to be out of order, the new one should be used. |

6) EXTRAORDINARY NOISE IS HEARD WHEN SUDDENLY REDUCING THE SPEED FROM THE HIGH-SPEED MODE


It takes time to accelerate the motor




| Cause | Remedy |
|---|--|
| The anti-cavitation valve does not work properly. | Screw the fitting bolts one more time with correct tightening torque. If the valve turns out to be damaged, is should be repaired. |

6. ATTACHMENT SYSTEM


1) BOOM OR ARM ACTION IS IMPOSSIBLE AT ALL

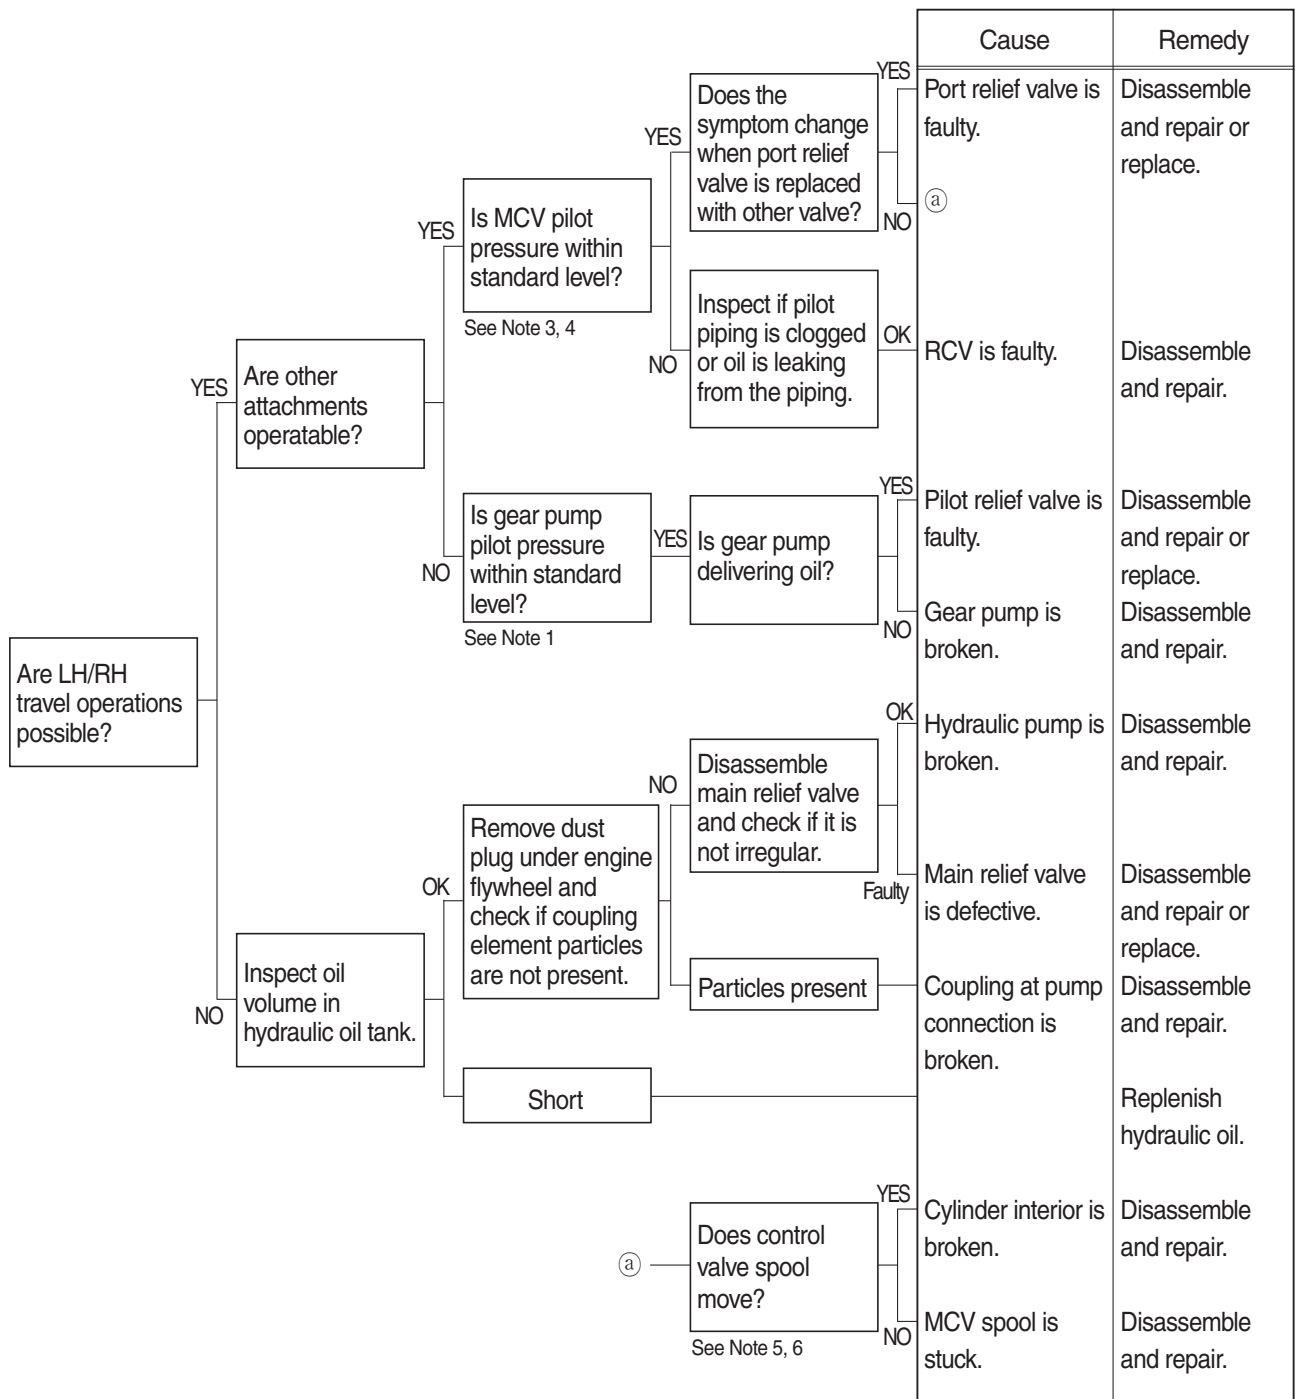


2) BOOM, ARM OR BUCKET SPEED IS LOW

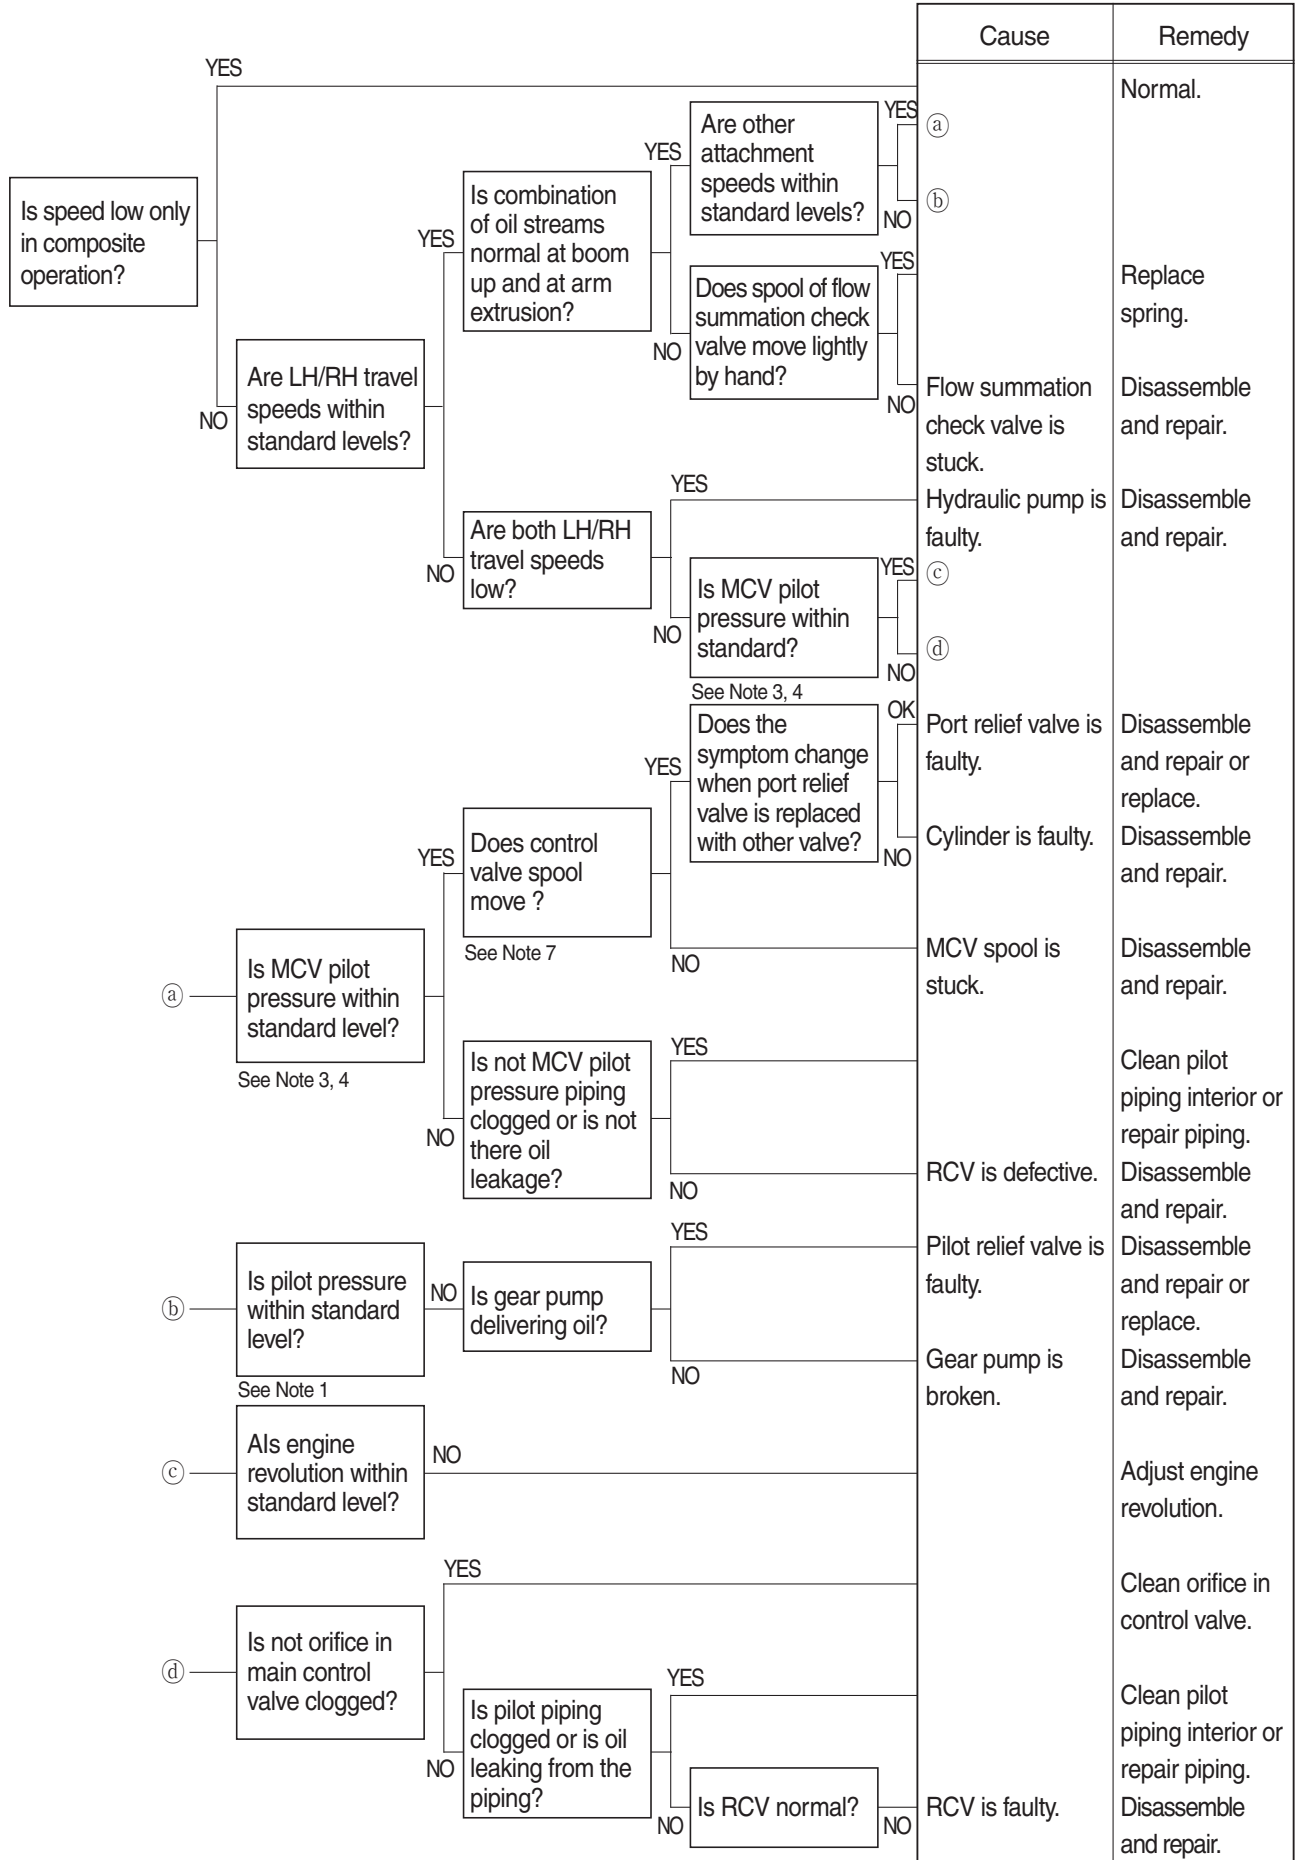


3) BOOM, ARM OR BUCKET CYLINDER EXTENDS OR CONTRACTS ITSELF AND ATTACHMENT FALLS

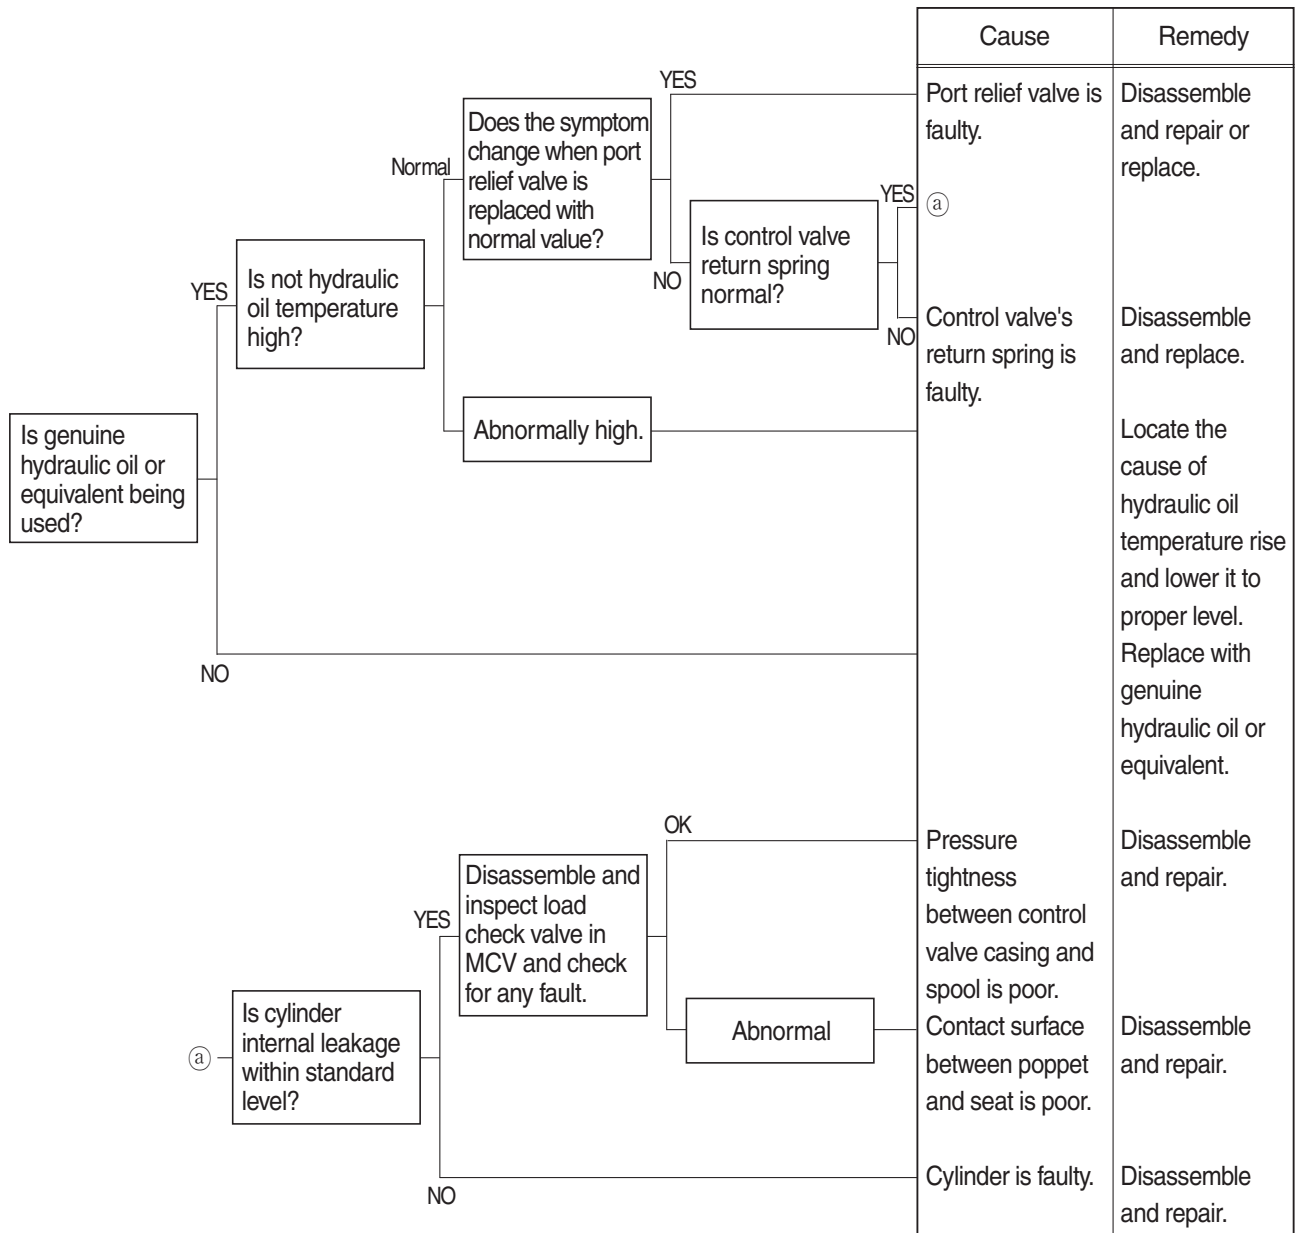

4) BOOM, ARM OR BUCKET POWER IS WEAK

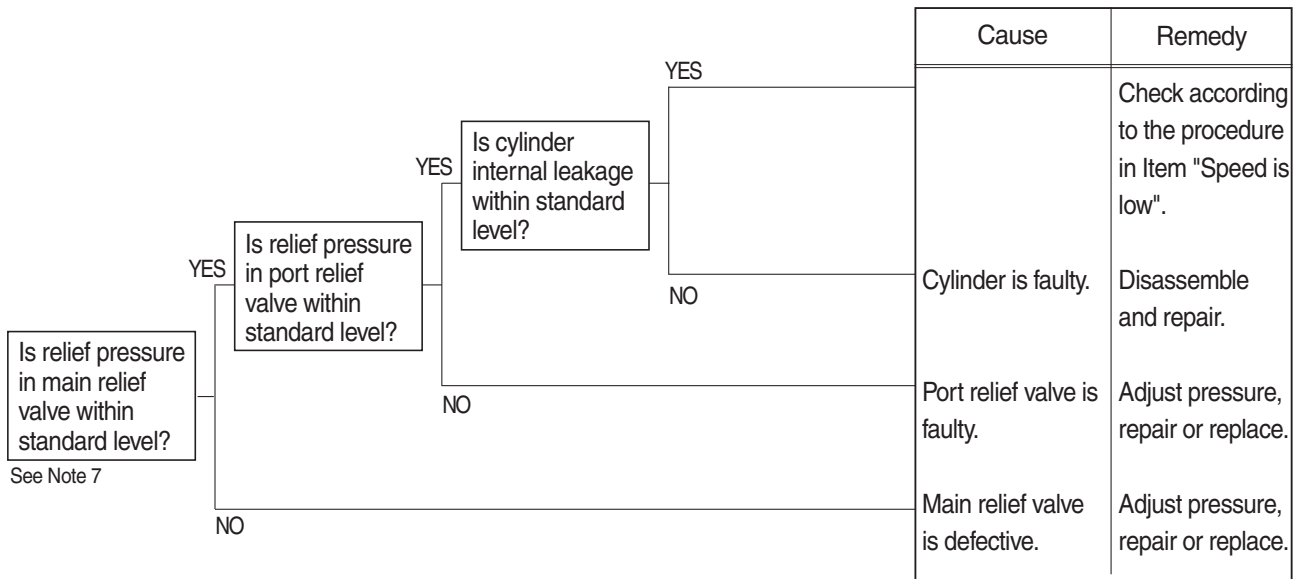

5) ONLY BUCKET OPERATION IS TOTALLY IMPOSSIBLE

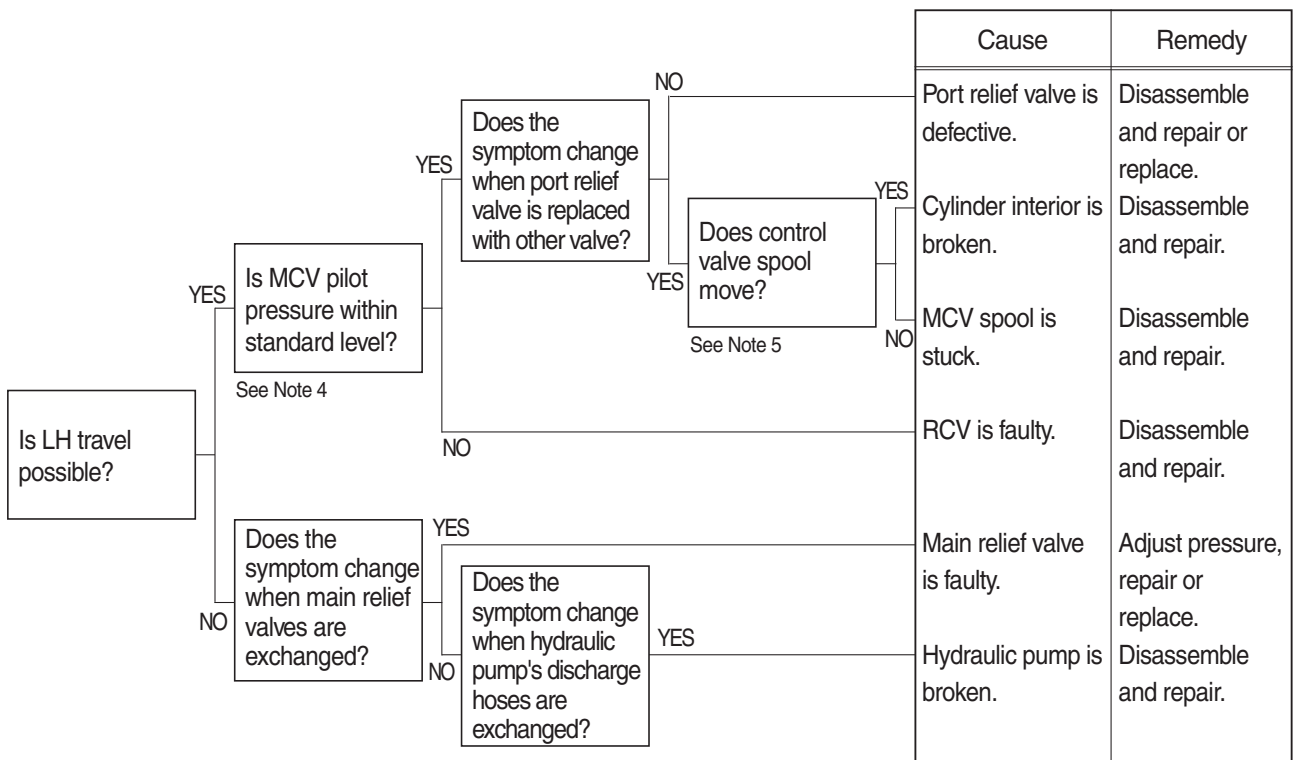

6) BOOM MAKES A SQUEAKING NOISE WHEN BOOM IS OPERATED


| | | Cause | Remedy |
|--|-----|--------------------------------------|--|
| Is boom foot pin greased sufficiently? | YES | | Frictional noise occurs between the sliding faces of boom cylinder's oil seal and boom proper. ※ Frictional noise will disappear if they are kept used. |
| | NO | Boom foot pin has run out of grease. | Supply grease to it. ※ If seizure is in an initial stage, supply sufficient grease. If seizure is in a grown state, correct it by paper lapping or with an oil stone. |

7) TIME LAG OF MACHINE WORKING IS LARGE.


| | | Cause | Remedy |
|---|-----|----------------------------------|-------------------------|
| Is overload relief valve for each spool working properly? | YES | | Refer to 2) |
| | NO | Overload relief valve is faulty. | Disassemble and repair. |

※ HOW TO CHECK INTERNAL BOOM CYLINDER LEAKAGE

1. Lower the bucket teeth to the ground with bucket cylinder fully retracted and arm cylinder rod retracted almost in full.

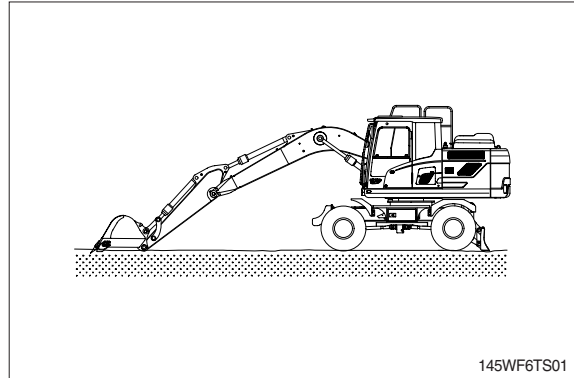


2. Disconnect hose (A) from rod side of boom cylinder and drain oil from cylinders and hose. (put cups on piping and hose ends)

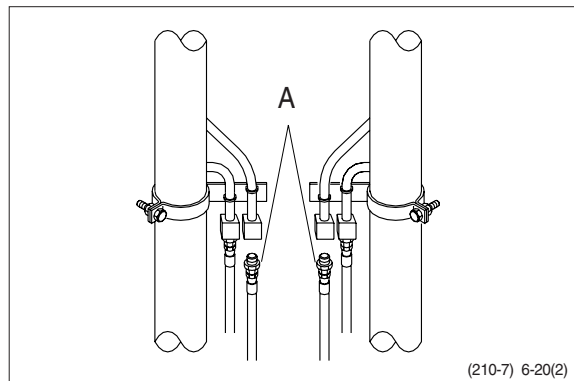

3. Raise bucket OFF the ground by retracting the arm cylinder rod.

If oil leaks from piping side and boom cylinder rod is retracted there is an internal leak in the cylinder.

If no oil leaks from piping side and boom cylinder rod is retracted, there is an internal leak in the control valve.

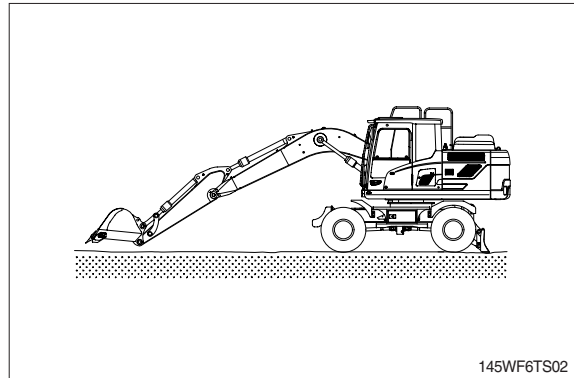

7. FRONT AXLE AND REAR AXLE


| Problem | Cause | Correction |
|--------------------------|---|---|
| Insufficient braking | 1. Incorrect adjustment | Inspect disc thickness and if discs are usable readjust brakes to the specifications in the manual. |
| | 2. Brake discs worn out | Inspect disc thickness and replace if necessary. |
| | 3. Incorrect brake fluid | Replace all seals in axle and master cylinder that have made contact with the incorrect fluid and all brake hoses. If incorrect fluid leaked into axle oil, seals and O-rings in axle must be replaced. |
| | 4. Loss of brake fluid | Inspect for and repair any leaks in outside circuit or master cylinder. If caused by incorrect brake fluid see correction No.3. If leak is to the outside replace the O-rings between the center and intermediate housings. If leak is to the inside replace above O-rings and brake piston O-rings. |
| | 5. Overheated axle causing brake fluid to vaporize. (Brake return when axle cools) | See "overheating" problem. |
| Soft brake pedal | 6. Air in brake circuit | Bleed air in brake circuit. |
| Ineffective safety brake | 7. Incorrect adjustment | See correction No.1. |
| | 8. Brake disc worn out | See correction No.2. |
| Overheating | 9. Oil level wrong | Drain, flush and refill oil to proper level. |
| | 10. Too small of a brake gap | Readjust brakes to the specifications. |
| | 11. Park brake dragging | Unlock the brake and adjust the correct gap. |
| | 12. Incorrect brake fluid in system | See correction No.3. |
| | 13. No free-pedal at master cylinder | Readjust brake pedal. |
| | 14. Restriction in brake lines | Inspect for and replace damage lines. |
| | 15. Restriction in return line of brake servo system | Inspect for and replace damaged return line. Inspect for and remove any filter, tee'd in line or any other source of back pressure from the return line. |
| 16. Incorrect lubricant | Change the retaining rings of the brake circuit and brake pump. | |
| Diff-lock inoperative | 17. If manual control, loose or misadjusted linkage | Inspect and correct linkage and readjust. |
| | 18. If hydraulic control, problems in the hydraulic or electrical circuits of the machine. | Refer to the hydraulic or electrical section in this manual. |
| | 19. If hydraulic control problems in actuating cylinder (noteable through loss of hydraulic oil or increase of the oil level in axle) | Rebuilt cylinder. |
| | 20. If with limit slip differential, worn discs | Replace discs. |

| Problem | Cause | Correction |
|--|---|---|
| Oil coming out of breather | 21. Leak in internal brake system 22. Leak in diff-lock actuating cylinder | See correction No.2 and No.3. See correction No.19. |
| Nospin indexing noise when driving straight ※ With nospin, fatigue damage can occur on the side with the larger tire. | 23. Unequal tire pressure left and right 24. Different style, size or brand of tires between left and right hand side | Inflate tires to the recommended pressure in this manual, or until the rolling radius is equal. Change tires to make the rolling radius equal. Vary the tire pressure within the specifications until the rolling radius is equal. |
| Noise during coast and under power the same | 25. Wheel bearings damaged | Replace and adjust |
| Noise under power greater than during coast | 26. Low oil level 27. Incorrect lubricant 28. Ring and pinion worn 29. Worn ring and pinion bearings 30. Worn planetary gears or bearings | Refill oil to proper level See correction No.16. Inspect through top cover. Replace and adjust. Replace and adjust Replace. |
| Noise during coast greater than under power | 31. Loose pinion nut 32. Only pinion bearing damaged | Inspect ring, pinion and pinion bearings. If undamaged, retighten nut. See correction No.29. |
| Noise during turn (Without nospin) | 33. Worn spider and/or side gears | Replace. |
| A stick slip noise when going from forward to reverse | 34. Worn or damaged cardan shaft 35. Loose wheel 36. Articulation box joint and achsel shaft damaged 37. Spider pins loose in diff-carrier 38. Damaged or missing spider and/or side gear washers | Inspect and replace. Inspect for wheel and wheel stud damage. Replace if needed and retorque lugnuts. Inspect and replace. Inspect through top cover. Replace. See correction No.33. |

GROUP 3 ELECTRICAL SYSTEM


1. WHEN STARTING SWITCH IS TURNED ON, MONITOR PANEL DISPLAY DOES NOT APPEAR (SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 11, 15.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

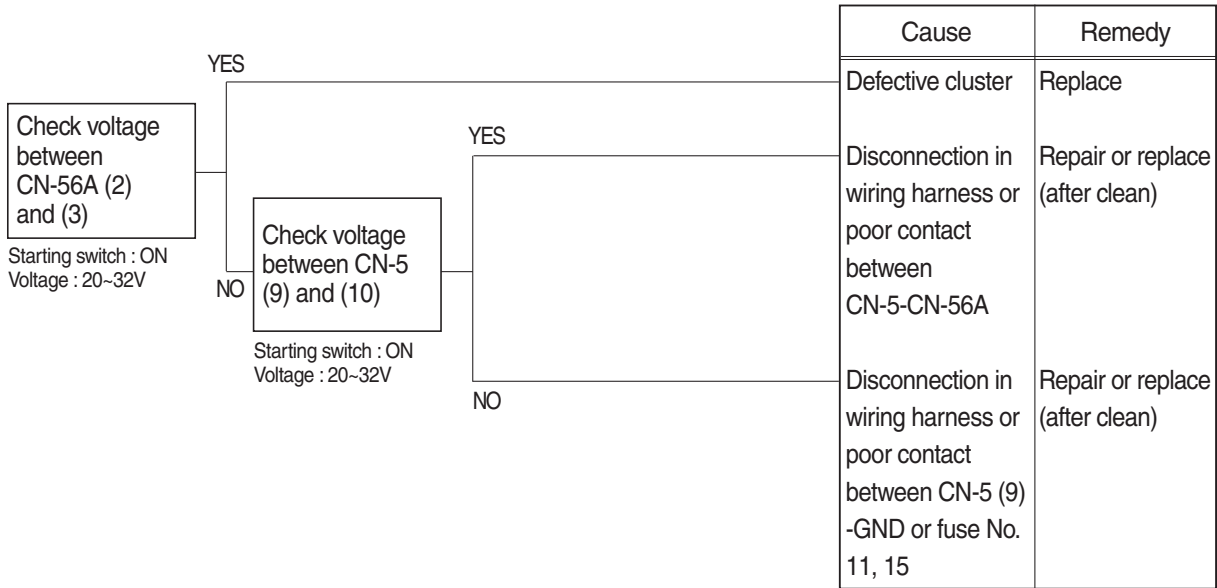

Check voltage


| | |
|-----|--------|
| YES | 20~32V |
| NO | 0V |

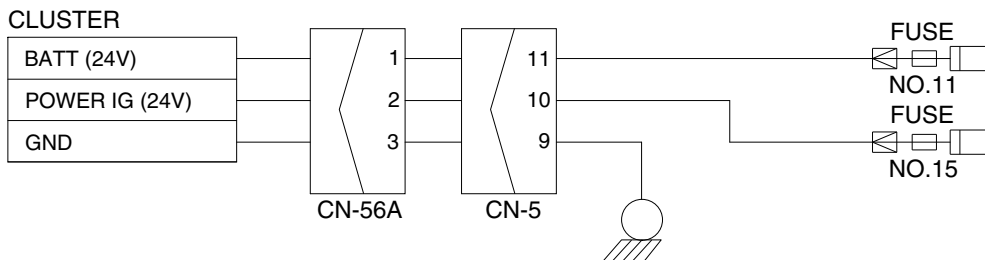

210WF6ES01


2.  **COMMUNICATION ERROR FLASHES ON THE CLUSTER (HCESPN 840, FMI 2)**
(SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

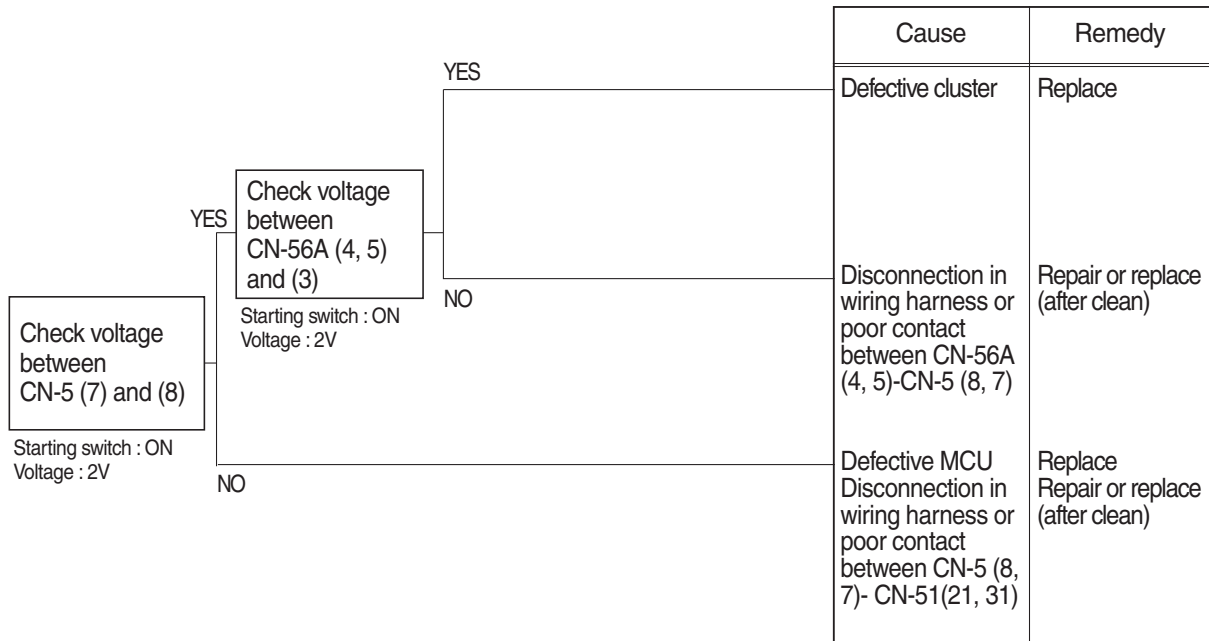


Check voltage

| | |
|-----|----|
| YES | 2V |
| NO | 0V |

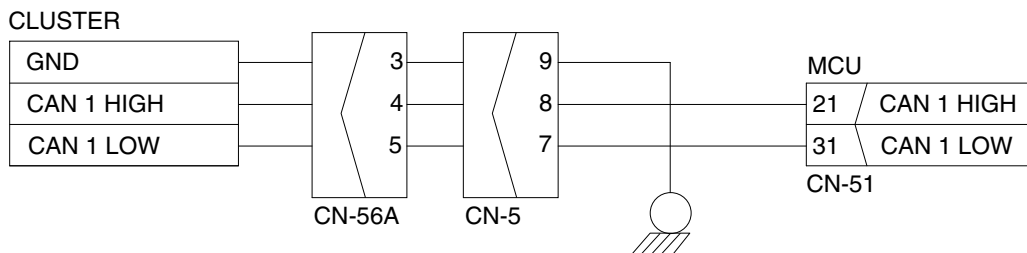


3.  **BATTERY CHARGING WARNING LAMP LIGHTS UP** (Starting switch : ON)
(SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

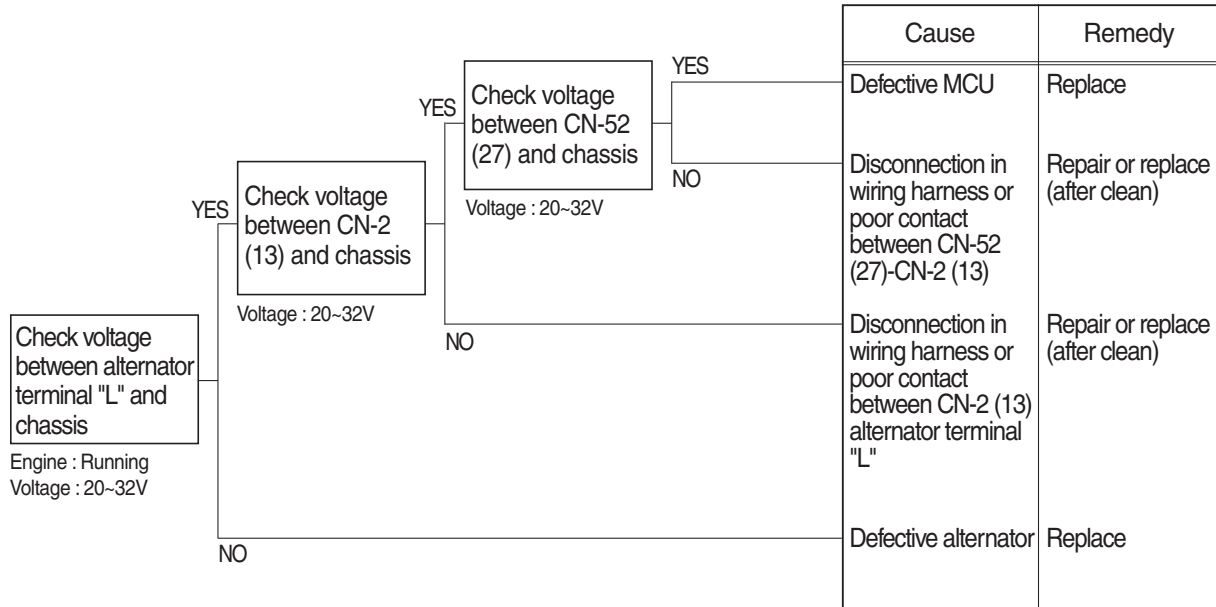

Check voltage



| | |
|-----|--------|
| YES | 20~32V |
| NO | 0V |

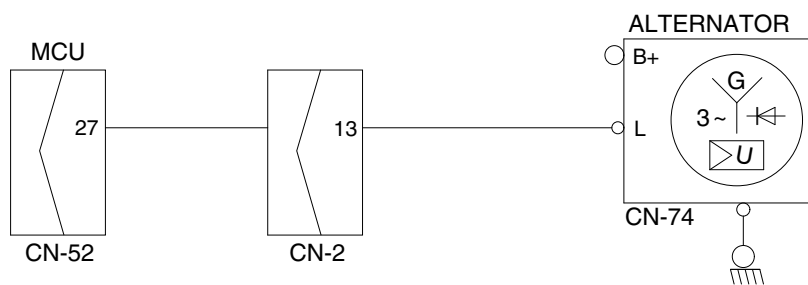

300L6ES03


4.  **WHEN COOLANT OVERHEAT WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

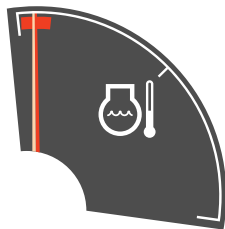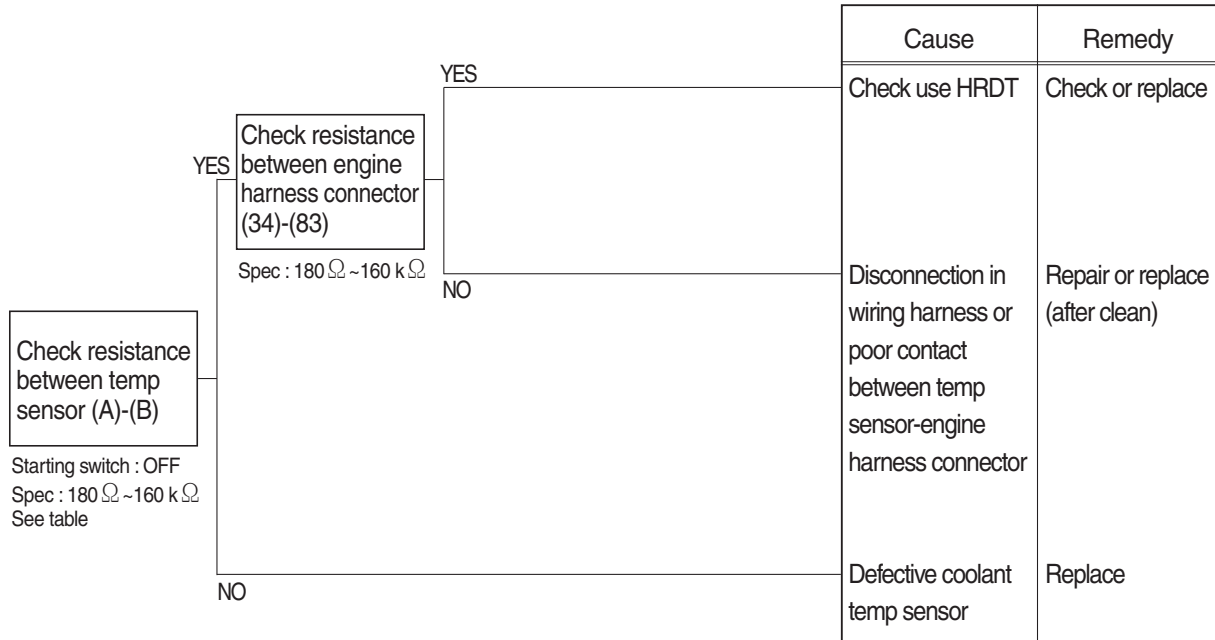

Check Table


| Temperature (°C) | 0 | 25 | 50 | 80 | 95 |
|------------------|-------|----------|---------|---------|---------|
| Resistance (kΩ) | 30~37 | 9.3~10.7 | 3.2~3.8 | 1.0~1.3 | 0.7~0.8 |

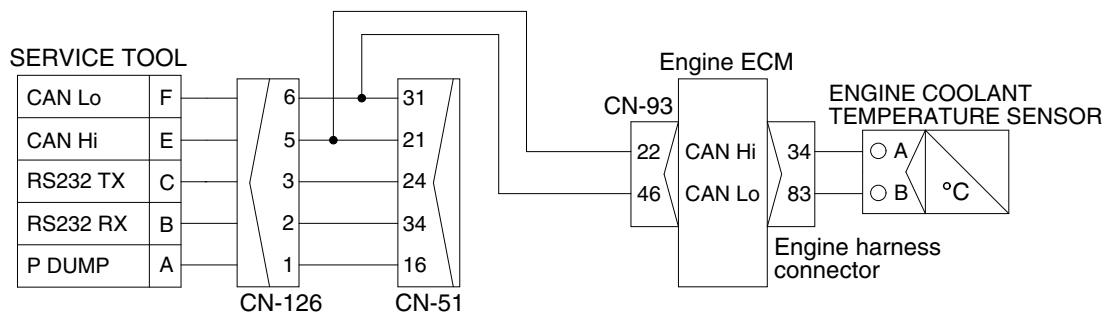

300L6ES04


5.  **WHEN AIR CLEANER WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

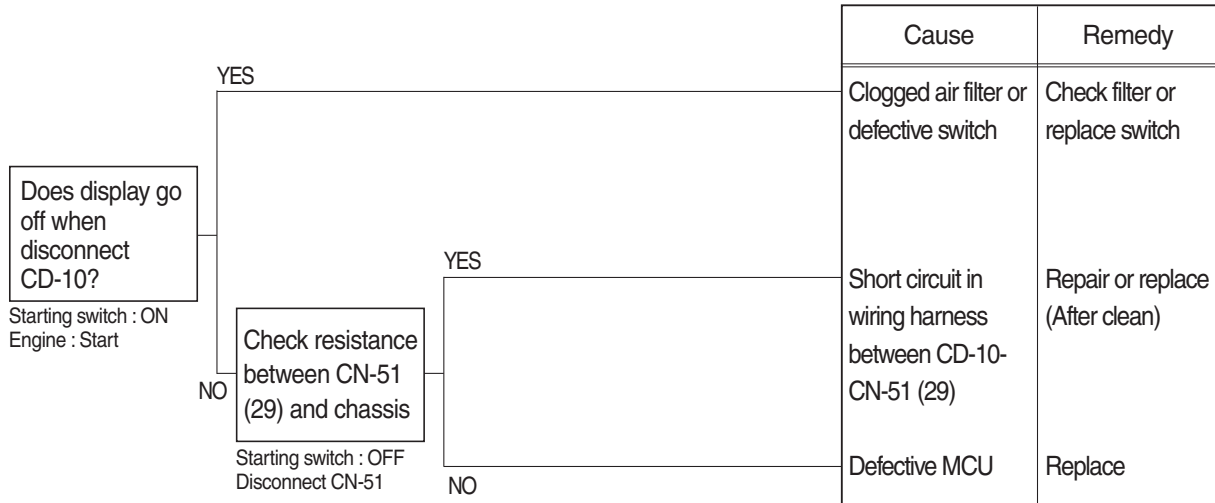

Check resistance



| | |
|-----|---------|
| YES | MAX 1Ω |
| NO | MIN 1MΩ |

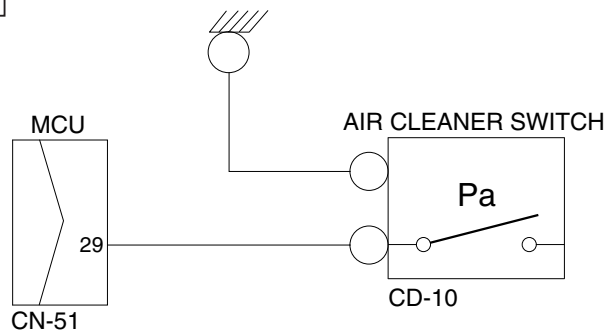

300L6ES06

6.  **WHEN ENGINE OIL PRESSURE WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : -#0507)


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

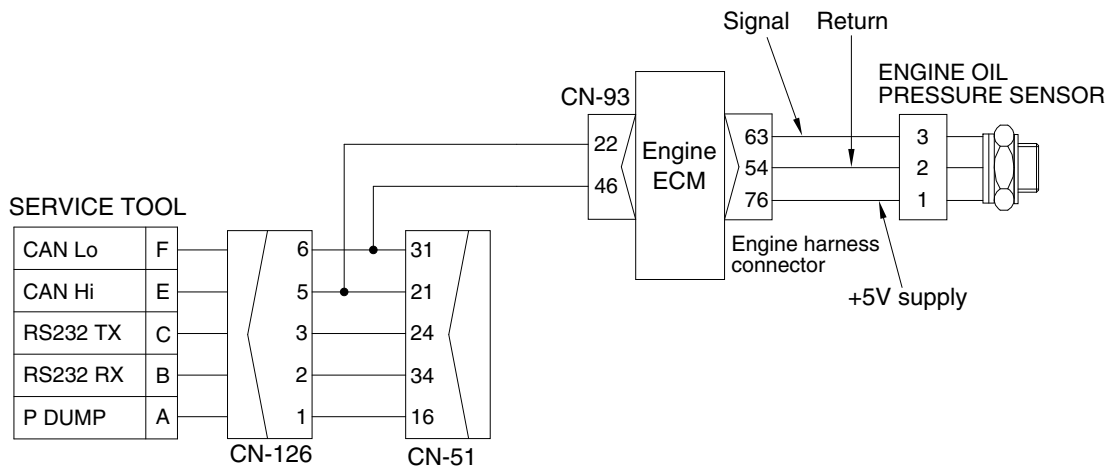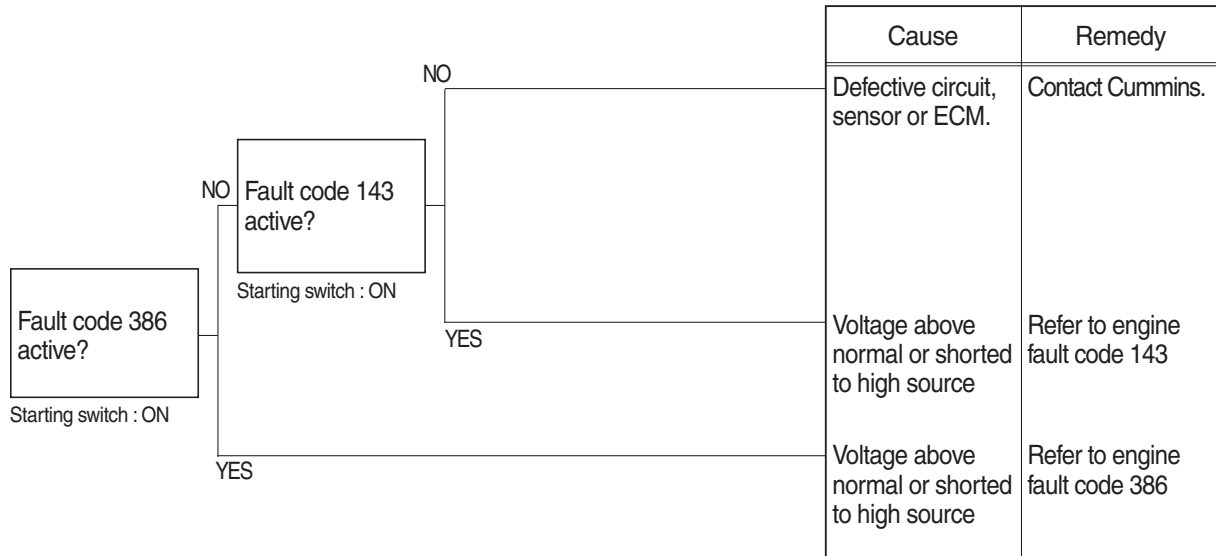


300L6ES07

7.  **WHEN HYDRAULIC OIL TEMPERATURE WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : -#0507)


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

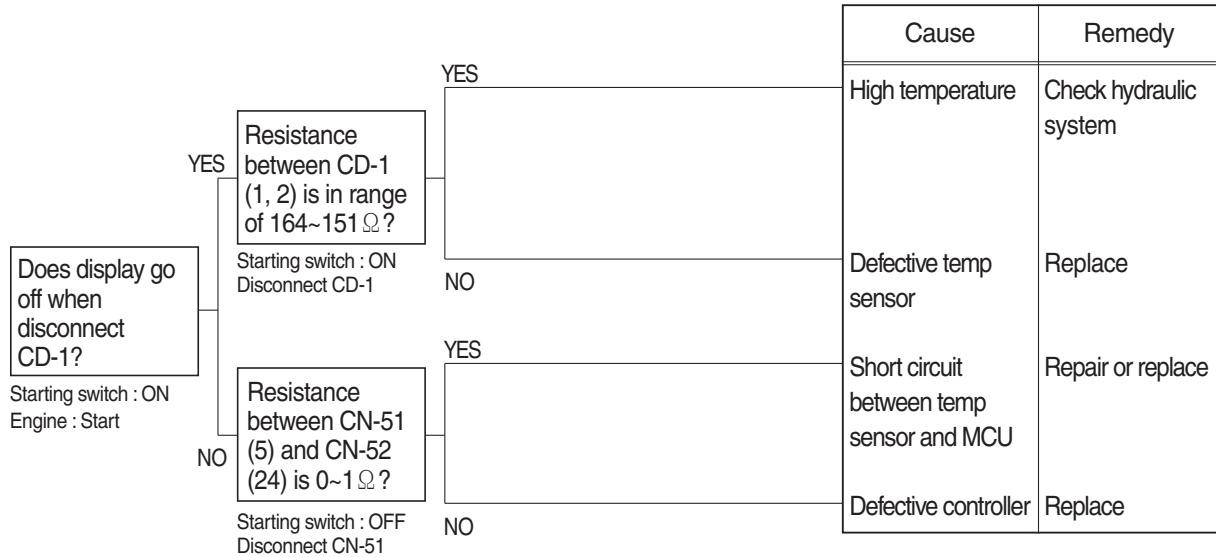

Check Table

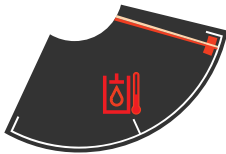


| Temperature (°C) | ~ -30 | ~ -10 | ~ 0 | ~ 40 | ~ 70 | ~ 80 | ~ 90 | ~ 100 | 105~ |
|------------------|-----------------|----------------|---------------|---------------|----------------|-----------------|-----------------|-----------------|----------------|
| Resistance (kΩ) | 22.22 ~31.78 | 8.16 ~10.74 | 5.18 ~ 6.6 | 1.06 ~1.28 | 0.39 ~0.476 | 0.322 ~0.298 | 0.243 ~0.219 | 0.185 ~0.167 | 0.164 0.151 |

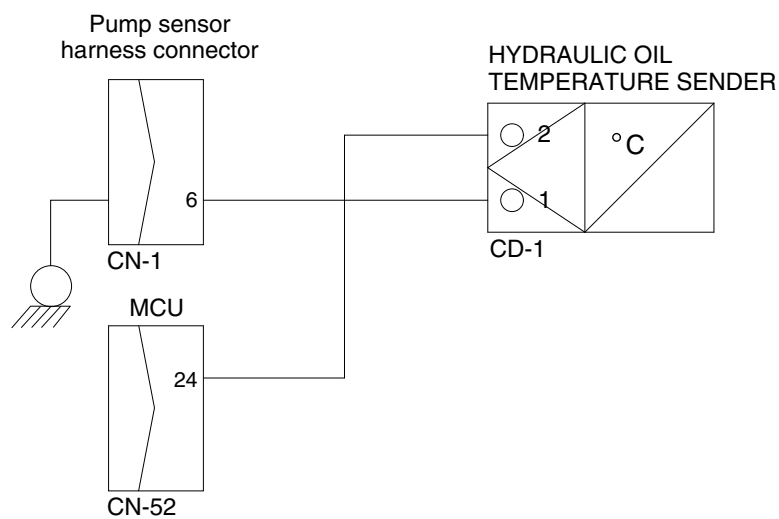

140WF6ES08


8. WHEN COOLANT TEMPERATURE GAUGE DOES NOT OPERATE (HCESPN 304, FMI 3 or 4) (SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

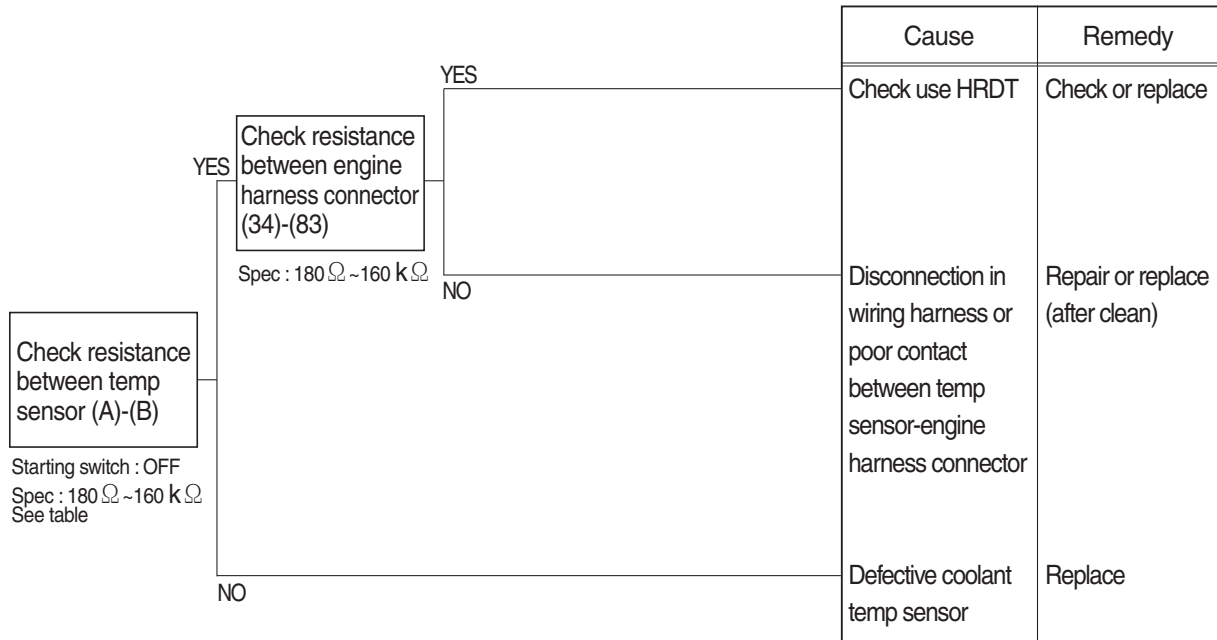

Check Table



| Temperature (°C) | 0 | 25 | 50 | 80 | 95 |
|------------------|-------|----------|---------|---------|---------|
| Resistance (kΩ) | 30~37 | 9.3~10.7 | 3.2~3.8 | 1.0~1.3 | 0.7~0.8 |

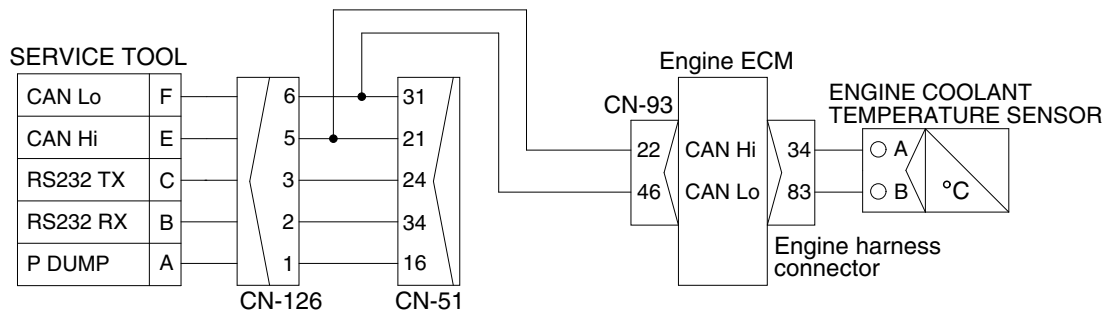

300L6ES04


9. WHEN FUEL GAUGE DOES NOT OPERATE (HCESPN 301, FMI 3 or 4) (SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

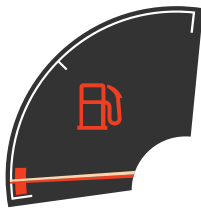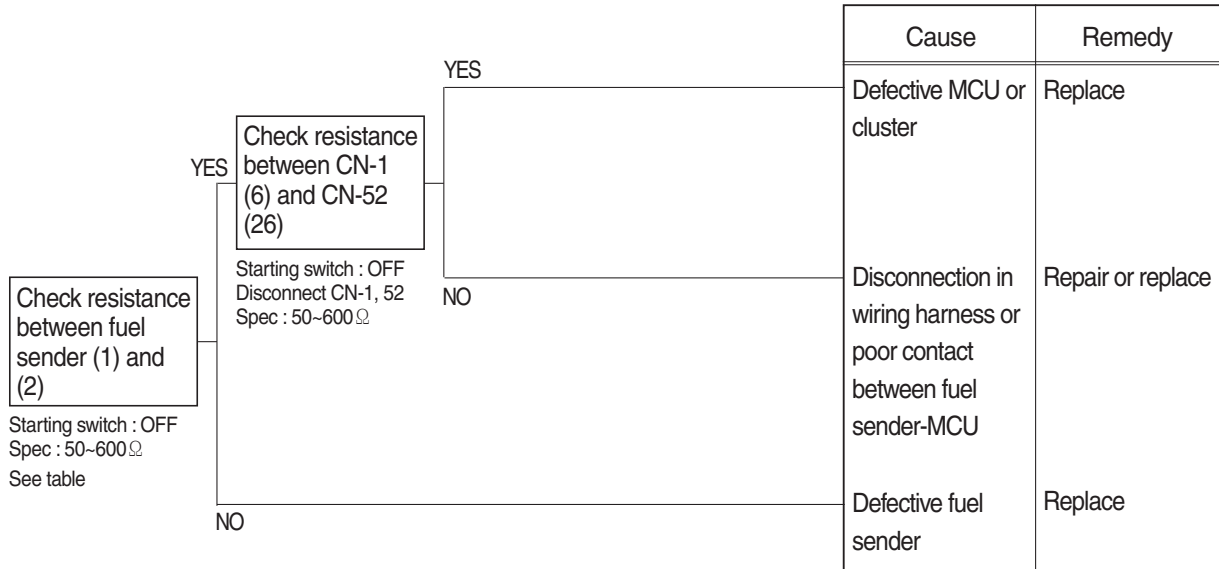

Check Table



| Range | Resistance (Ω) | Range | Resistance (Ω) |
|-------|----------------|---------------|----------------|
| Full | 50 | 5/12 | 400 |
| 11/12 | 100 | 4/12 | 450 |
| 10/12 | 150 | 3/12 | 500 |
| 9/12 | 200 | 2/12 | 550 |
| 8/12 | 250 | 1/12 | 600 |
| 7/12 | 300 | Empty warning | 700 |
| 6/12 | 350 | - | - |

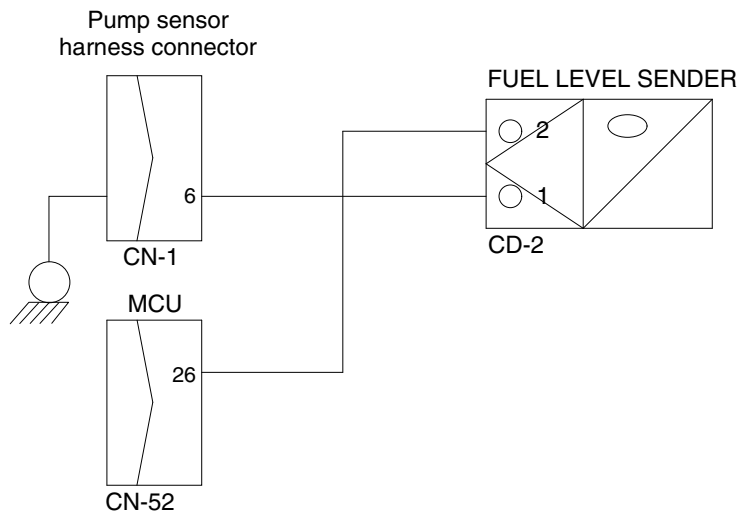

140WF6ES10

10. WHEN SAFETY SOLENOID DOES NOT OPERATE\ (SERIAL NO. : -#0507)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 28.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

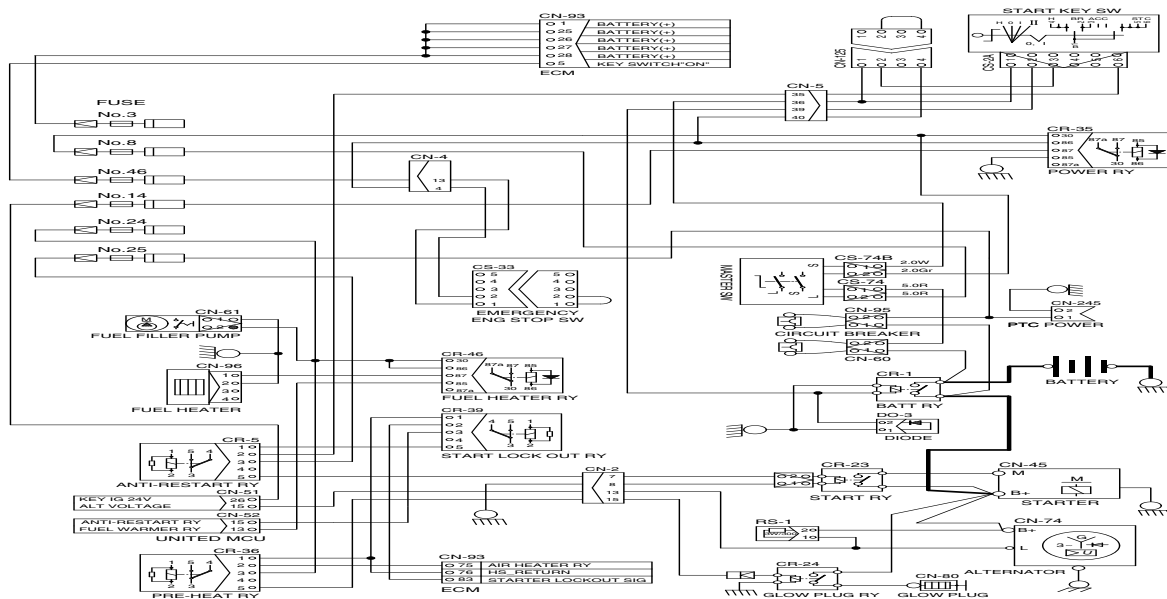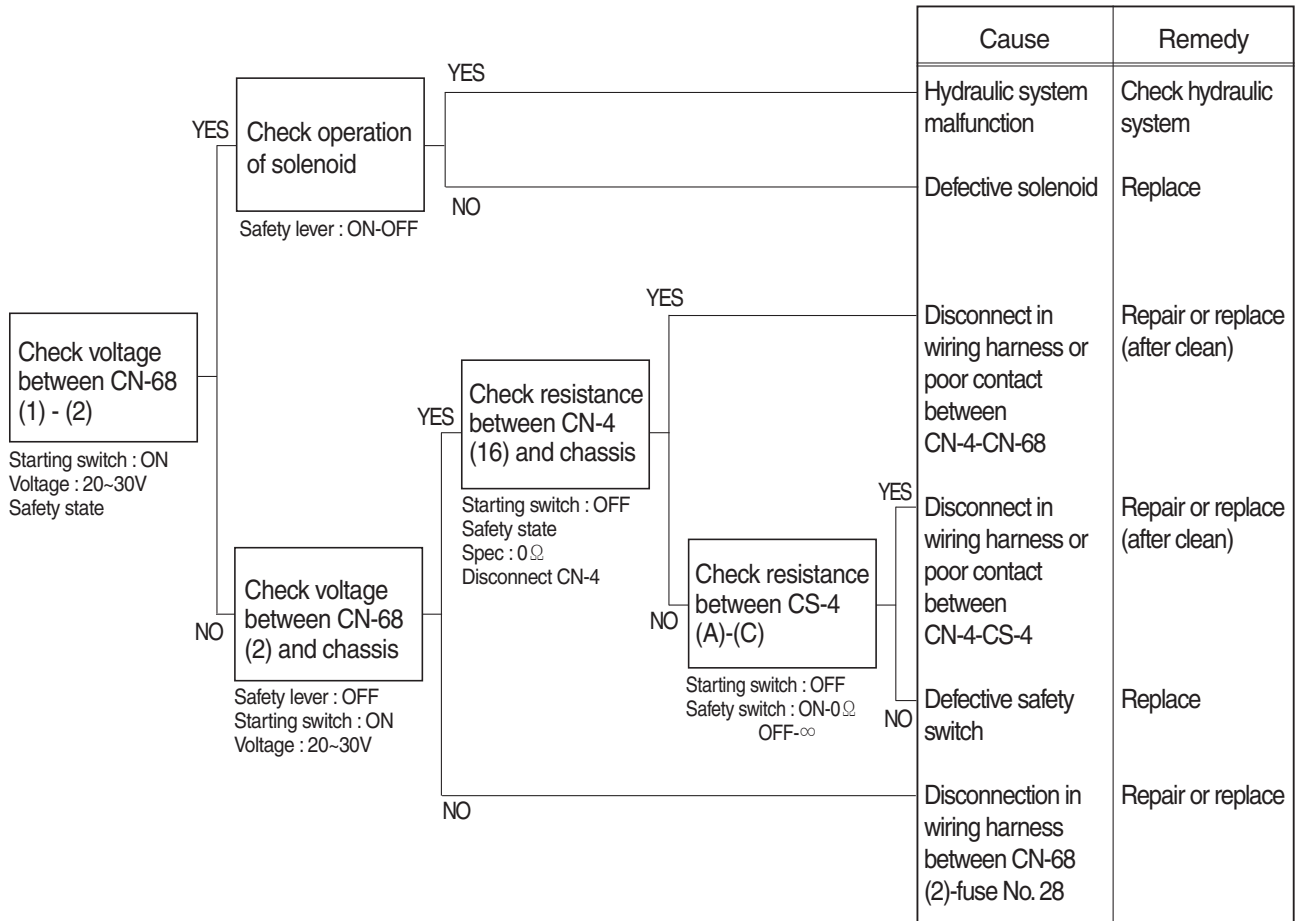

140WF6ES12

11. WHEN TRAVEL SPEED 1, 2 DOES NOT OPERATE (HCESPN 167, FMI 4 or 6) (SERIAL NO. : -#0507)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 30.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

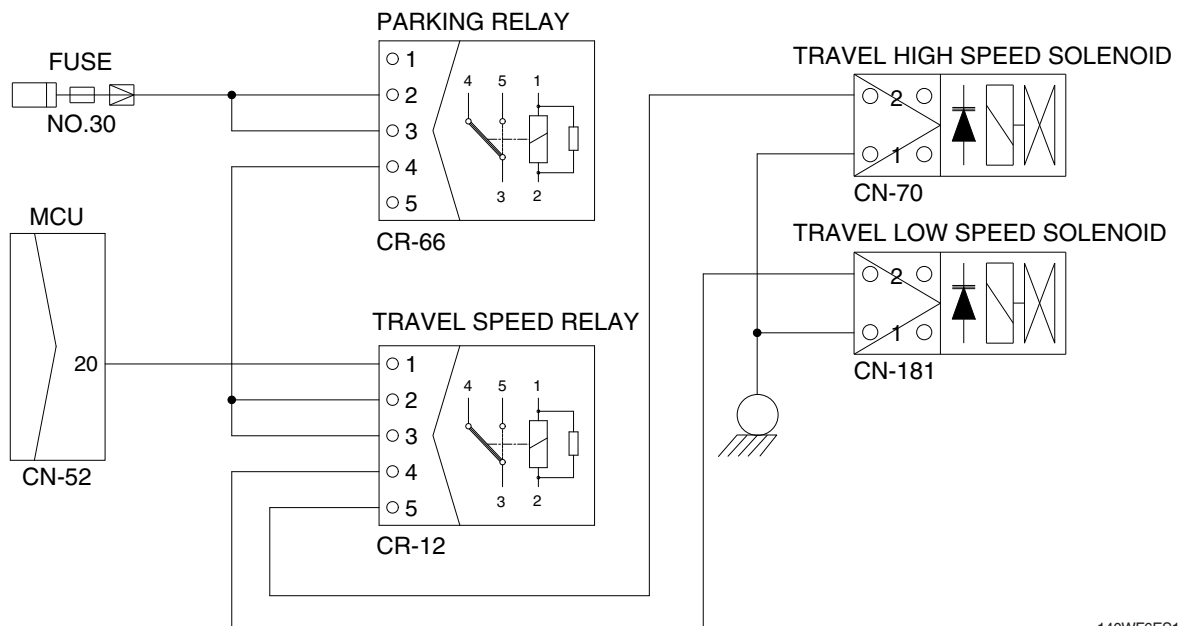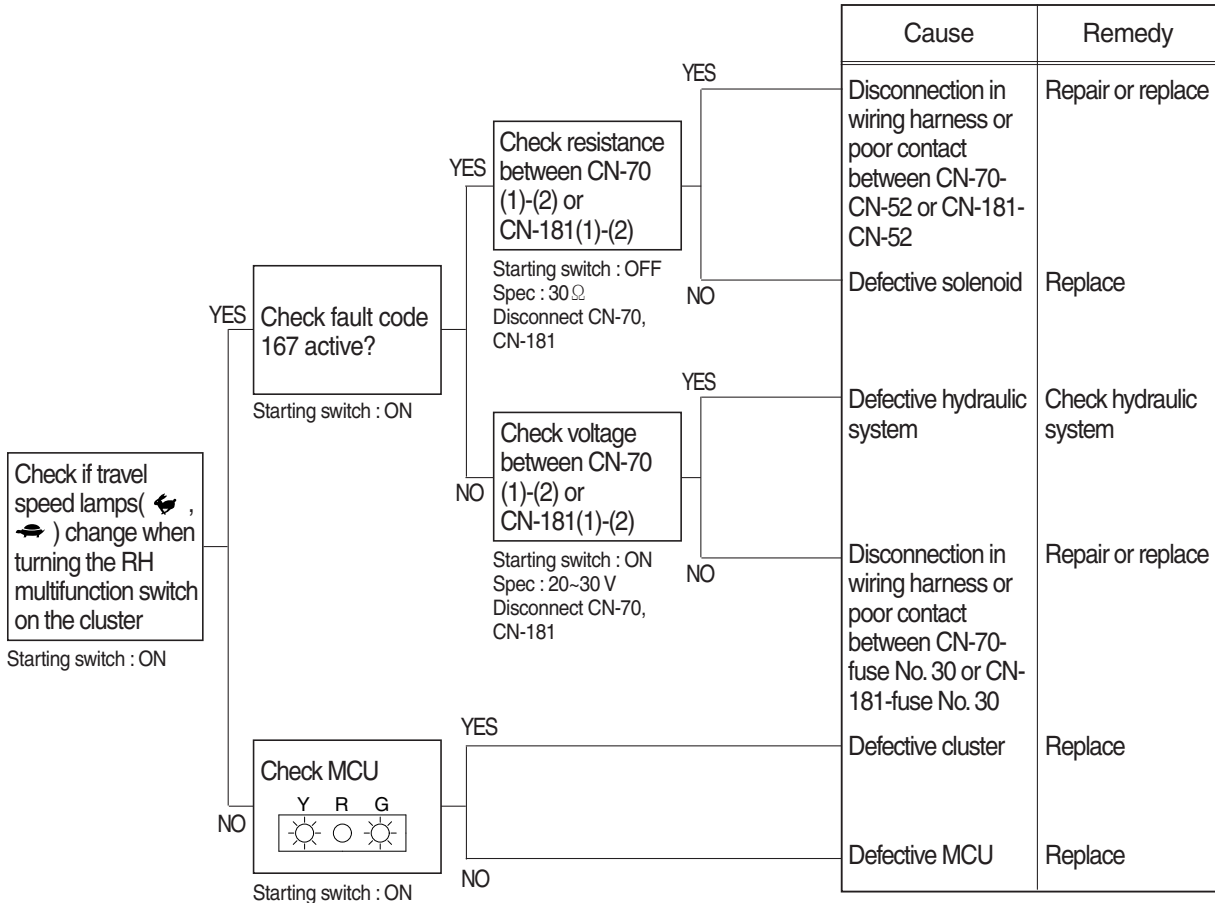

140WF6ES11

12. WHEN ENGINE DOES NOT START ( lights up condition)
(SERIAL NO. : -#0507)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 3, 8, 13, 14, 24, 25.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

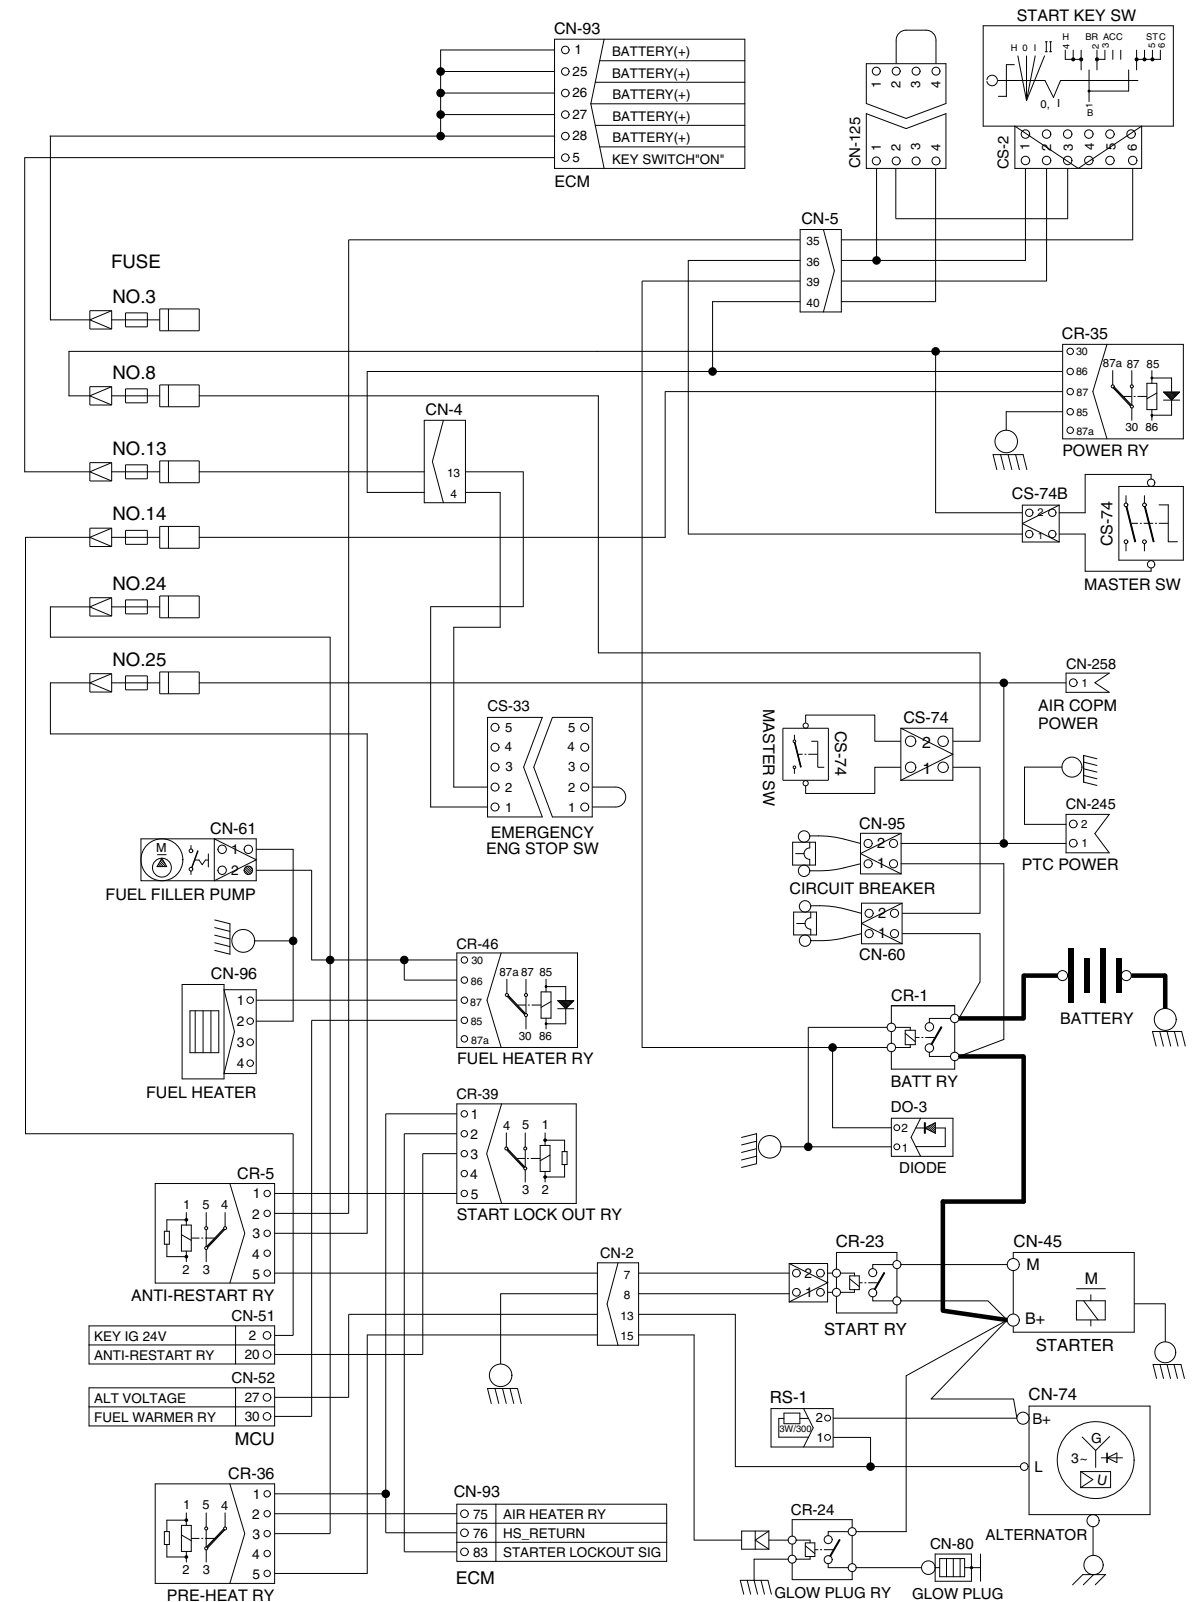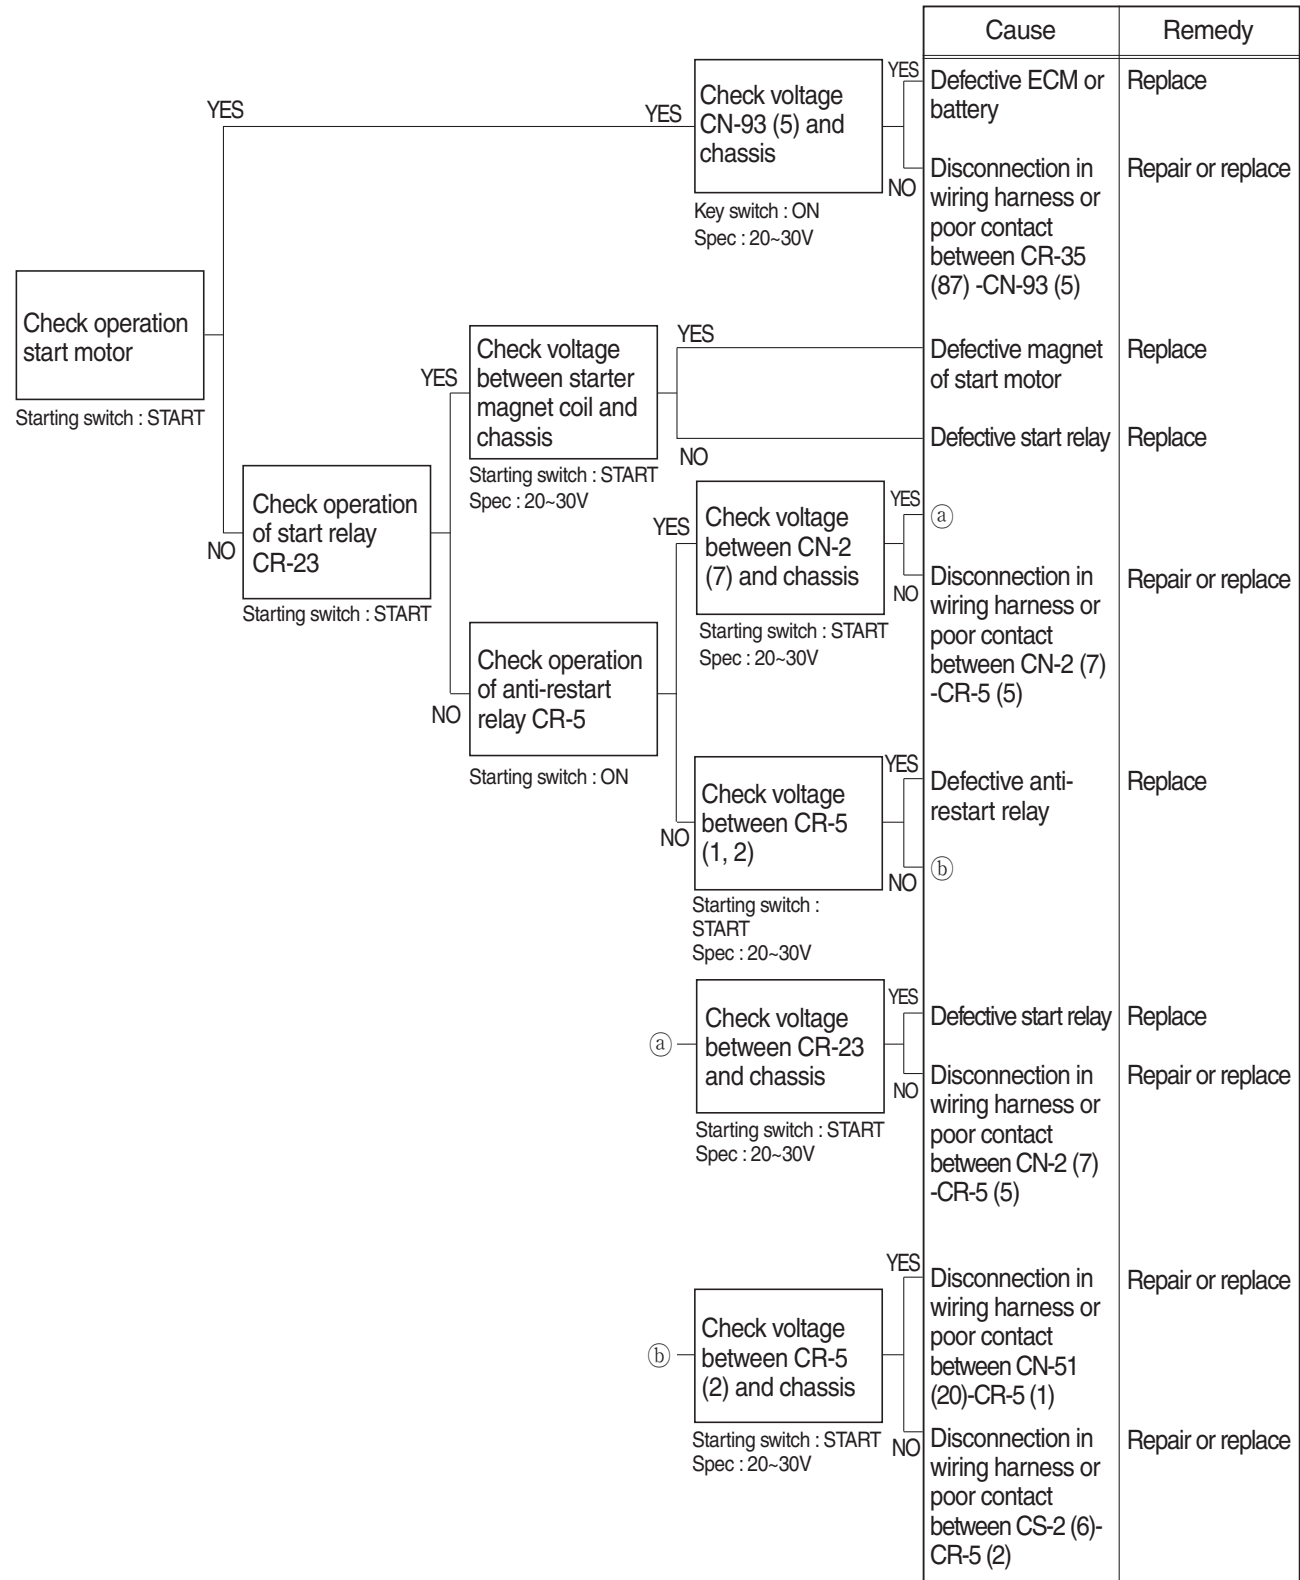

13. WHEN STARTING SWITCH ON DOES NOT OPERATE



(SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted, master switch ON and check open circuit of circuit breaker (CN-60, CN-95).
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

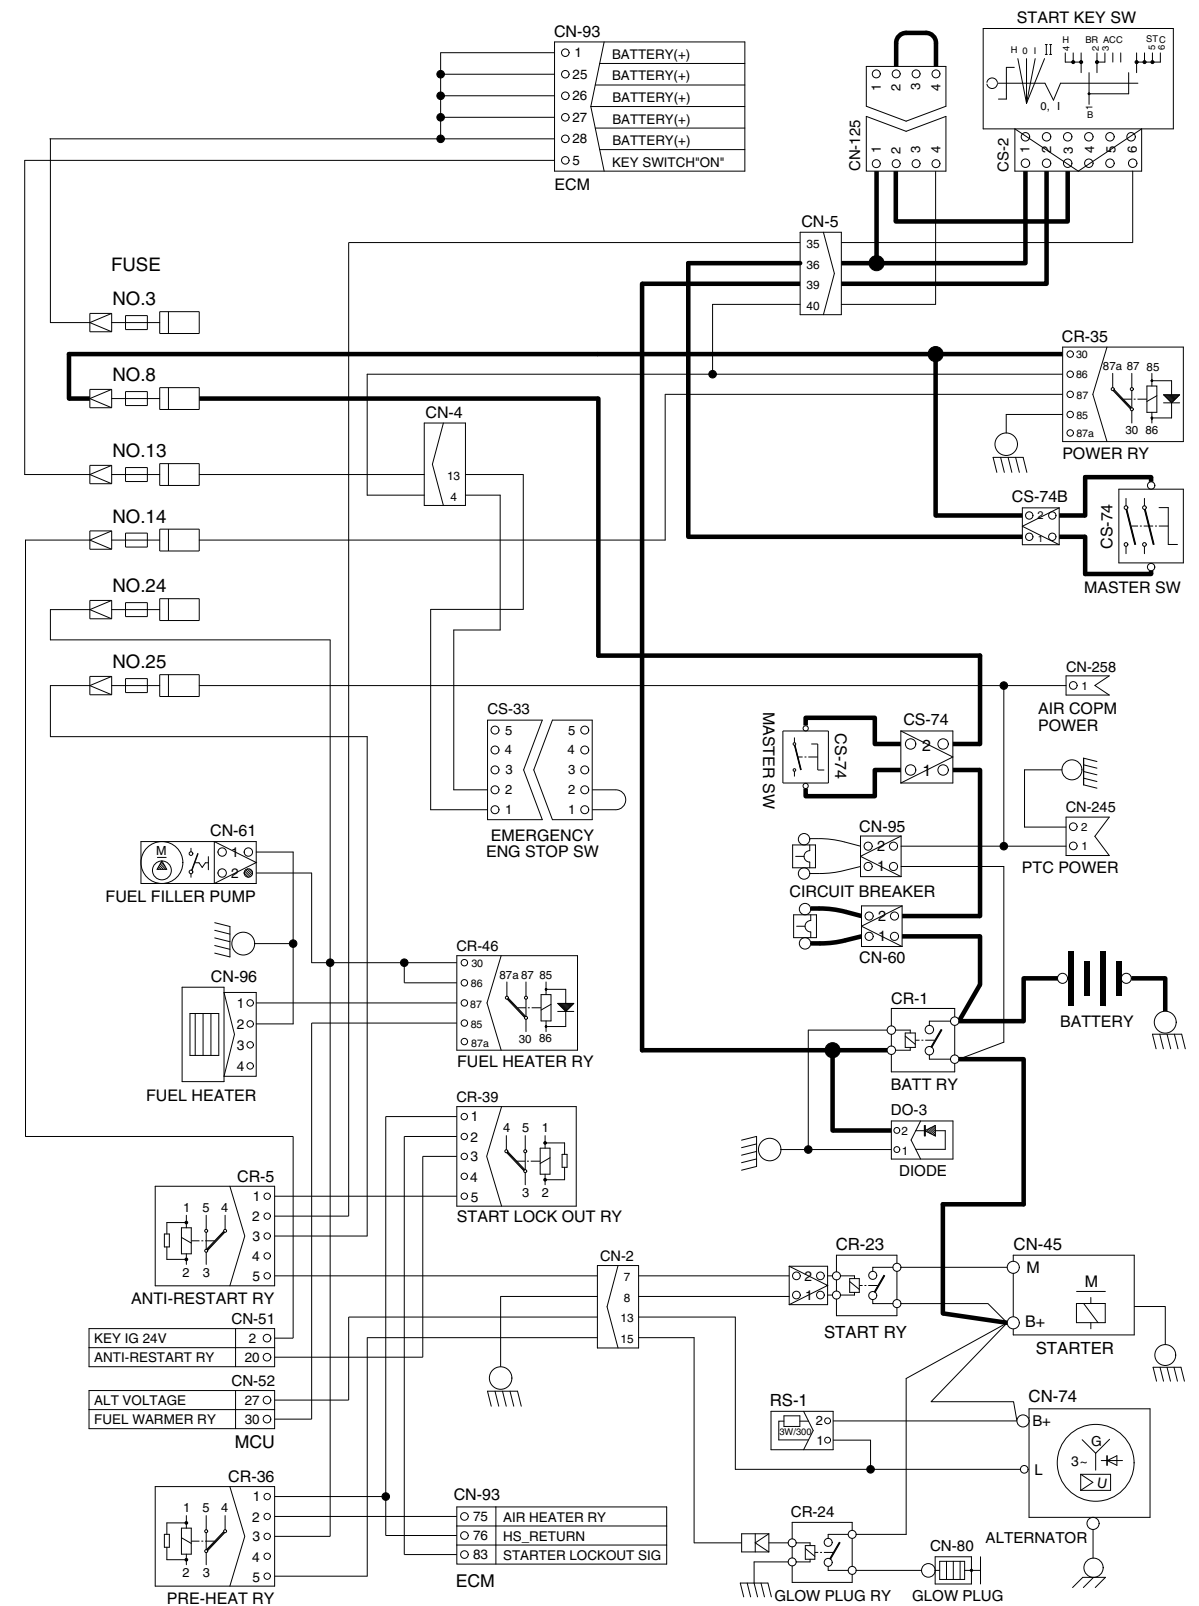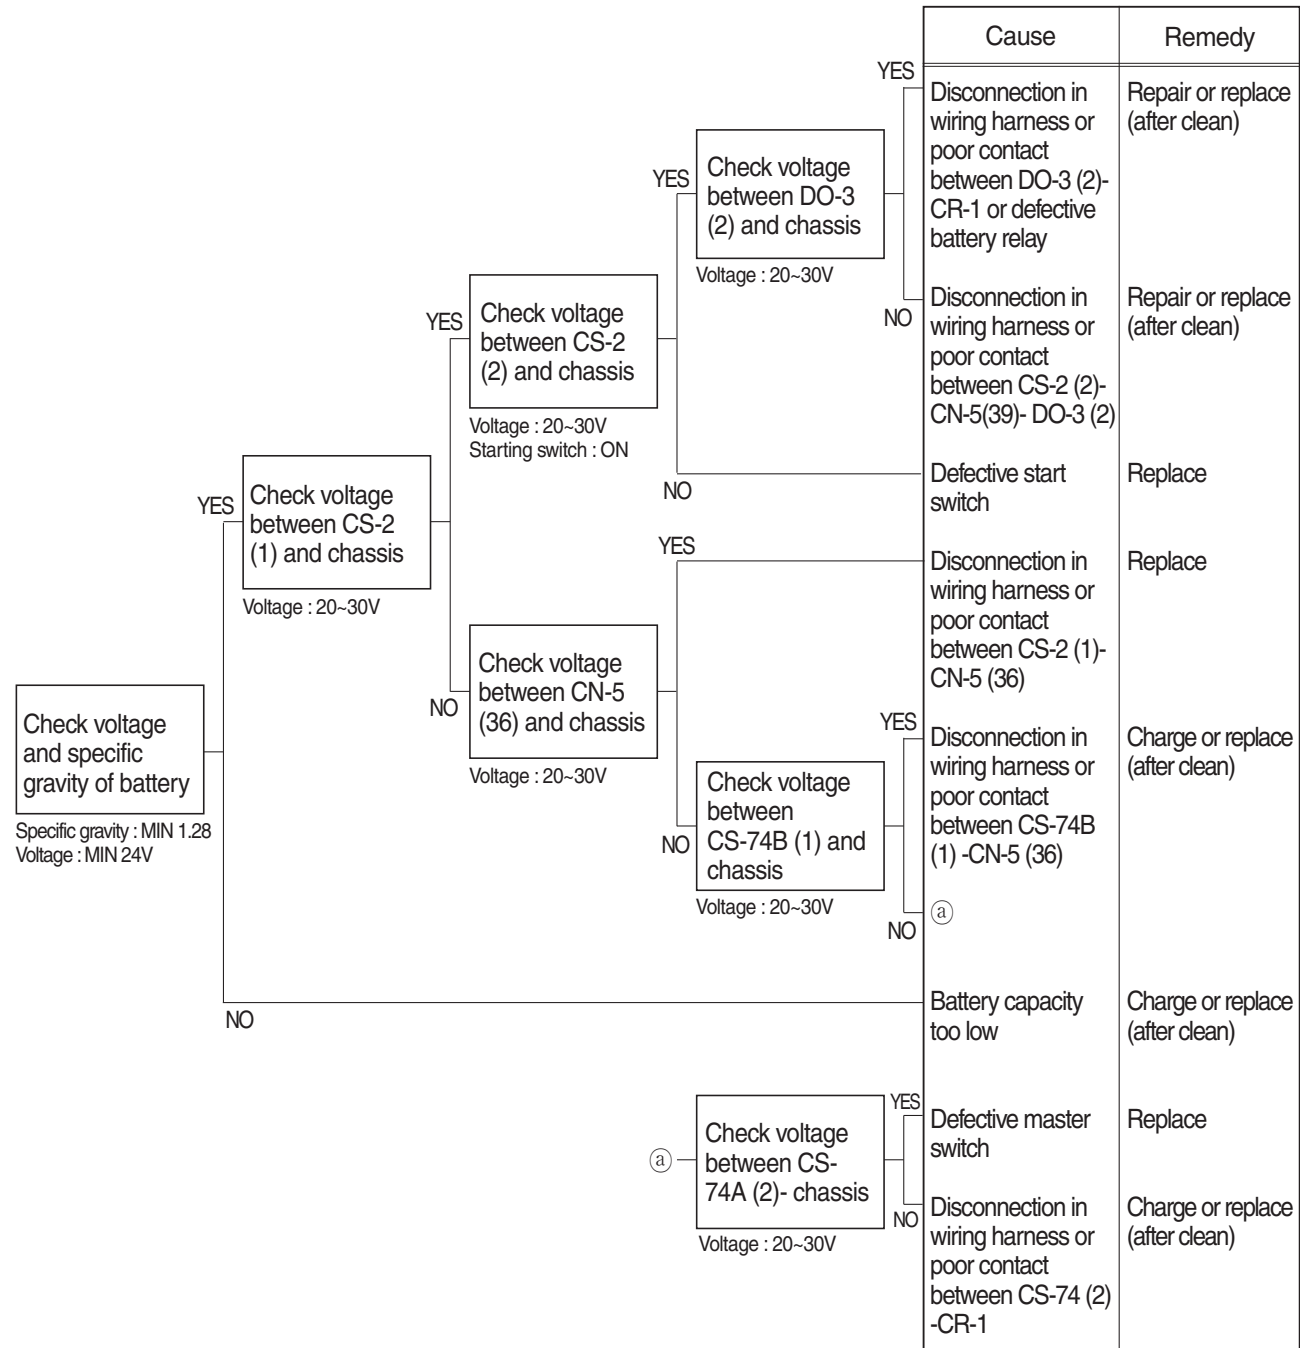



14. WHEN STARTING SWITCH IS TURNED ON, WIPER MOTOR DOES NOT OPERATE (SERIAL NO. : -#0507)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and the fuse No. 10, 22 and 23 is not blown out.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

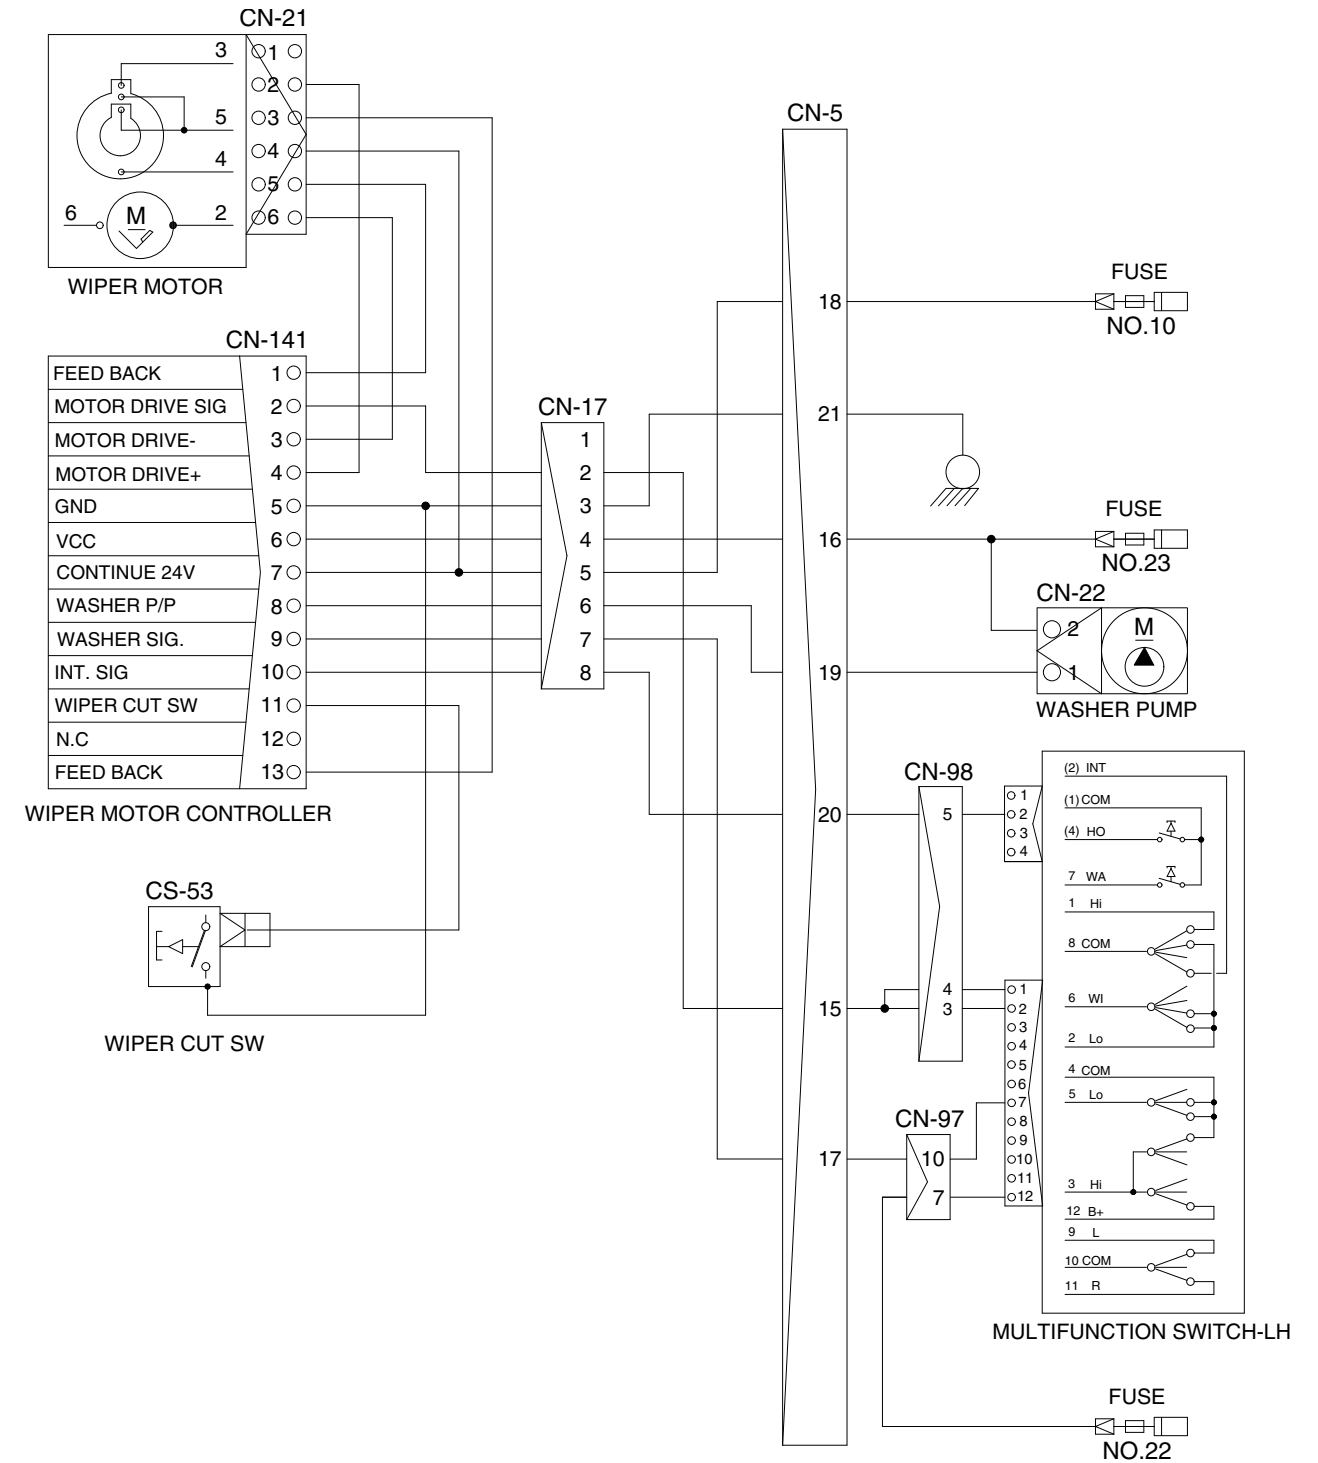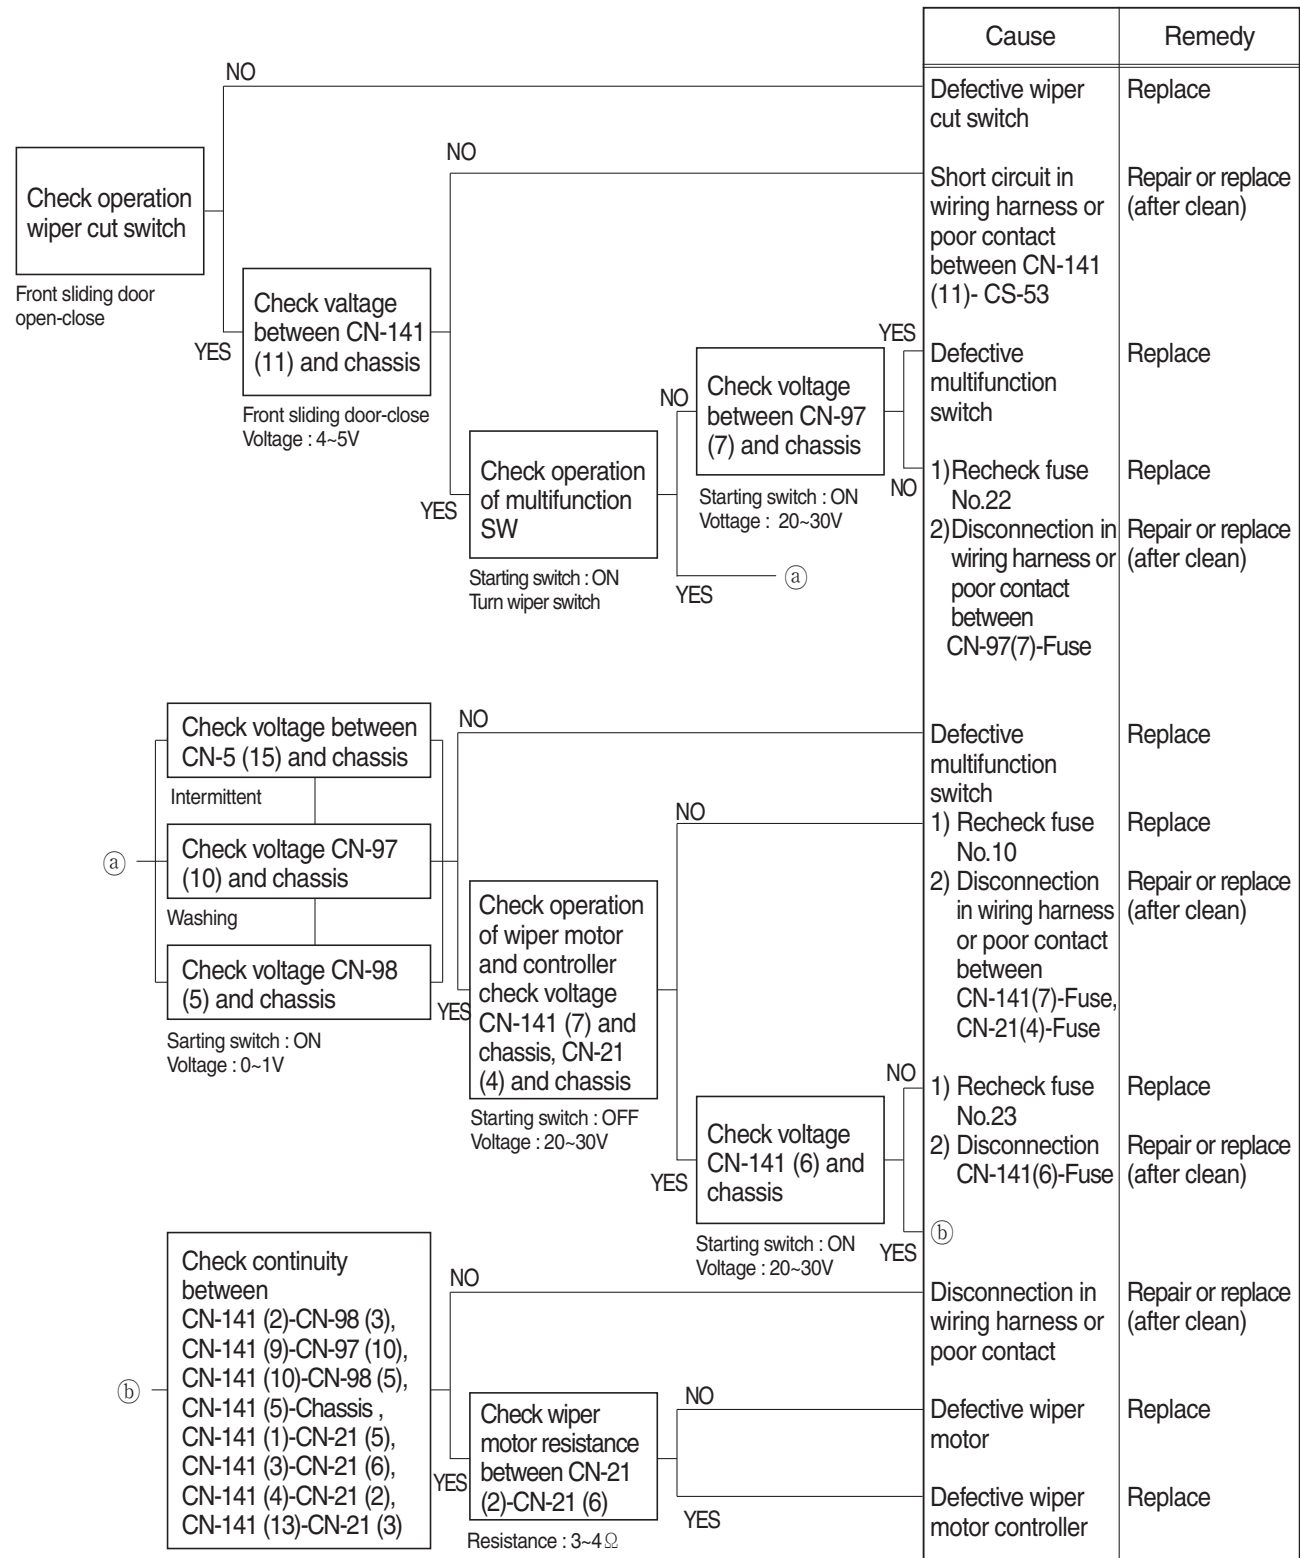

15. WHEN STARTING SWITCH IS TURNED ON, HEAD LAMP DOES NOT LIGHTS UP
(SERIAL NO. : -#0507)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 16, 22.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

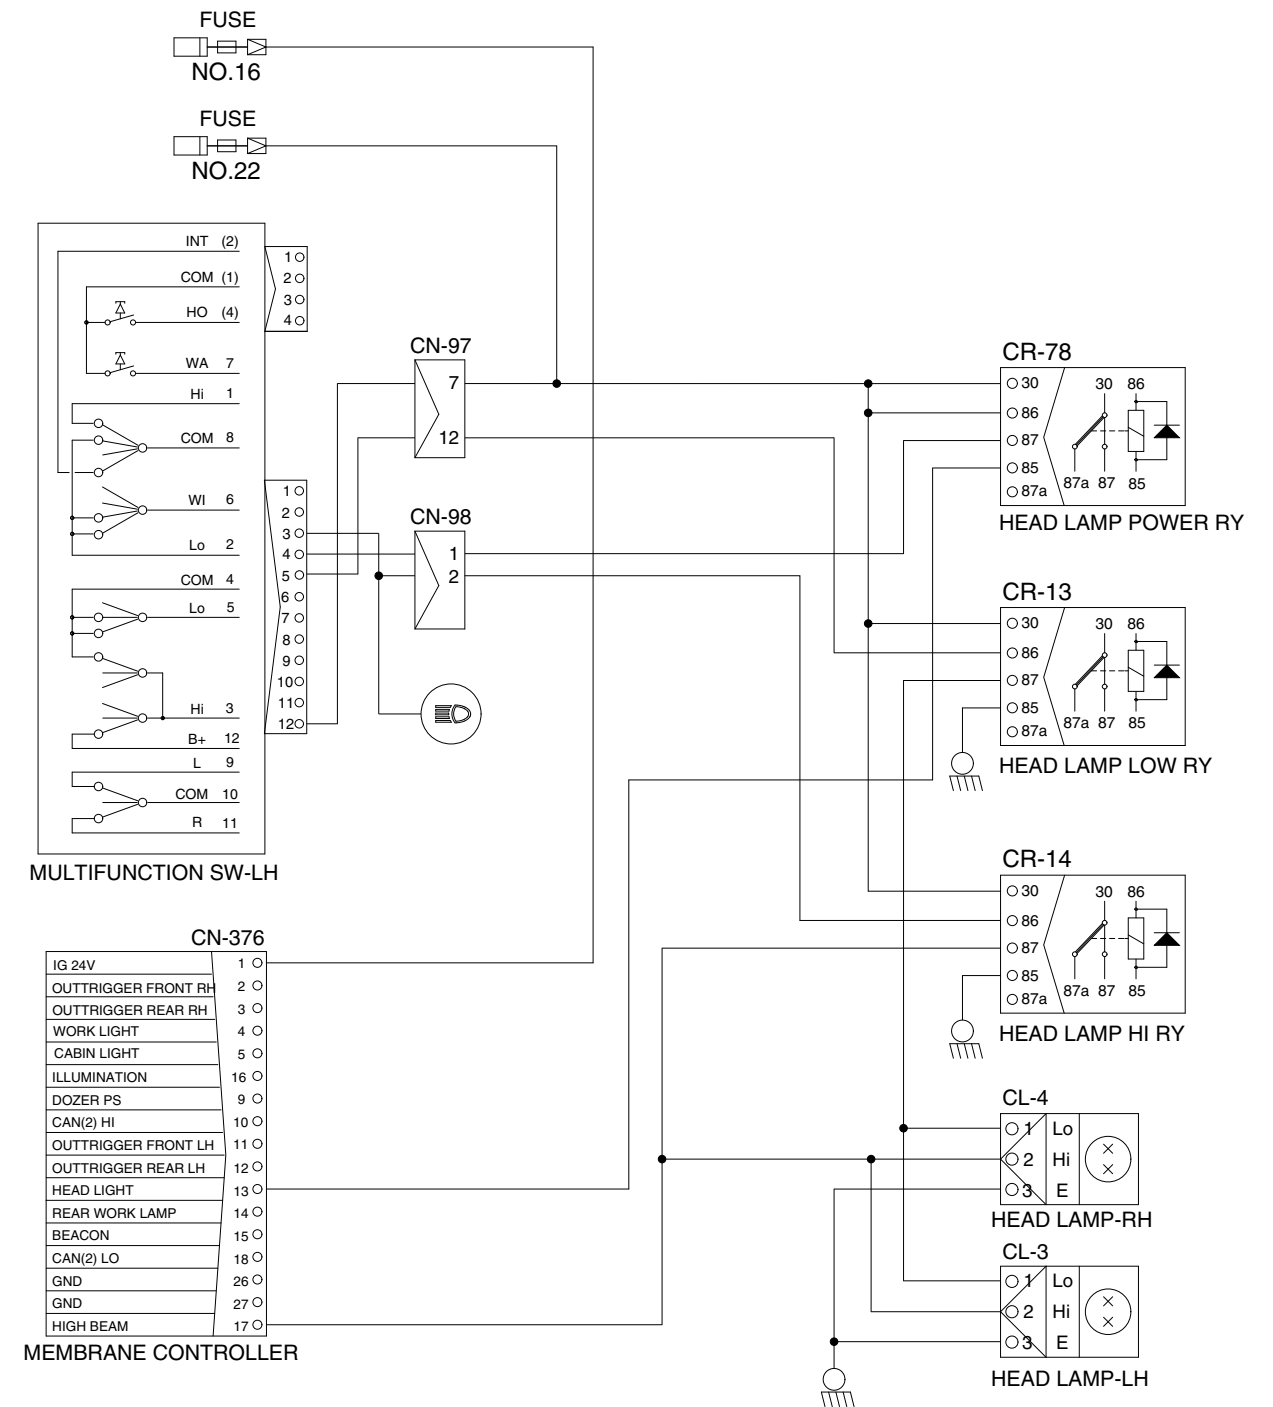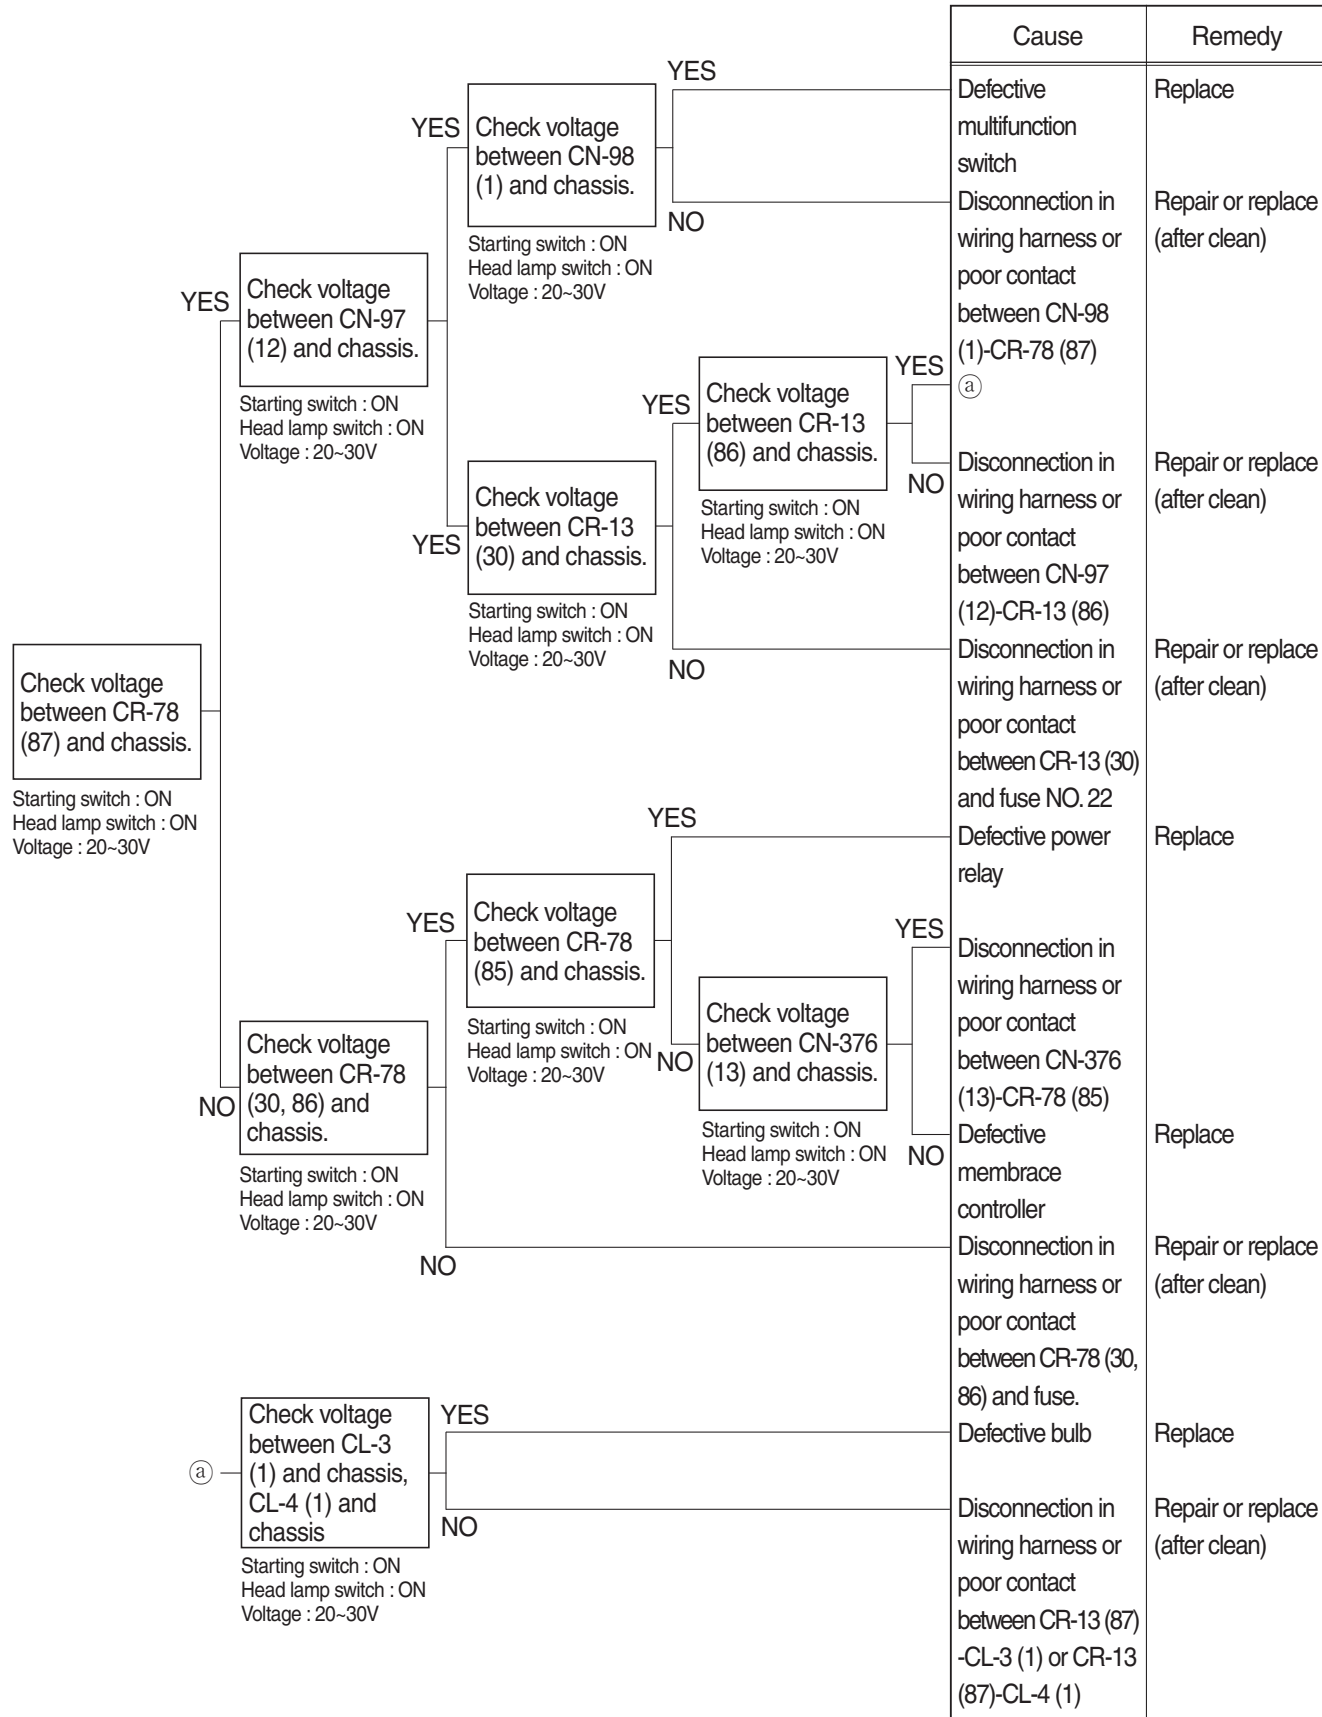

140WF6ES17

16. WHEN STARTING SWITCH IS TURNED ON, WORK LAMP DOES NOT LIGHTS UP
(SERIAL NO. : -#0507)


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 20.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

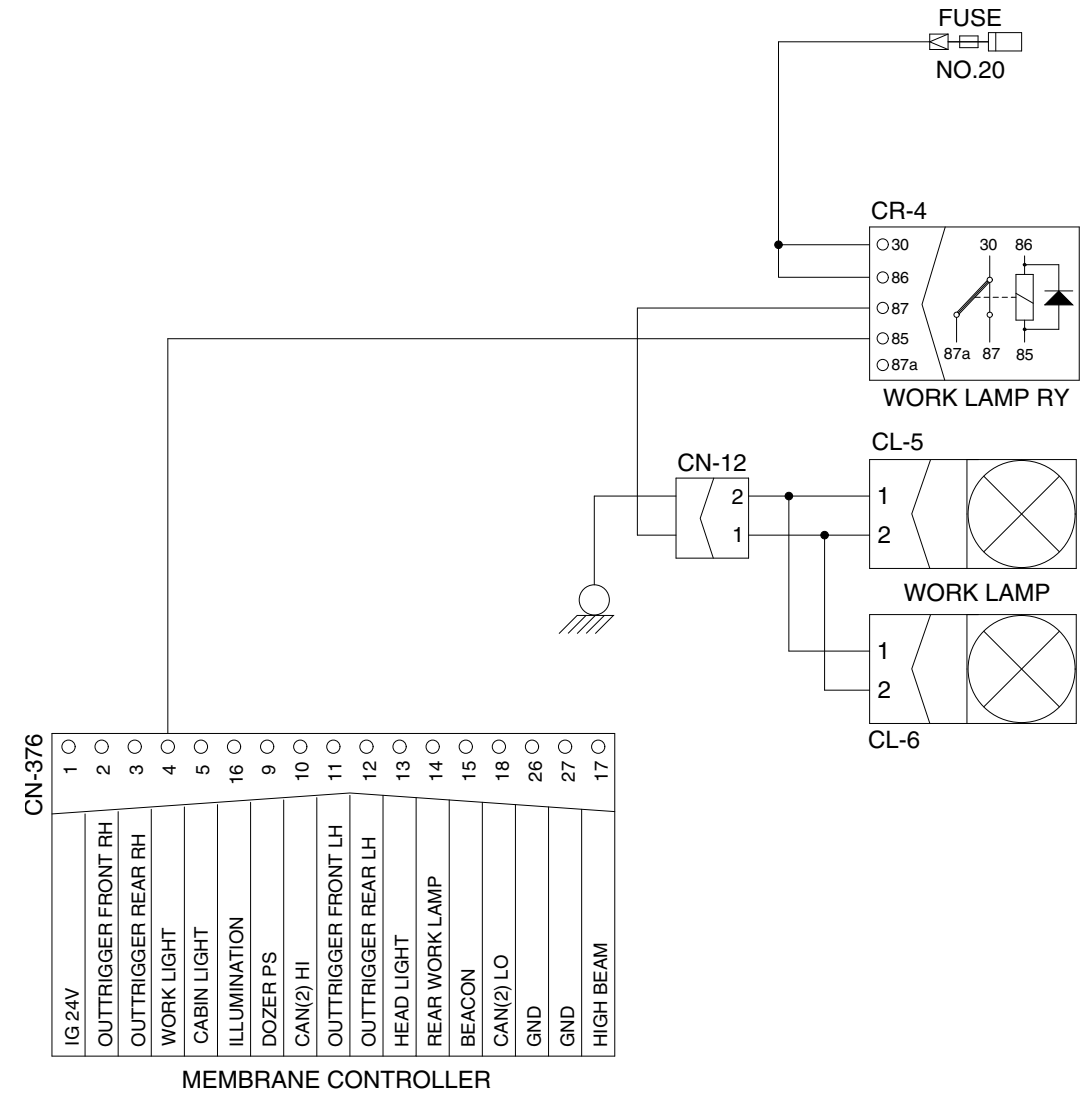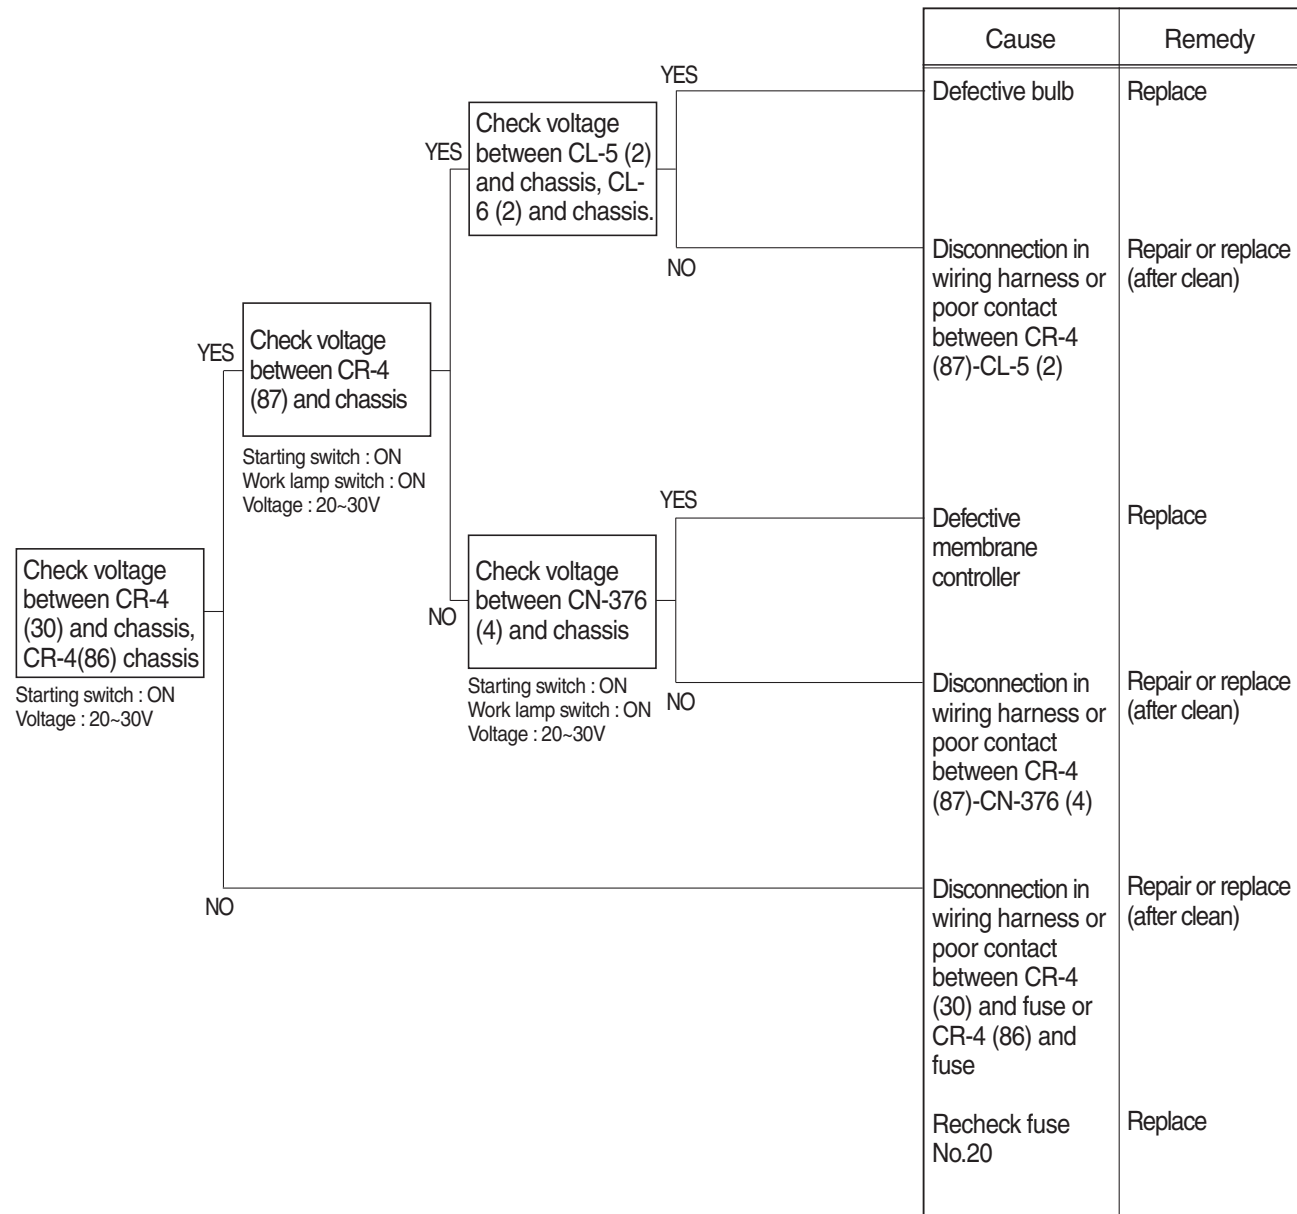

ELECTRICAL SYSTEM


1. WHEN STARTING SWITCH IS TURNED ON, MONITOR PANEL DISPLAY DOES NOT APPEAR (SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 11, 15.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

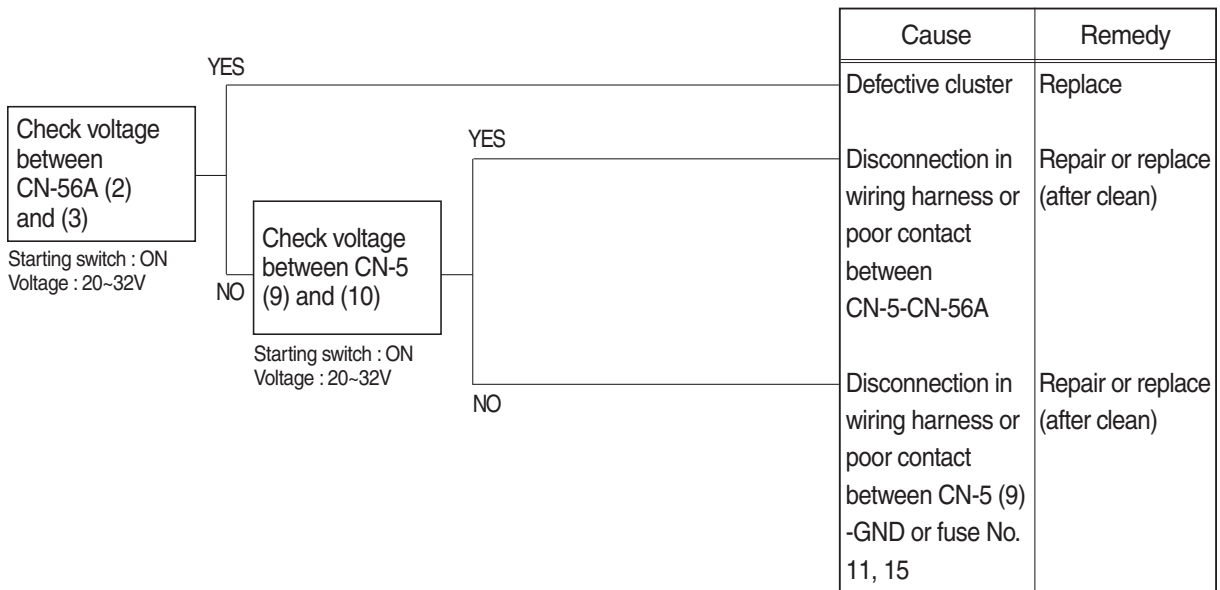

Check voltage


| | |
|-----|--------|
| YES | 20~32V |
| NO | 0V |

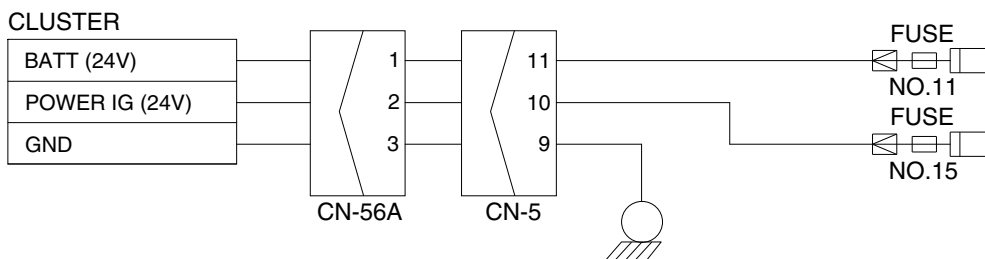

210WF6ES01


2.  **COMMUNICATION ERROR FLASHES ON THE CLUSTER (HCESPN 840, FMI 2)**
(SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

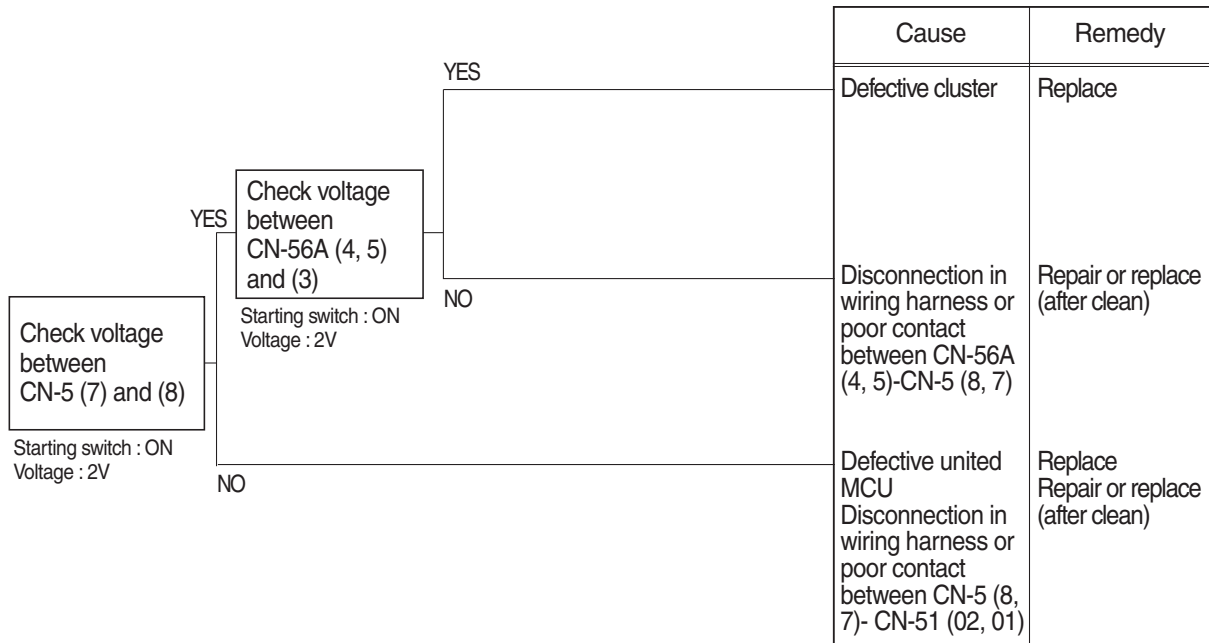


Check voltage

| | |
|-----|----|
| YES | 2V |
| NO | 0V |

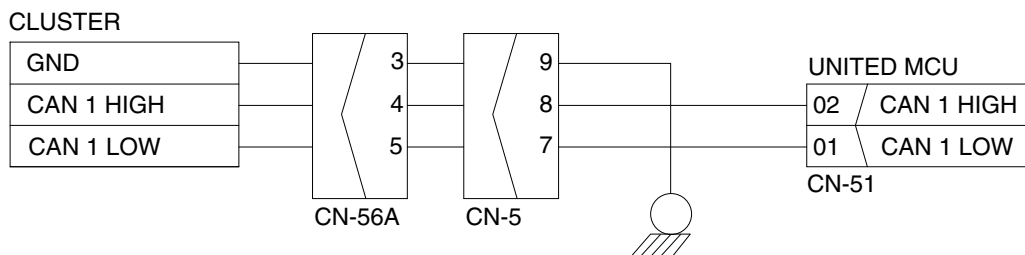


3. BATTERY CHARGING WARNING LAMP LIGHTS UP (Starting switch : ON) (SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

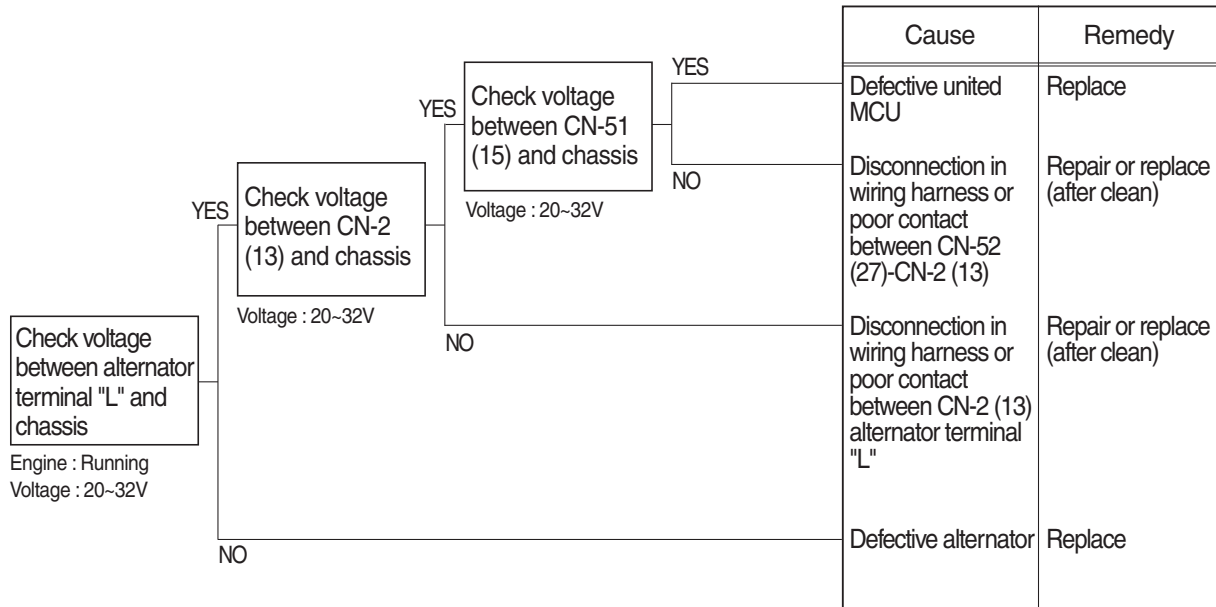

Check voltage


| | |
|-----|--------|
| YES | 20~32V |
| NO | 0V |

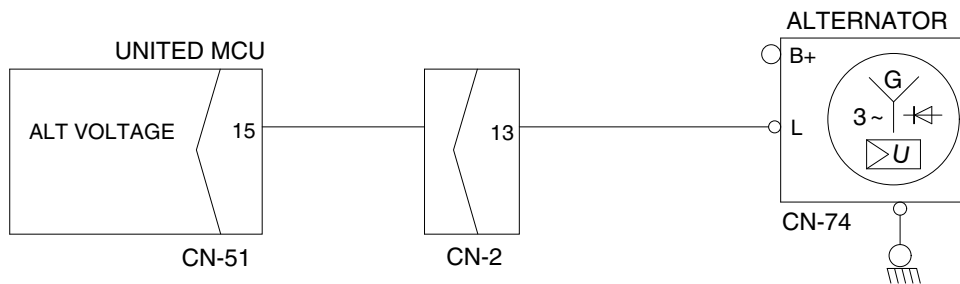

220F6ES103


4.  **WHEN COOLANT OVERHEAT WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

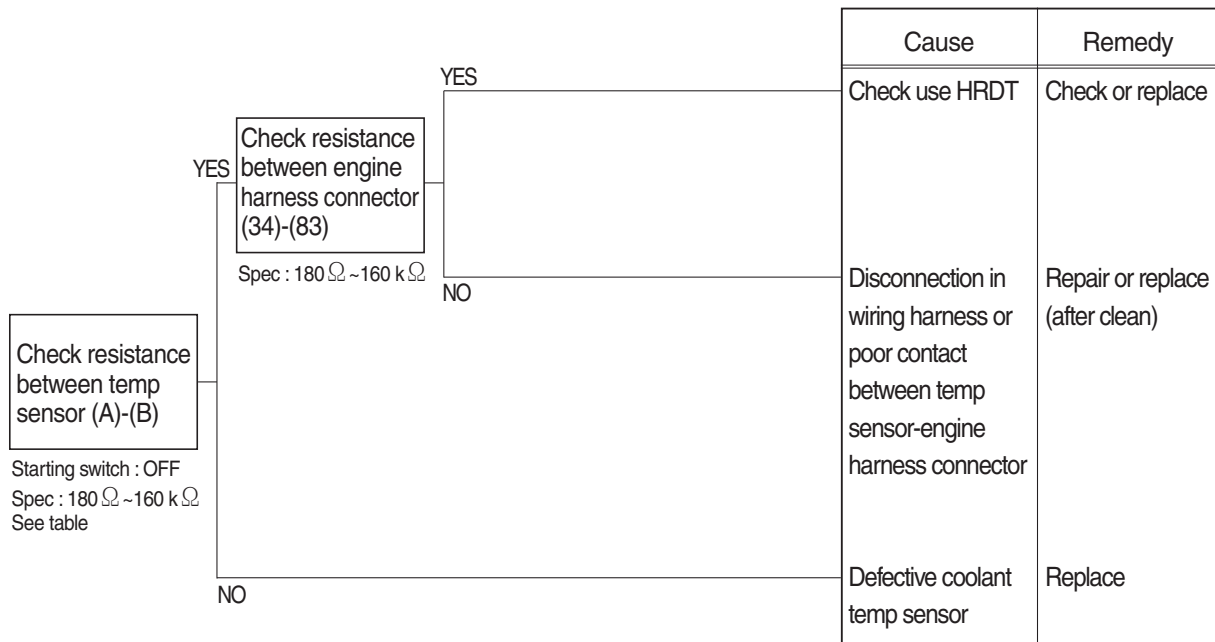

Check Table


| Temperature (°C) | 0 | 25 | 50 | 80 | 95 |
|------------------|-------|----------|---------|---------|---------|
| Resistance (kΩ) | 30~37 | 9.3~10.7 | 3.2~3.8 | 1.0~1.3 | 0.7~0.8 |

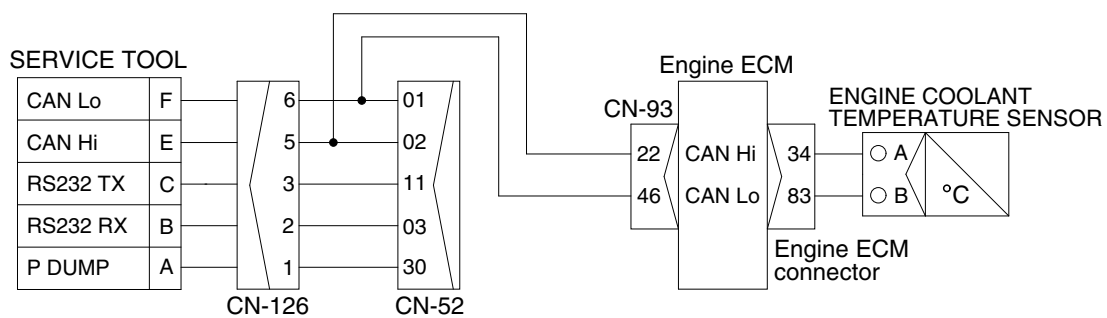

300L6ES104


5.  **WHEN AIR CLEANER WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

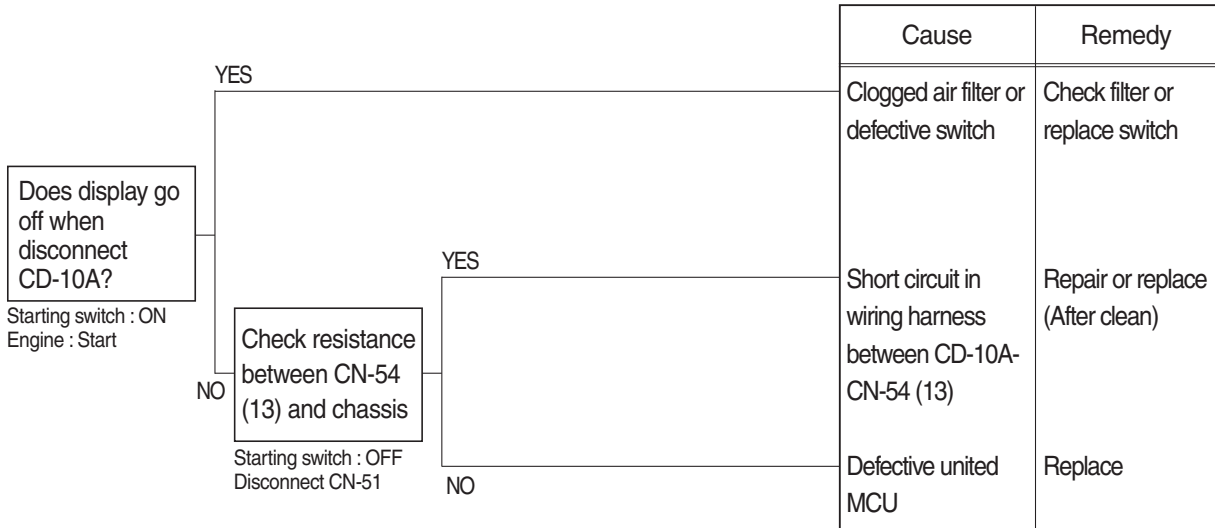

Check resistance



| | |
|-----|---------|
| YES | MAX 1Ω |
| NO | MIN 1MΩ |

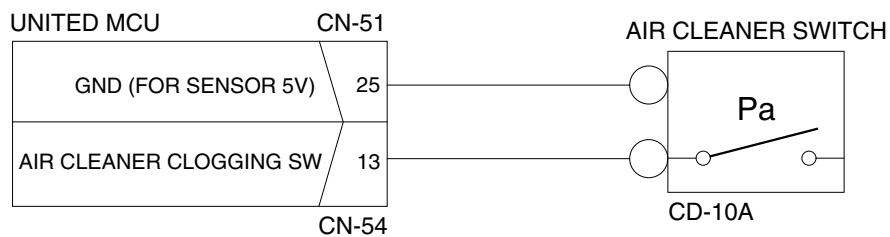

140W6ES106

6.  **WHEN ENGINE OIL PRESSURE WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : #0508-)


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

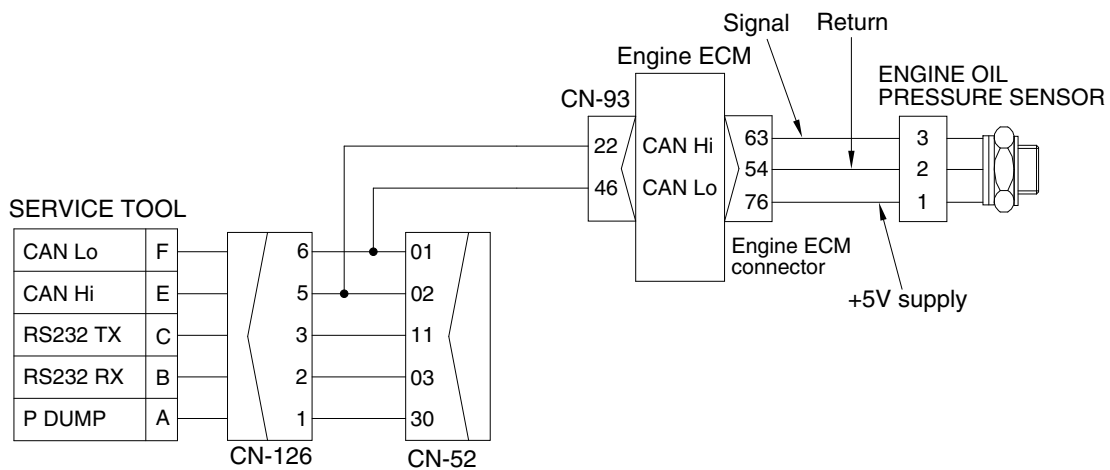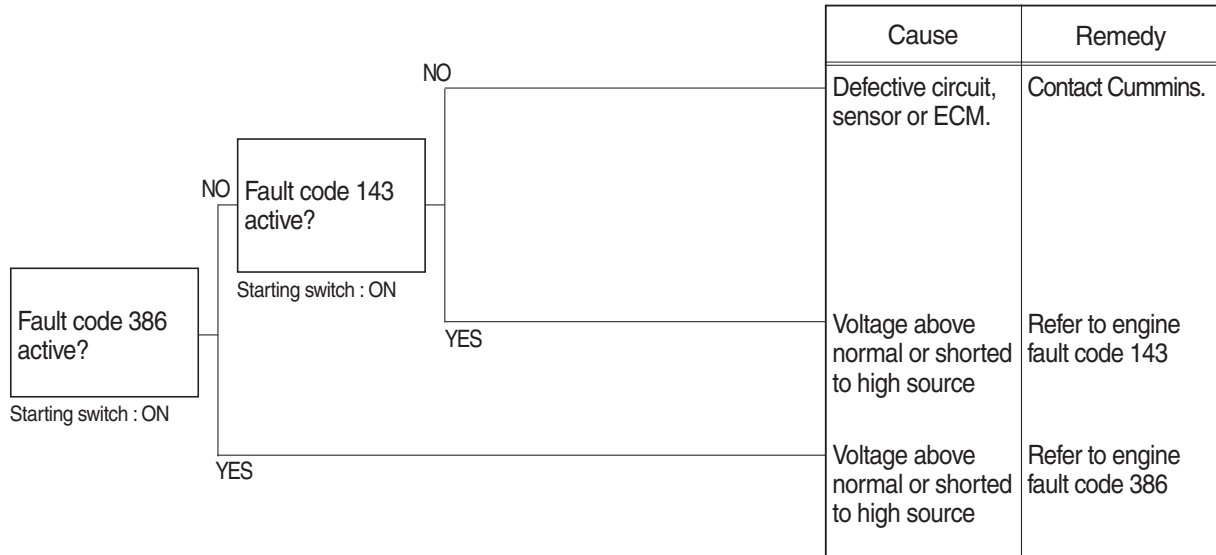


220A6ES107

7.  **WHEN HYDRAULIC OIL TEMPERATURE WARNING LAMP LIGHTS UP** (engine is started)
(SERIAL NO. : #0508-)


- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

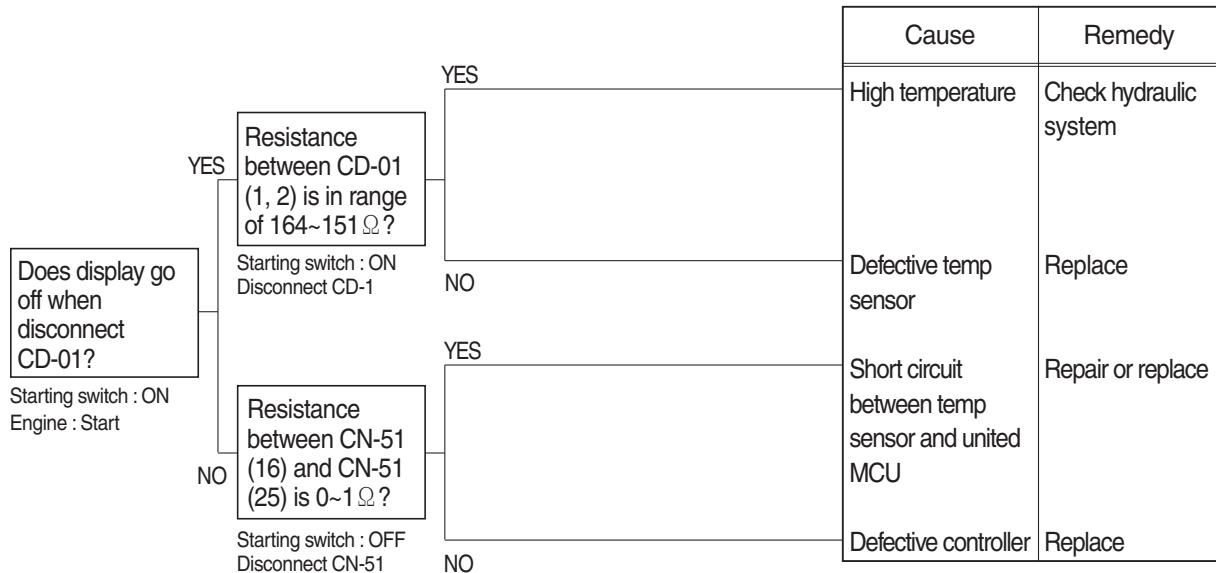

Check Table

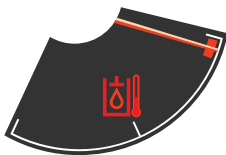


| Temperature (°C) | ~-30 | ~-10 | ~ 0 | ~ 40 | ~ 70 | ~ 80 | ~ 90 | ~ 100 | 105~ |
|------------------|-----------------|----------------|---------------|---------------|----------------|-----------------|-----------------|-----------------|----------------|
| Resistance (kΩ) | 22.22 ~31.78 | 8.16 ~10.74 | 5.18 ~ 6.6 | 1.06 ~1.28 | 0.39 ~0.476 | 0.322 ~0.298 | 0.243 ~0.219 | 0.185 ~0.167 | 0.164 0.151 |

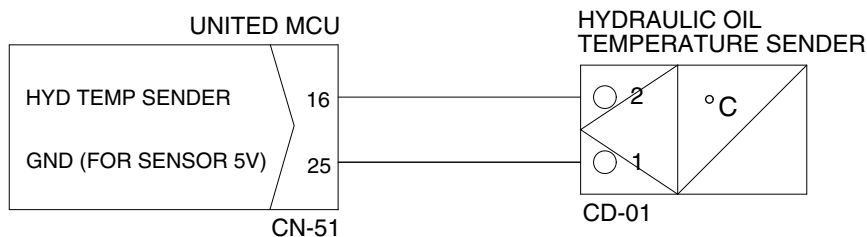


8. WHEN COOLANT TEMPERATURE GAUGE DOES NOT OPERATE (HCESPN 304, FMI 3 or 4) (SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

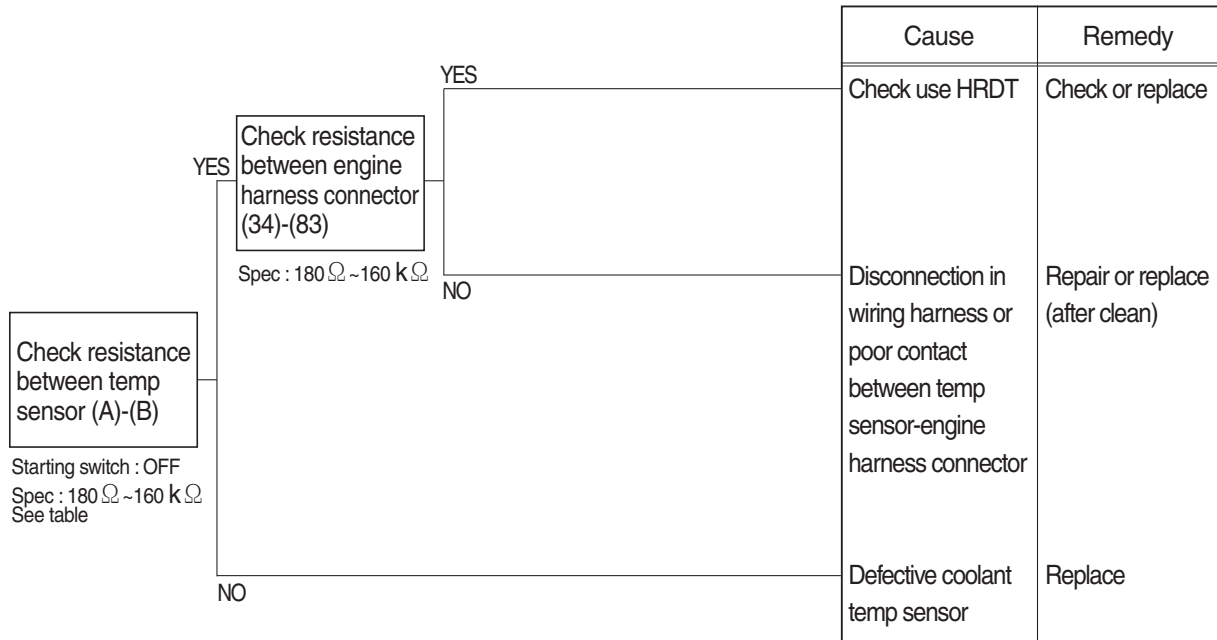

Check Table



| Temperature (°C) | 0 | 25 | 50 | 80 | 95 |
|------------------|-------|----------|---------|---------|---------|
| Resistance (kΩ) | 30~37 | 9.3~10.7 | 3.2~3.8 | 1.0~1.3 | 0.7~0.8 |

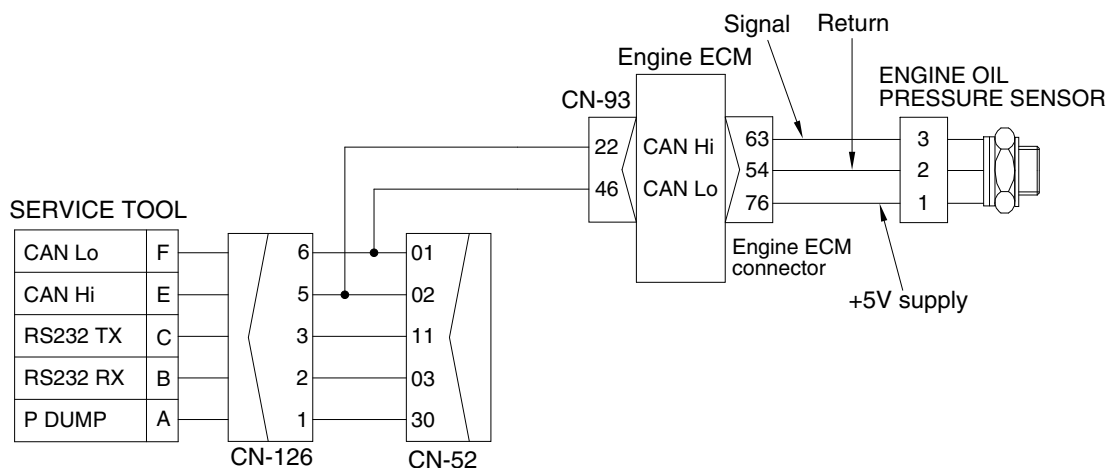

220A6ES107


9. WHEN FUEL GAUGE DOES NOT OPERATE (HCESPN 301, FMI 3 or 4) (SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

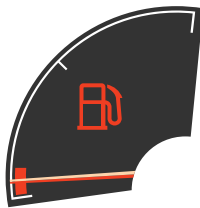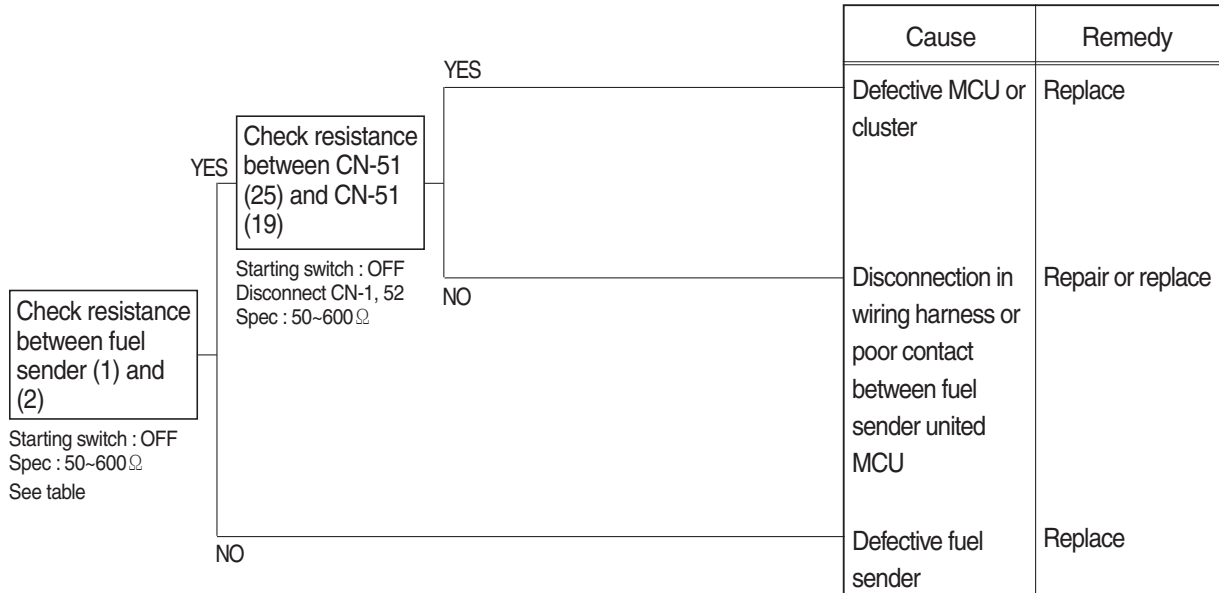

Check Table



| Range | Resistance (Ω) | Range | Resistance (Ω) |
|-------|----------------|---------------|----------------|
| Full | 50 | 5/12 | 400 |
| 11/12 | 100 | 4/12 | 450 |
| 10/12 | 150 | 3/12 | 500 |
| 9/12 | 200 | 2/12 | 550 |
| 8/12 | 250 | 1/12 | 600 |
| 7/12 | 300 | Empty warning | 700 |
| 6/12 | 350 | - | - |

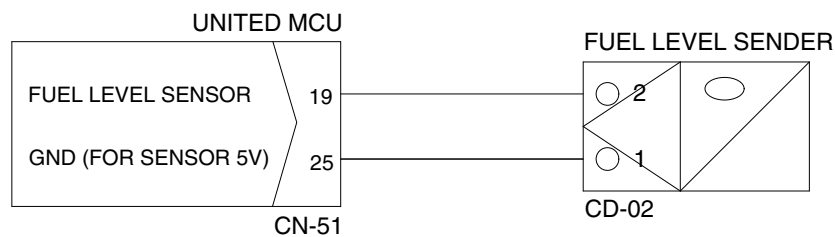

10. WHEN SAFETY SOLENOID DOES NOT OPERATE

(SERIAL NO. : #0508-)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 28.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

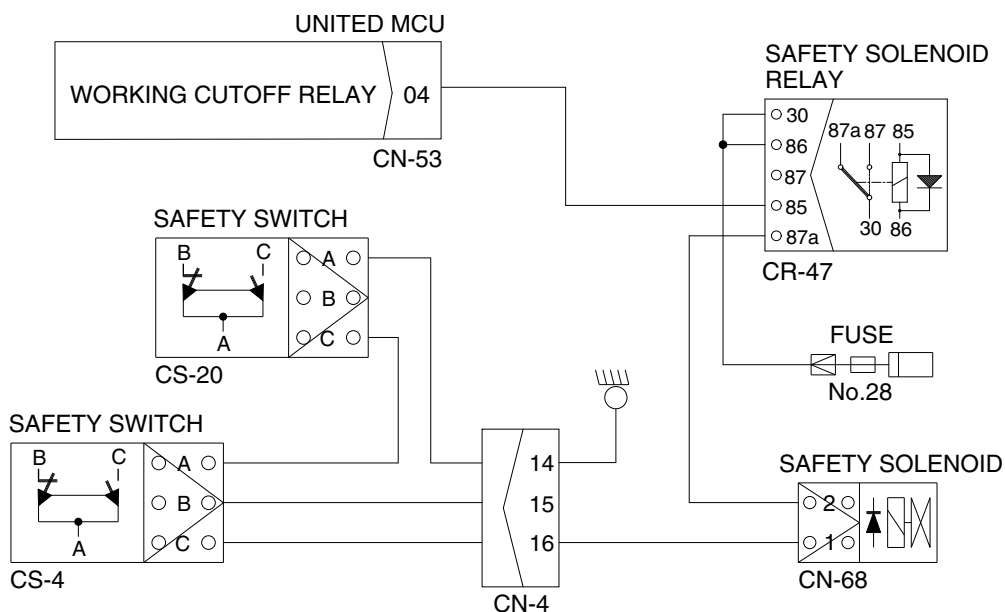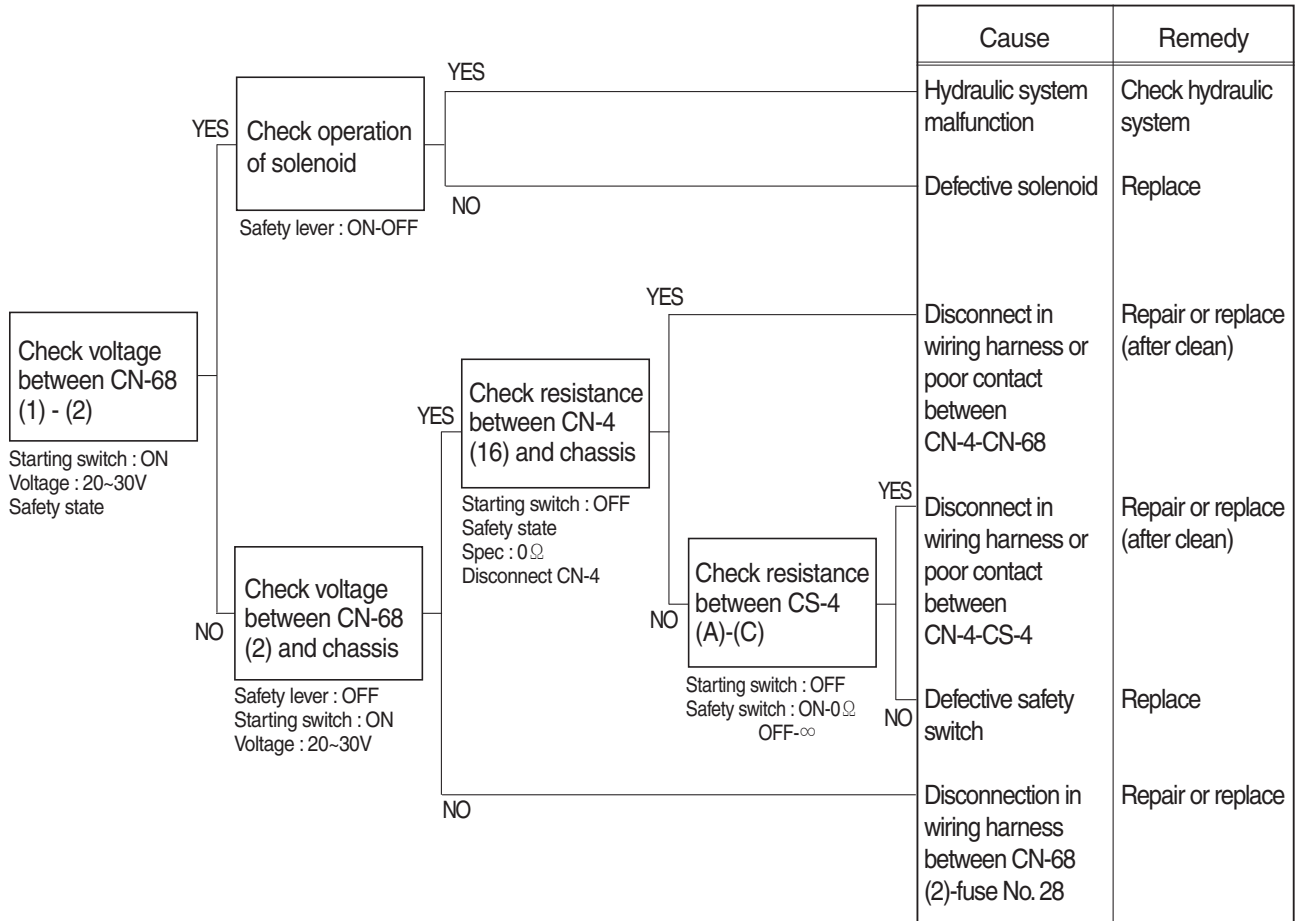

140WF6ES112

11. WHEN TRAVEL SPEED 1, 2 DOES NOT OPERATE (HCESPN 167, FMI 4 or 6) (SERIAL NO. : #0508-)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 30.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

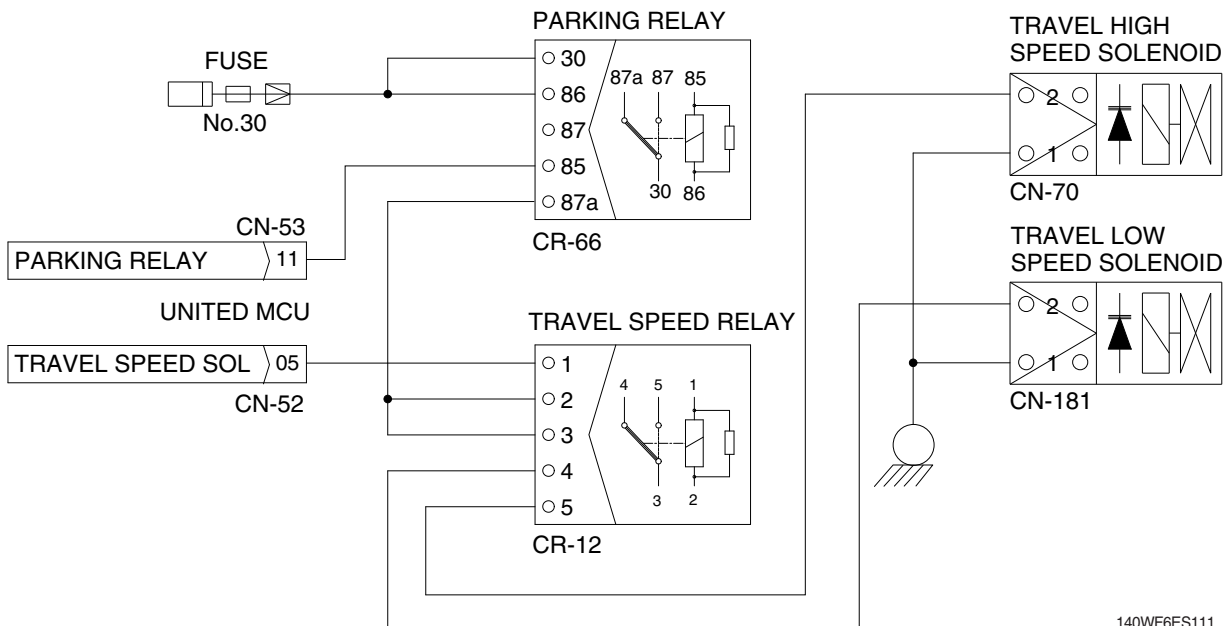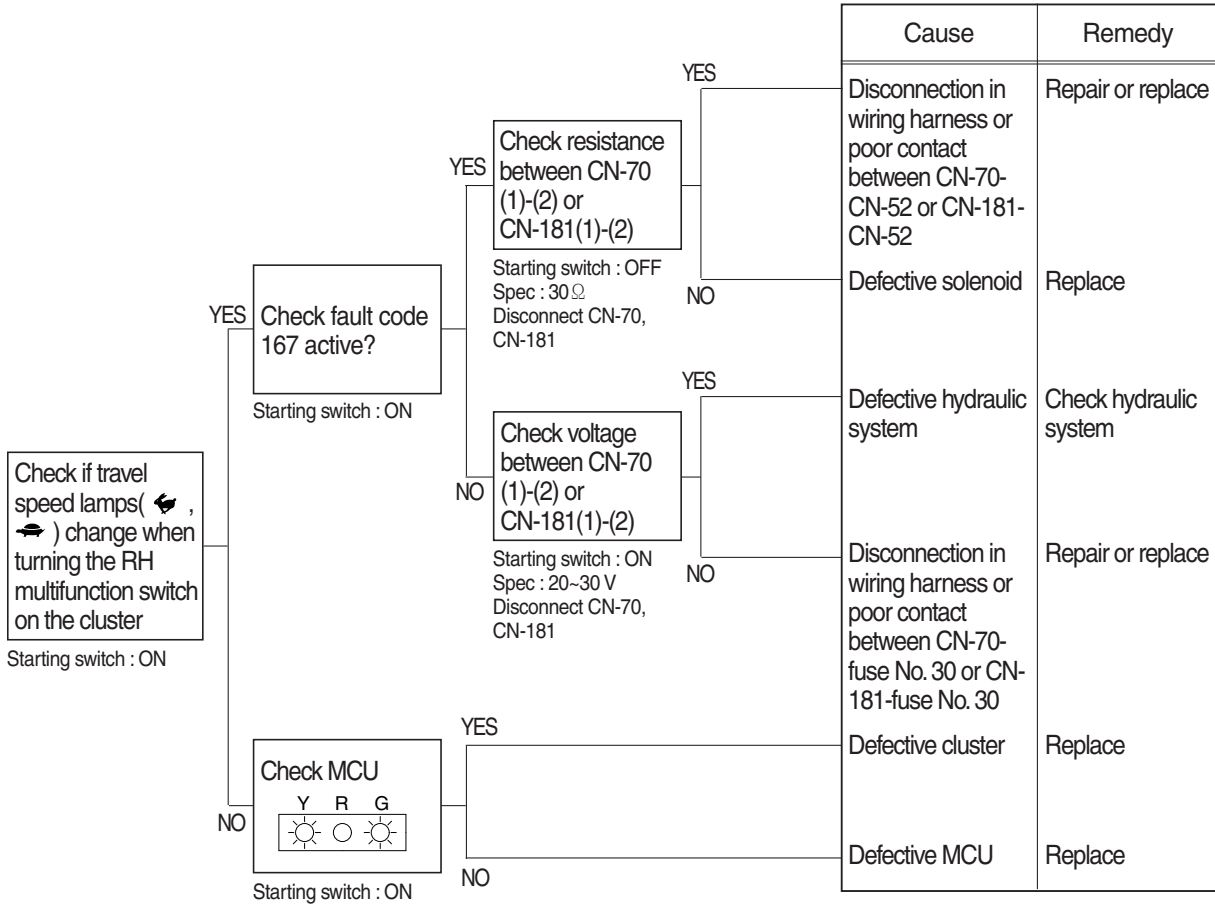

140WF6ES111

12. WHEN ENGINE DOES NOT START ( lights up condition)
(SERIAL NO. : #0508-)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 3, 8, 14, 24, 25, 46.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

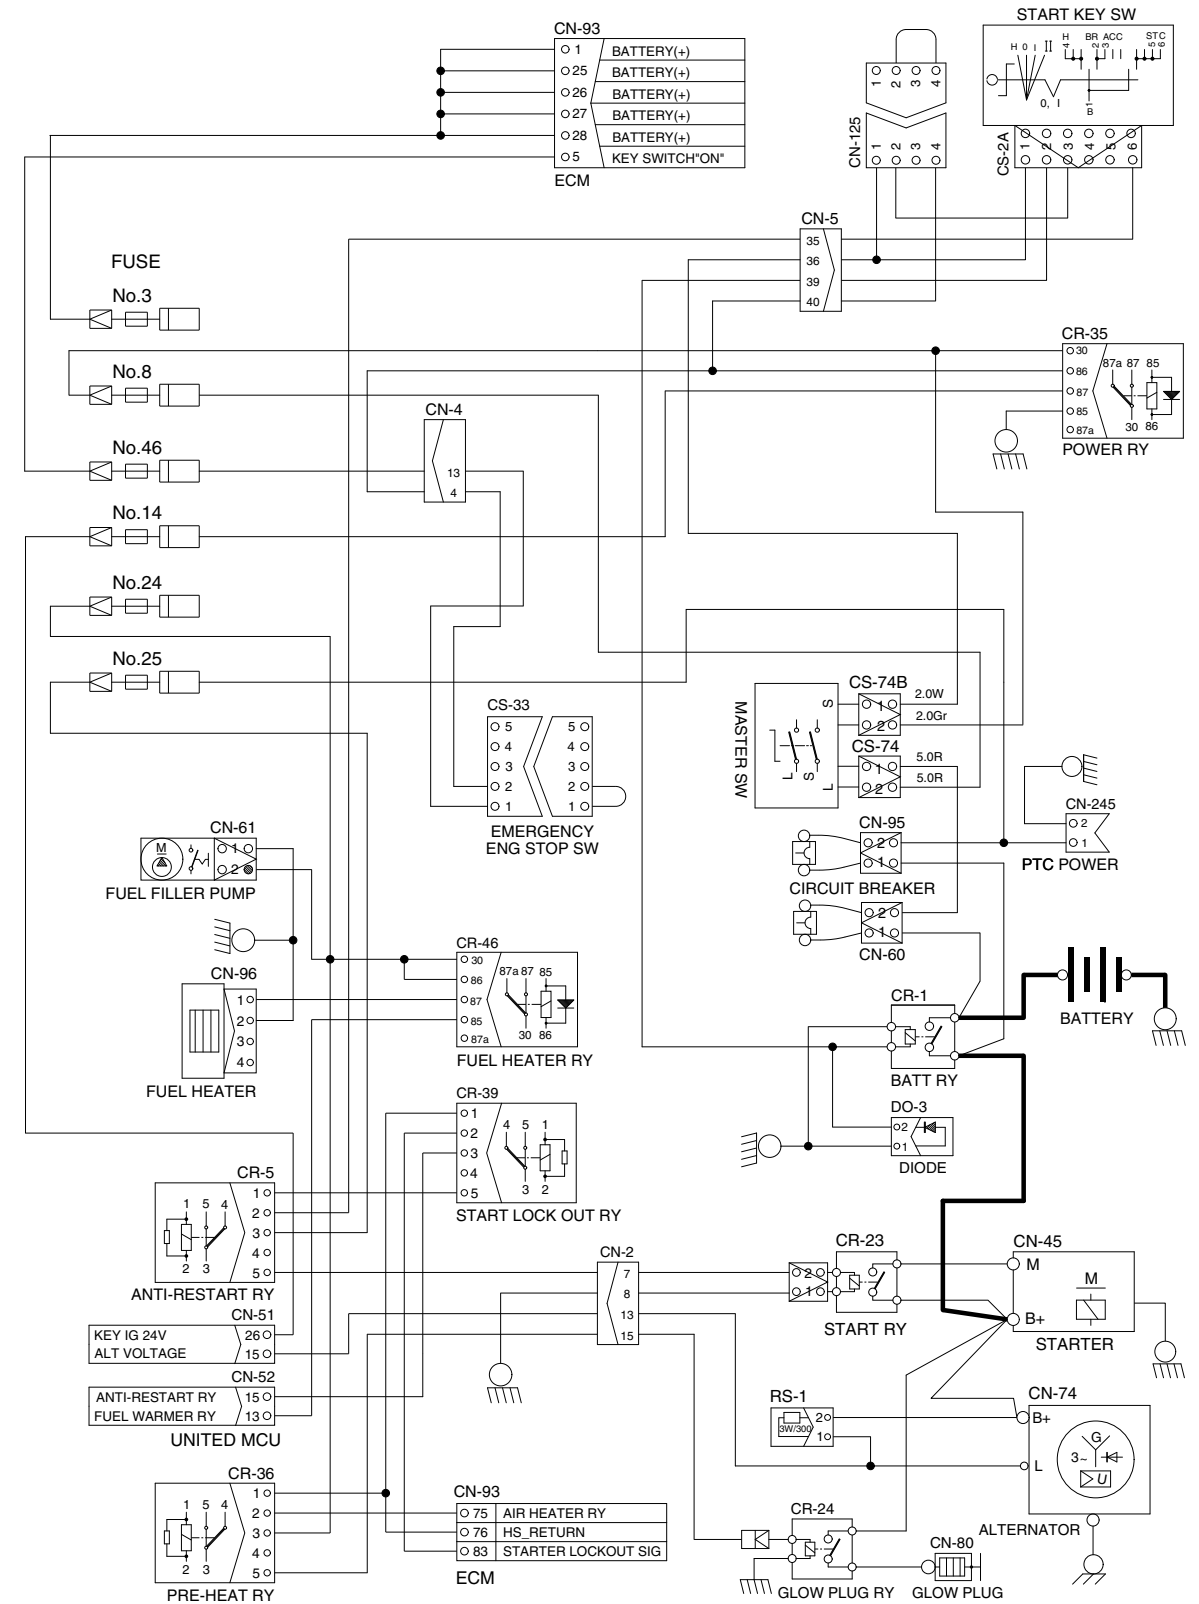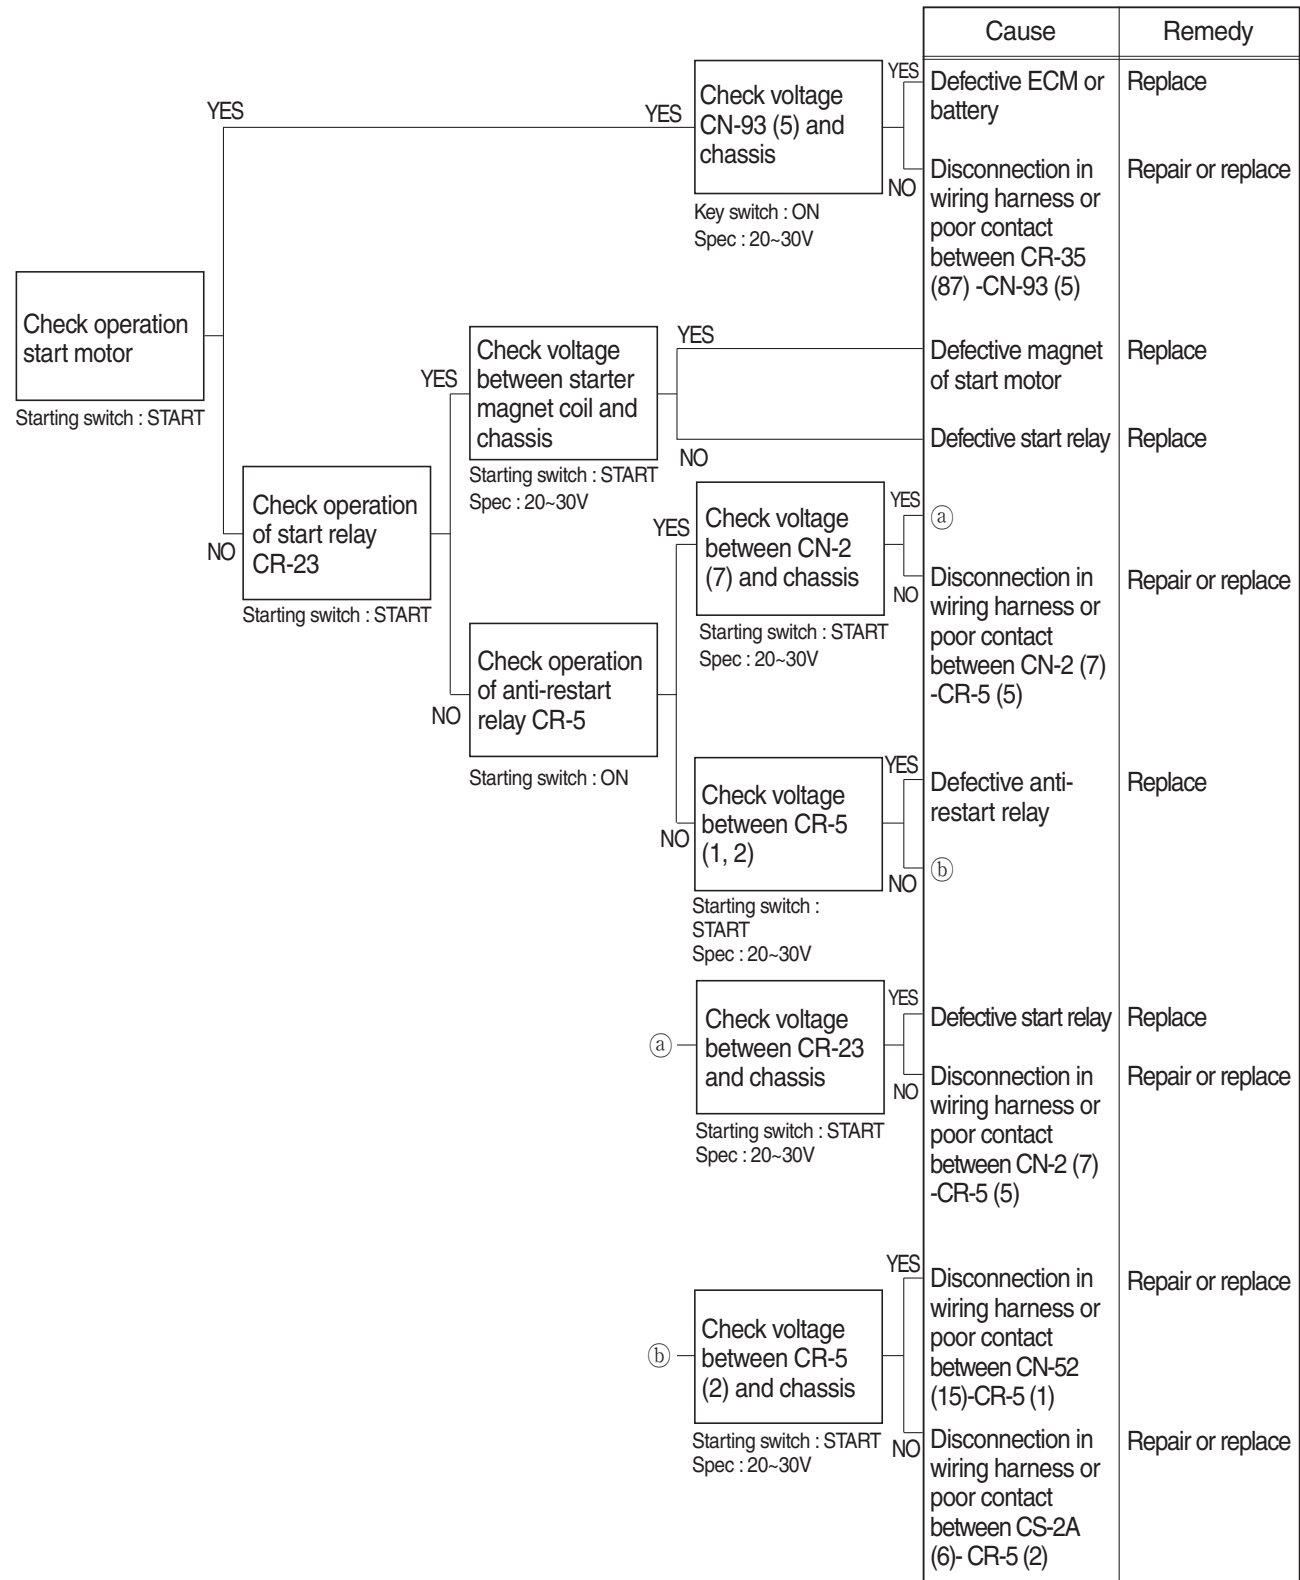

13. WHEN STARTING SWITCH ON DOES NOT OPERATE

(SERIAL NO. : #0508-)



- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted, master switch ON and check open circuit of circuit breaker (CN-60, CN-95).
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

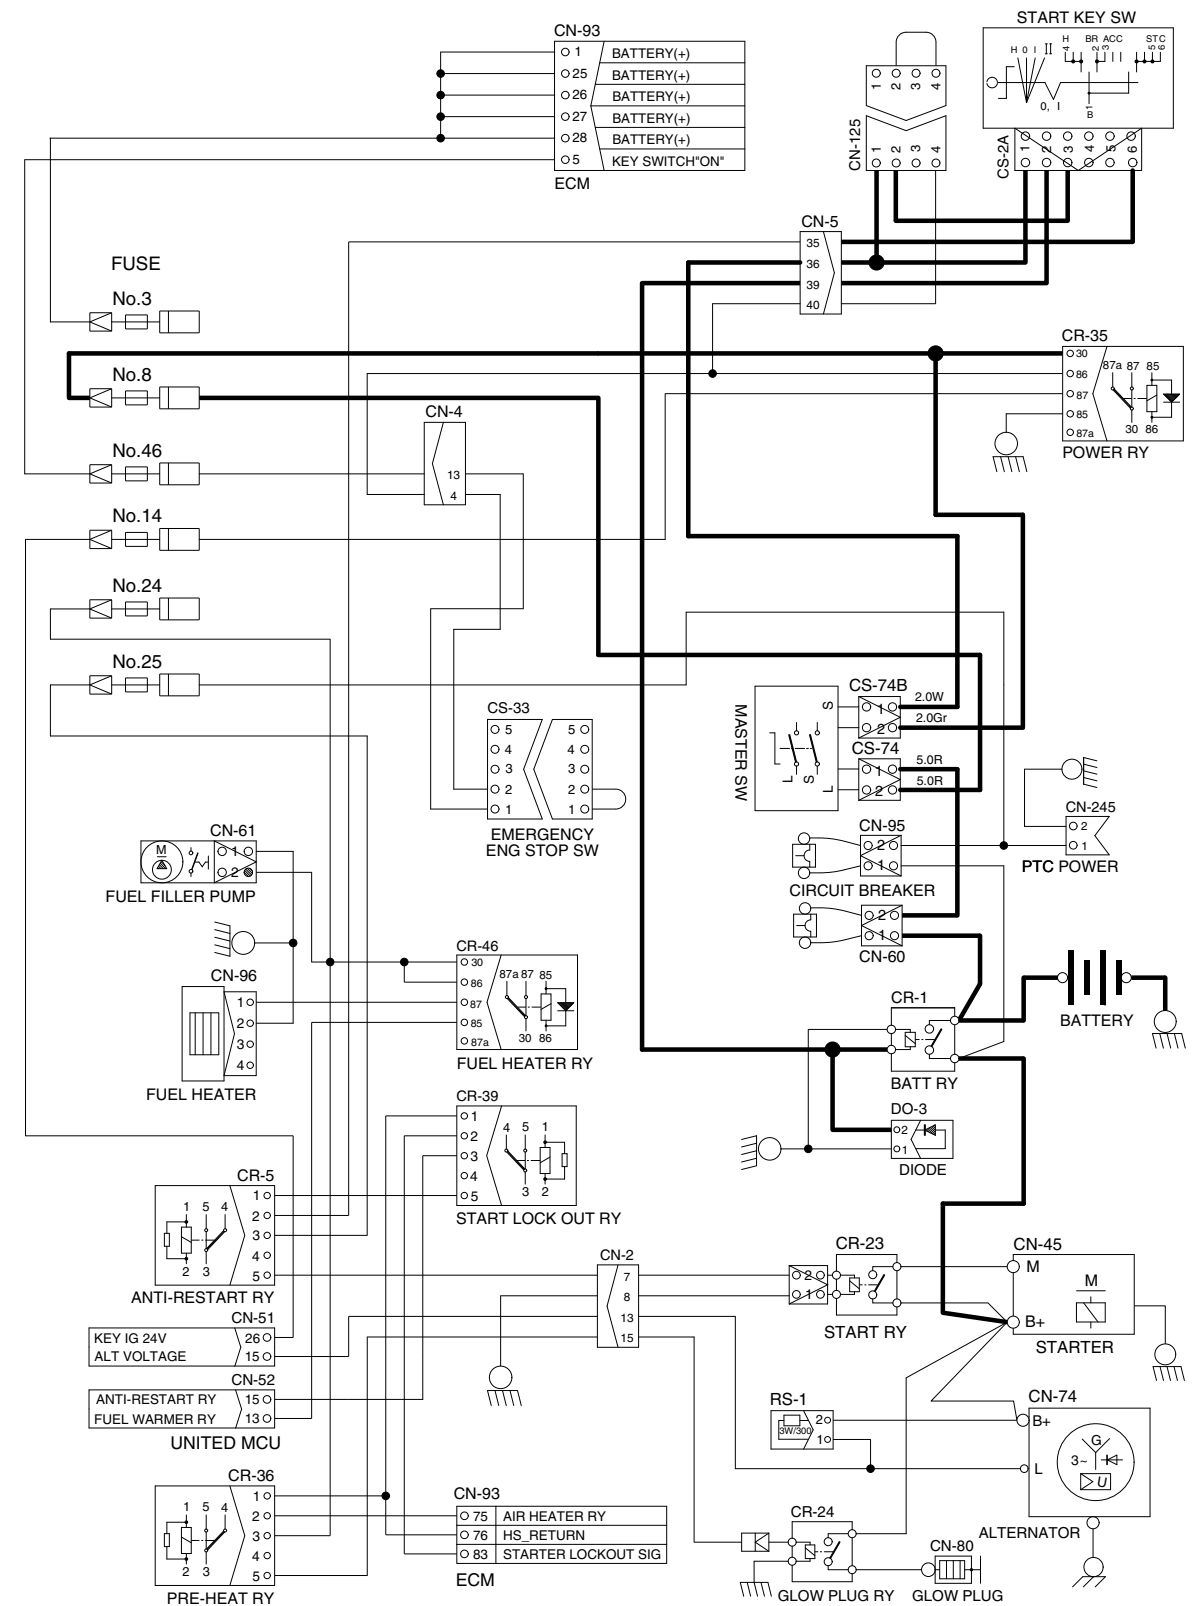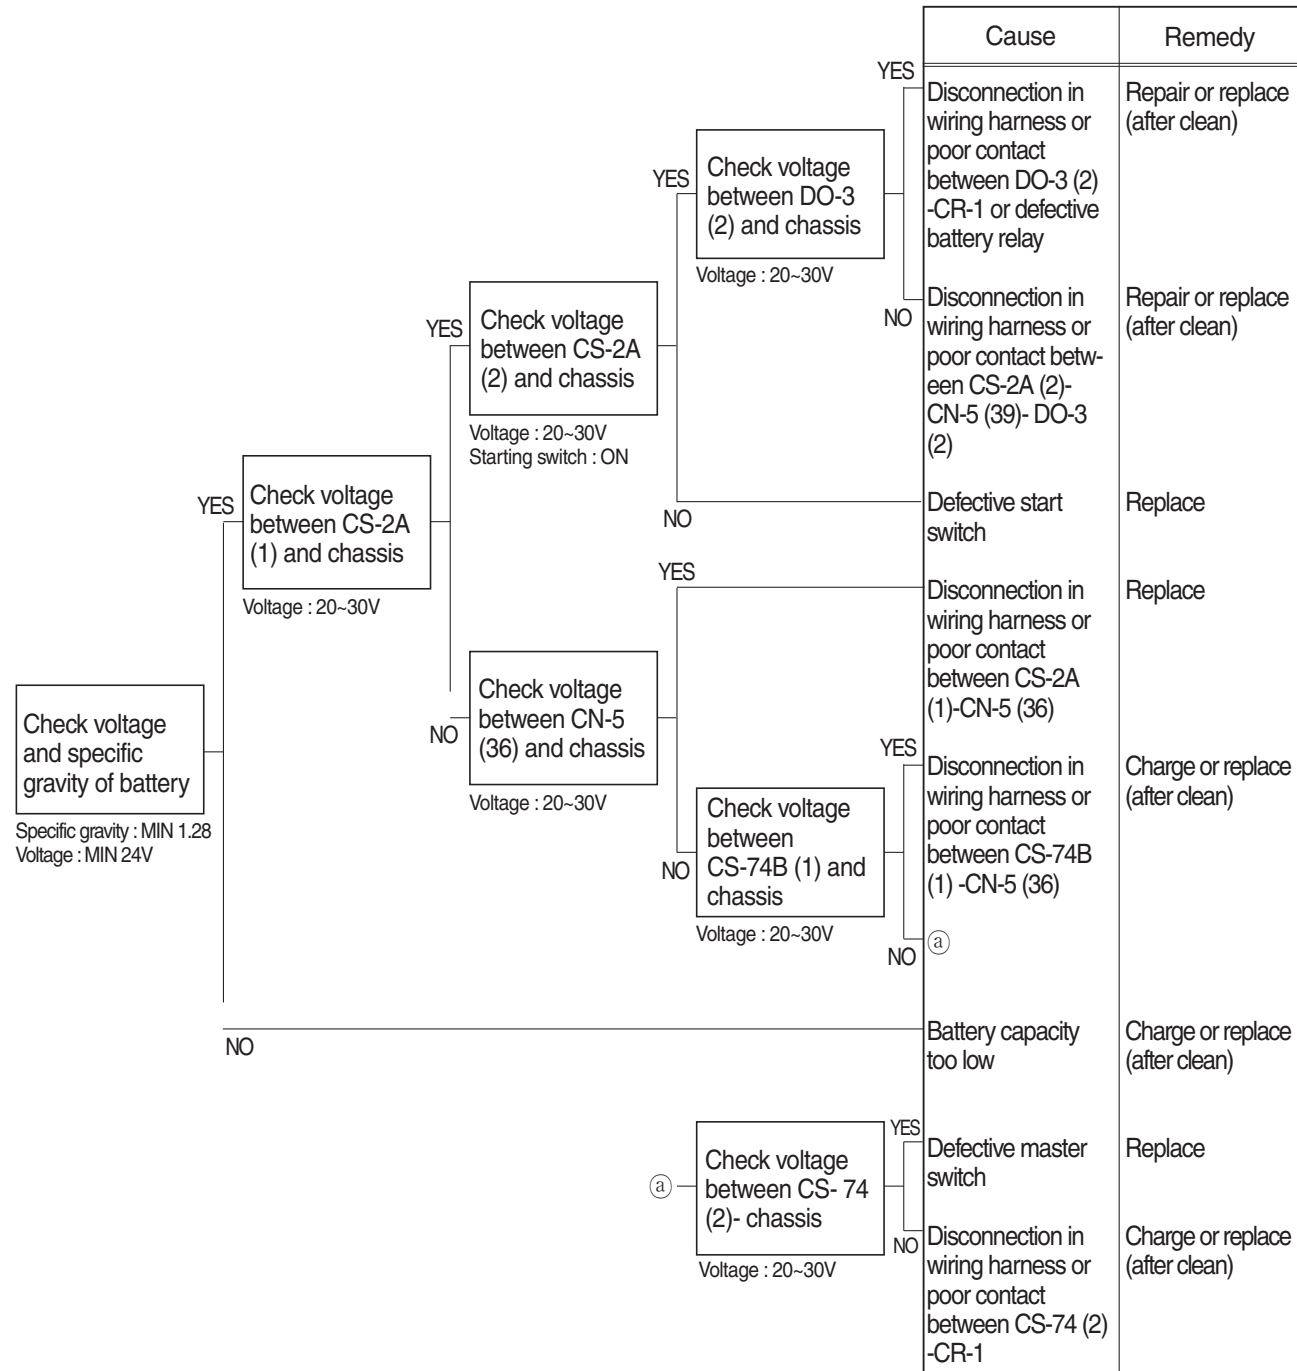

14. WHEN STARTING SWITCH IS TURNED ON, WIPER MOTOR DOES NOT OPERATE



(SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and the fuse No. 10, 23 and 39 is not blown out.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

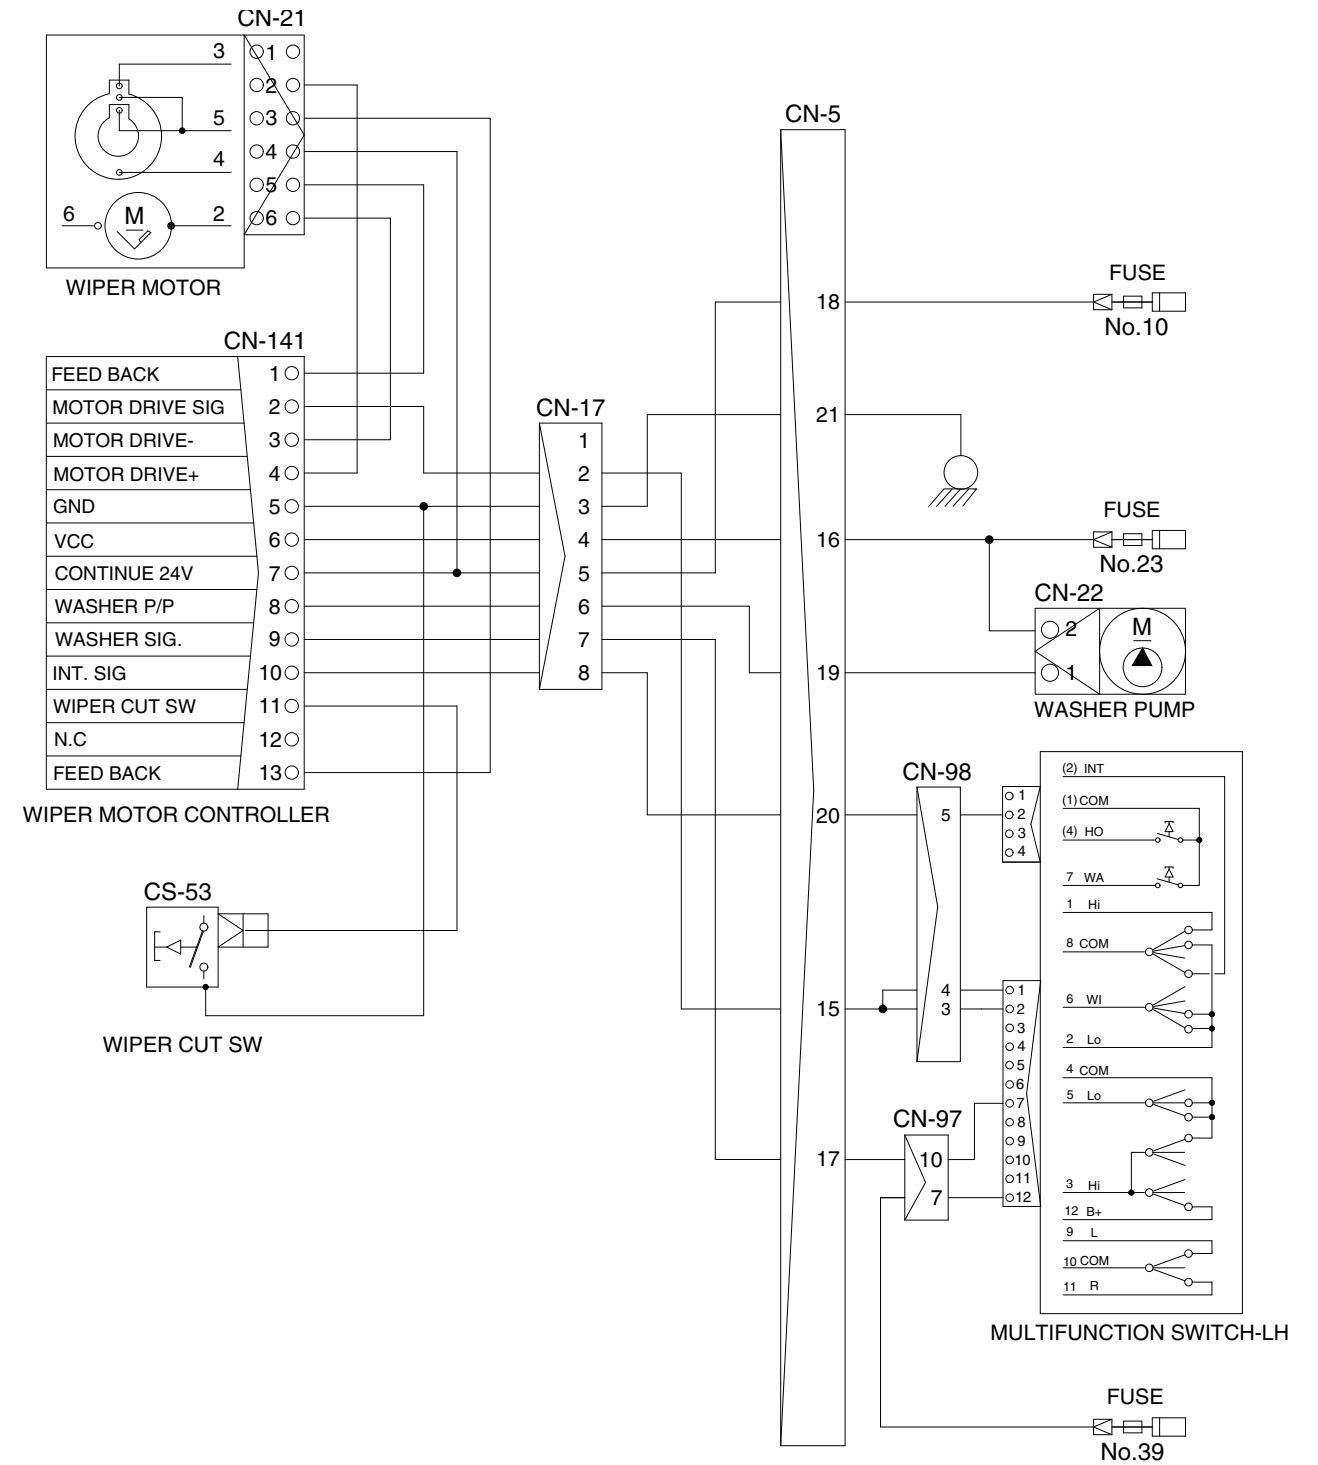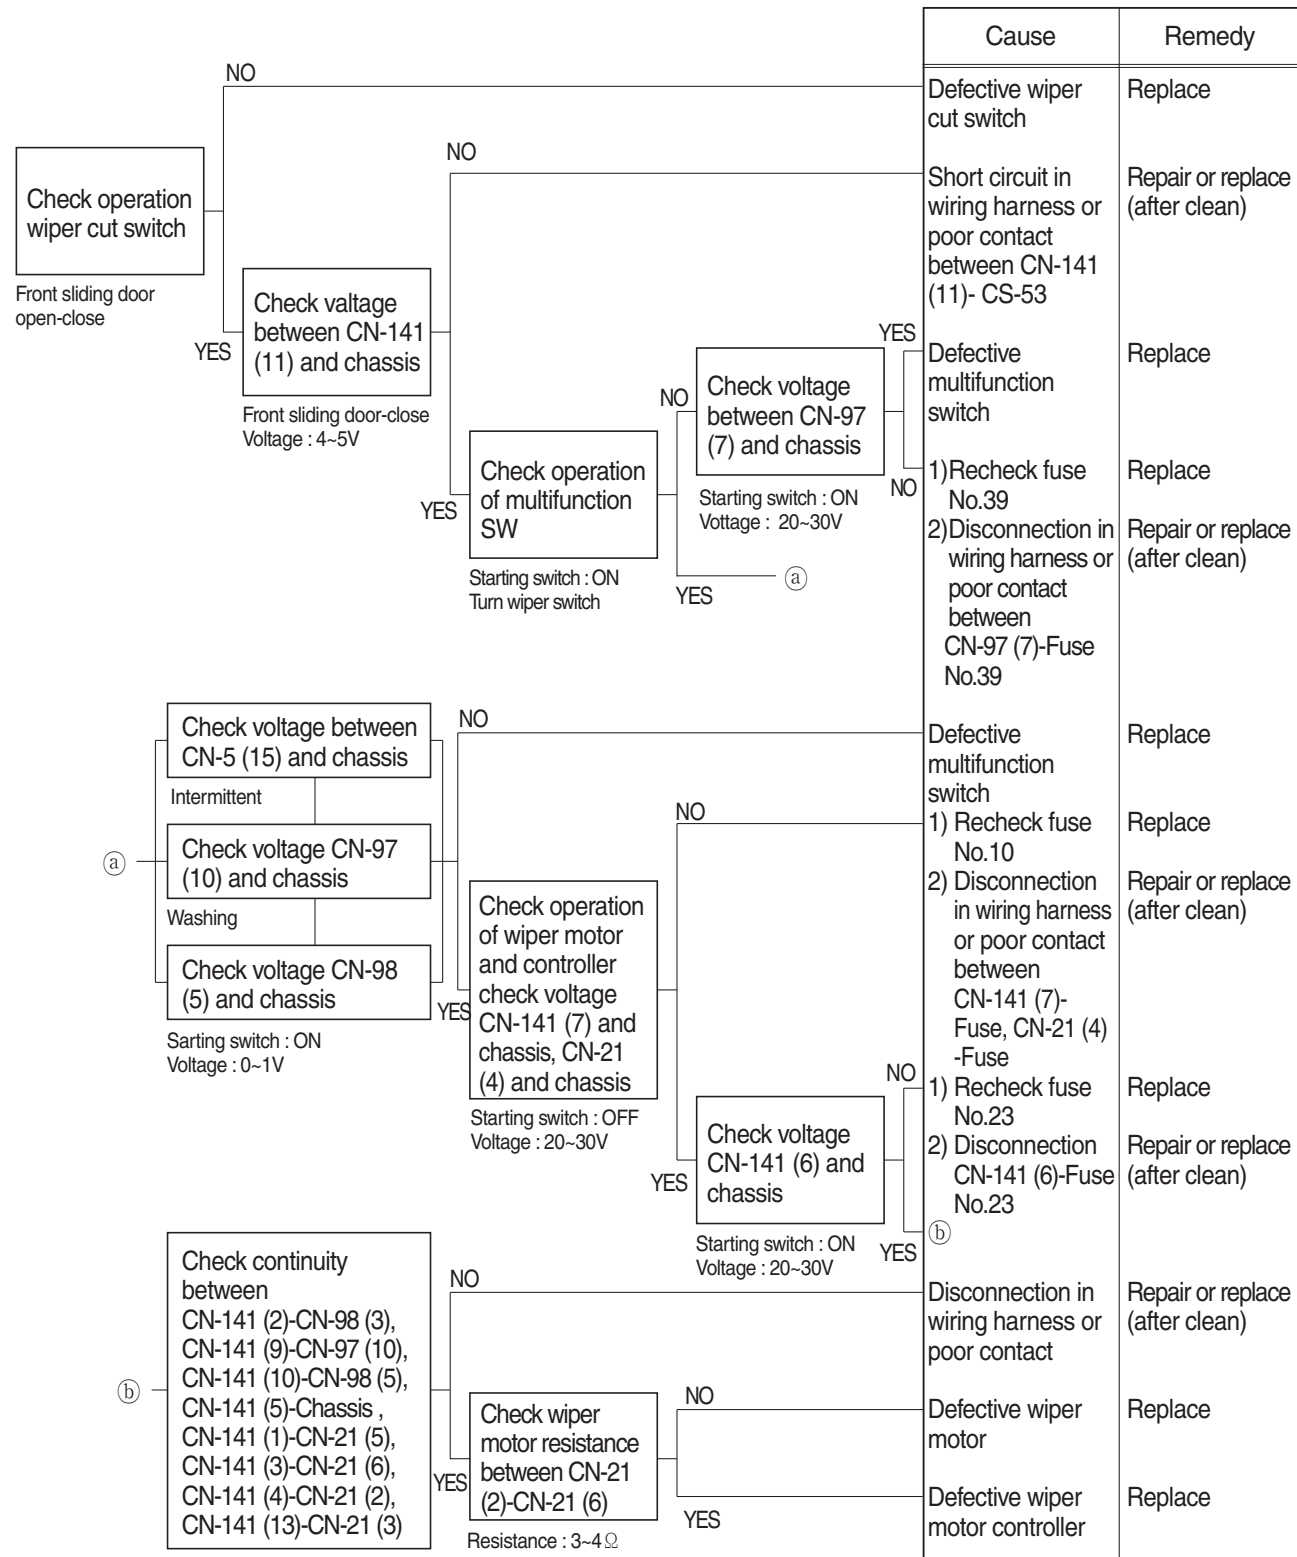

15. WHEN STARTING SWITCH IS TURNED ON, HEAD LAMP DOES NOT LIGHTS UP
(SERIAL NO. : #0508-)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted and short of fuse No. 16, 39.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

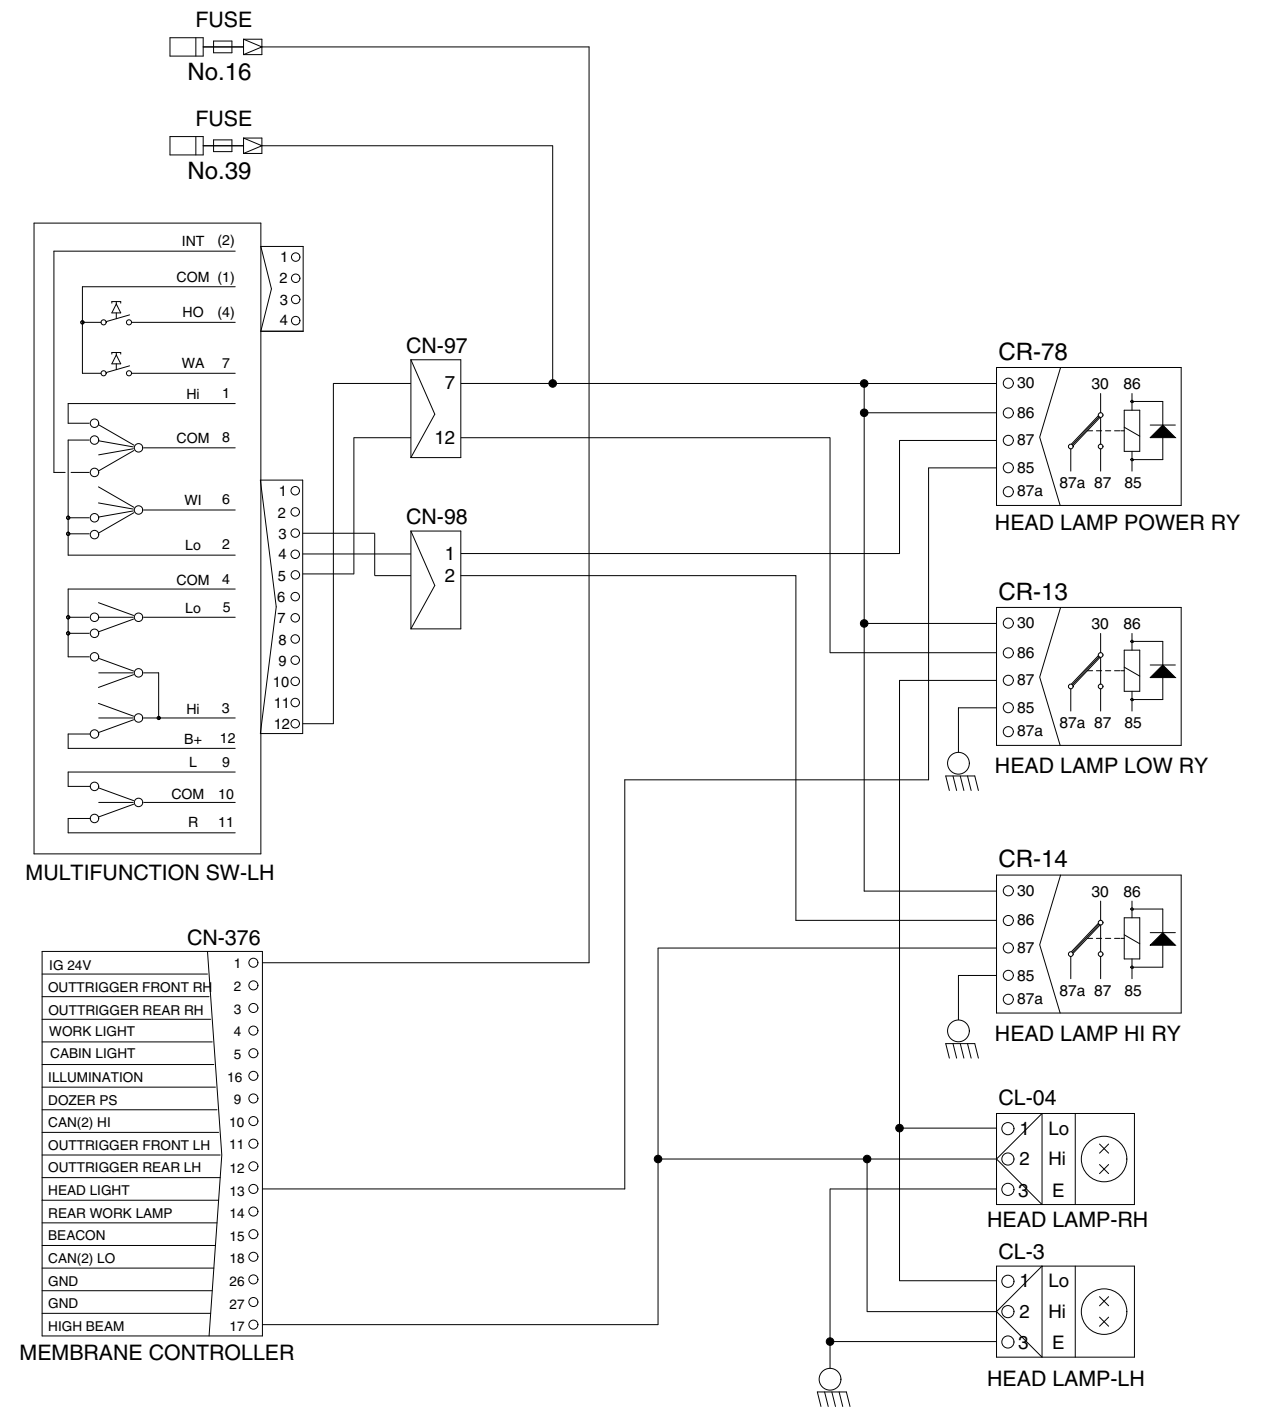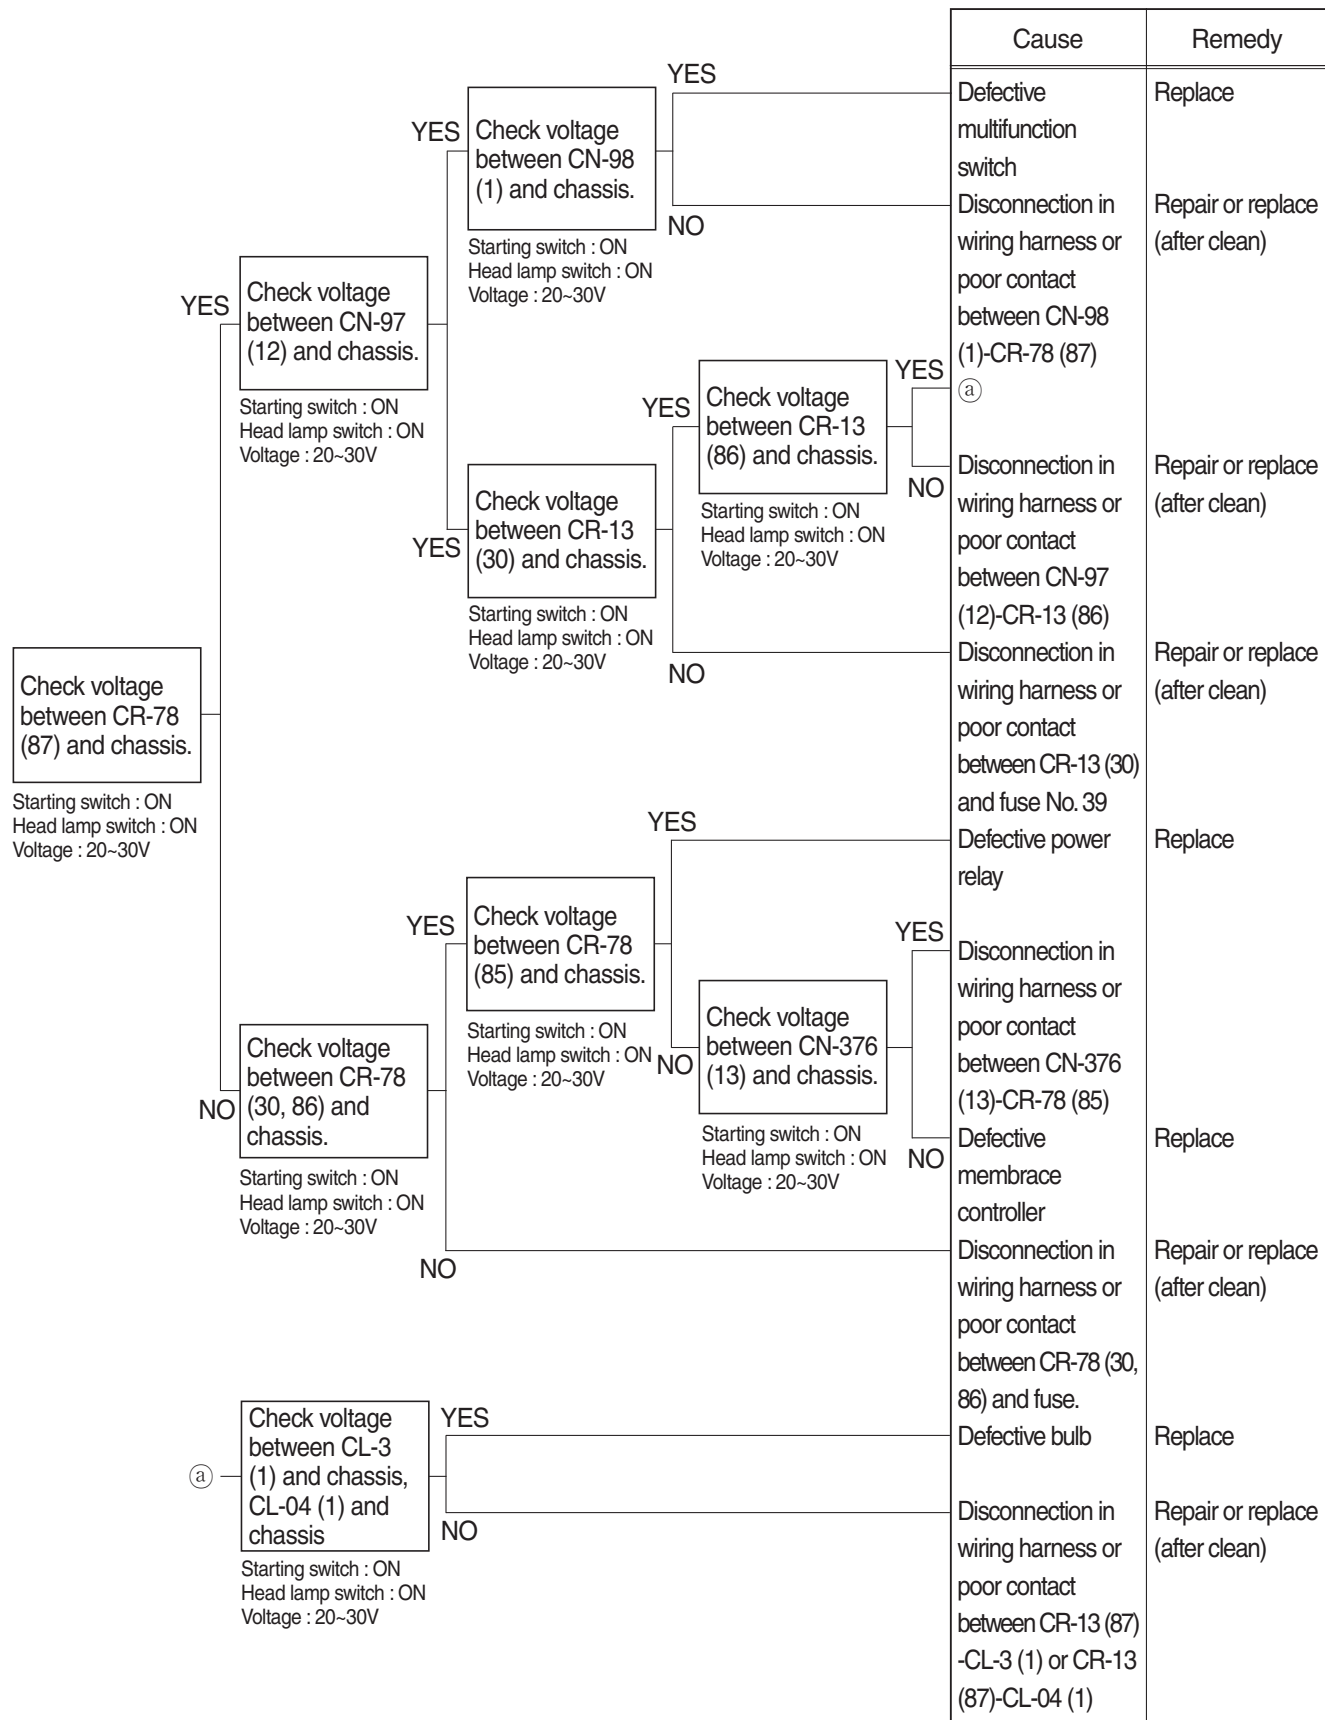


GROUP 4 MECHATRONICS SYSTEM


1. ALL ACTUATORS SPEED ARE SLOW (SERIAL NO. : -#0507)

- ※ Boom, Arm, Bucket, Swing and travel speed are slow, but engine speed is good.
- ※ Spec : P-mode 1500 ± 50 rpm S-mode 1400 ± 50 rpm E-mode 1300 ± 50 rpm
- ※ Before carrying out below procedure, check all the related connectors are properly inserted and fault code on the cluster.

1) INSPECTION PROCEDURE

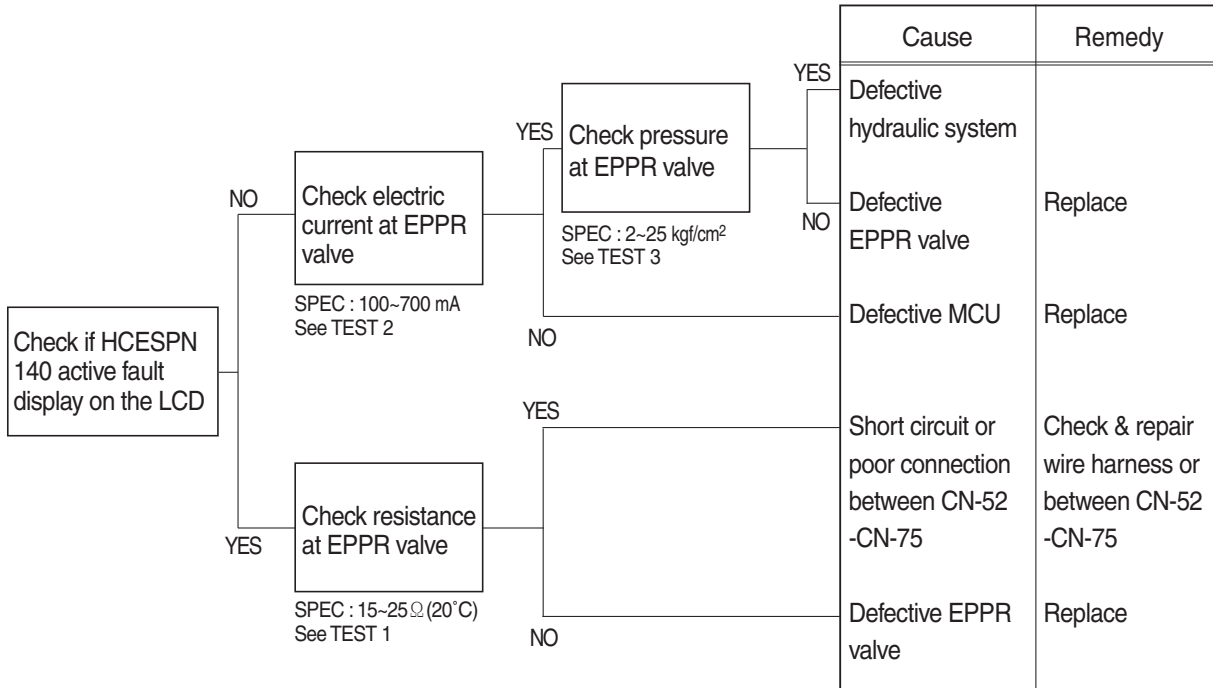

Wiring diagram

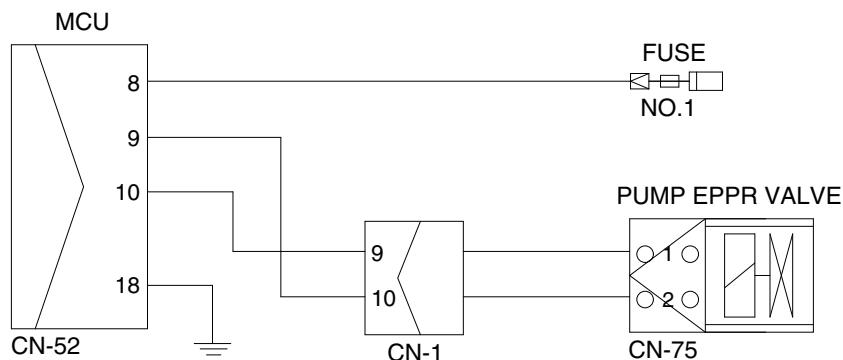


140WF6MS01

(SERIAL NO. : -#0507)

2) TEST PROCEDURE


(1) **Test 1** : Check resistance at connector CN-75.

- ① Starting key OFF.
- ② Disconnect connector CN-75 from EPPR valve at main hydraulic pump.
- ③ Check resistance between 2 lines as figure.

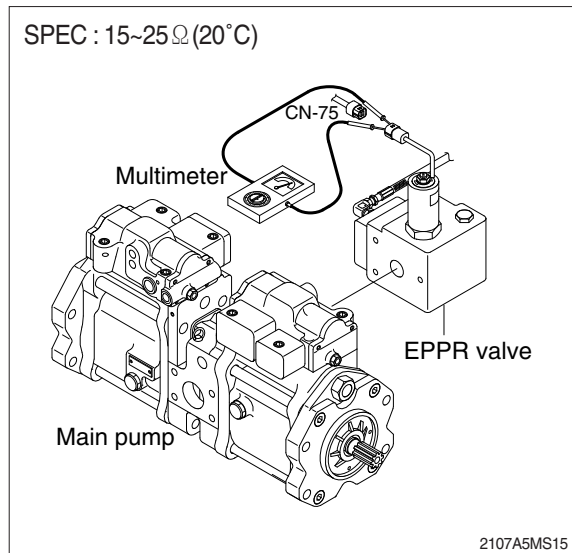


(2) **Test 2** : Check electric current at EPPR valve.

- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ Position the multimodal dial at 10.
- ⑥ If tachometer show approx 1400 ± 50 rpm disconnect one wire harness from EPPR valve.
- ⑦ Check electric current at bucket circuit relief position.

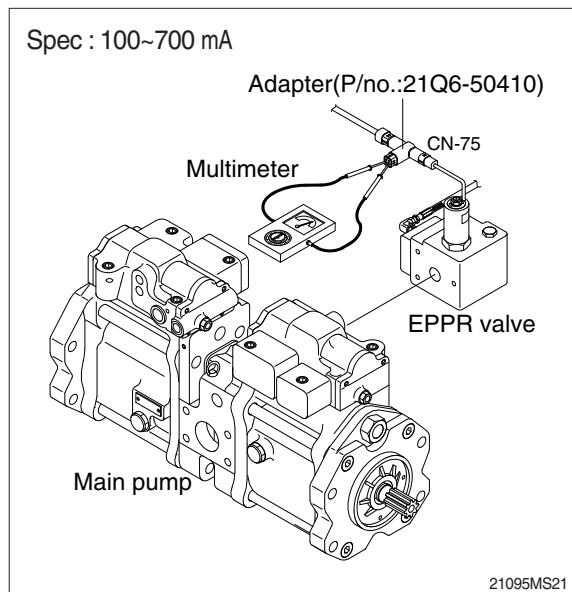

(3) **Test 3** : Check pressure at EPPR valve.


- ① Remove plug and connect pressure gauge as figure.
 - Gauge capacity : 0 to 50 kgf/cm²
(0 to 725 psi)
- ② Start engine.
- ③ Set S-mode and cancel auto decel mode.
- ④ Position the multimodal dial at 10.
- ⑤ If tachometer show approx 1400 ± 50 rpm check pressure at relief position of bucket circuit by operating bucket control lever.
- ⑥ If pressure is not correct, adjust it.
- ⑦ After adjust, test the machine.

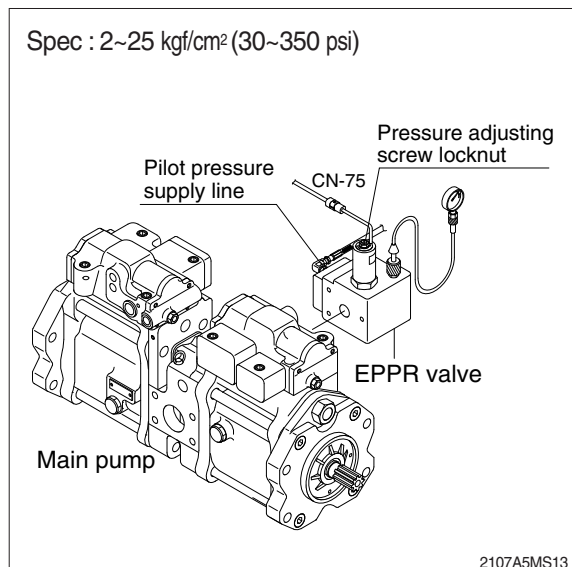


2. ENGINE STALL (SERIAL NO. : -#0507)

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

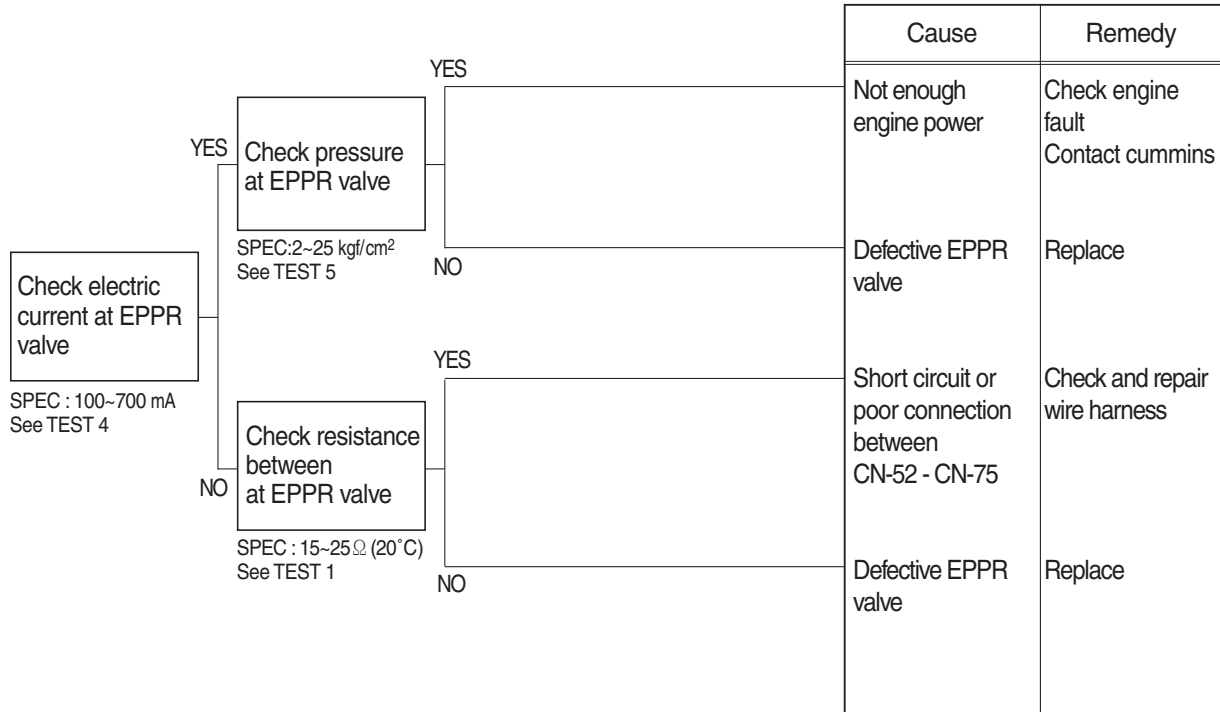

Wiring diagram

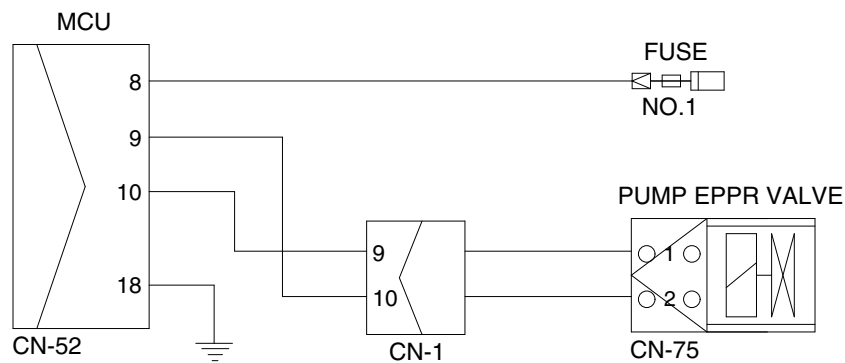


140WF6MS01

(SERIAL NO. : -#0507)

2) TEST PROCEDURE


(1) **Test 4** : Check electric current at EPPR valve.

- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ Position the multimodal dial at 10.
- ⑥ If rpm show approx 1400 ± 50 rpm disconnect one wire harness from EPPR valve.
- ⑦ Check electric current at bucket circuit relief position.

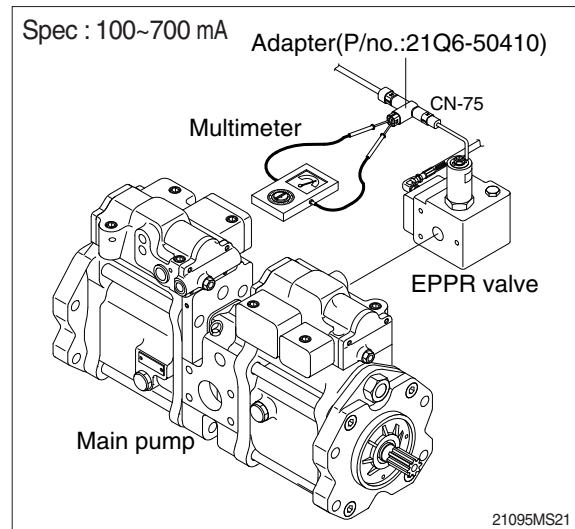

(2) **Test 5** : Check pressure at EPPR valve.


- ① Remove plug and connect pressure gauge as figure.
 - Gauge capacity : 0 to 50 kgf/cm²
(0 to 725 psi)
- ② Start engine.
- ③ Set S-mode and cancel auto decel mode.
- ④ Position the multimodal dial at 10.
- ⑤ If rpm show approx 1400 ± 50 rpm check pressure at relief position of bucket circuit by operating bucket control lever.
- ⑥ If pressure is not correct, adjust it.
- ⑦ After adjust, test the machine.

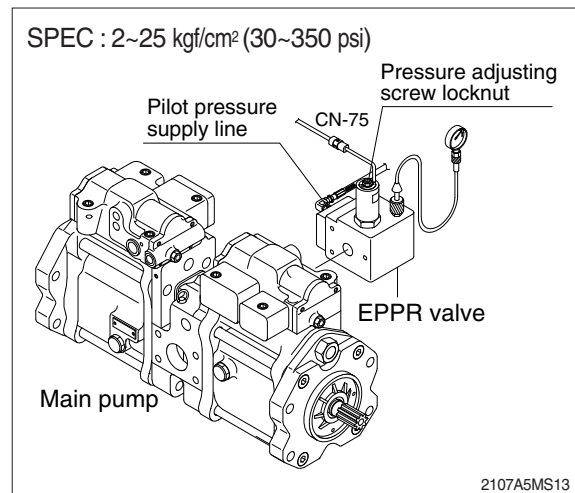


3. MALFUNCTION OF CLUSTER OR MODE SELECTION SYSTEM (SERIAL NO. : -#0507)

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

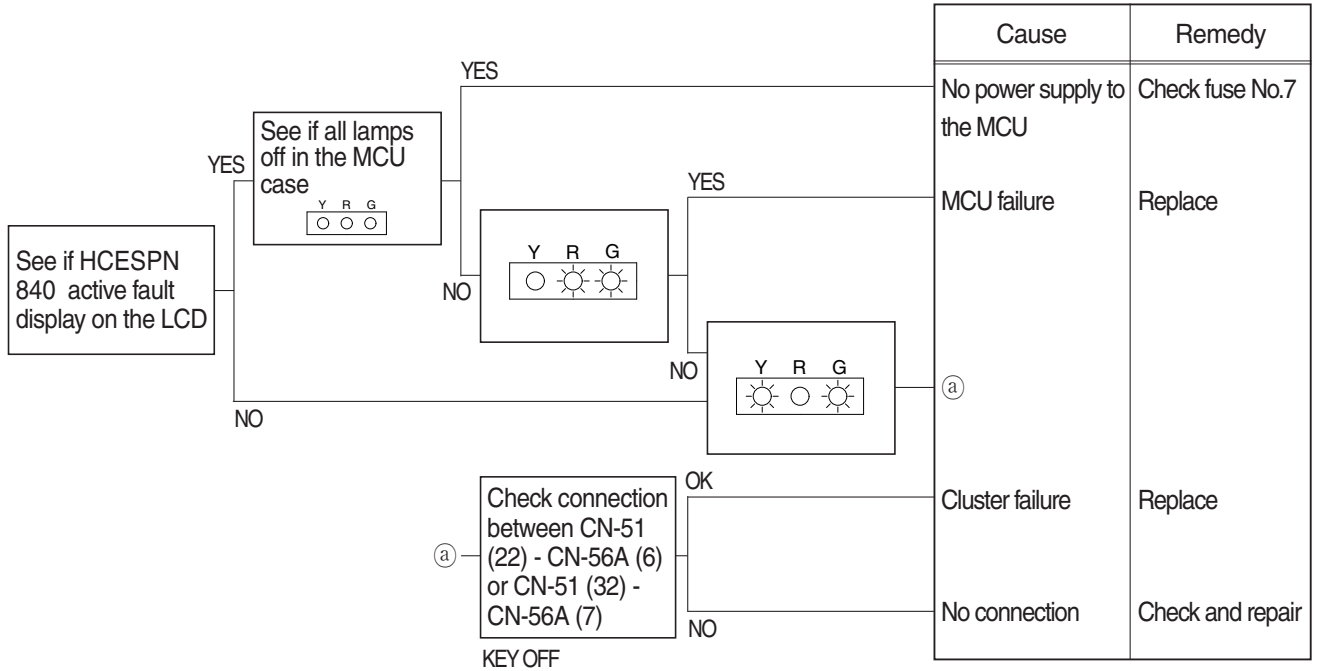

Wiring diagram

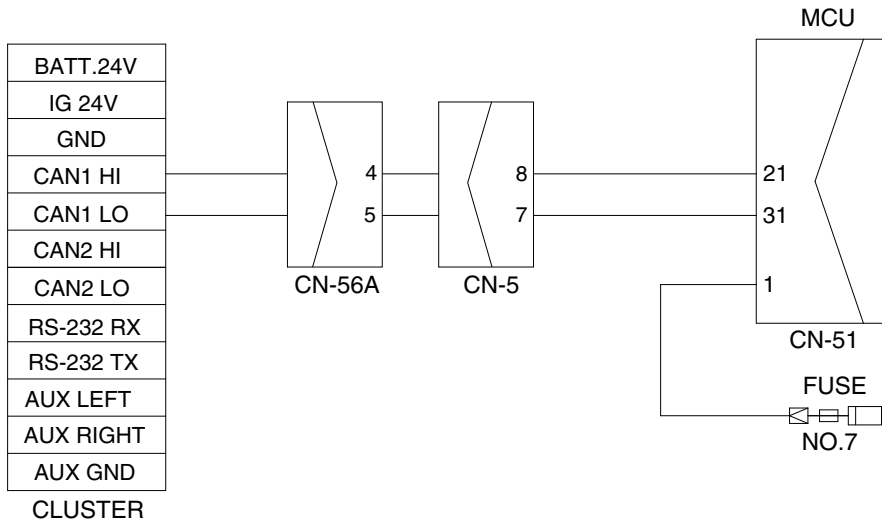


140WF6MS03

4. AUTO DECEL SYSTEM DOES NOT WORK (SERIAL NO. : -#0507)


- Fault code : HCESPN 105, FMI 0~4 (work pressure sensor)
HCESPN 108, FMI 0~4 (travel oil pressure sensor)

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

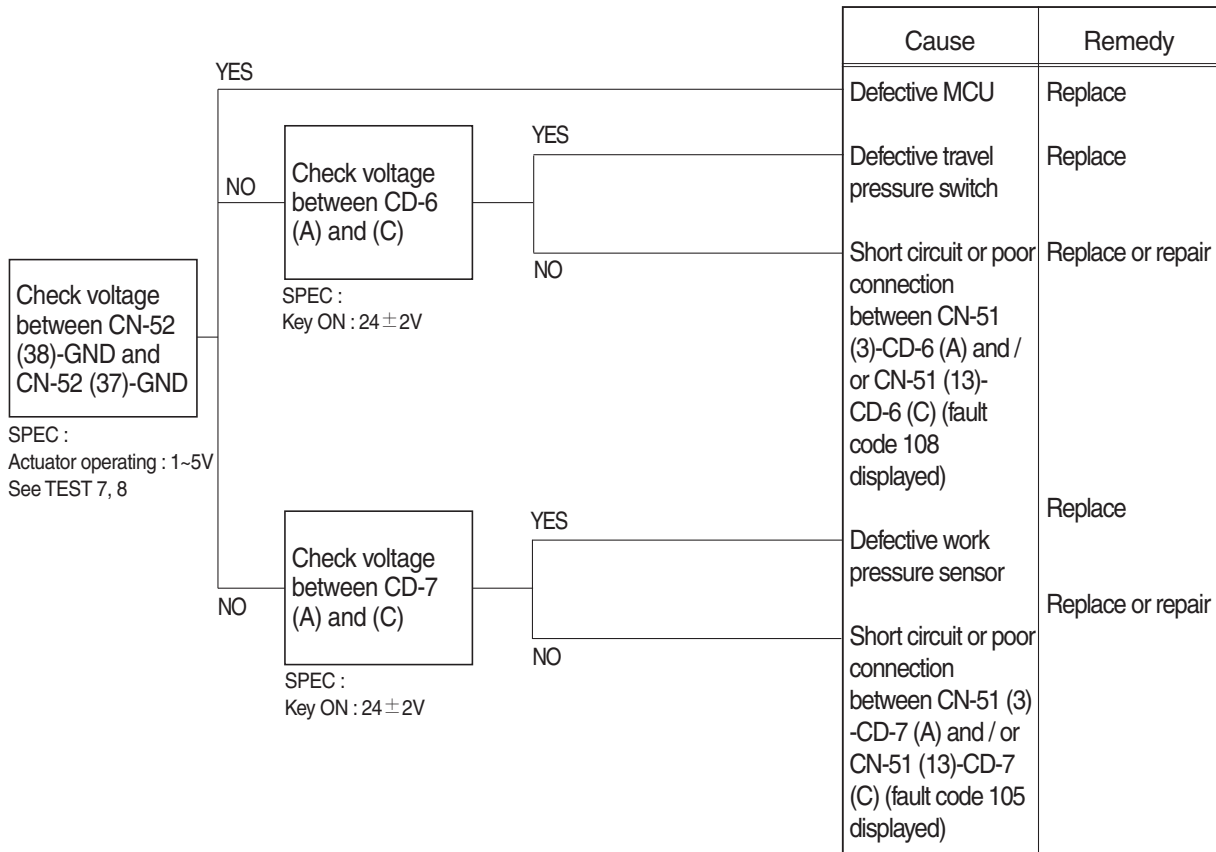

Wiring diagram

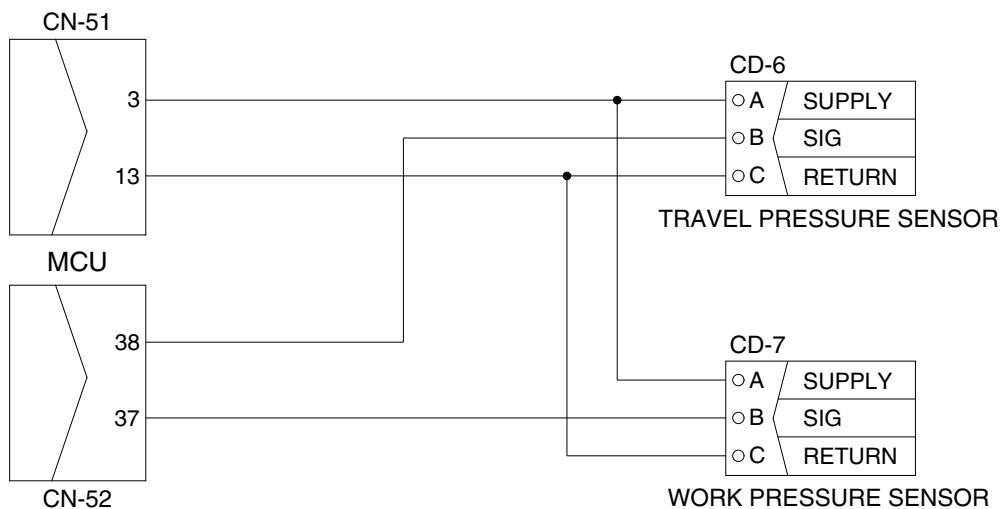

(SERIAL NO. : -#0507)

2) TEST PROCEDURE


(1) **Test 7** : Check voltage at CN-52 (38) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (38) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

(2) **Test 8** : Check voltage at CN-52 (37) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper
- ② Insert prepared pin to rear side of connectors : One pin to (37) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

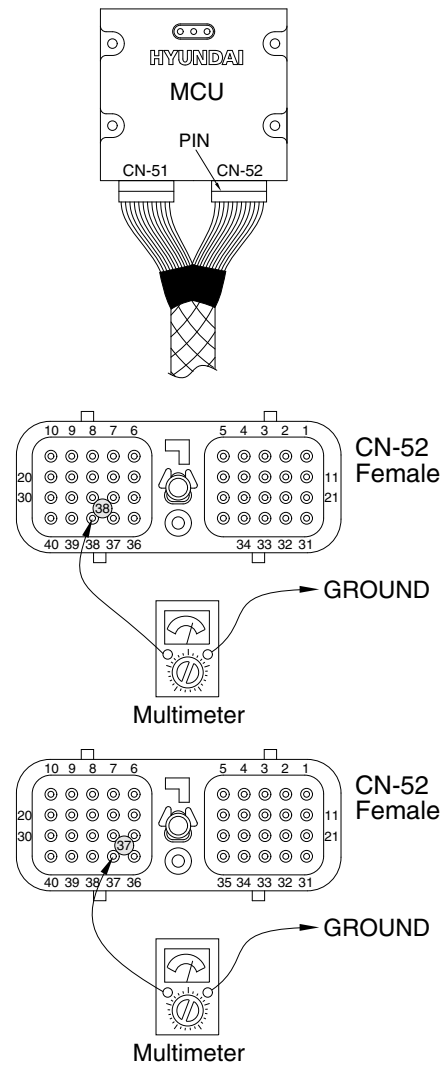


300L6MS04

5. MALFUNCTION OF PUMP 1 PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 120, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

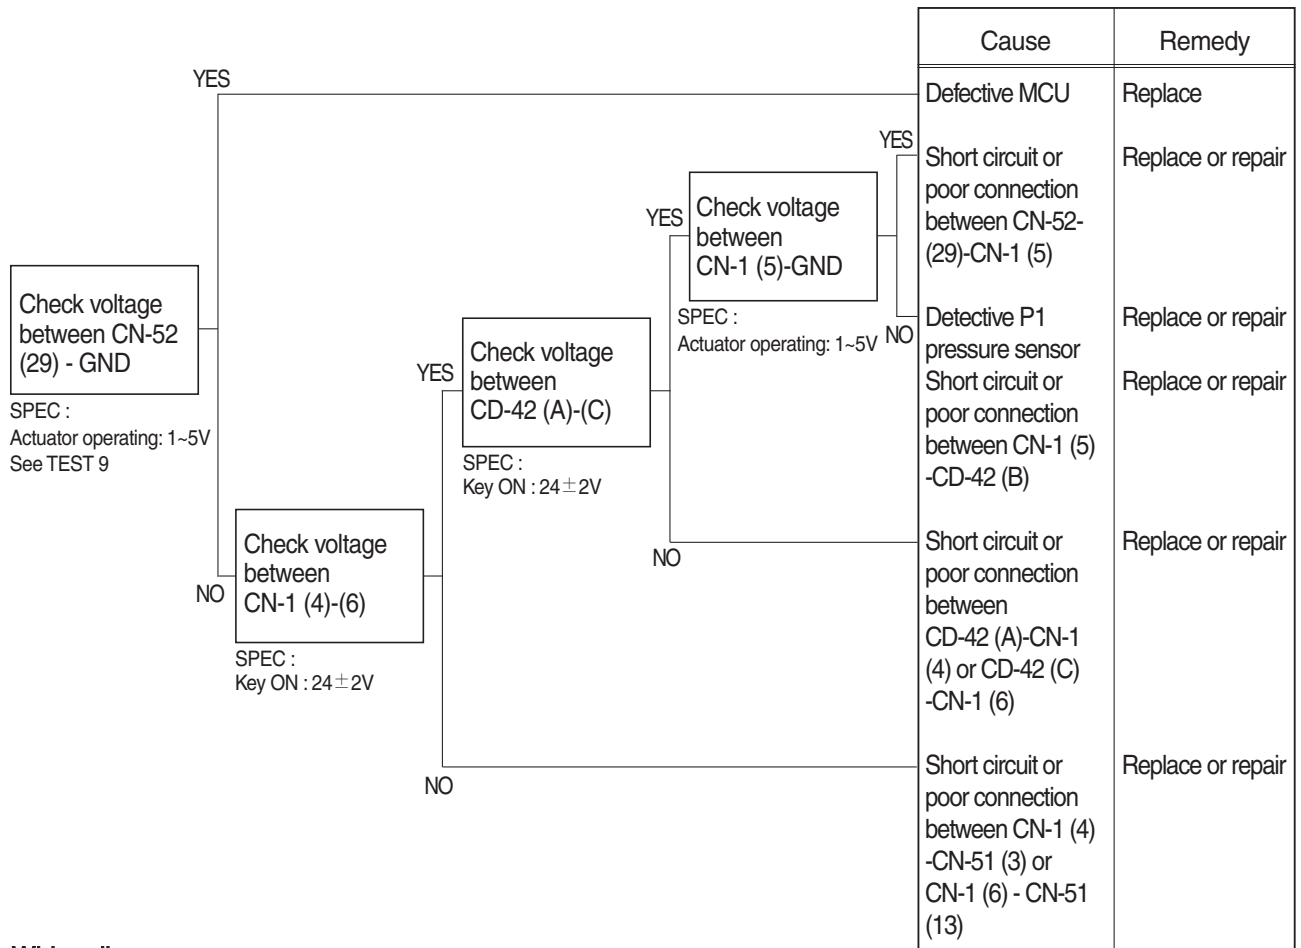

Wiring diagram

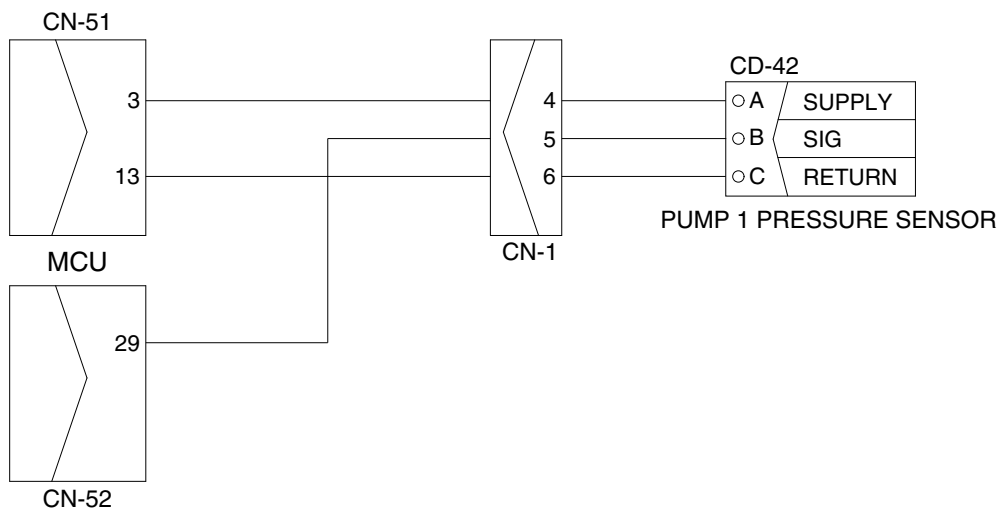


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 9** : Check voltage at CN-52 (29) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (29) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

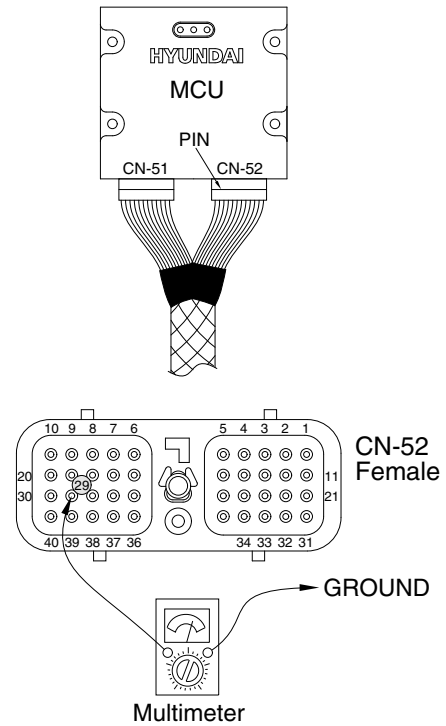


300L6MS06

6. MALFUNCTION OF PUMP 2 PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 121, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

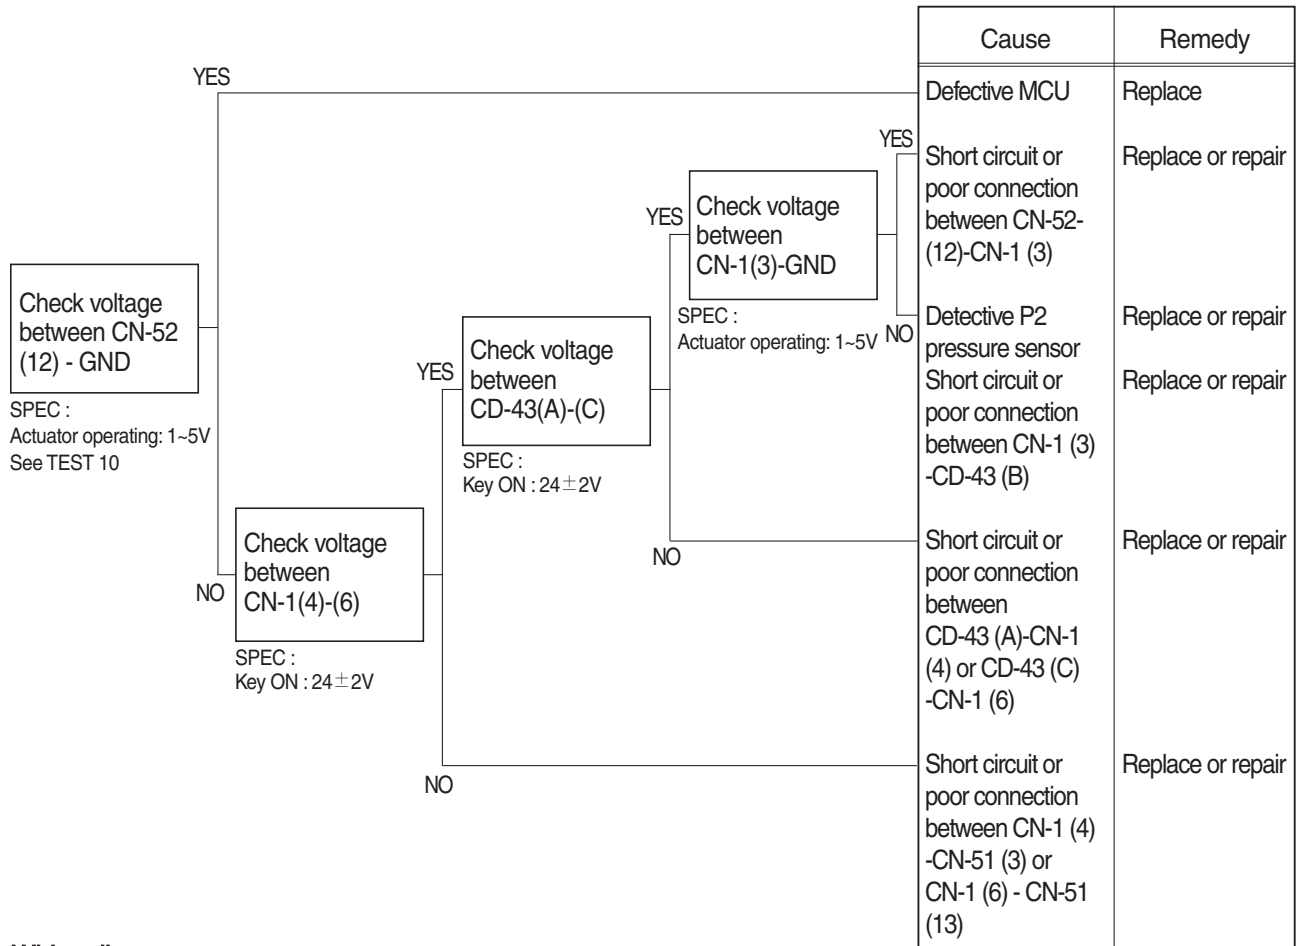

Wiring diagram

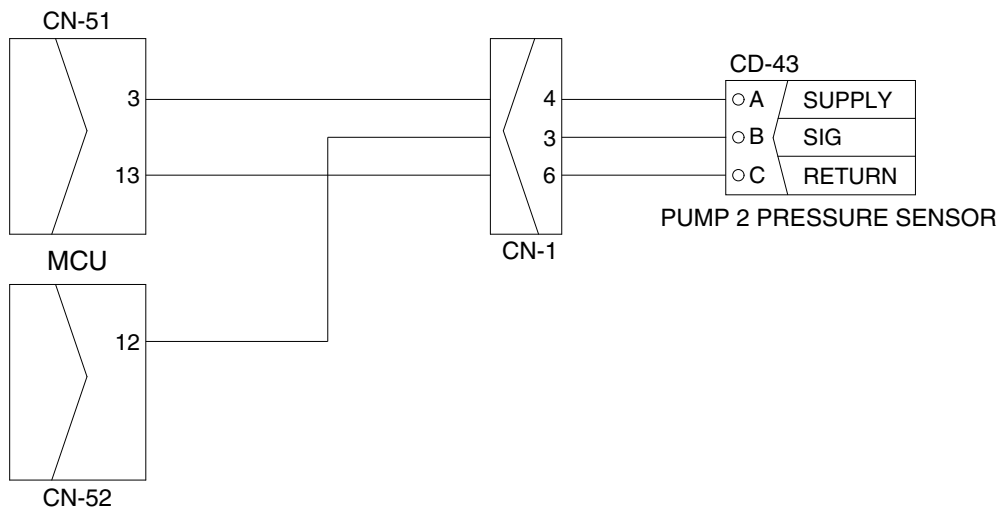


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) Test 10 : Check voltage at CN-52 (12) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (12) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

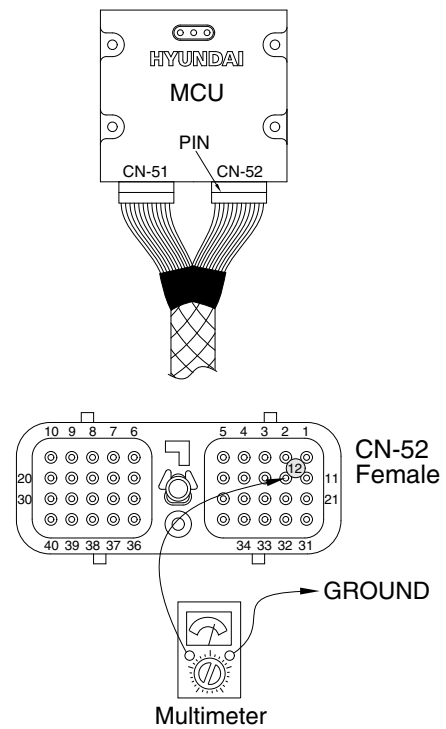


300L6MS08

7. MALFUNCTION OF PUMP 3 PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 125, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

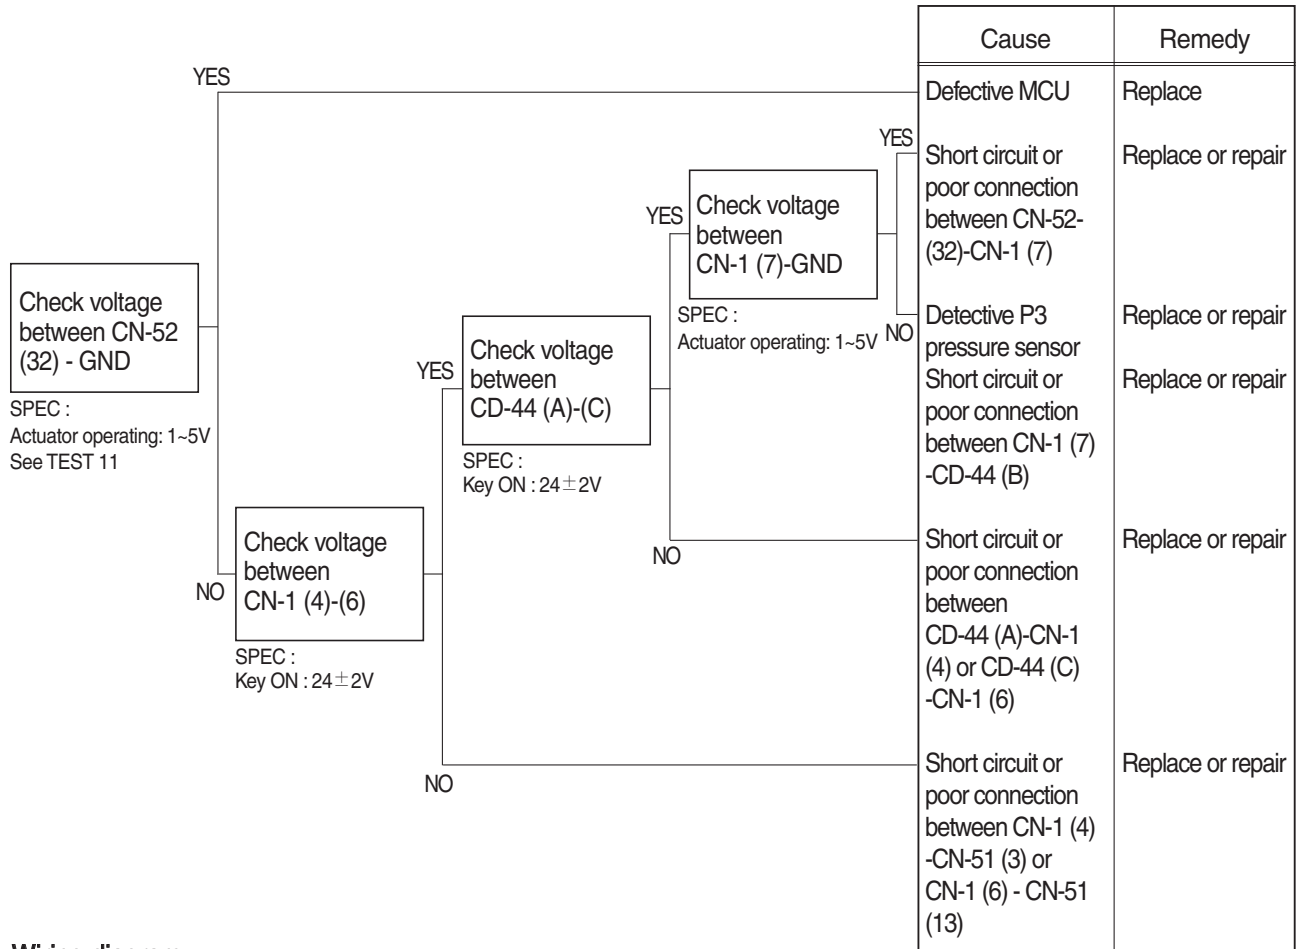

Wiring diagram

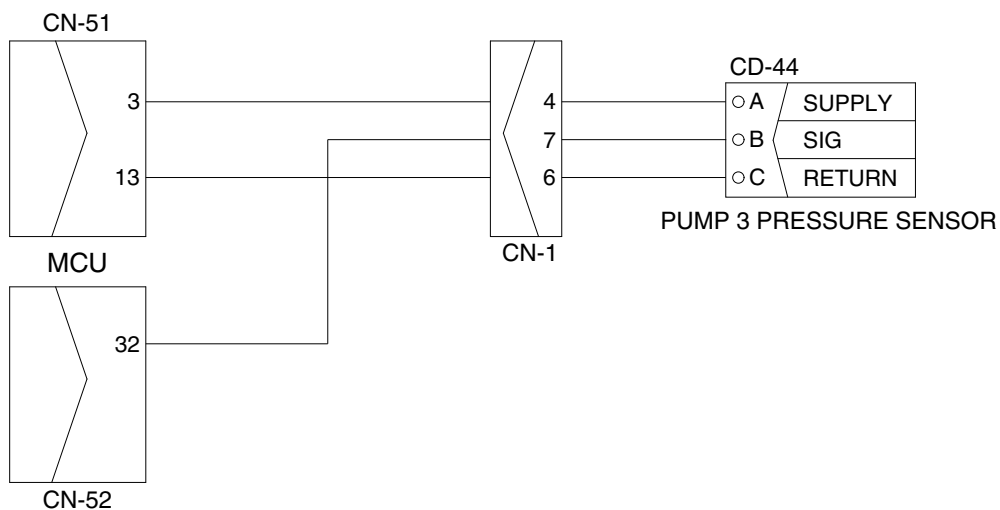


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 11** : Check voltage at CN-52 (32) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (32) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

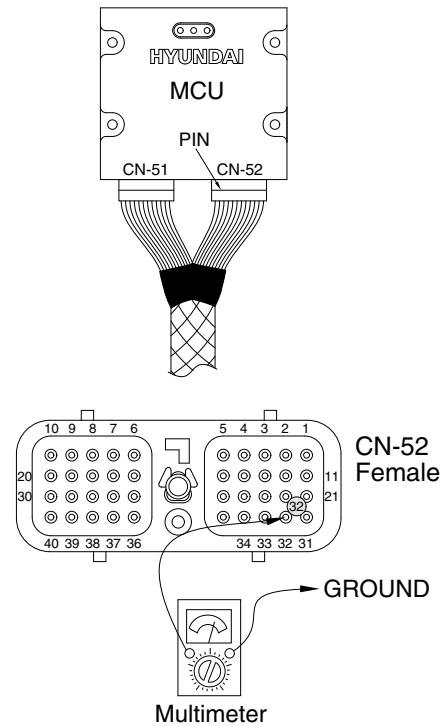


300L6MS10

8. MALFUNCTION OF NEGATIVE 1 PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 123, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

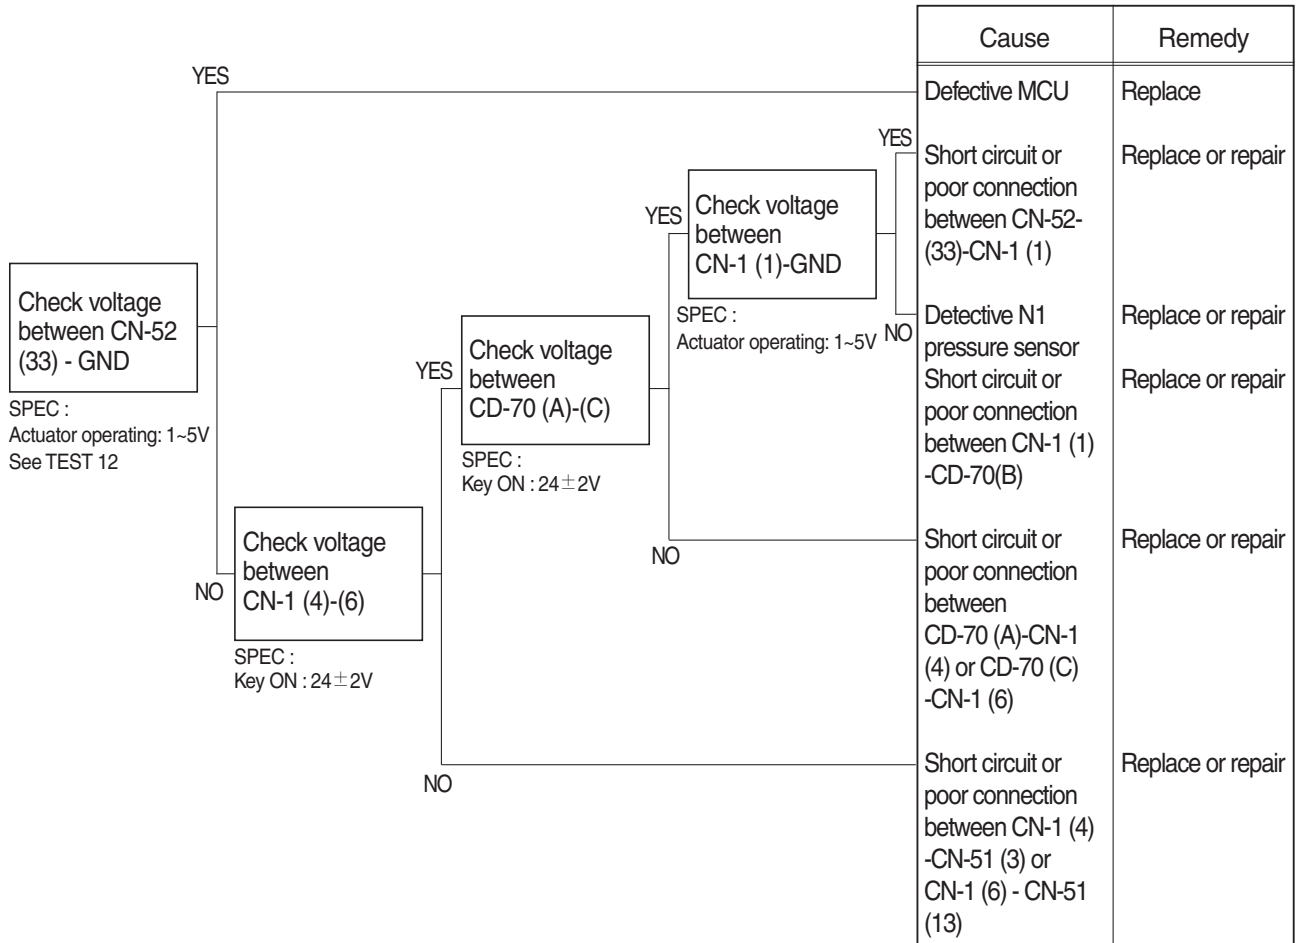

Wiring diagram

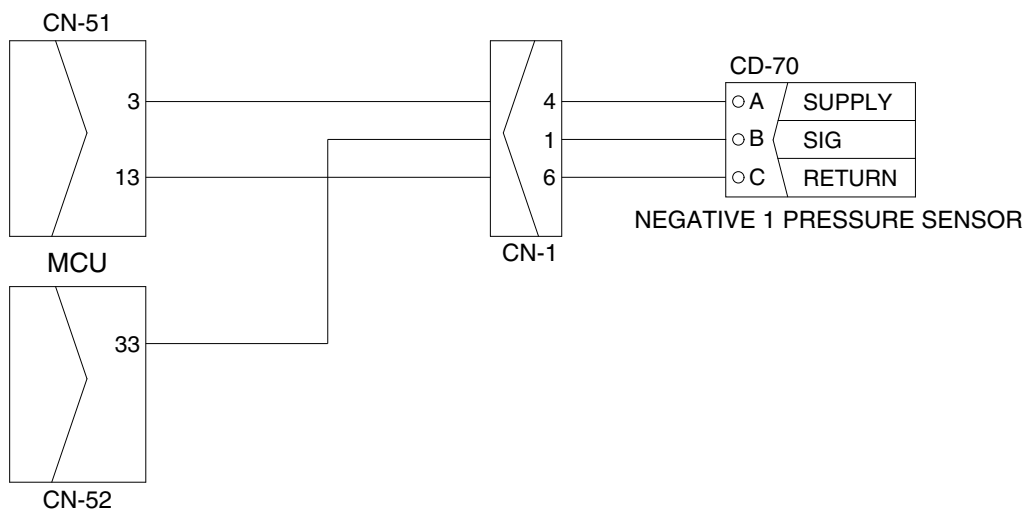


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 12** : Check voltage at CN-52 (33) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (33) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

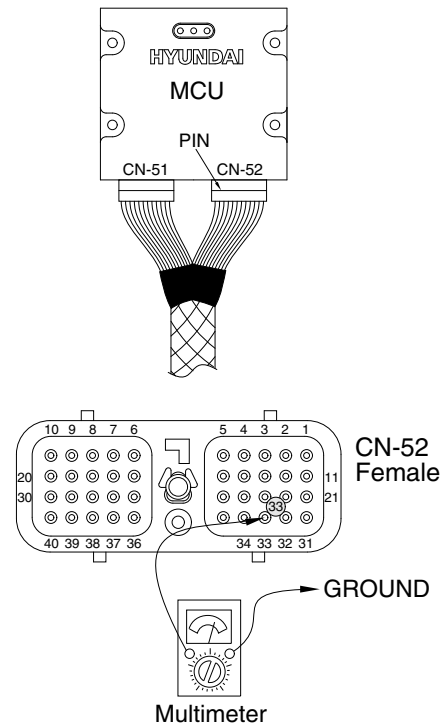


300L6MS12

9. MALFUNCTION OF NEGATIVE 2 PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 124, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

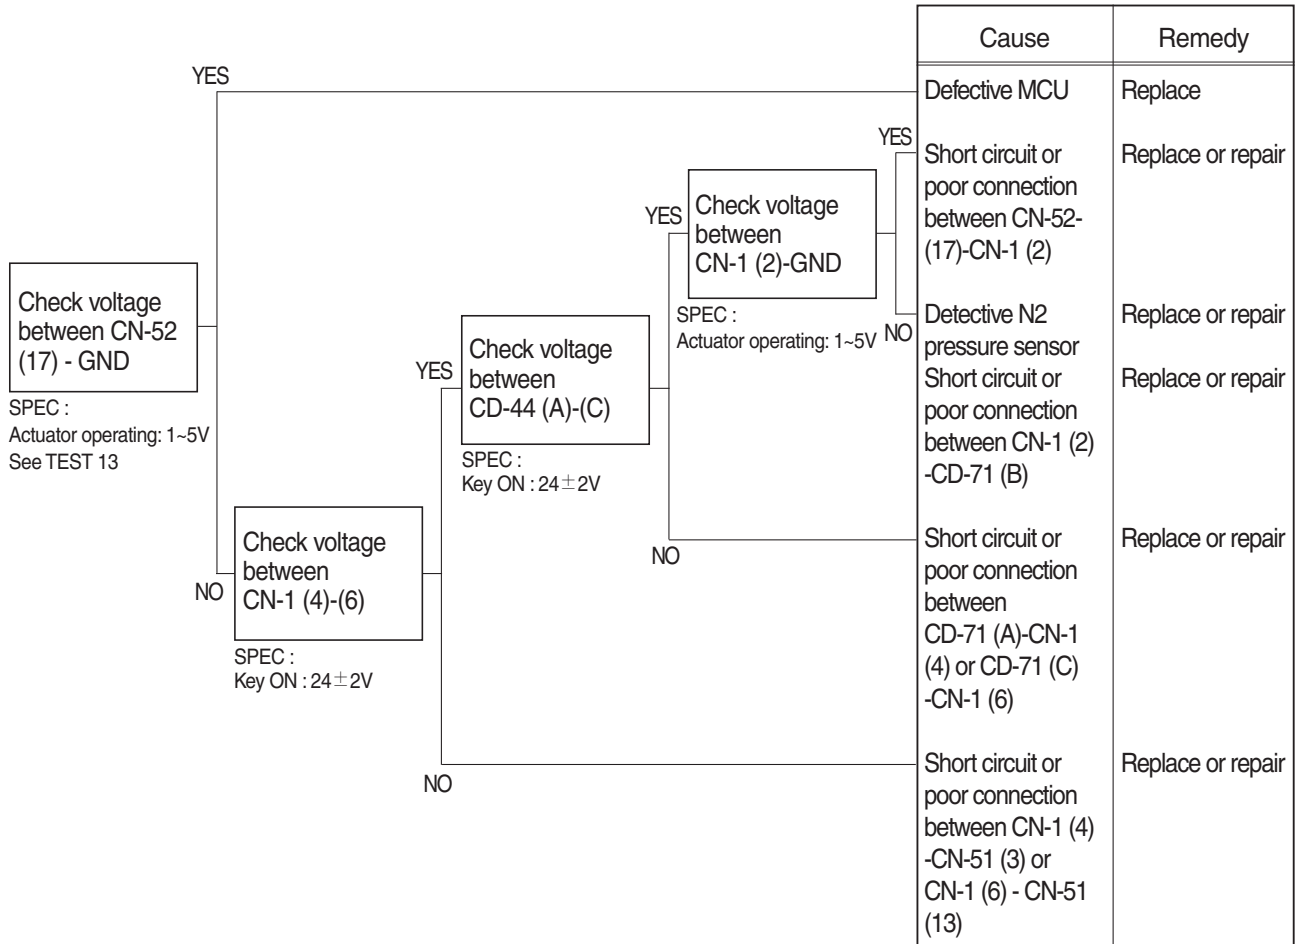

Wiring diagram

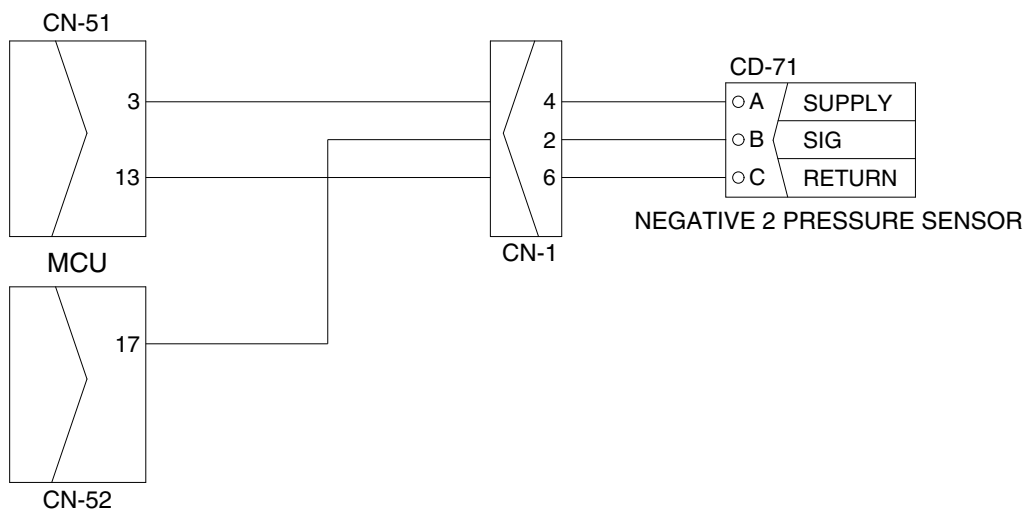


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 13** : Check voltage at CN-52 (17) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (17) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

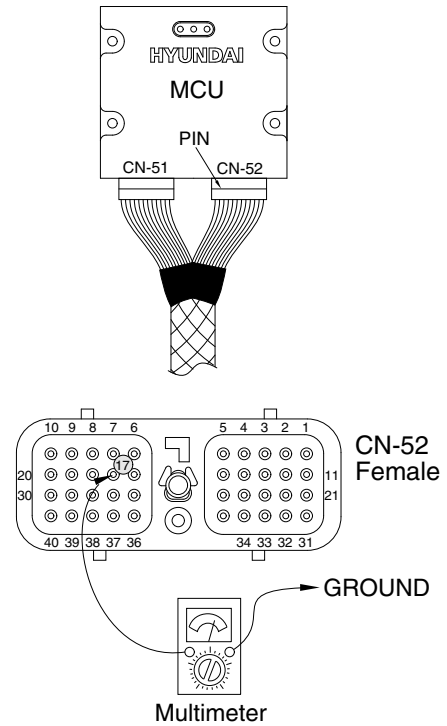


300L6MS14

10. MALFUNCTION OF SWING PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 135, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

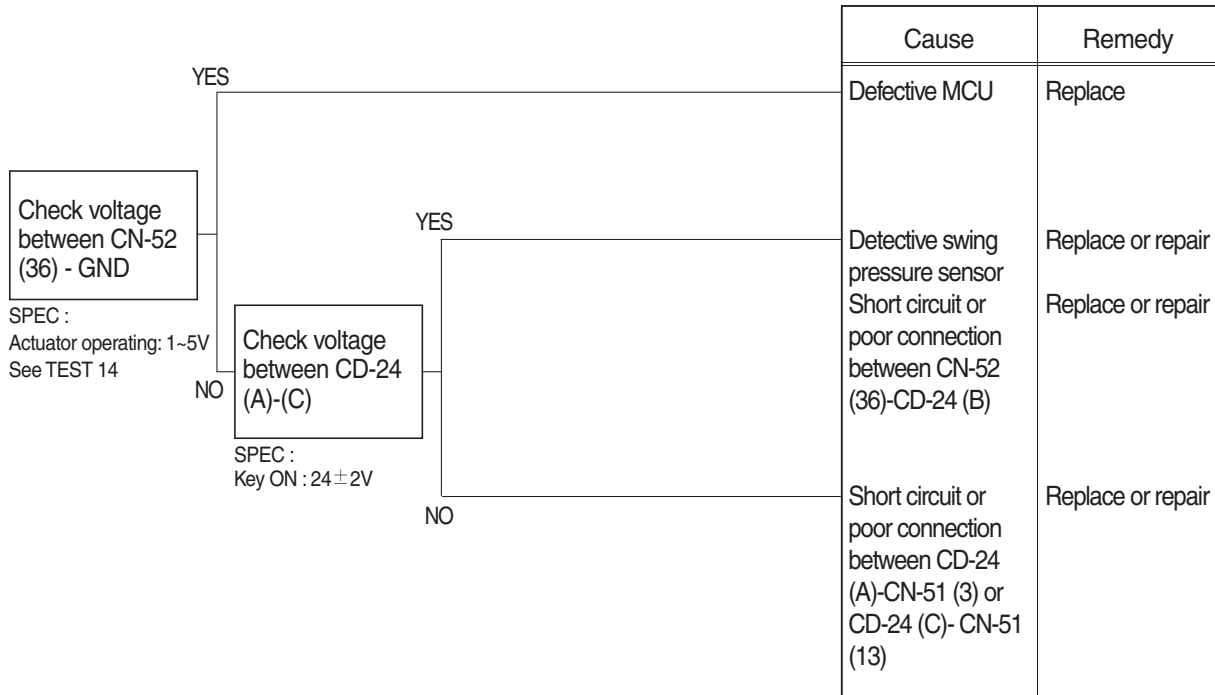

Wiring diagram

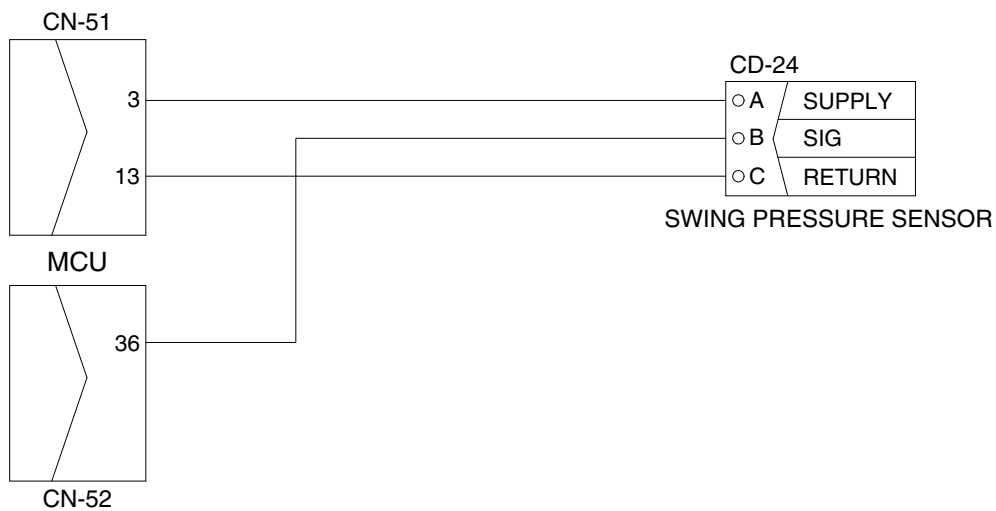

300L6MS15


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) Test 14 : Check voltage at CN-52 (36) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (36) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

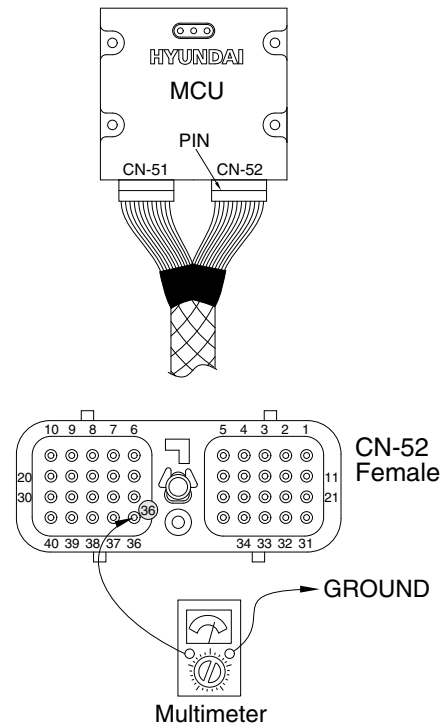


300L6MS16

11. MALFUNCTION OF ARM IN/OUT & BUCKET IN PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 133, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

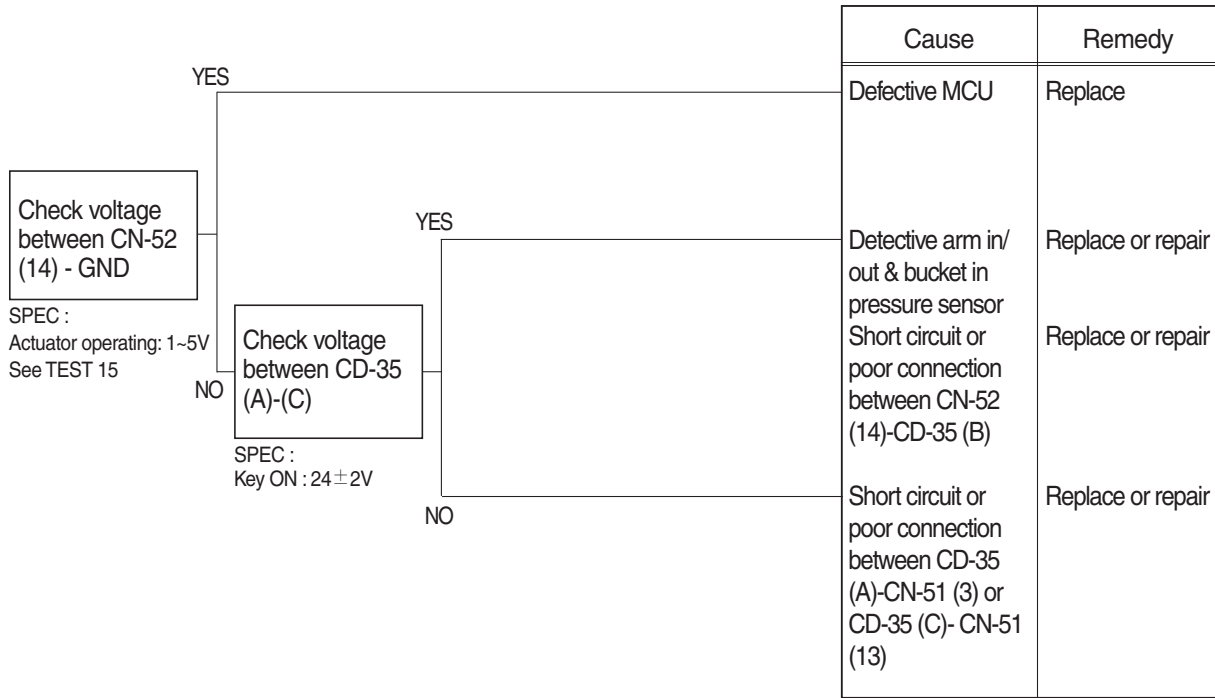

Wiring diagram

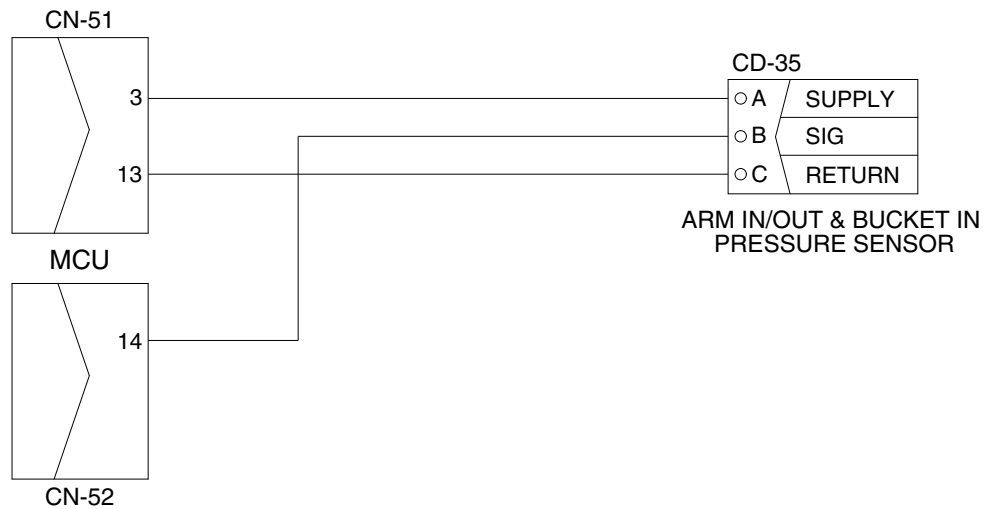

300L6MS17


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 15** : Check voltage at CN-52 (14) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (14) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

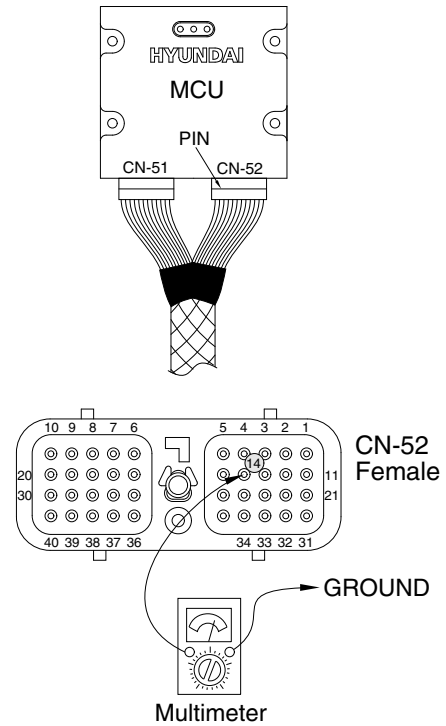


300L6MS18

12. MALFUNCTION OF BOOM UP PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 127, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

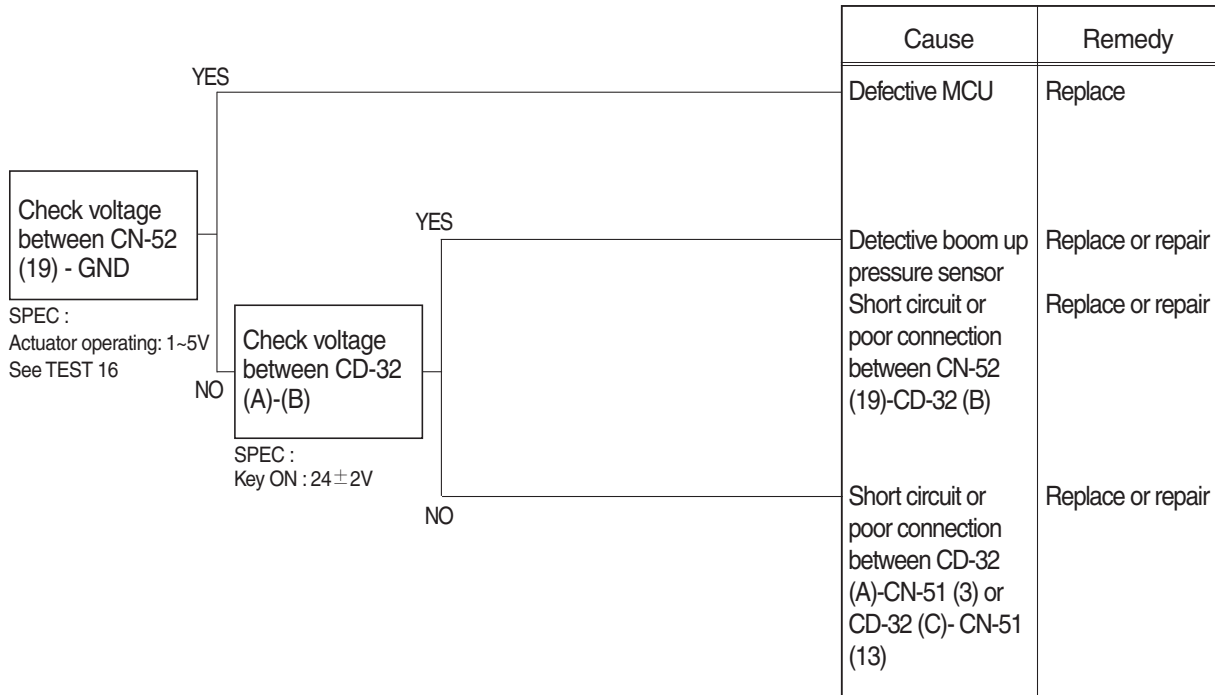

Wiring diagram

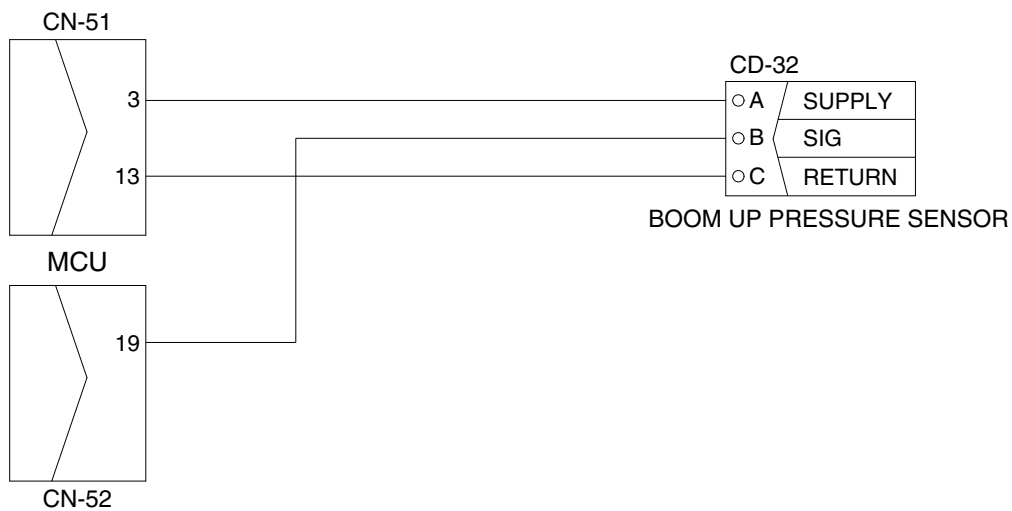

300L6MS19


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 16** : Check voltage at CN-52 (19) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (19) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

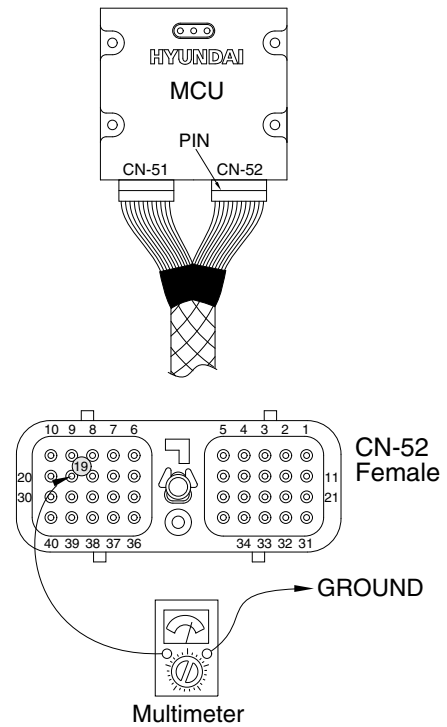


300L6MS20

13. MALFUNCTION OF BOOM DOWN PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 128, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

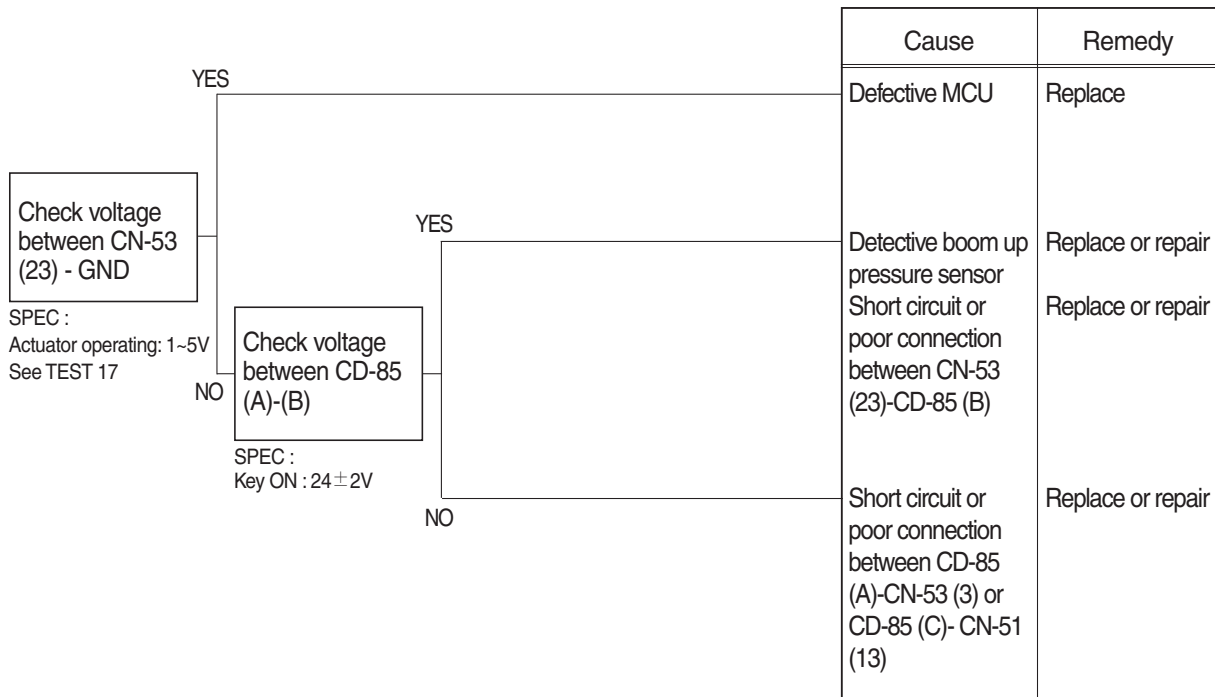

Wiring diagram

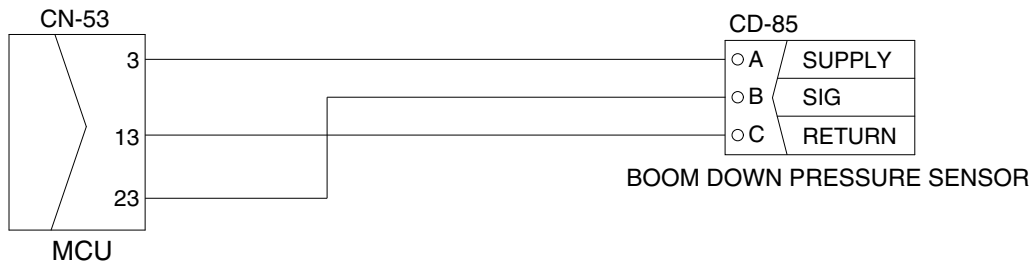

300L6MS25


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 17** : Check voltage at CN-53 (23) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (23) of CN-53.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

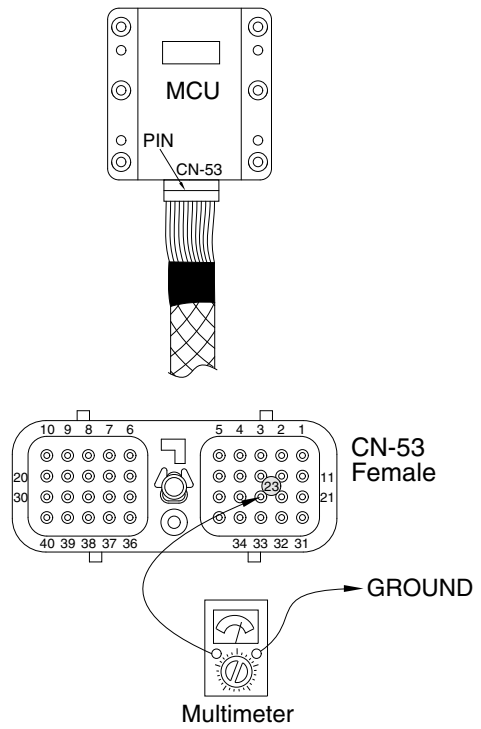


300L6MS26

14. MALFUNCTION OF POWER MAX (SERIAL NO. : -#0507)


· Fault code : HCESPN 166, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

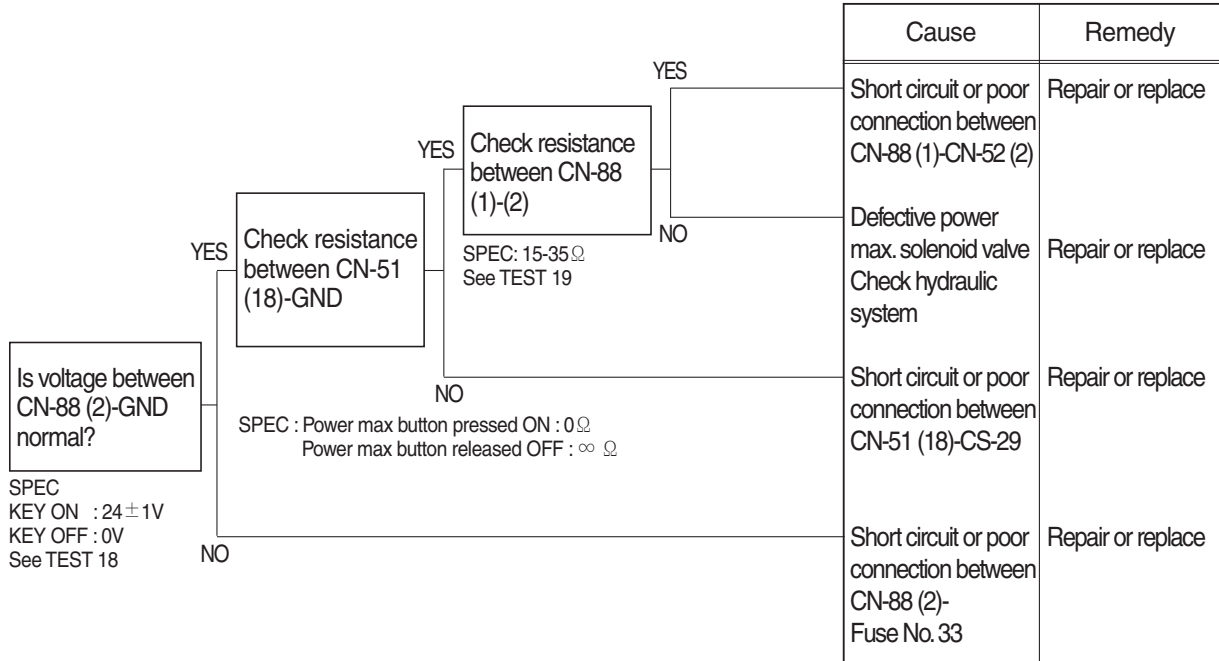

Wiring diagram

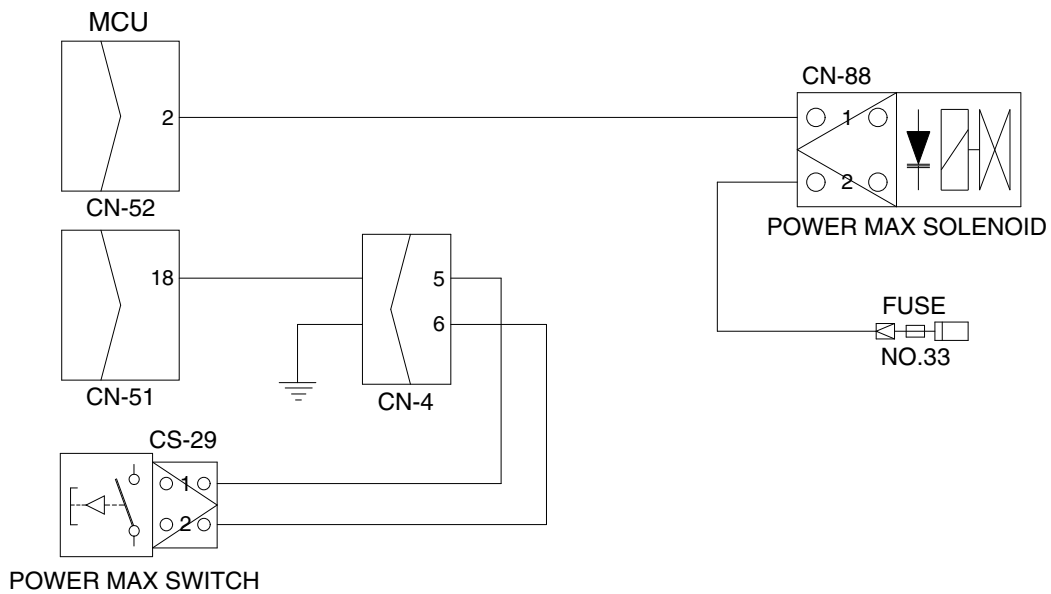

210WF6MS17


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 18:** Check voltage between connector CN-88 (2) - GND.

- ① Disconnect connector CN-88 from power max solenoid valve.
- ② Start key ON.
- ③ Check voltage as figure.

SPEC : Key ON : $24 \pm 1V$
Key OFF : 0V

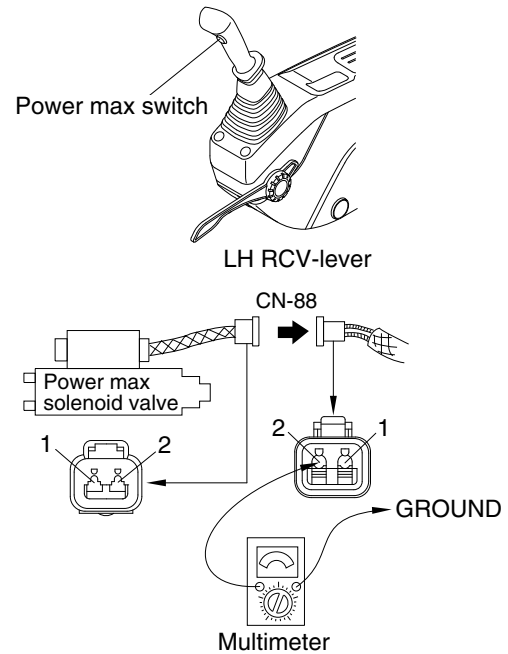


220NL6MS14A

(2) **Test 19:** Check resistance of the solenoid valve between CN-88 (1)-(2).

- ① Starting key OFF.
- ② Disconnect connector CN-88 from power max solenoid valve.
- ③ Check resistance as figure.

SPEC : $15 \sim 35 \Omega$

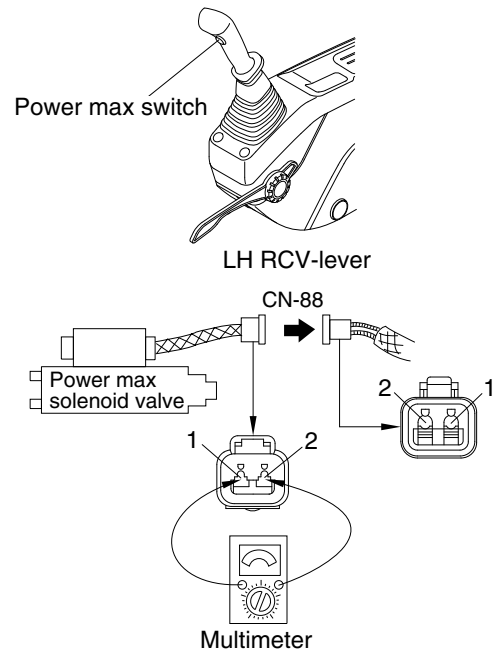


220NL6MS14B

15. MALFUNCTION OF BOOM PRIORITY EPPR VALVE (SERIAL NO. : -#0507)


· Fault code : HCESPN 141, FMI 5 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

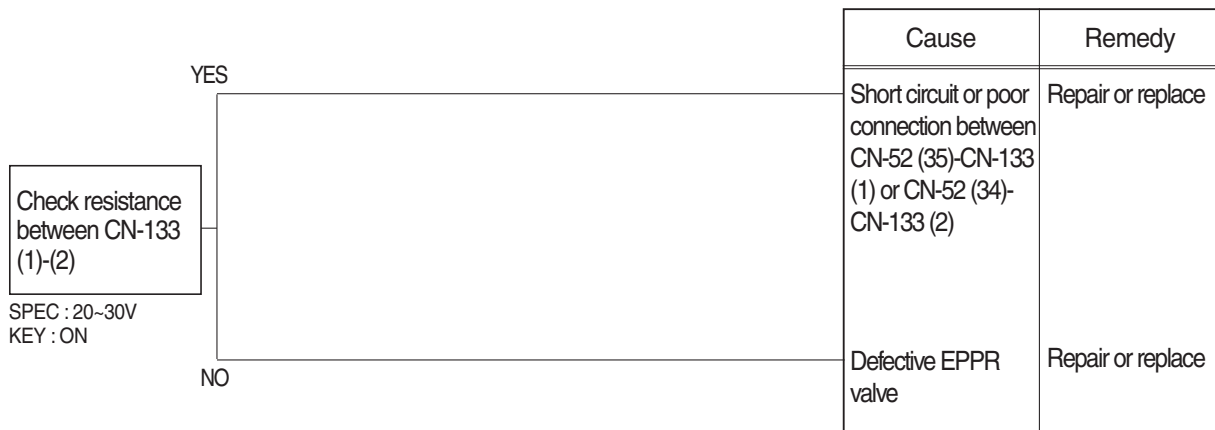

Wiring diagram

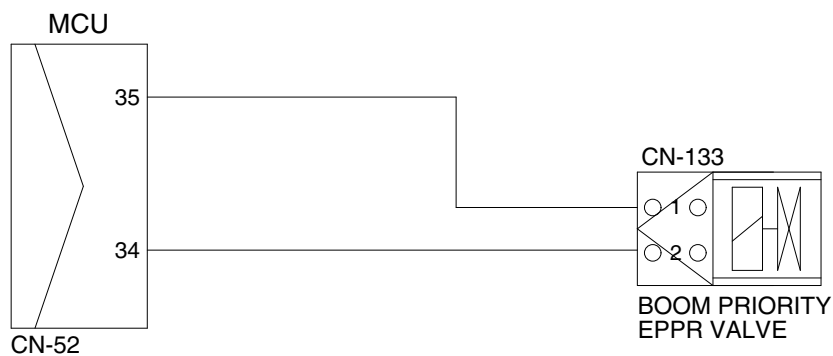

300L6MS23


(SERIAL NO. : -#0507)

16. MALFUNCTION OF ARM REGENERATION SOLENOID


· Fault code : HCESPN 170, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

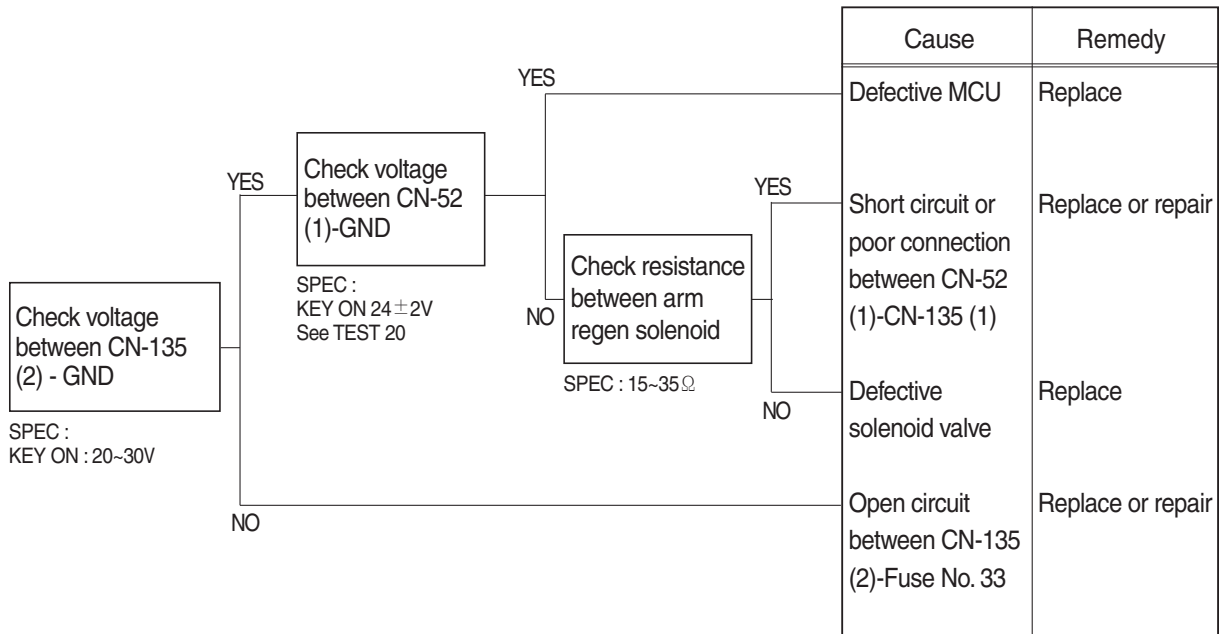

Wiring diagram

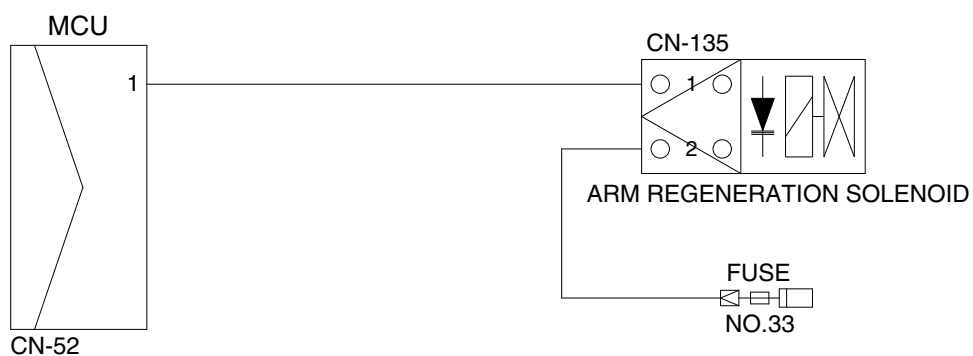

210WF6MS19


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 20** : Check voltage at CN-52 (1) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (1) of CN-52.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Key ON : 24 ± 2 V

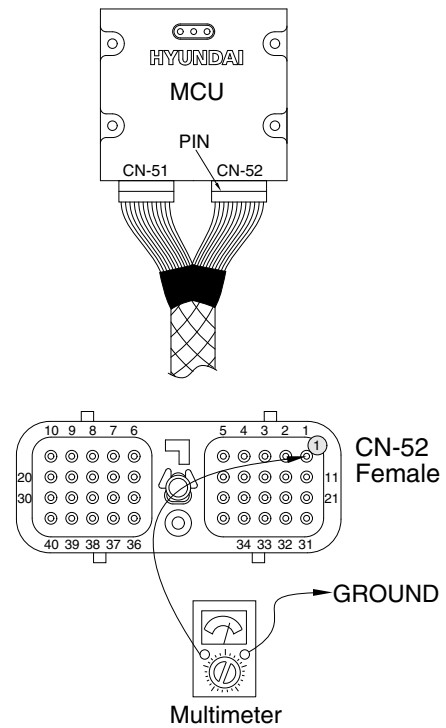


300L6MS22

17. MALFUNCTION OF TRANSMISSION OIL PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 501, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

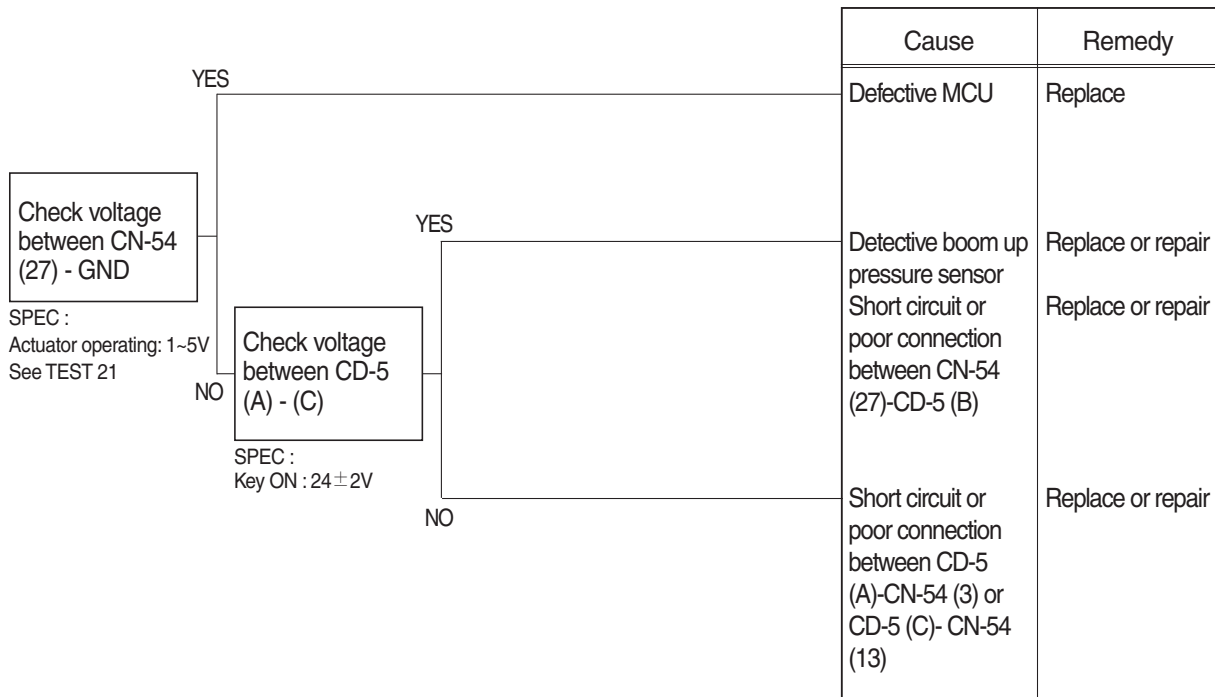

Wiring diagram

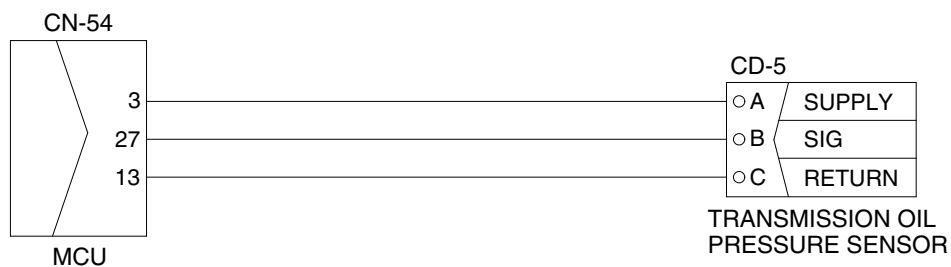

140WF6MS20


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 21** : Check voltage at CN-54 (27) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (27) of CN-54.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

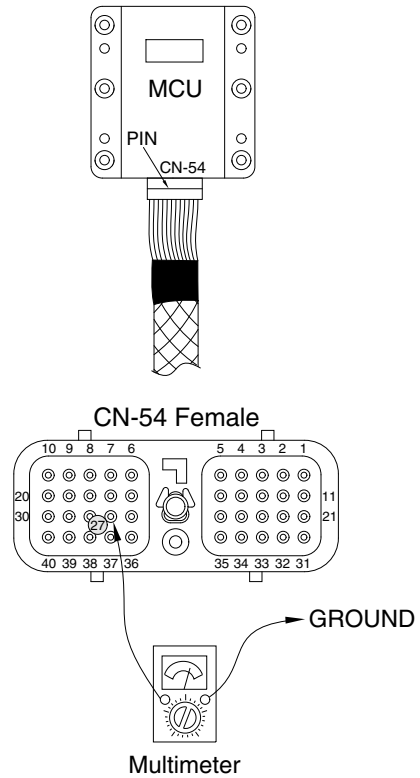


140WF6MS20A

18. MALFUNCTION OF BRAKE OIL PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 503, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

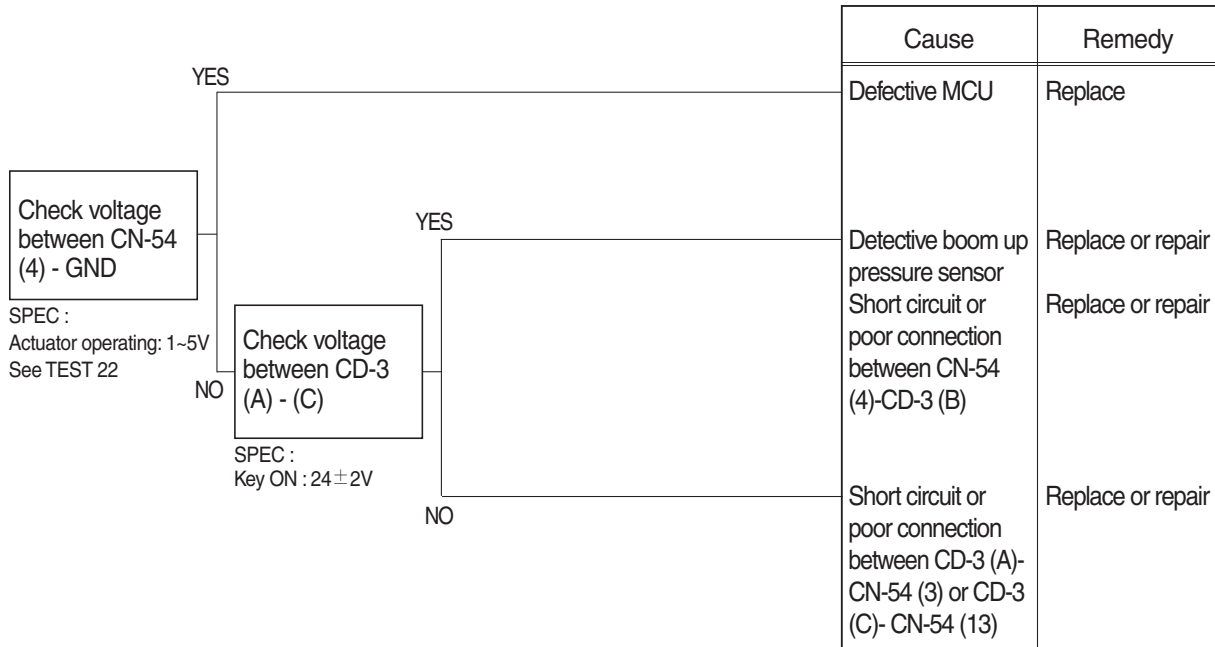

Wiring diagram

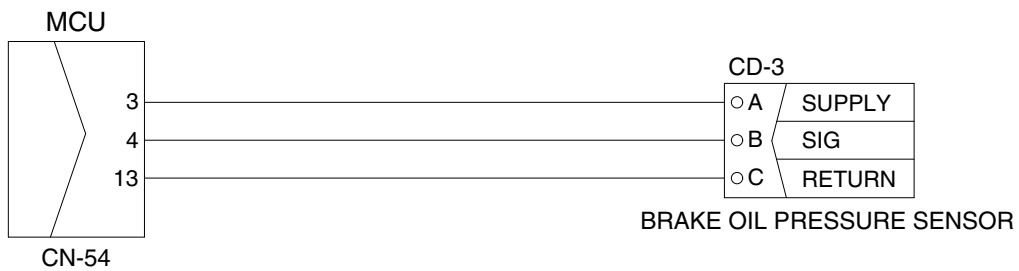

210WF6MS14


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 22** : Check voltage at CN-54 (4) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (4) of CN-54.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

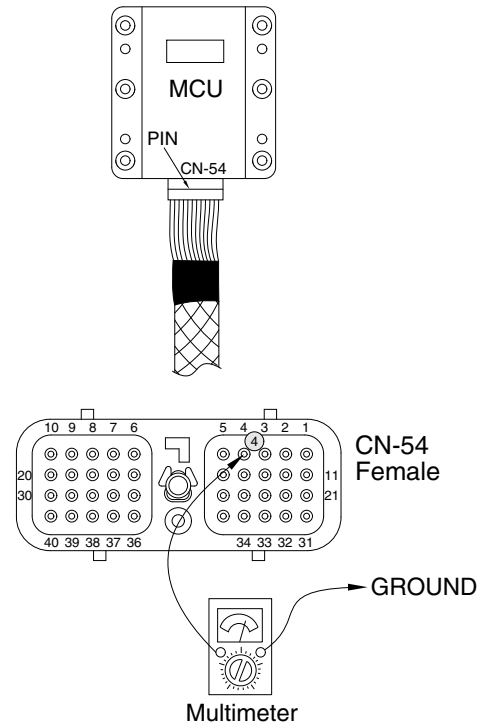


210WF6MS14A

19. MALFUNCTION OF TRAVEL FORWARD PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 530, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

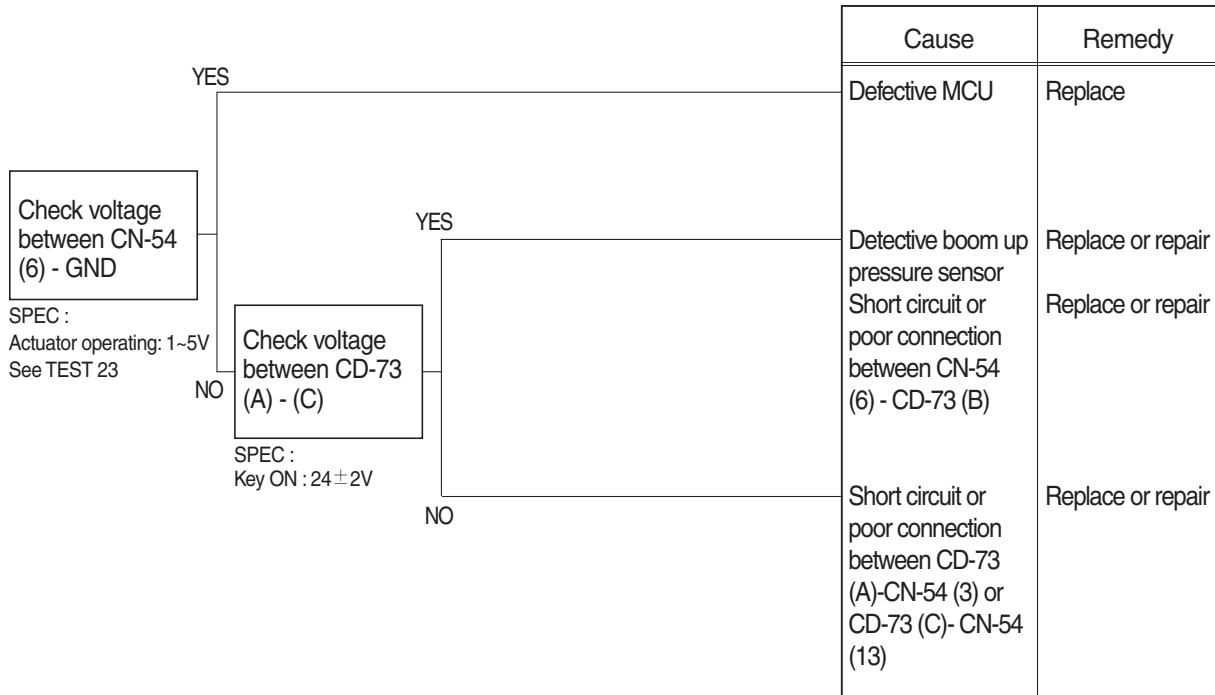

Wiring diagram

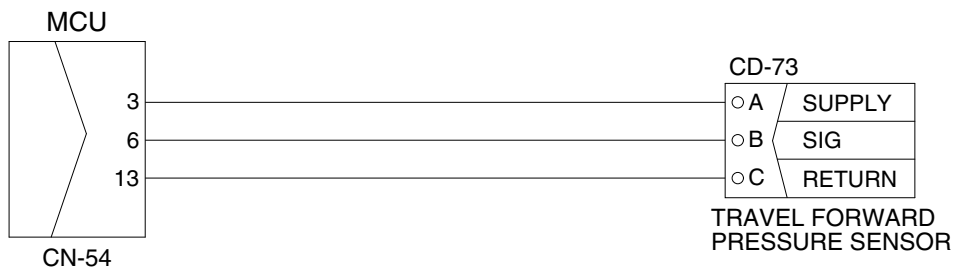

210WF6MS15


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 23** : Check voltage at CN-54 (6) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (6) of CN-54.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

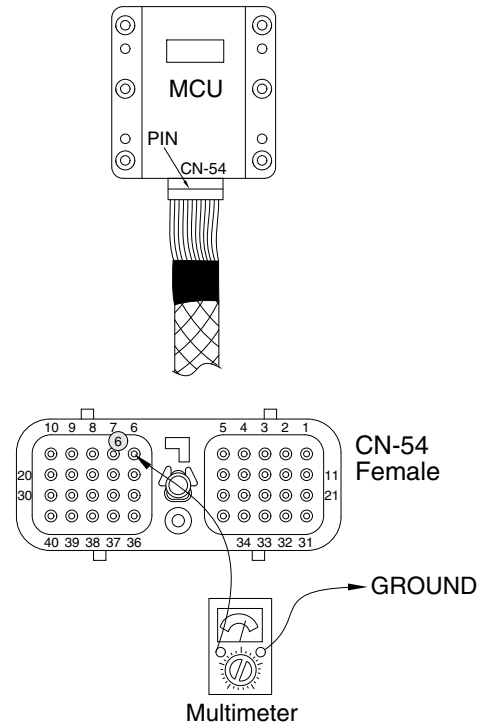


210WF6MS15A

20. MALFUNCTION OF TRAVEL REVERSE PRESSURE SENSOR (SERIAL NO. : -#0507)


· Fault code : HCESPN 531, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

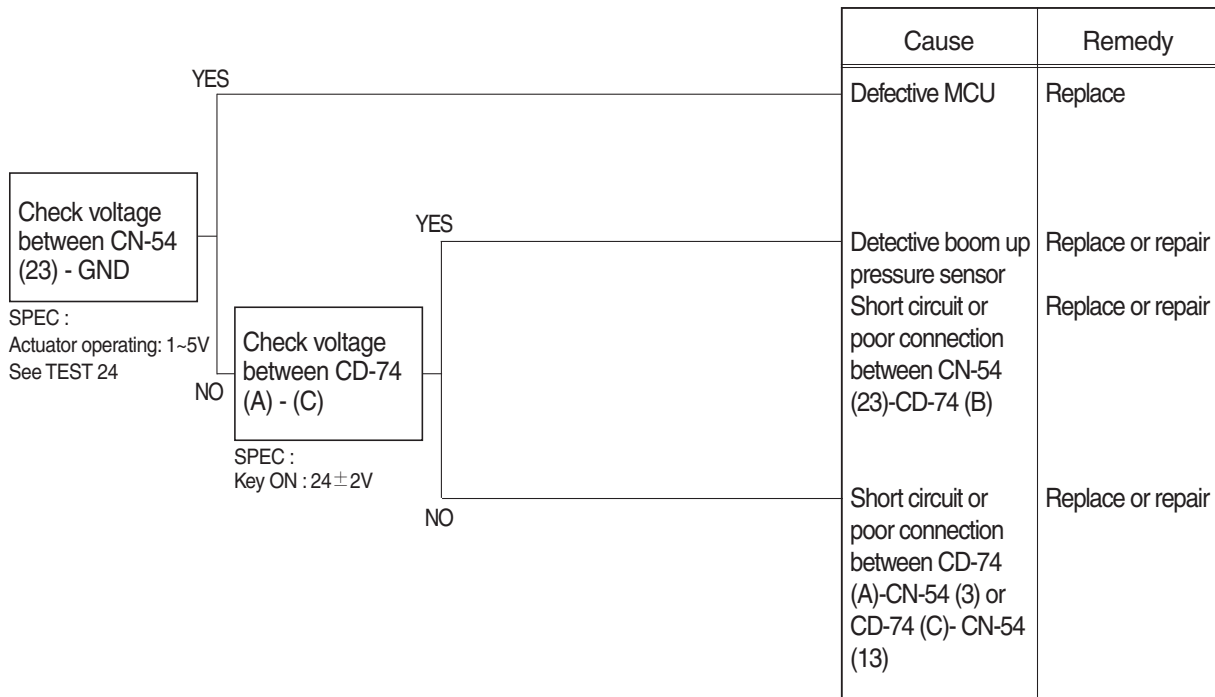

Wiring diagram

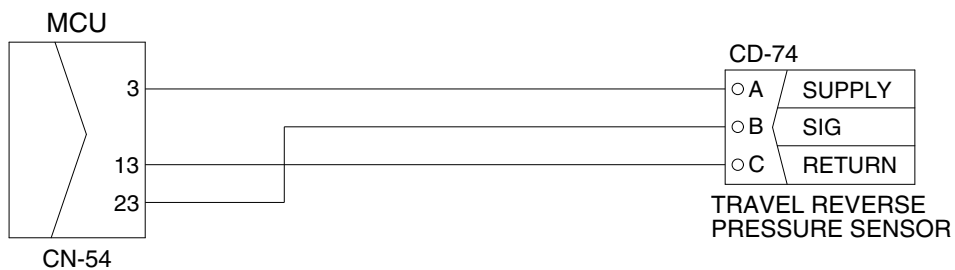

210WF6MS16


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 24** : Check voltage at CN-54 (23) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (23) of CN-54.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

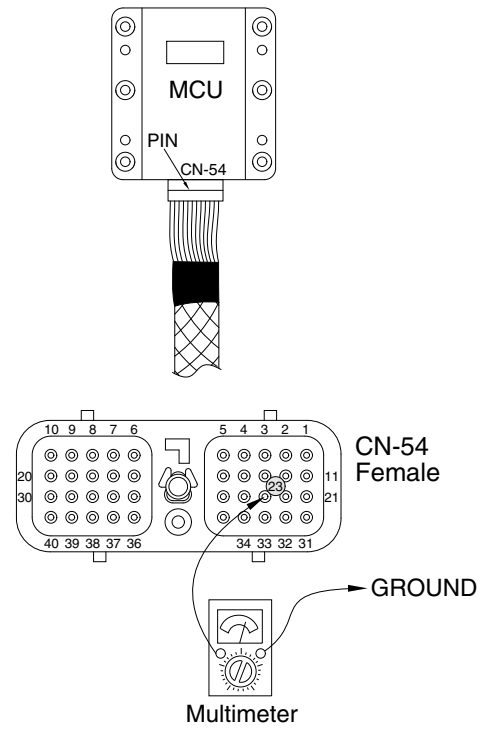


210WF6MS16A

21. MALFUNCTION OF RAM LOCK SOLENOID (SERIAL NO. : -#0507)


· Fault code : HCESPN 525, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

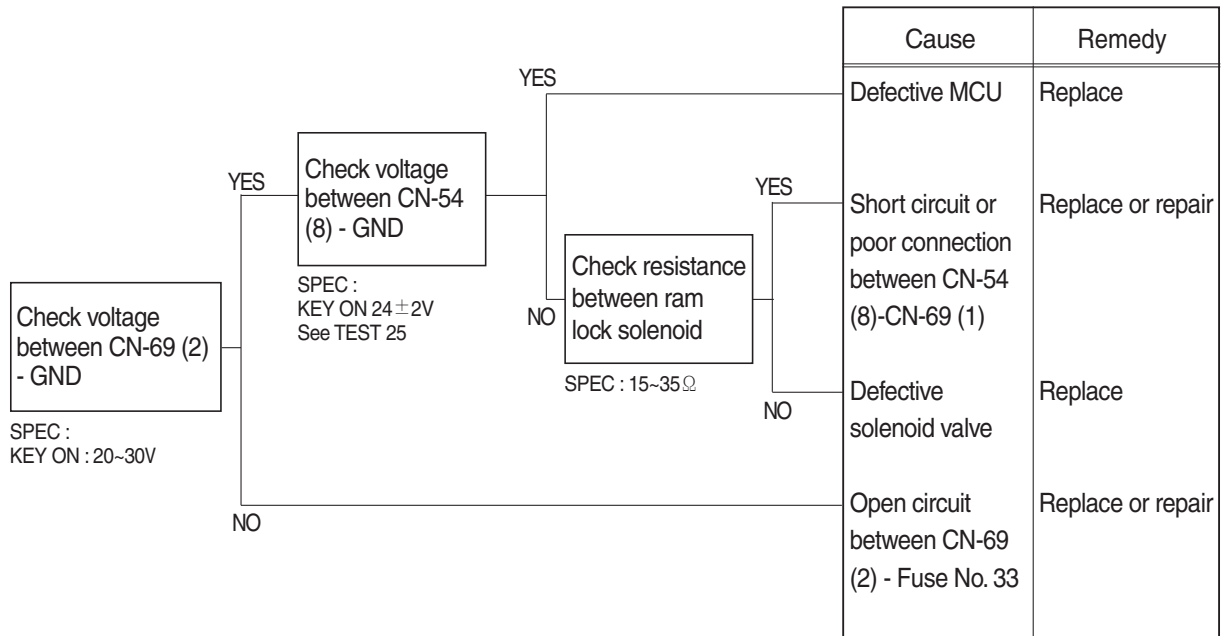

Wiring diagram

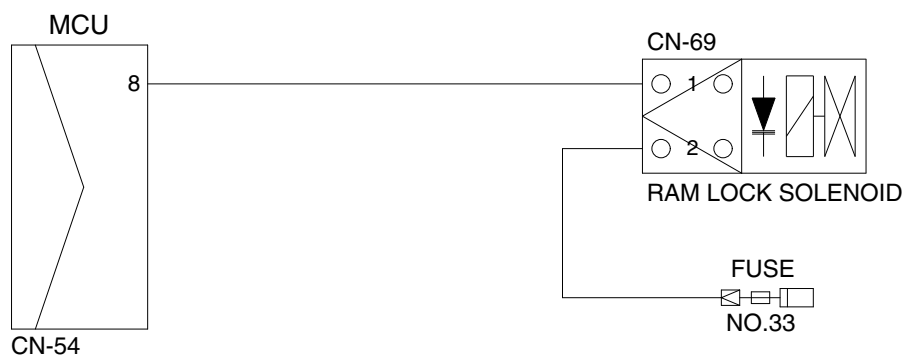

140WF6MS25


(SERIAL NO. : -#0507)

2) TEST PROCEDURE

(1) **Test 25** : Check voltage at 54 (8) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (8) of CN-54.
- ③ Starting key ON.
- ④ Check voltage as figure.

SPEC : Key ON : $24 \pm 2V$

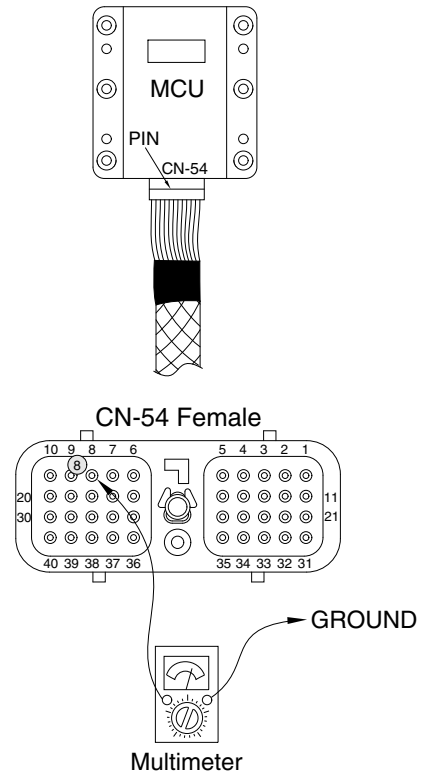


140WF6MS25A

MECHATRONICS SYSTEM


1. ALL ACTUATORS SPEED ARE SLOW (SERIAL NO. : #0508-)

- ※ Boom, Arm, Bucket, Swing and travel speed are slow, but engine speed is good.
- ※ Spec : P-mode 1500 ± 50 rpm S-mode 1400 ± 50 rpm E-mode 1300 ± 50 rpm
- ※ Before carrying out below procedure, check all the related connectors are properly inserted and fault code on the cluster.

1) INSPECTION PROCEDURE

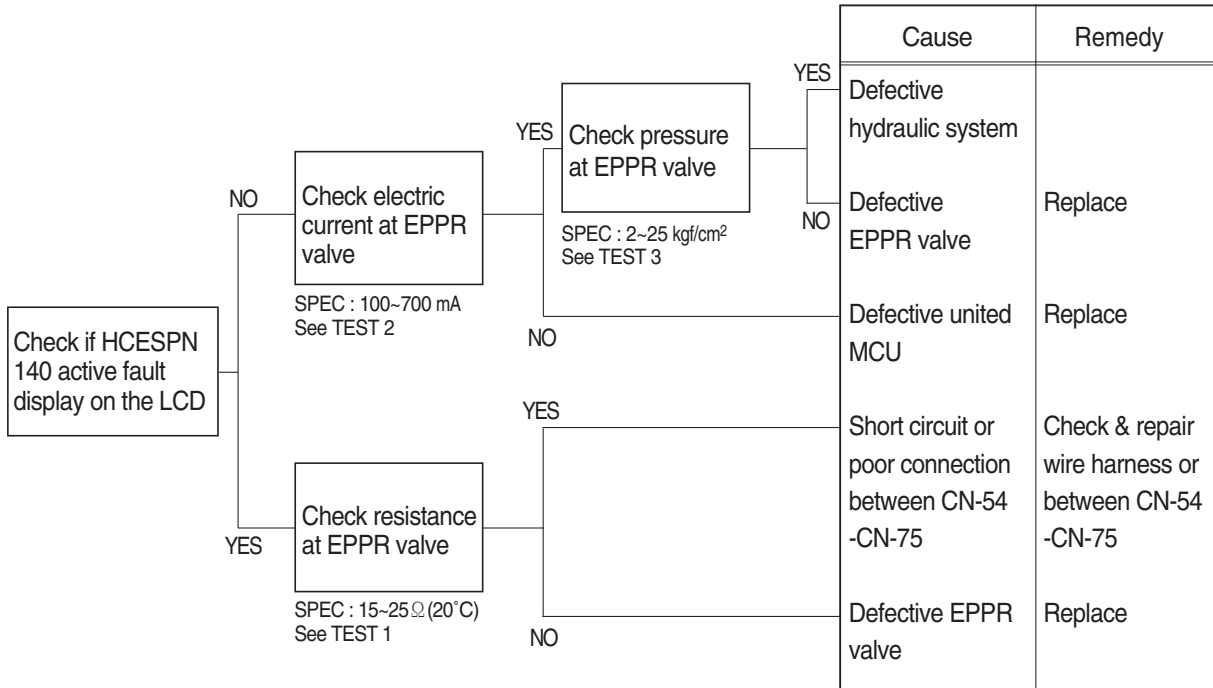

Wiring diagram

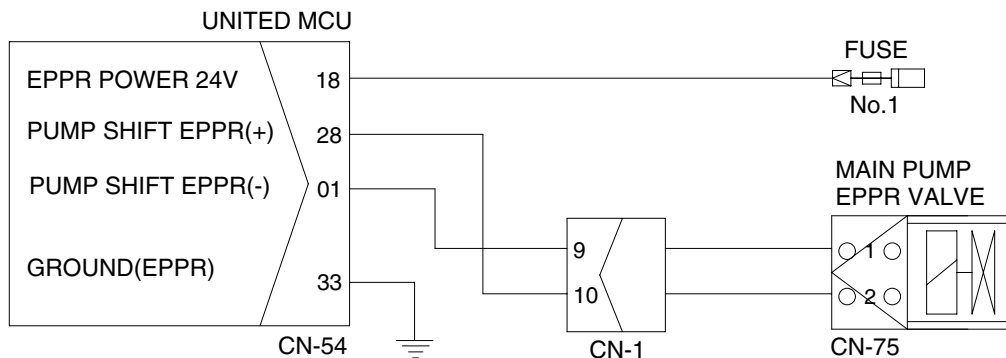


140WF6MS01A

(SERIAL NO. : #0508-)

2) TEST PROCEDURE


(1) **Test 1** : Check resistance at connector CN-75.

- ① Starting switch OFF.
- ② Disconnect connector CN-75 from EPPR valve at main hydraulic pump.
- ③ Check resistance between 2 lines as figure.

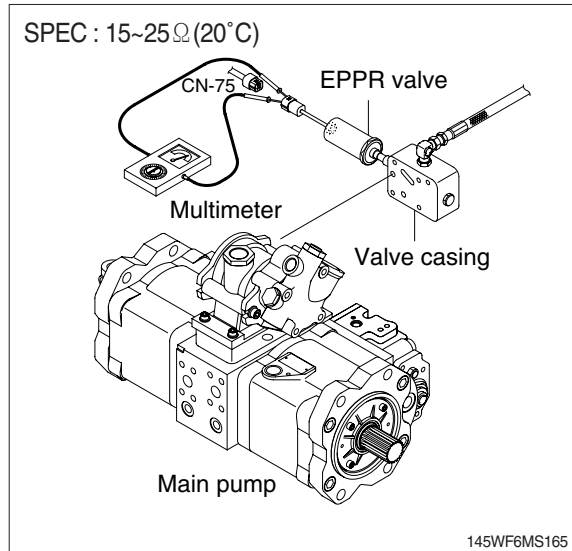


(2) **Test 2** : Check electric current at EPPR valve.

- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ Position the multimodal dial at 10.
- ⑥ If tachometer show approx 1400 ± 50 rpm disconnect one wire harness from EPPR valve.
- ⑦ Check electric current at bucket circuit relief position.

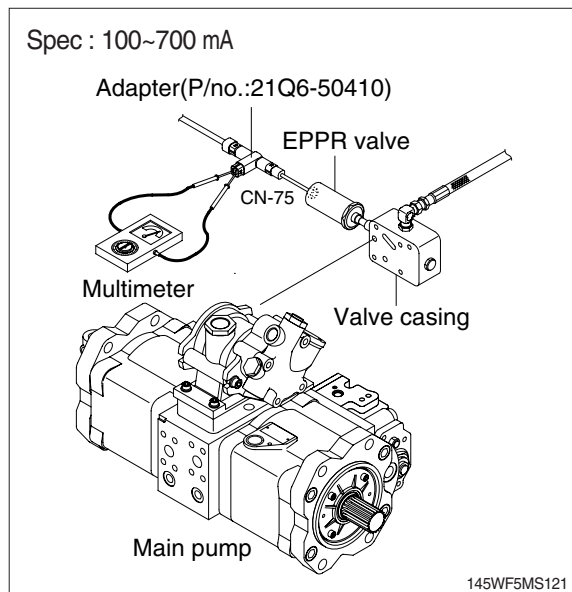

(3) **Test 3** : Check pressure at EPPR valve.


- ① Remove plug and connect pressure gauge as figure.
 - Gauge capacity : 0 to 50 kgf/cm² (0 to 725 psi)
- ② Start engine.
- ③ Set S-mode and cancel auto decel mode.
- ④ Position the multimodal dial at 10.
- ⑤ If tachometer show approx 1400 ± 50 rpm check pressure at relief position of bucket circuit by operating bucket control lever.
- ⑥ If pressure is not correct, adjust it.
- ⑦ After adjust, test the machine.

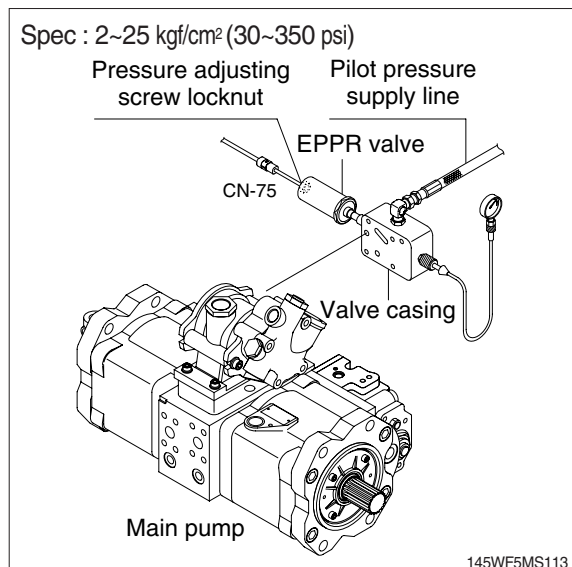


2. ENGINE STALL (SERIAL NO. : #0508-)

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

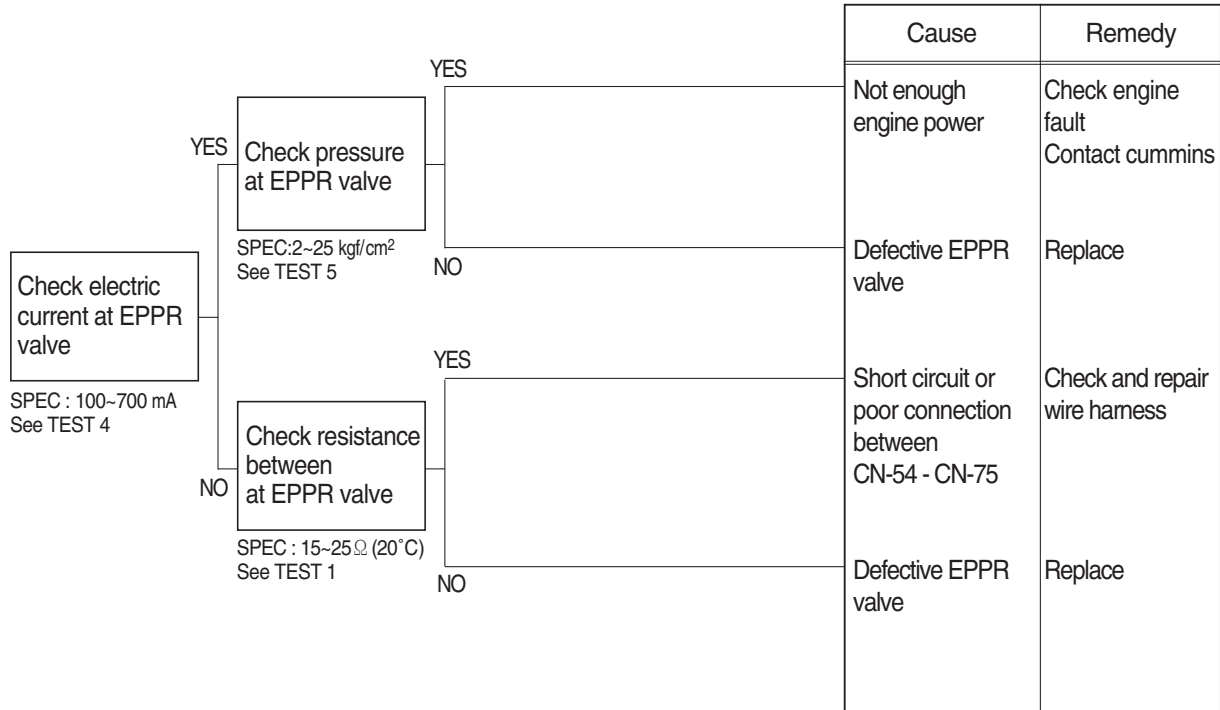

Wiring diagram

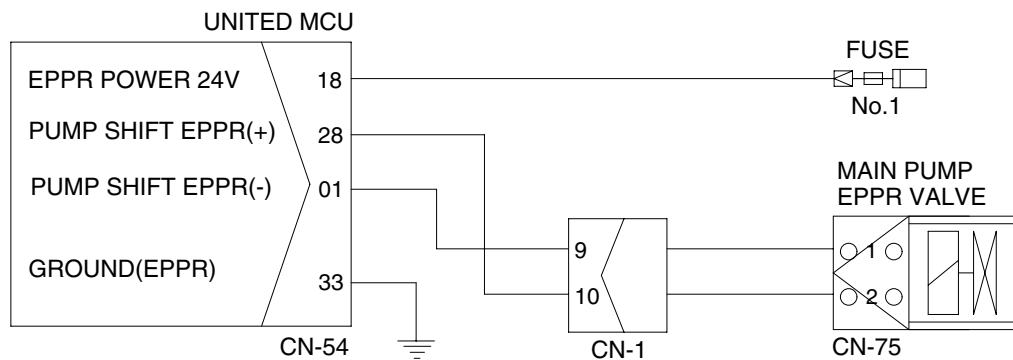


140WF6MS01A

(SERIAL NO. : #0508-)

2) TEST PROCEDURE


(1) **Test 4** : Check electric current at EPPR valve.

- ① Disconnect connector CN-75 from EPPR valve.
- ② Insert the adapter to CN-75 and install multimeter as figure.
- ③ Start engine.
- ④ Set S-mode and cancel auto decel mode.
- ⑤ Position the multimodal dial at 10.
- ⑥ If rpm show approx 1400 ± 50 rpm disconnect one wire harness from EPPR valve.
- ⑦ Check electric current at bucket circuit relief position.

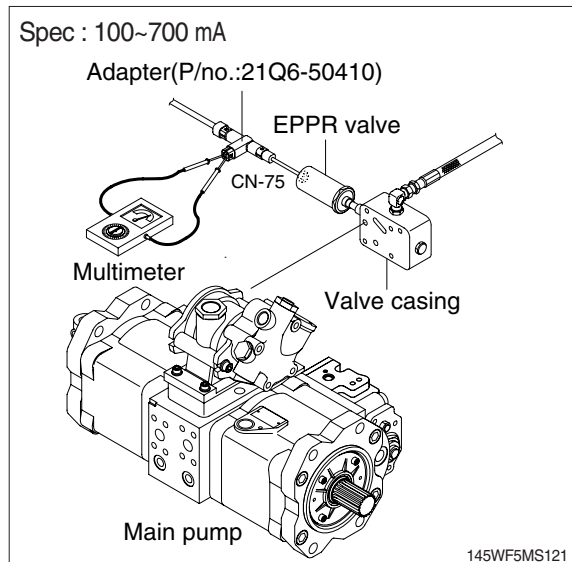

(2) **Test 5** : Check pressure at EPPR valve.


- ① Remove plug and connect pressure gauge as figure.
 - Gauge capacity : 0 to 50 kgf/cm²
(0 to 725 psi)
- ② Start engine.
- ③ Set S-mode and cancel auto decel mode.
- ④ Position the multimodal dial at 10.
- ⑤ If rpm show approx 1400 ± 50 rpm check pressure at relief position of bucket circuit by operating bucket control lever.
- ⑥ If pressure is not correct, adjust it.
- ⑦ After adjust, test the machine.

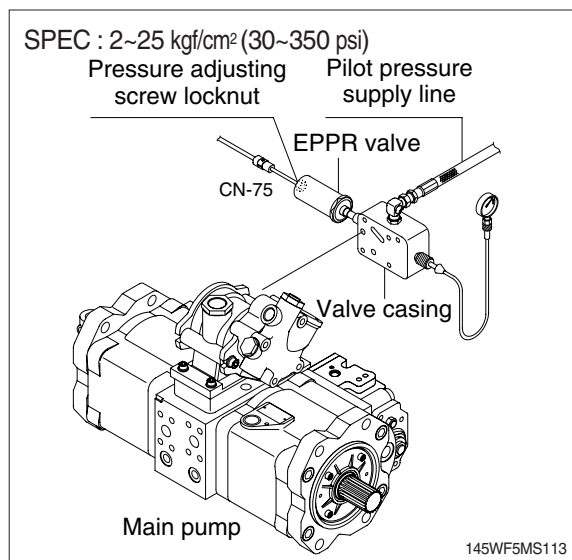


3. MALFUNCTION OF CLUSTER OR MODE SELECTION SYSTEM (SERIAL NO. : #0508-)

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

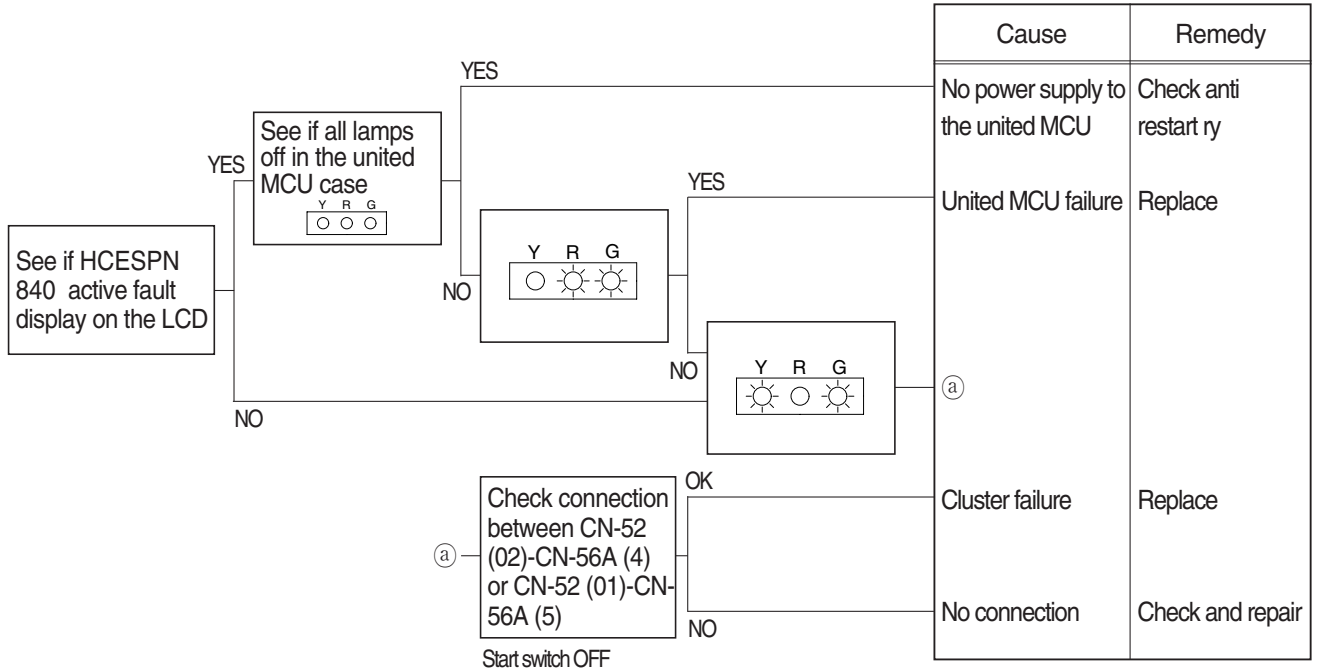

Wiring diagram

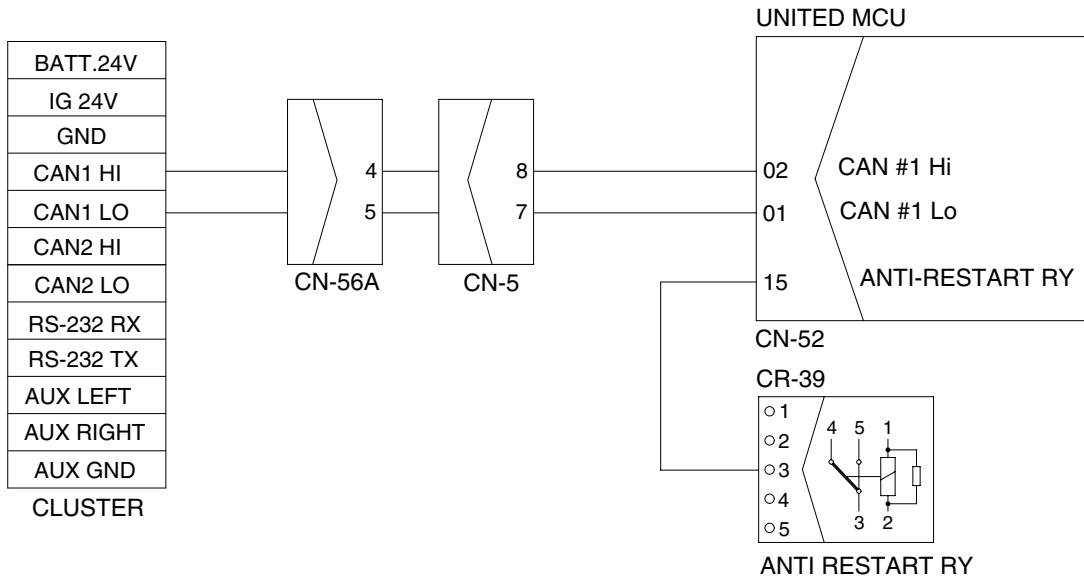


140WF6MS03A

4. AUTO DECEL SYSTEM DOES NOT WORK (SERIAL NO. : #0508-)


- Fault code : HCESPN 105, FMI 0~4 (work pressure sensor)
HCESPN 108, FMI 0~4 (travel oil pressure sensor)

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

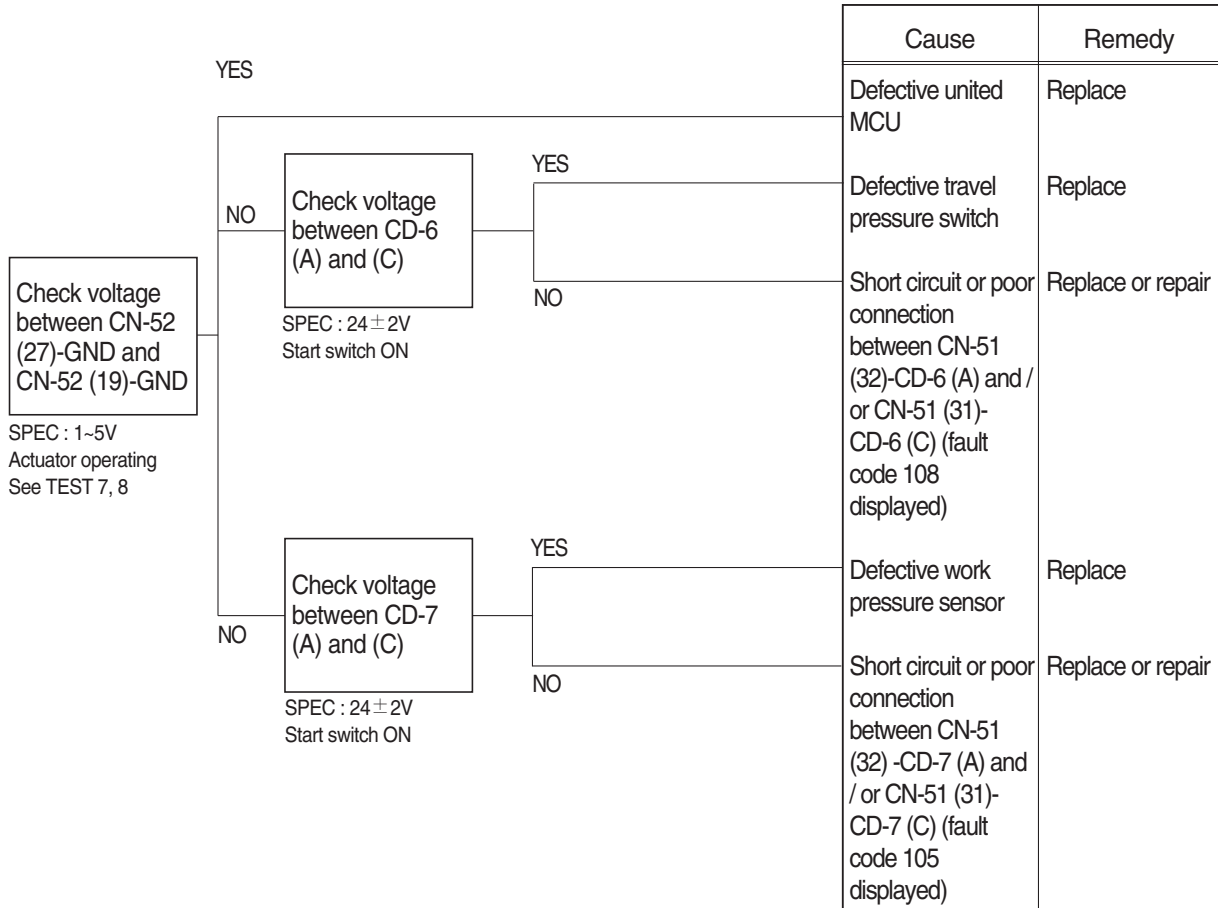

Wiring diagram

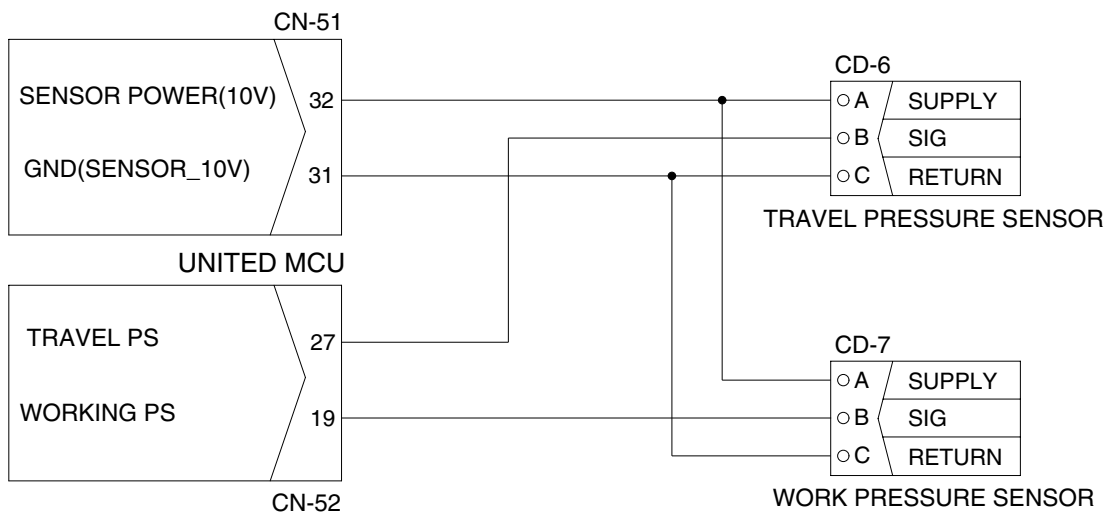

(SERIAL NO. : #0508-)

2) TEST PROCEDURE




(1) **Test 7** : Check voltage at CN-52 (27) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (27) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

(2) **Test 8** : Check voltage at CN-52 (19) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper
- ② Insert prepared pin to rear side of connectors : One pin to (19) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

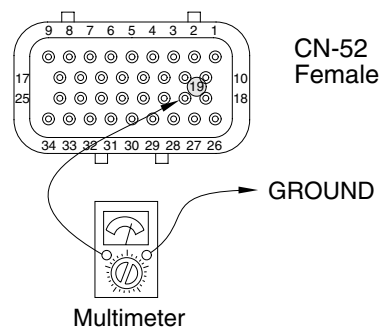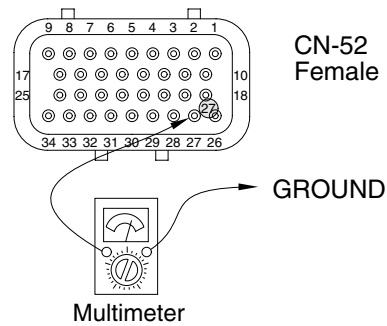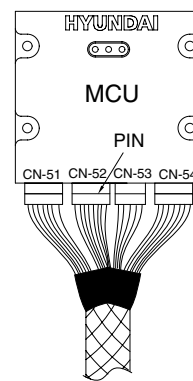


140WF6MS104

5. MALFUNCTION OF PUMP 1 PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 120, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

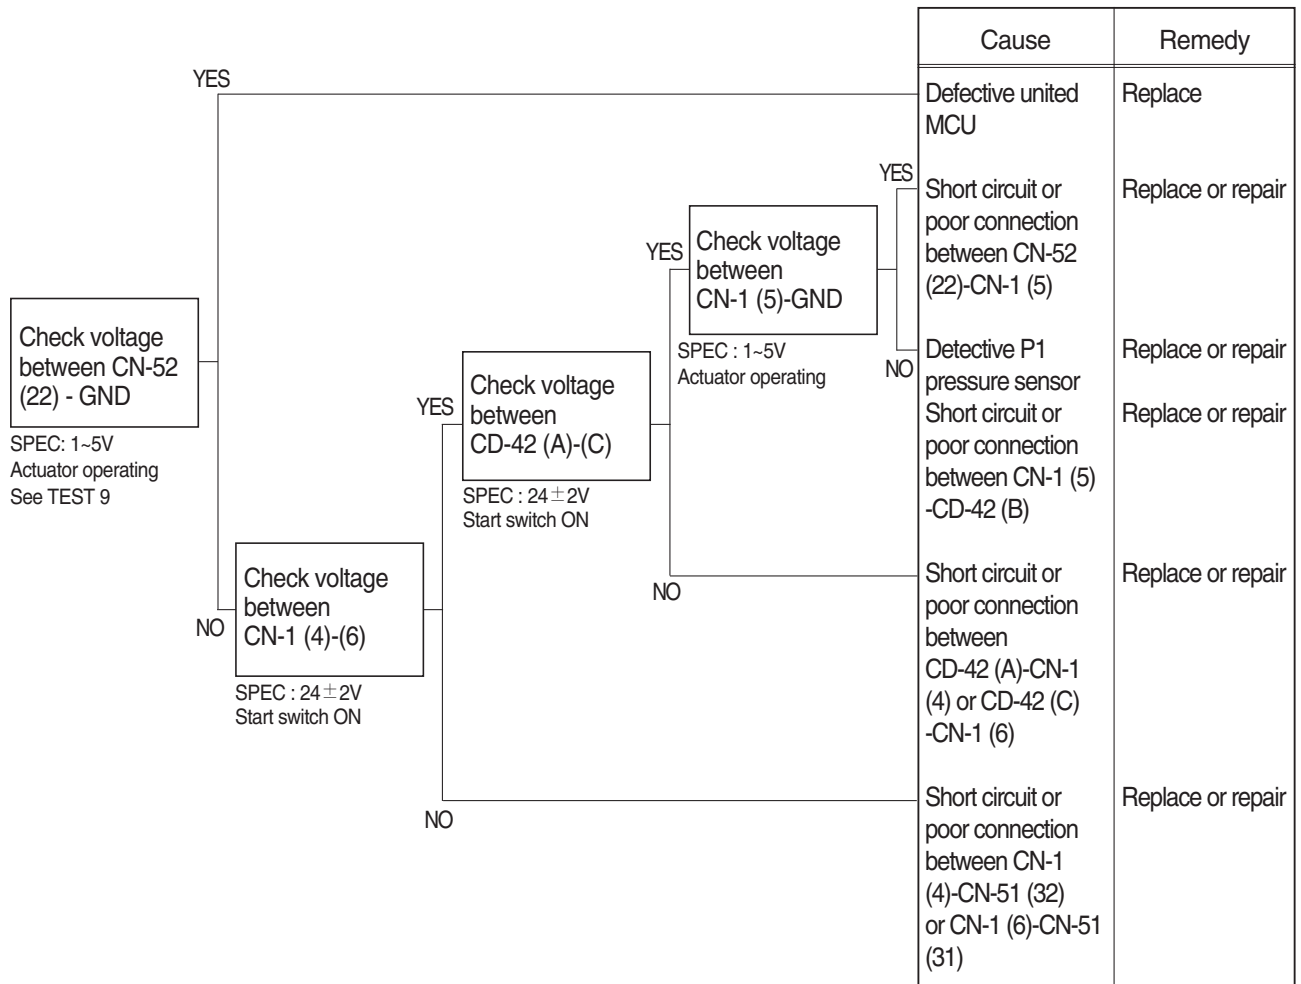

Wiring diagram

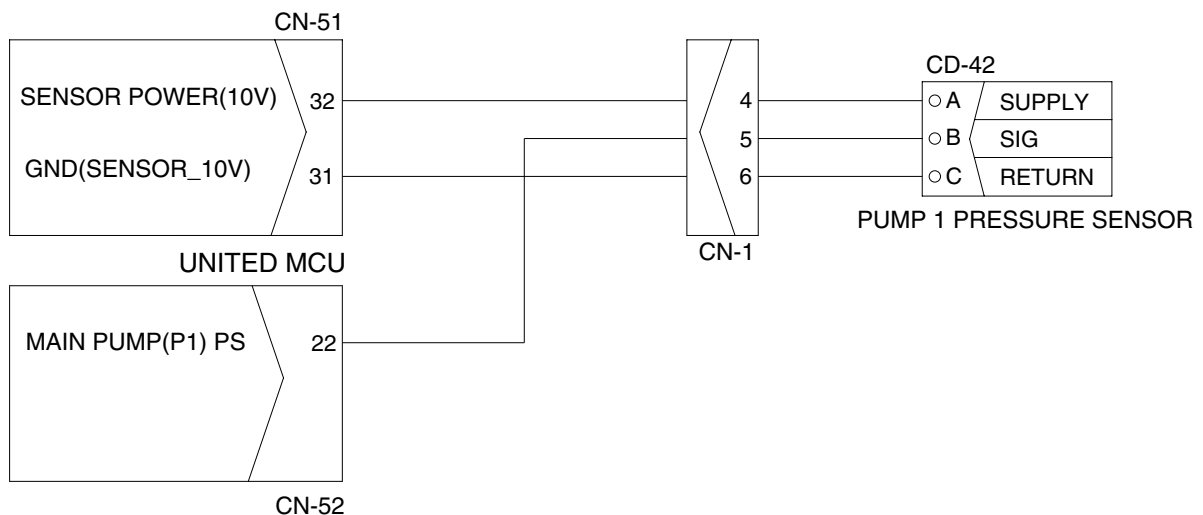

140WF6MS105


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 9** : Check voltage at CN-52 (22) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (22) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

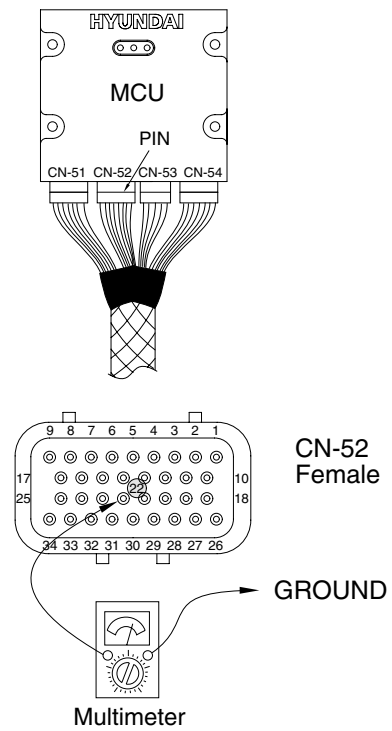


140WF6MS106

6. MALFUNCTION OF PUMP 2 PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 121, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

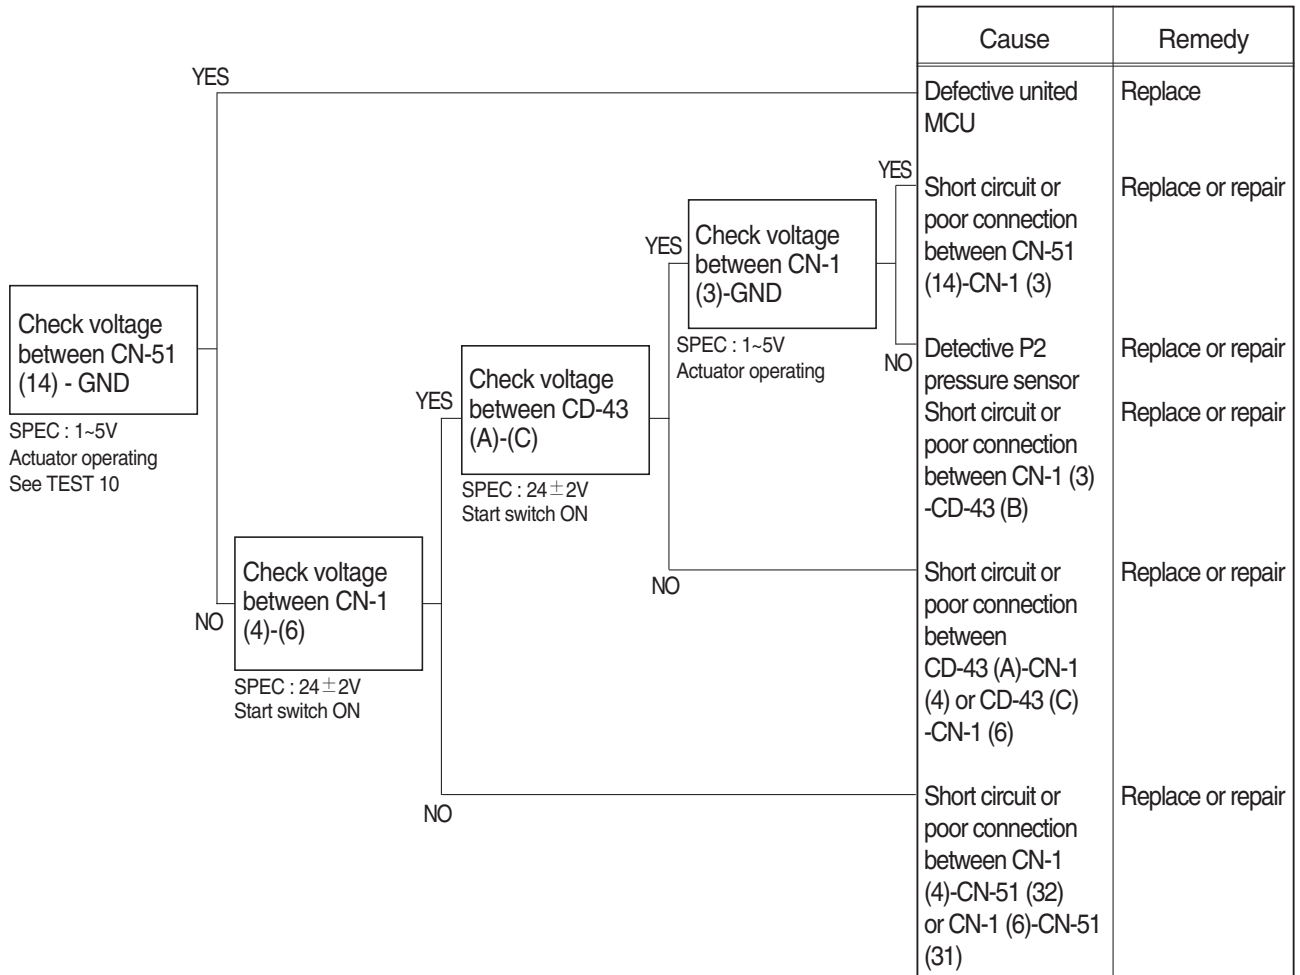

Wiring diagram

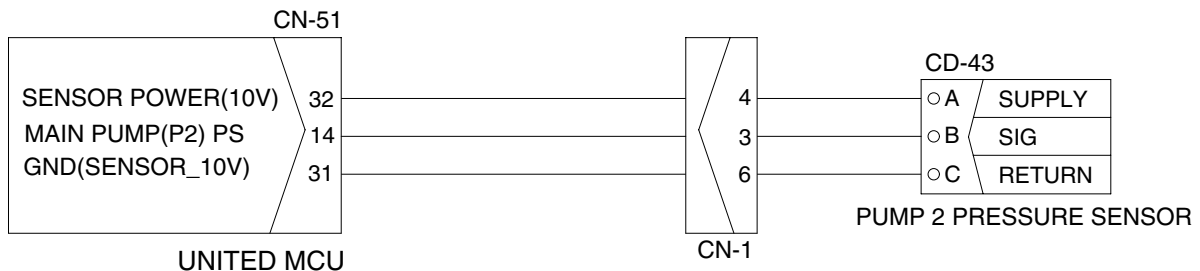


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) Test 10 : Check voltage at CN-51 (14) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (14) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

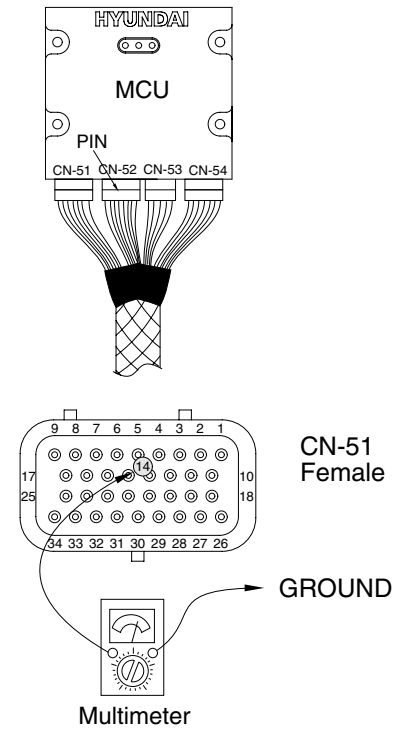


140WF6MS156

7. MALFUNCTION OF PUMP 3 PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 125, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

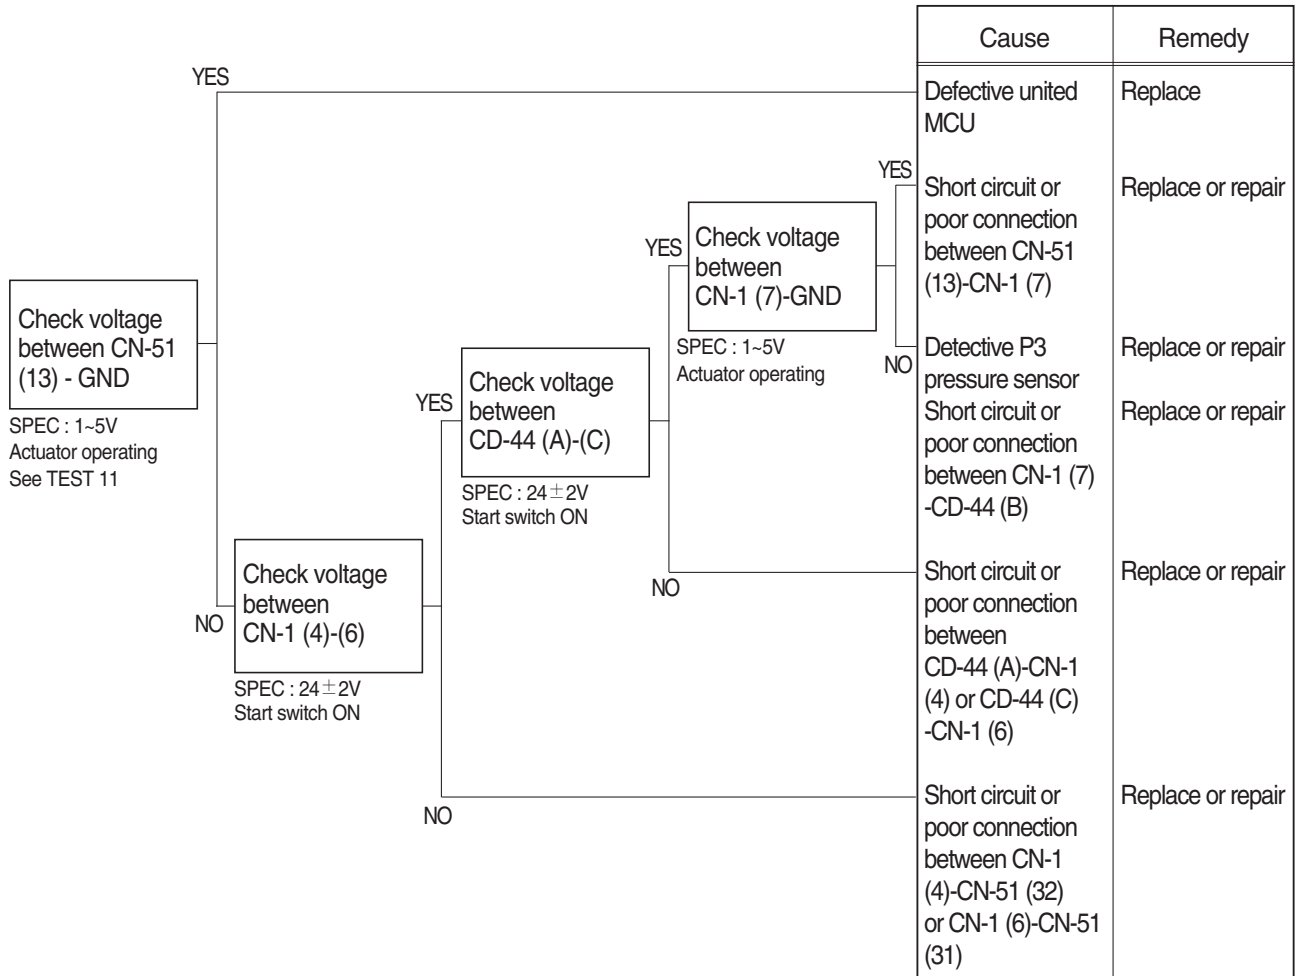

Wiring diagram

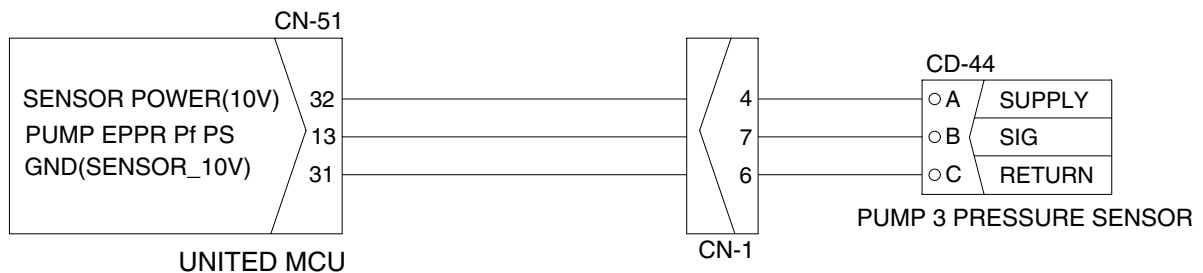


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 11** : Check voltage at CN-51 (13) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (13) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

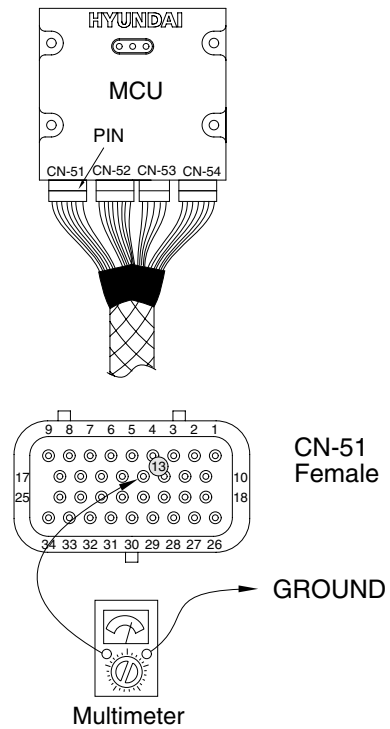


140WF6MS110

8. MALFUNCTION OF NEGATIVE 1 PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 123, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

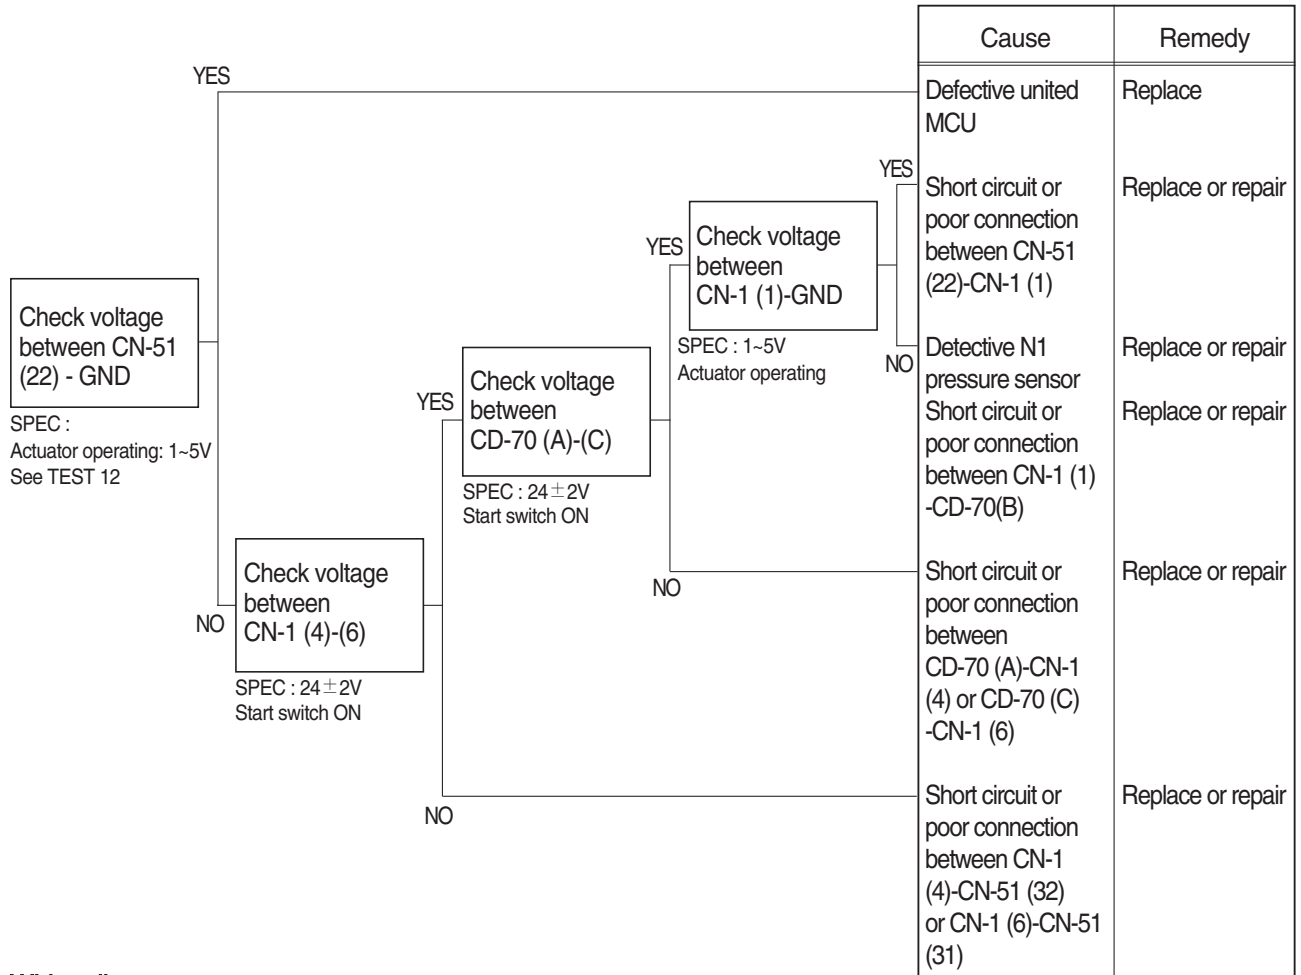

Wiring diagram

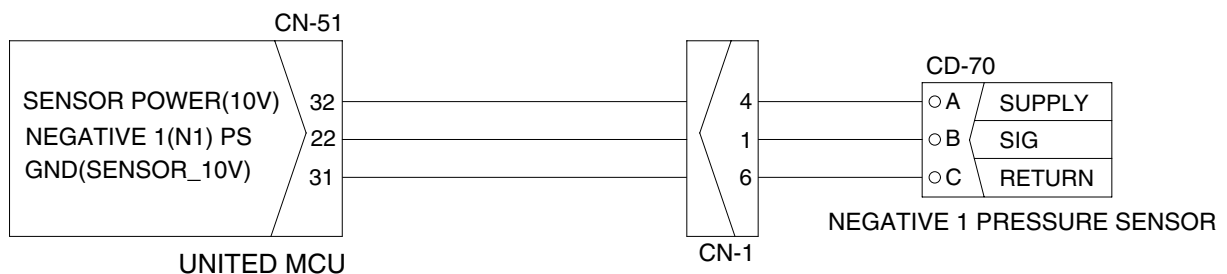


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 12** : Check voltage at CN-51 (22) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (22) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

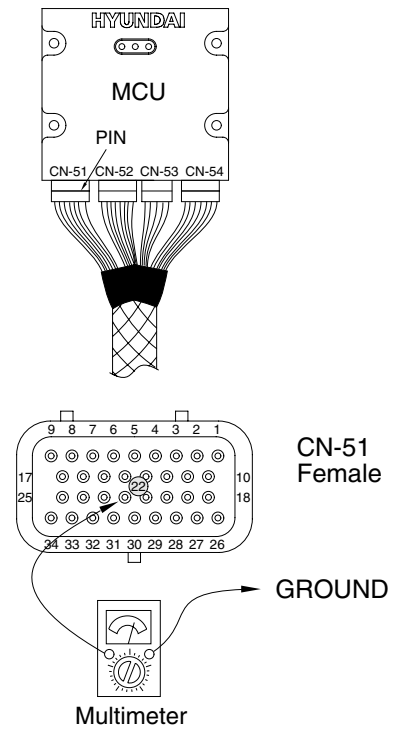


140WF6MS112

9. MALFUNCTION OF NEGATIVE 2 PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 124, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

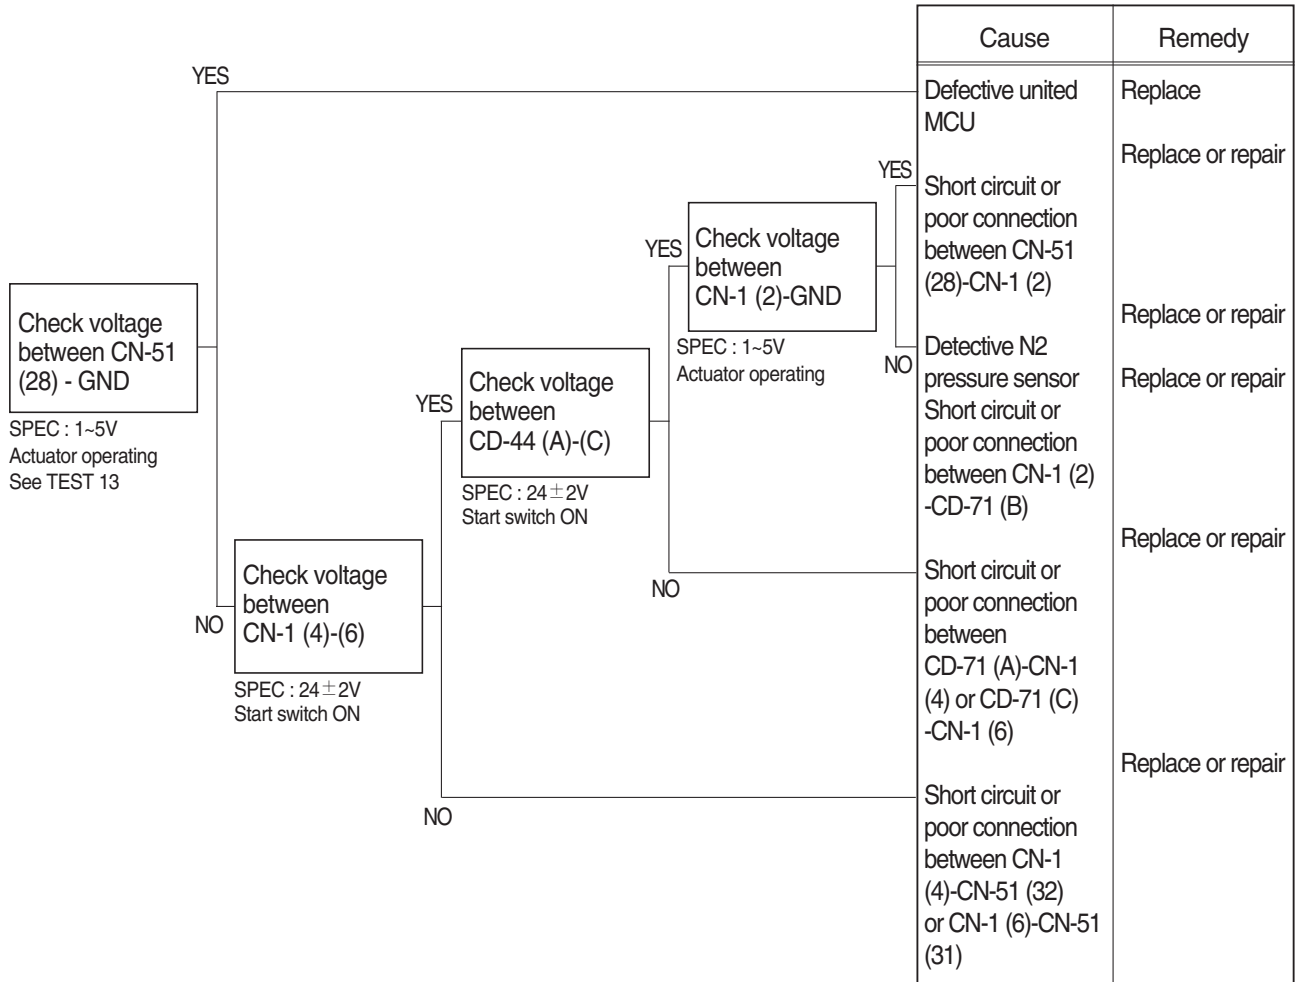

Wiring diagram

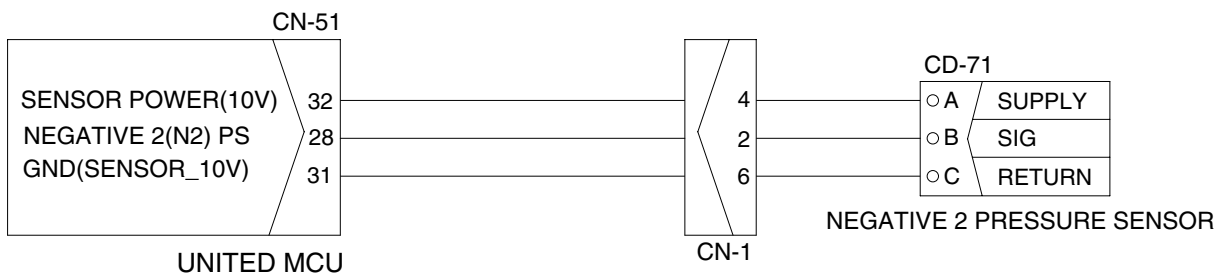


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 13** : Check voltage at CN-51 (22) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (22) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

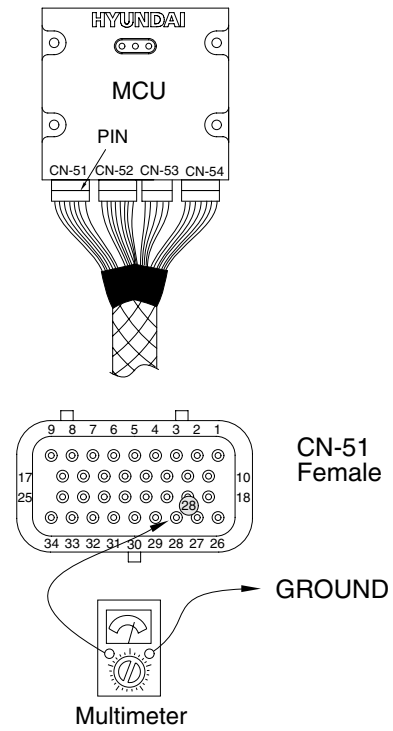


140WF6MS114

10. MALFUNCTION OF SWING PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 135, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

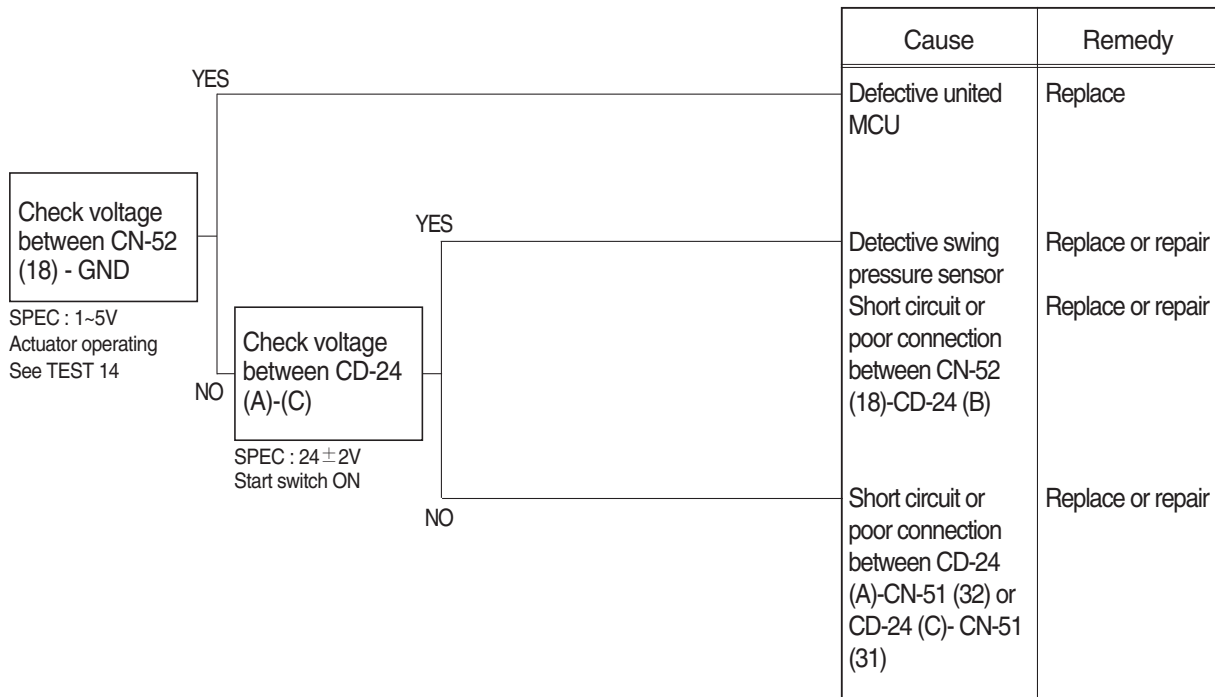

Wiring diagram

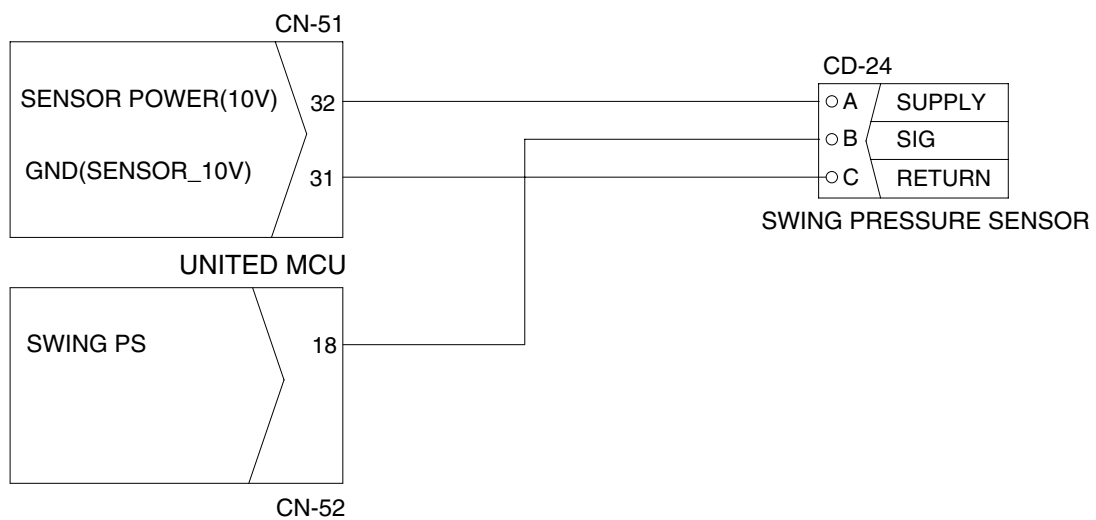

140WF6MS115


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) Test 14 : Check voltage at CN-52 (18) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (18) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

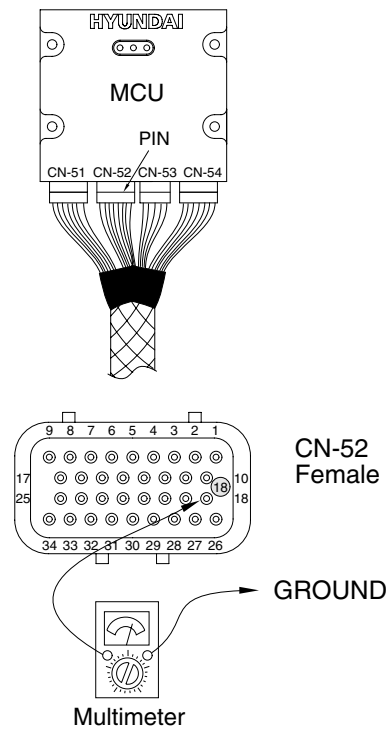


140WF6MS116

11. MALFUNCTION OF ARM IN/OUT & BUCKET IN PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 133, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

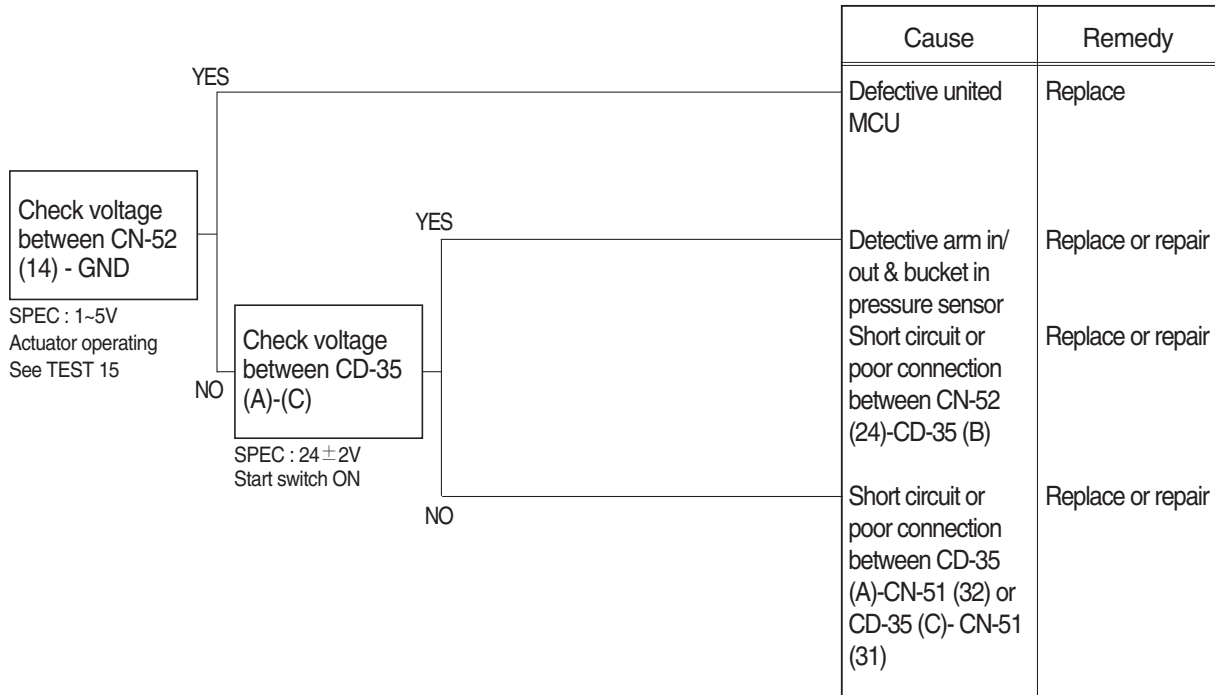

Wiring diagram

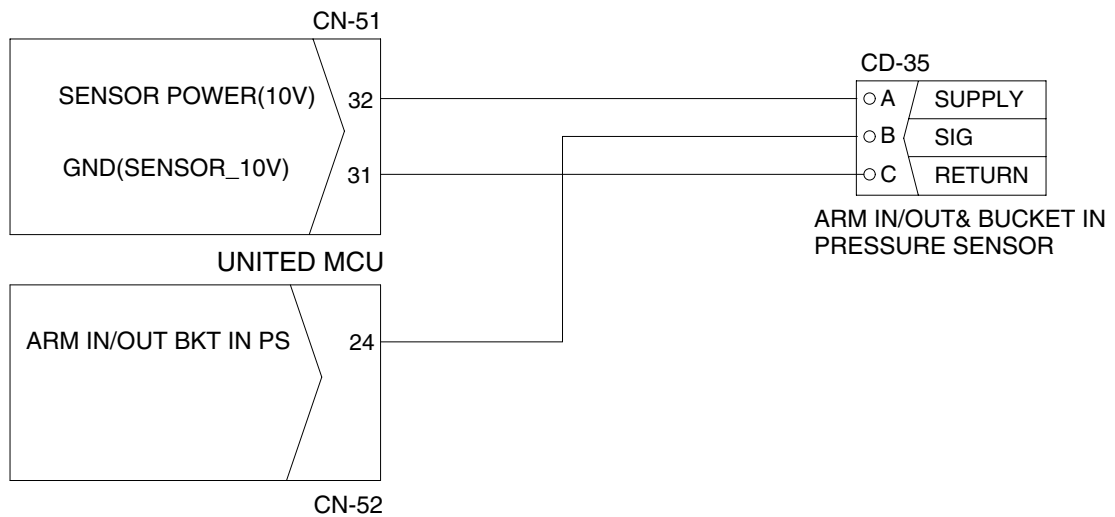

140WF6MS117


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 15** : Check voltage at CN-52 (24) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (24) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

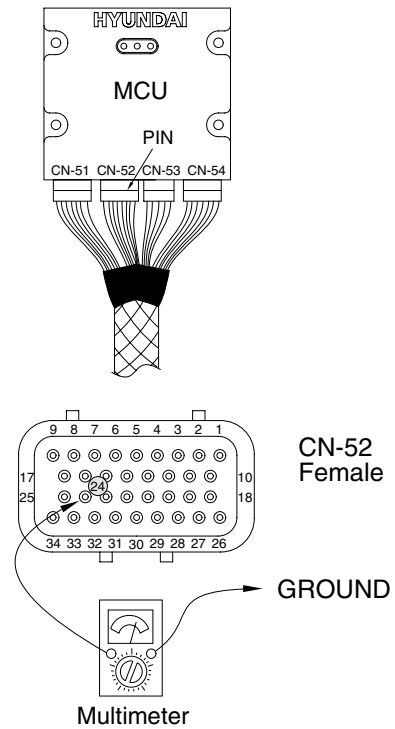


140WF6MS118

12. MALFUNCTION OF BOOM UP PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 127, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

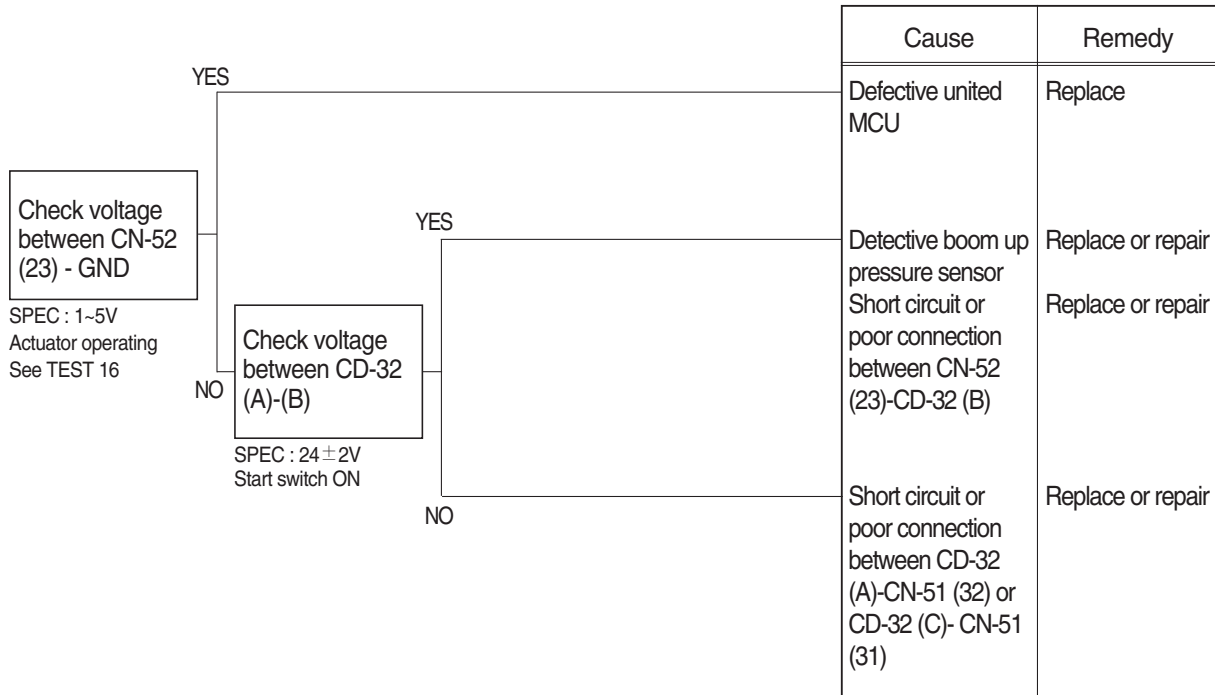

Wiring diagram

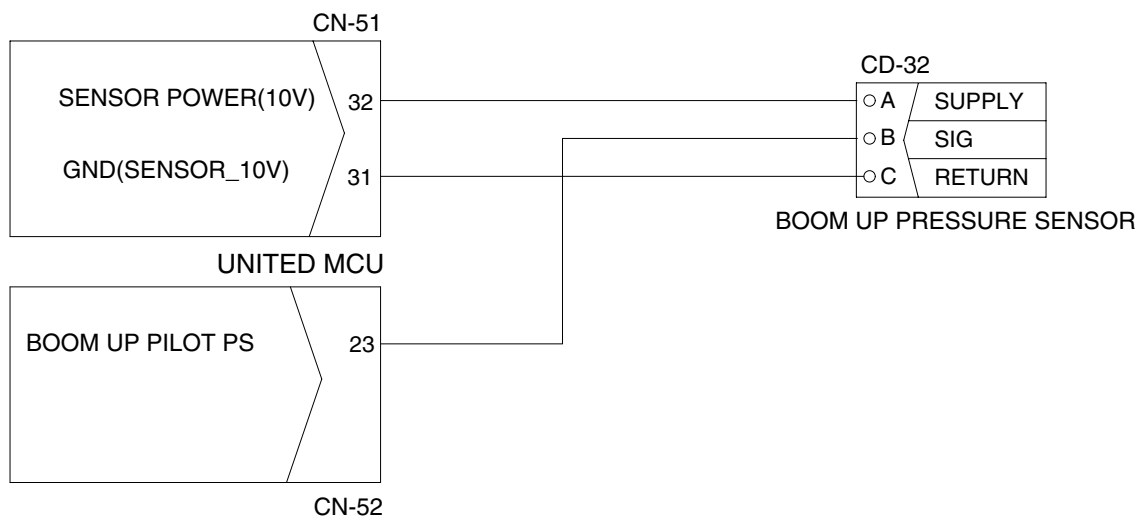

140WF6MS119



(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 16** : Check voltage at CN-52 (23) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (23) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

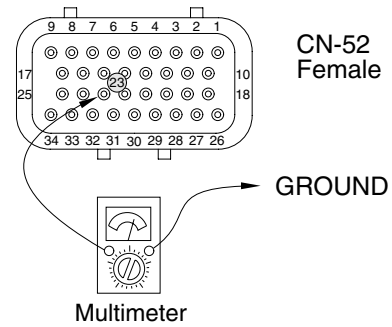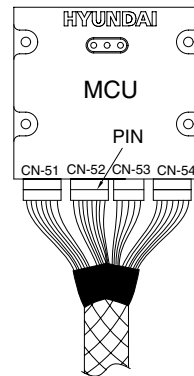


140WF6MS120

13. MALFUNCTION OF BOOM DOWN PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 128, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

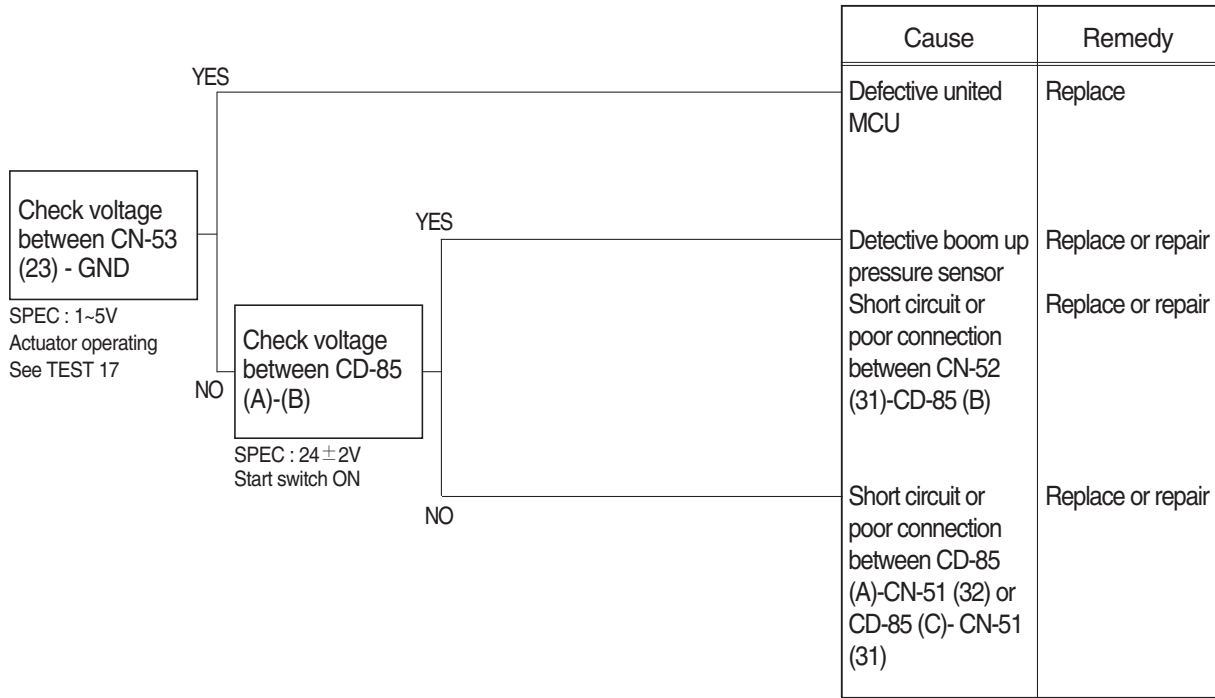

Wiring diagram

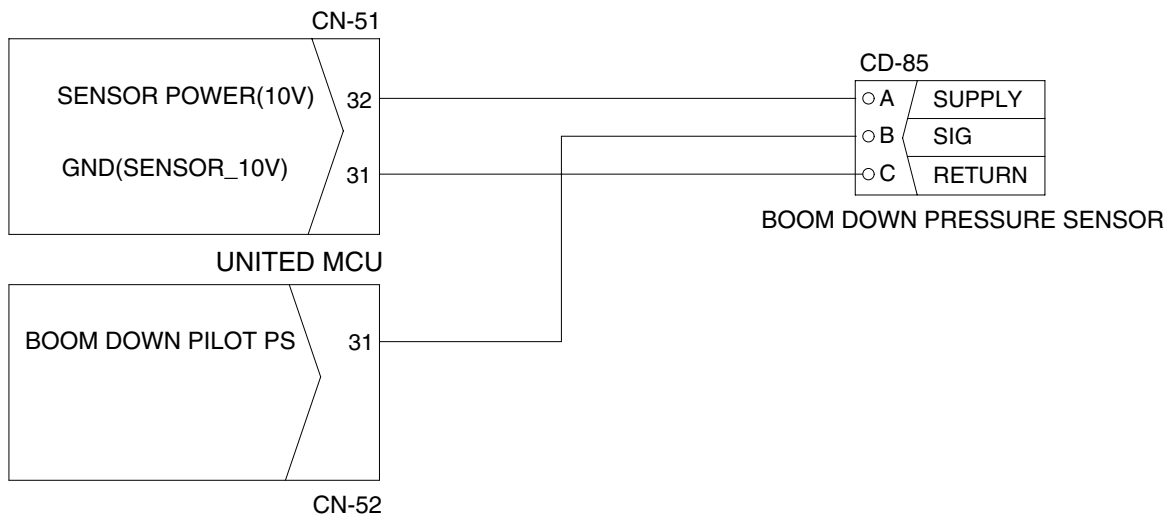

140WF6MS125


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 17** : Check voltage at CN-52 (31) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (31) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

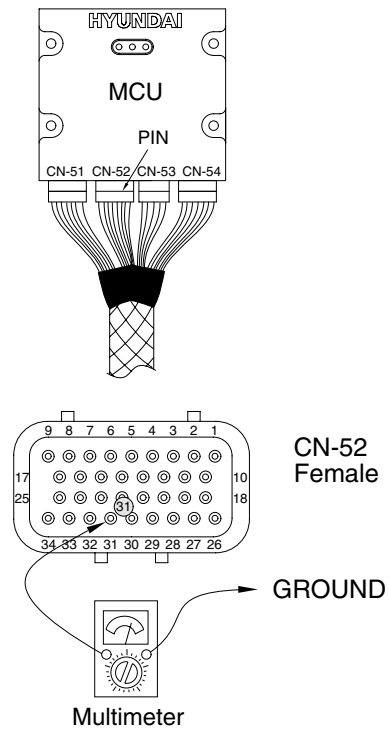


140WF6MS126

14. MALFUNCTION OF POWER MAX (SERIAL NO. : #0508-)


· Fault code : HCESPN 166, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

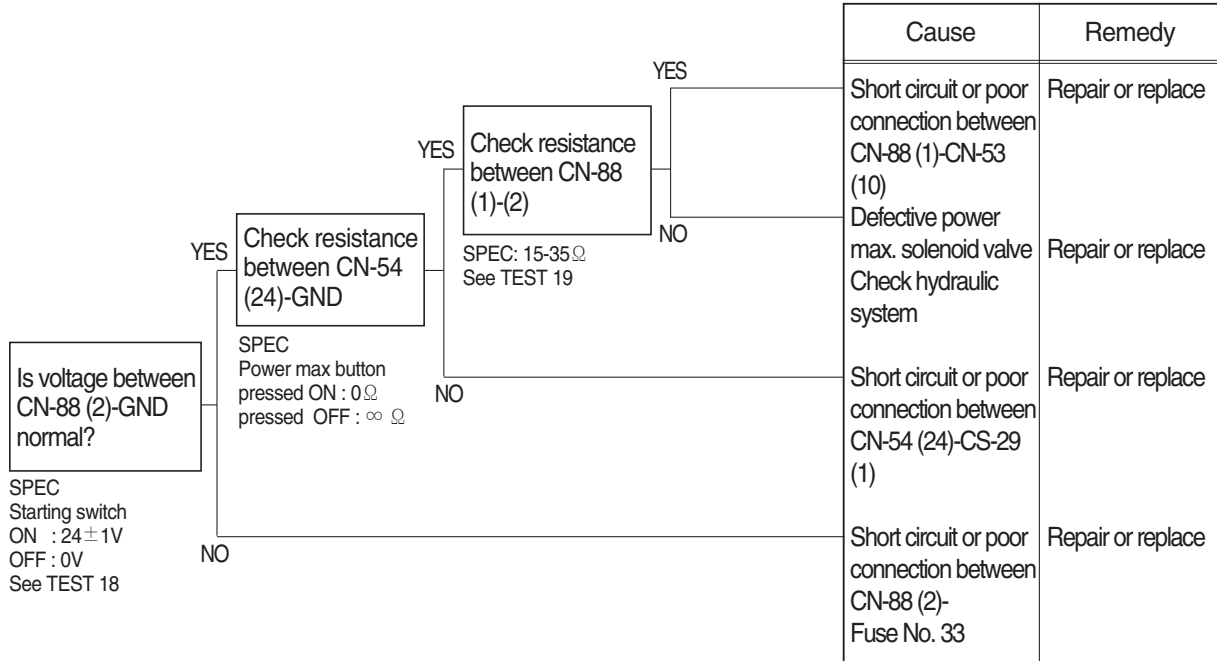

Wiring diagram

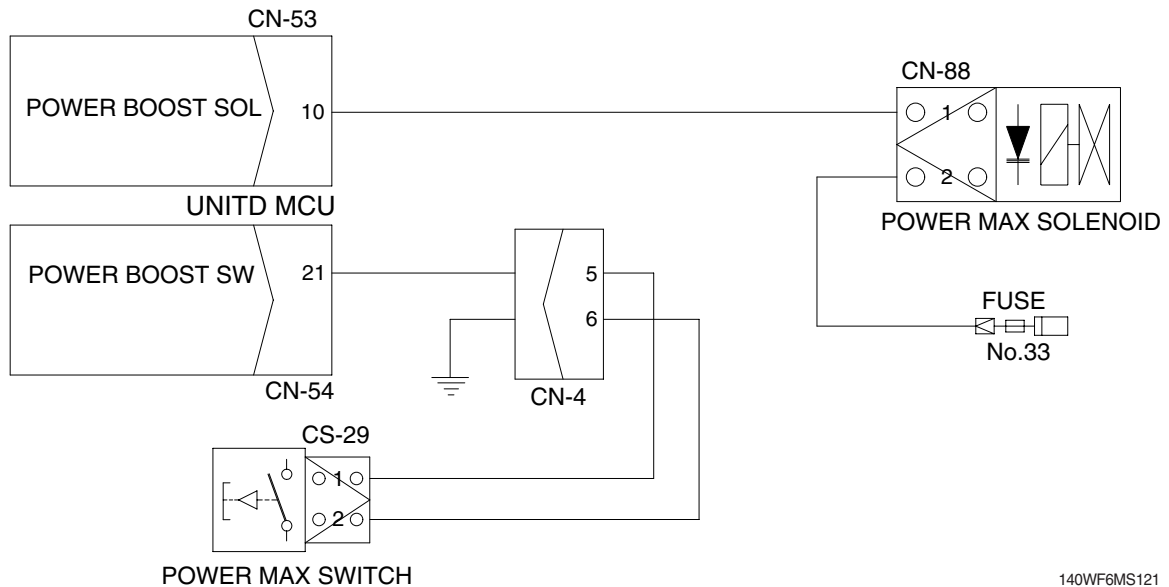

140WF6MS121


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 18:** Check voltage between connector CN-88 (2) - GND.

- ① Disconnect connector CN-88 from power max solenoid valve.
- ② Start switch ON.
- ③ Check voltage as figure.

SPEC : Key ON : $24 \pm 1V$
Key OFF : 0V

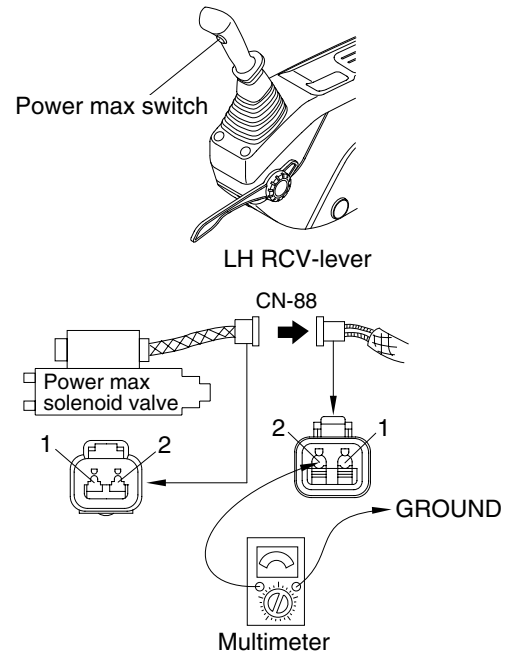


220NL6MS14A

(2) **Test 19:** Check resistance of the solenoid valve between CN-88 (1)-(2).

- ① Starting key OFF.
- ② Disconnect connector CN-88 from power max solenoid valve.
- ③ Check resistance as figure.

SPEC : $15 \sim 35 \Omega$

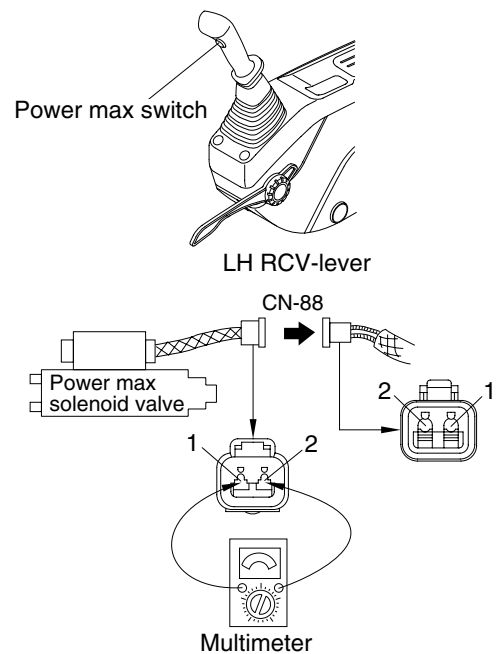


220NL6MS14B

15. MALFUNCTION OF BOOM PRIORITY EPPR VALVE (SERIAL NO. : #0508-)


· Fault code : HCESPN 141, FMI 5 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

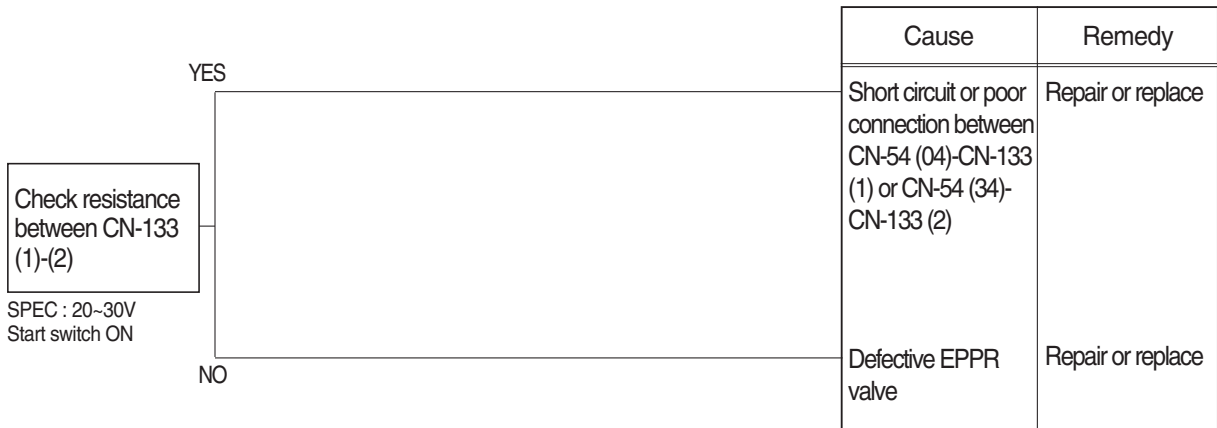

Wiring diagram

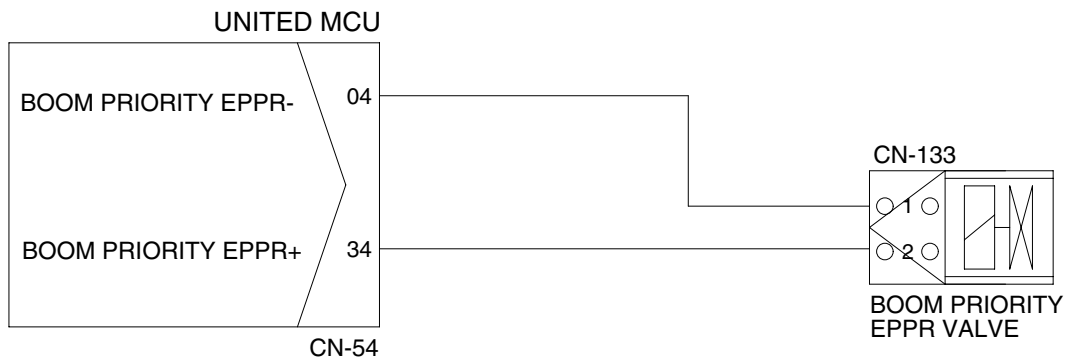

140WF6MS123


(SERIAL NO. : #0508-)

16. MALFUNCTION OF ARM REGENERATION SOLENOID

· Fault code : HCESPN 170, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

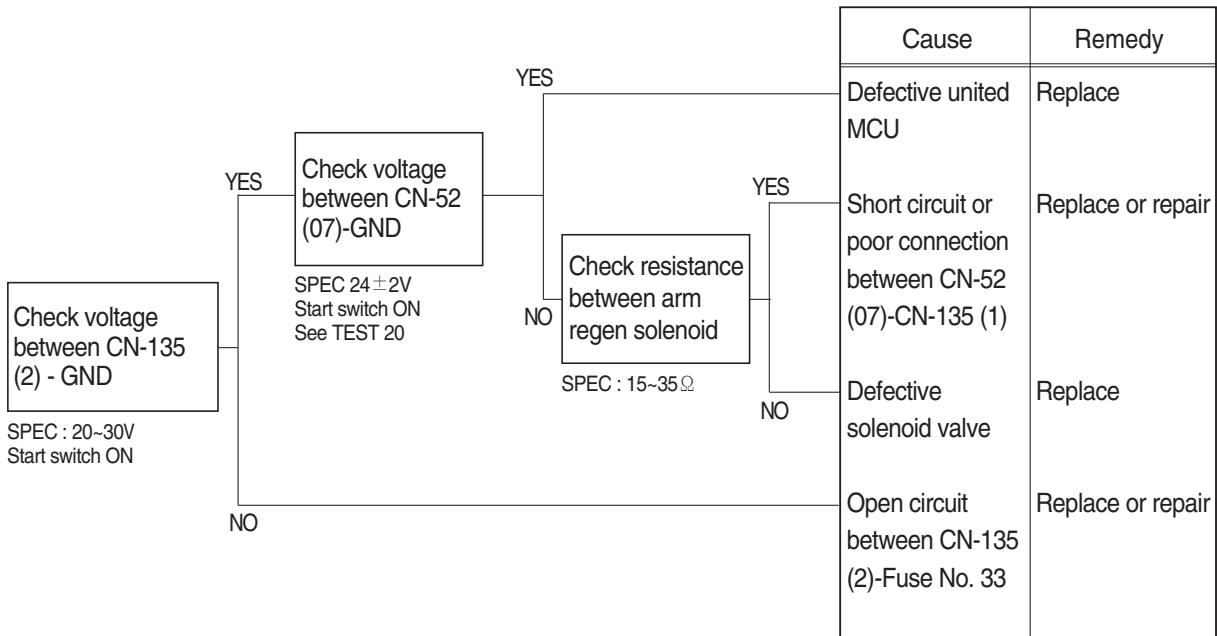

Wiring diagram



140WF6MS124


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 20** : Check voltage at CN-52 (07) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (07) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Key ON : 24 ± 2 V

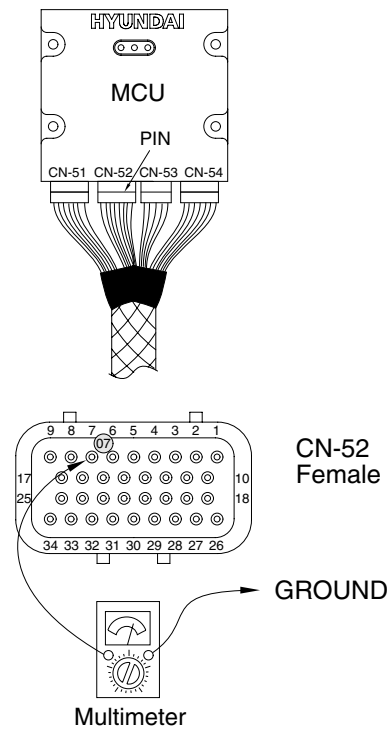


140WF6MS122

17. MALFUNCTION OF TRANSMISSION OIL PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 501, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

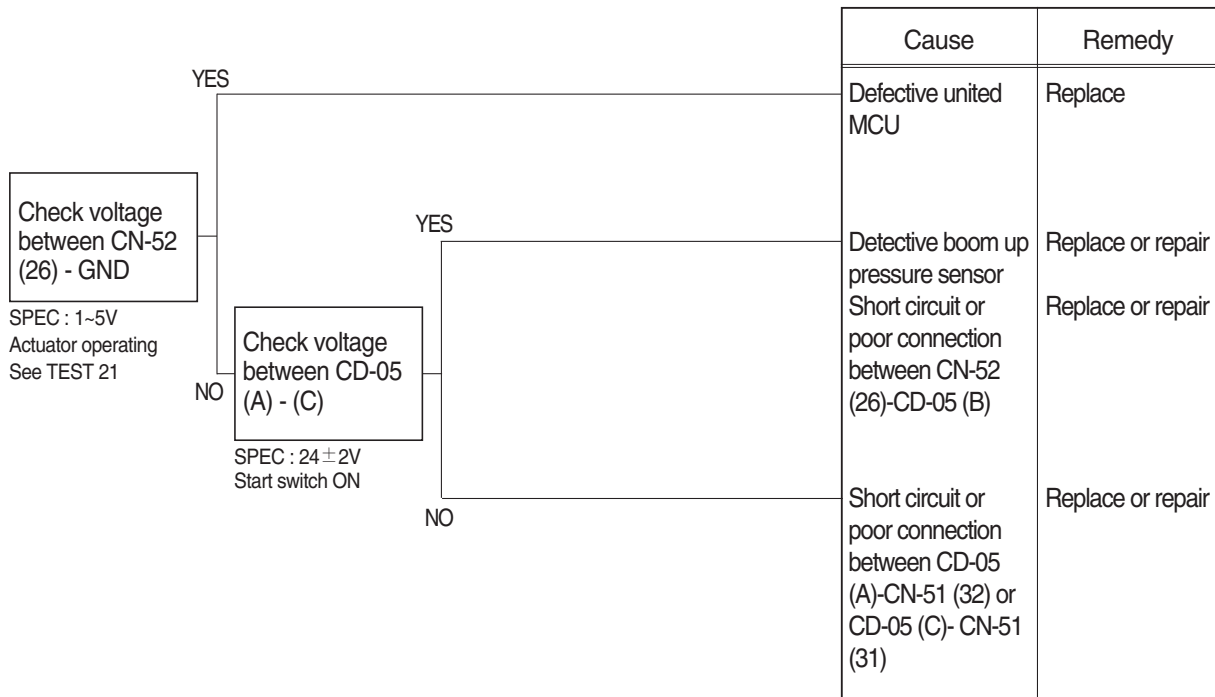

Wiring diagram

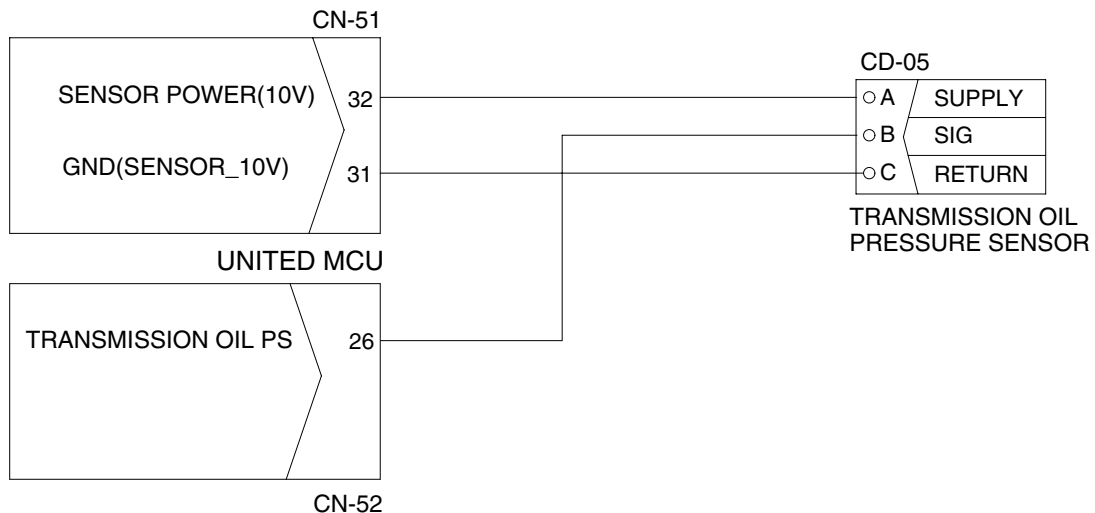

140WF6MS160


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 21** : Check voltage at CN-52 (26) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (26) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

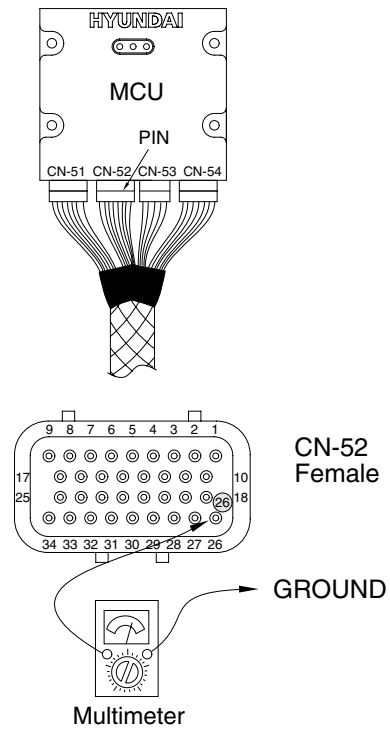


140WF6MS161

18. MALFUNCTION OF BRAKE OIL PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 503, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

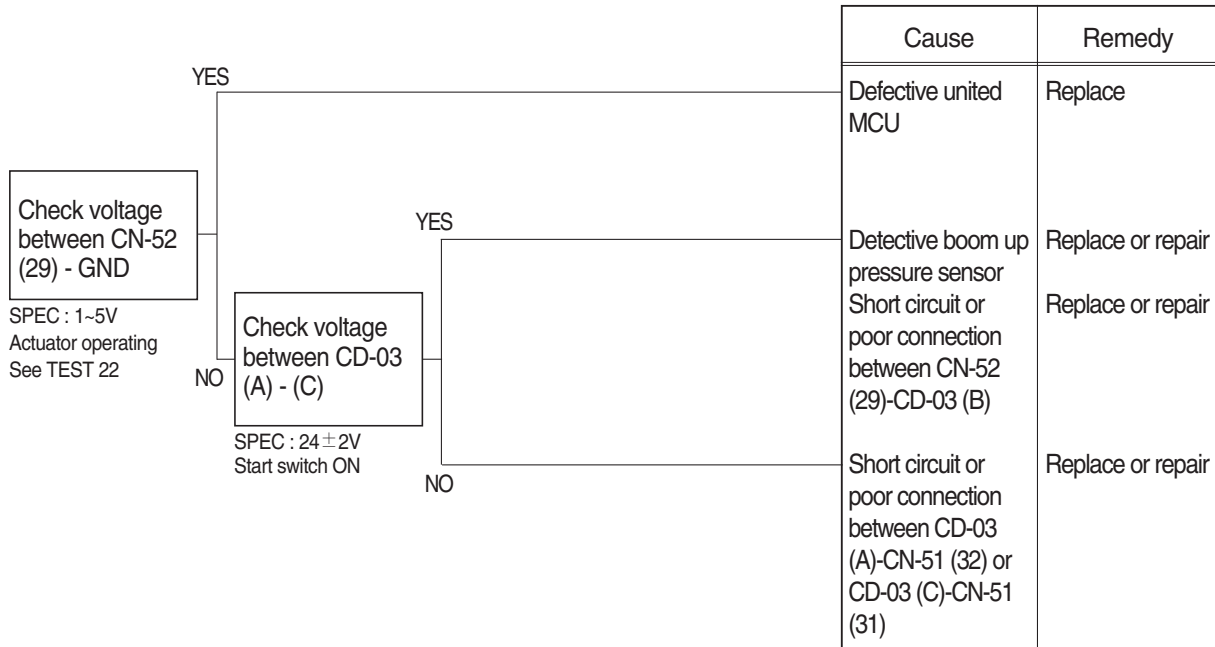

Wiring diagram

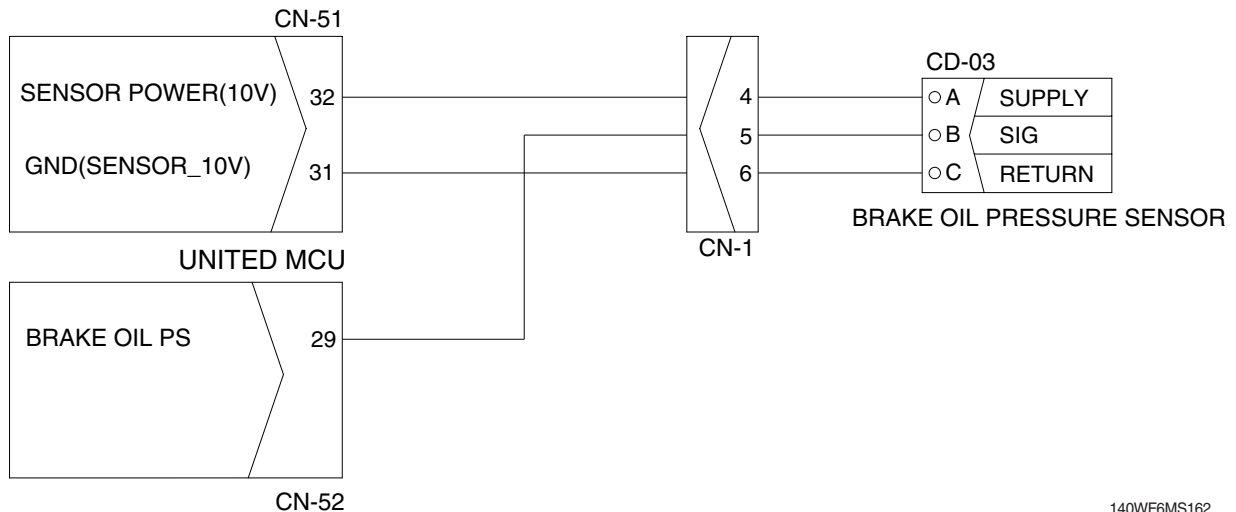

140WF6MS162


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 22** : Check voltage at CN-52 (29) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (29) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

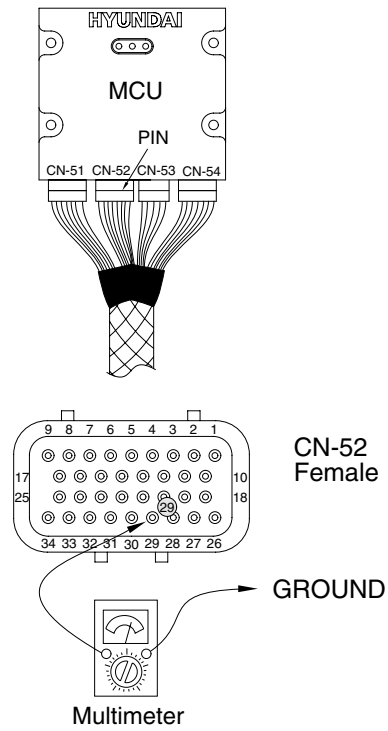


140WF6MS163

19. MALFUNCTION OF TRAVEL FORWARD PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 530, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

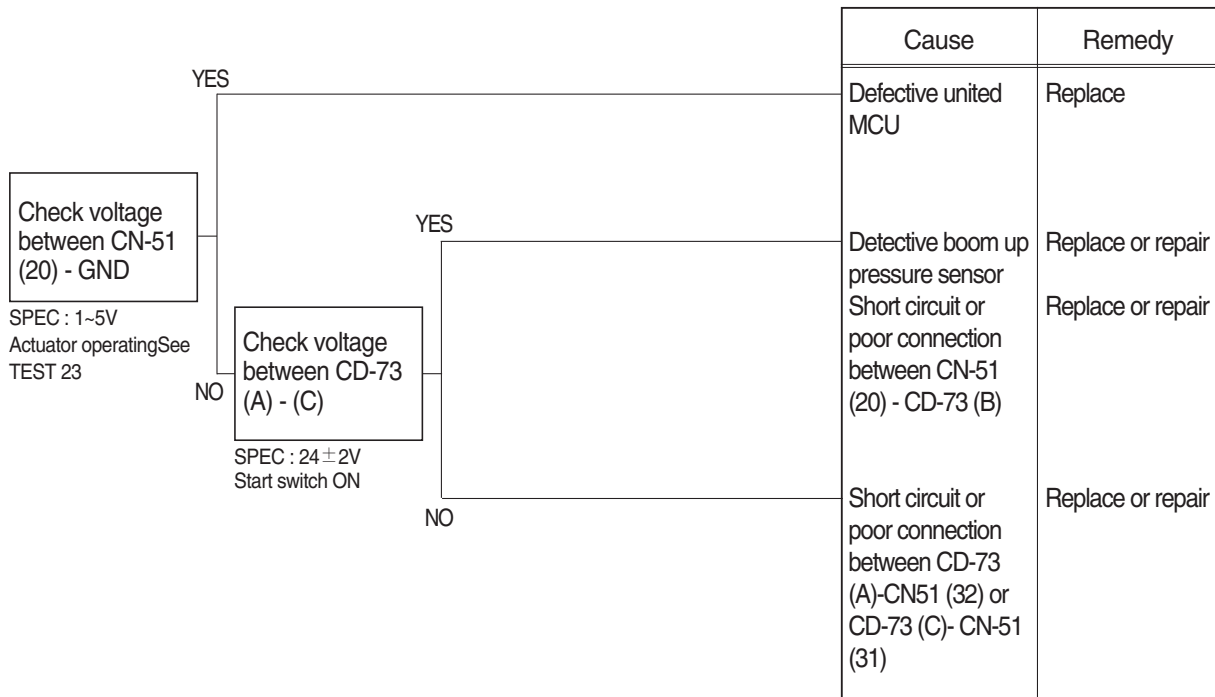

Wiring diagram

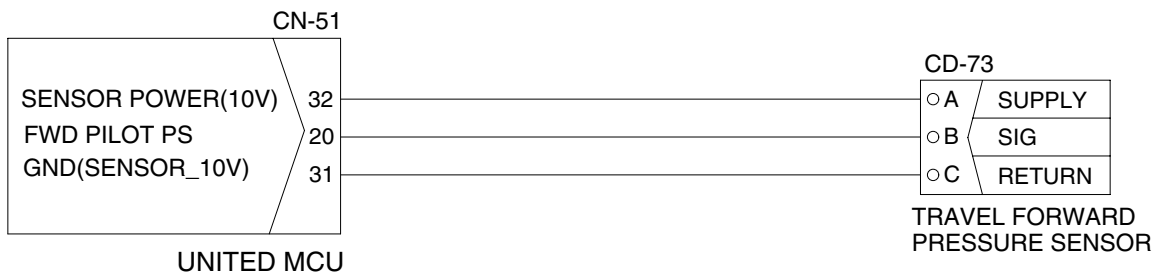

140WF6MS164


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 23** : Check voltage at CN-51 (20) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (20) of CN-51.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

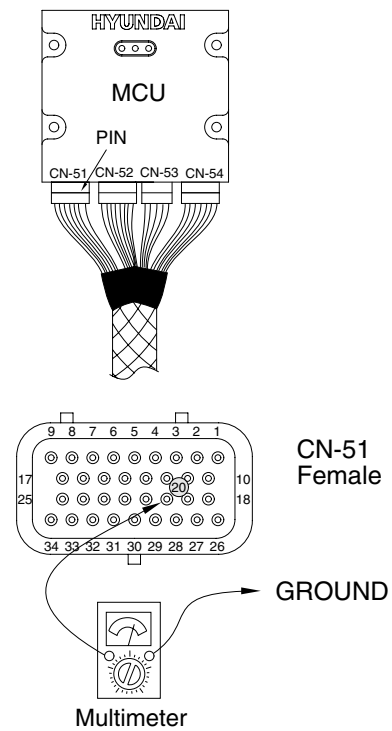


140WF6MS165

20. MALFUNCTION OF TRAVEL REVERSE PRESSURE SENSOR (SERIAL NO. : #0508-)


· Fault code : HCESPN 531, FMI 0~4

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

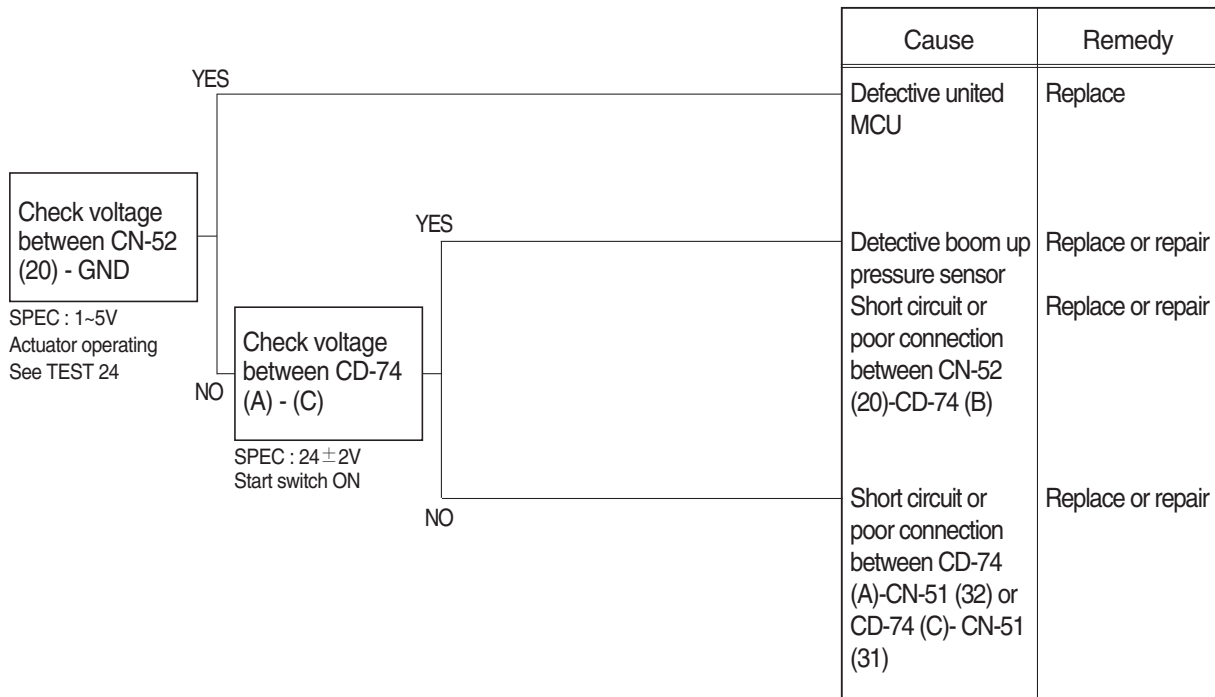

Wiring diagram

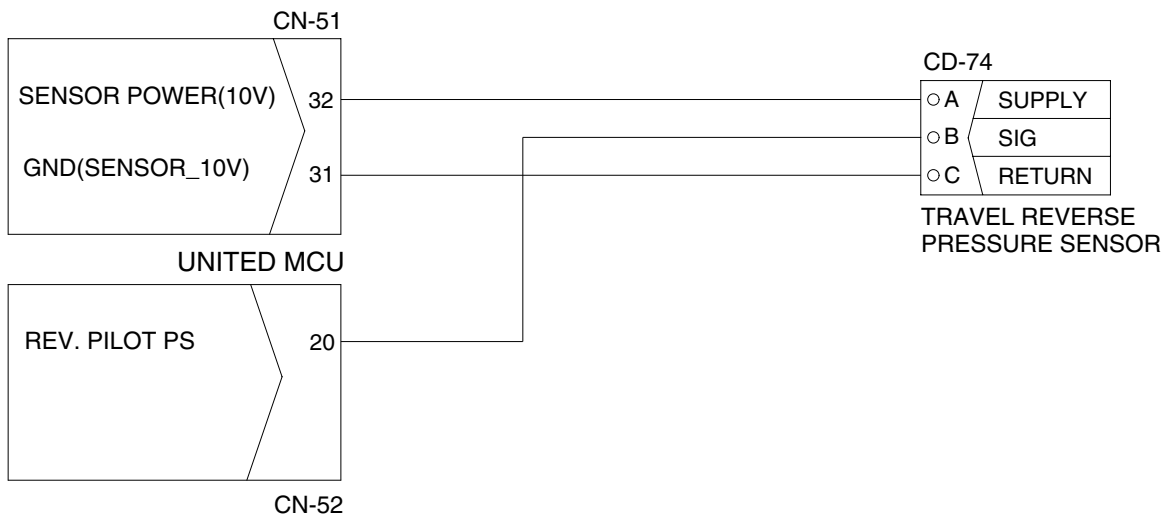

140WF6MS166


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 24** : Check voltage at CN-52 (20) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (20) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

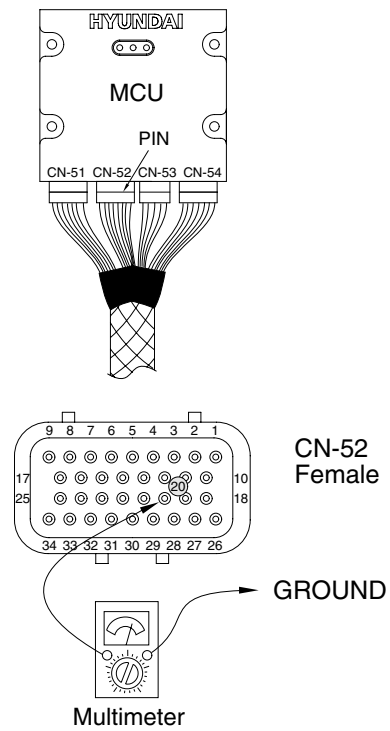


140WF6MS167

21. MALFUNCTION OF RAM LOCK SOLENOID (SERIAL NO. : #0508-)

· Fault code : HCESPN 525, FMI 4 or 6

※ Before carrying out below procedure, check all the related connectors are properly inserted.

1) INSPECTION PROCEDURE

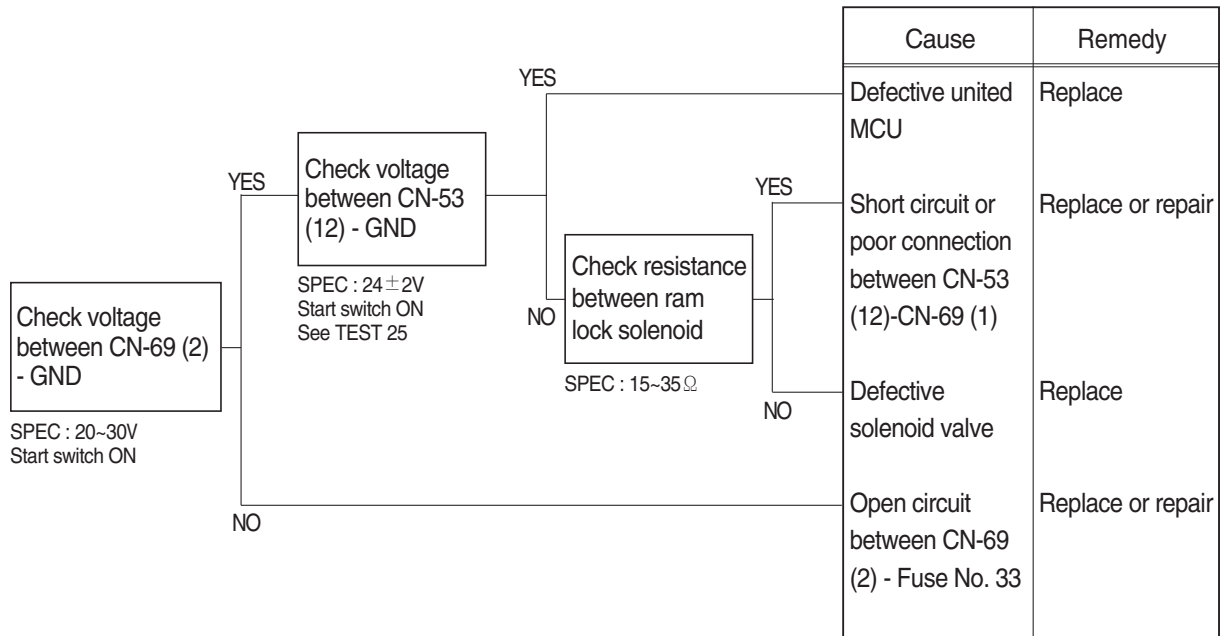

Wiring diagram



140WF6MS168


(SERIAL NO. : #0508-)

2) TEST PROCEDURE

(1) **Test 25** : Check voltage at 53 (12) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (12) of CN-53.
- ③ Starting switch ON.
- ④ Check voltage as figure.


SPEC : Key ON : 24 ± 2 V

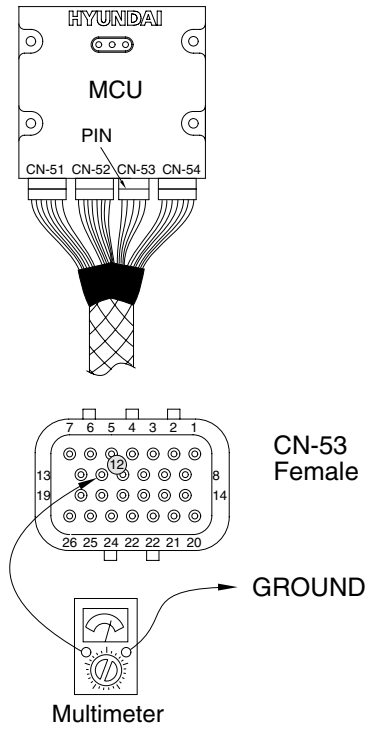

140WF6MS169

GROUP 5 AIR CONDITIONER & HEATER SYSTEM

1. AIR CONDITIONER DOES NOT OPERATE

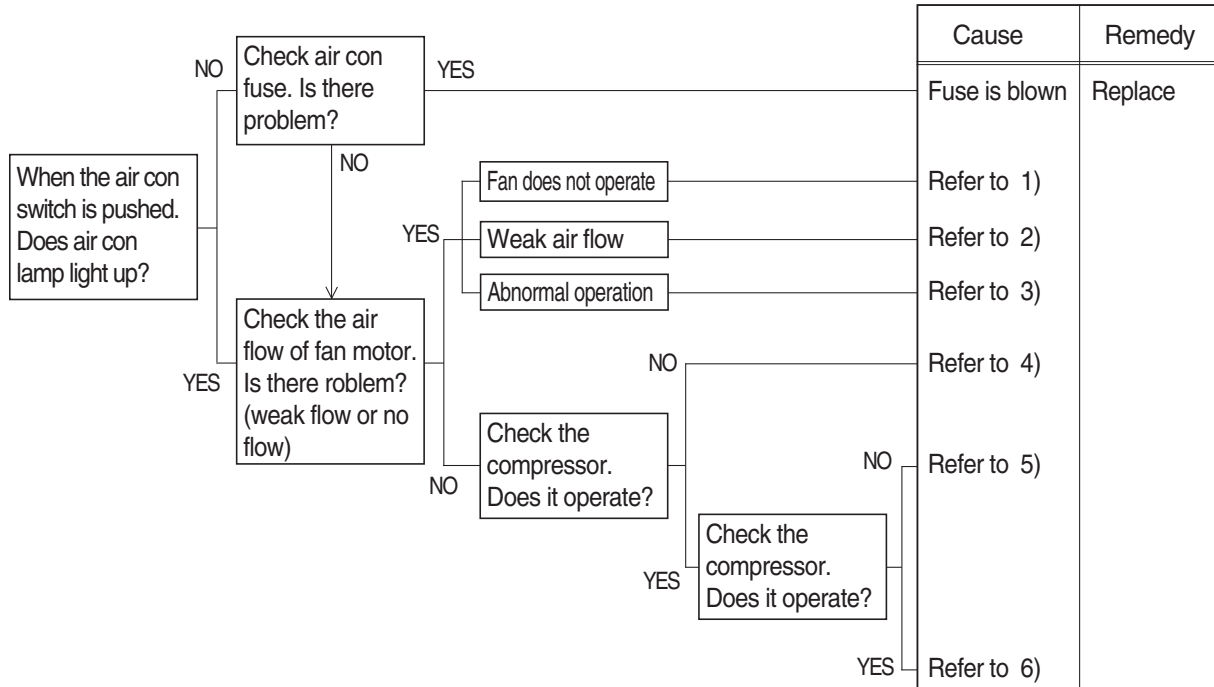

1) FAN DOES NOT OPERATE

| Cause | Check | Remedy |
|---|--|-----------------|
| Fuse is blown or abnormal relay operation | * Fuse * Does relay normally operate? | Replace |
| Harness short or poor contact | Check any harness short or abnormal contact of connector | Repair shortage |
| Fan motor failure | Supply 24V to 2 lead wire from motor and check the operation | Replace |
| Resistor is broken | Check current flow of resistor with tester | Replace |
| Fan switch failure | Push fan switch by turn and check the operation | Replace |

2) WEAK AIR FLOW FROM FAN MOTOR

| Cause | Check | Remedy |
|--|-------------------------------------|---------|
| Clogged evaporator or obstacles around air inlet | Check if evaporator is contaminated | Clean |
| Leakage of air flow | Check HVAC case assembly | Adjust |
| Duct sensor failure | Check if evaporator is frozen | Replace |

3) ABNORMAL OPERATION OF FAN MOTOR

| Cause | Check | Remedy |
|--|------------------------------|------------------|
| Abnormal operation of each step of control | 4 step only operate | Replace resistor |
| | 1 or 2 step does not operate | Replace control |
| | 3 or 4 step does not operate | Replace relay |

4) COMPRESSOR DOES NOT ROTATE OR HARDLY ROTATE

| Cause | Check | Remedy |
|--------------------------------------|---|--|
| Loose belt | Belt shaking is severe | Adjust tension |
| Failure of compressor itself | Belt slip | Repair or Replace |
| Low voltage of battery | Slip when rotate | Charge battery |
| Fieldcoil short | Slip when rotate | Replace magnetic clutch |
| Oily clutch face | Contamination around clutch | Replace magnetic clutch, clean |
| Fieldcoil is broken | Magnetic clutch does not operate or " ∞ " resistance | Replace compressor |
| Leakage of refrigerant or oil inside | Check if wet with oil | Replace compressor Charge refrigerant |

5) COMPRESSOR OPERATE NORMALLY AND AIR FLOW IS NORMAL

| Cause | Check | Remedy |
|--|--|--|
| Shortage of refrigerant | When air con operate during 5~10 min small temperature difference between high and low pressure pipes. | Repair leakage joint Charge refrigerant |
| Overcharge of refrigerant | *Magnetic clutch on/off rapidly *High pressure over specification *Lukewarm air from nozzle | Recharge refrigerant following specification |
| Lower pressure than normal condition at low side | Shortage of refrigerant | Make up refrigerant |
| | Clogged receive dryer | Replace receive dryer |
| | Clogged expansion valve | Replace expansion valve |
| | Clogged or crushed pipe | Replace pipe or clean |
| | Failure of duct sensor | Replace duct sensor |

6) COMPRESSOR OPERATE NORMALLY AND AIR FLOW IS NORMAL

| Cause | Check | Remedy |
|--|--|--|
| Lower pressure than normal condition at low side | Failure of duct sensor Magnetic clutch off before air temperature sufficiently down | Replace duct sensor or adjust location |
| | Defective compressor gasket When compressor off, high and low pressure balance immediatly | Repair compressor or Replace |
| Higher pressure than normal condition at high side | Failure of condensing Contamination on condenser or insufficient air flow from fan | Clean the condenser Repair fan |
| | Overcharge of refrigerant | Adjust refrigerant |
| | Entrained air | Vacuum and recharge |
| Lower pressure than normal condition at high side | Shortage of refrigerant | Make up refrigerant |