

GROUP 9 BOOM, ARM AND BUCKET CYLINDER

1. REMOVAL AND INSTALL

1) BUCKET CYLINDER

(1) Removal


- ※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.
- ※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.



▲ Loosen the breather slowly to release the pressure inside the hydraulic tank.


- ※ Escaping fluid under pressure can penetrate the skin causing serious injury. Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.

- ① Set block between bucket cylinder and arm.

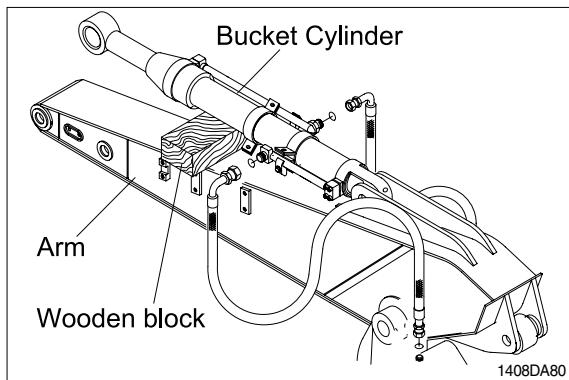


- ② Remove bolt(2), nut(3) and pull out pin (1).


- ※ Tie the rod with wire to prevent it from coming out.

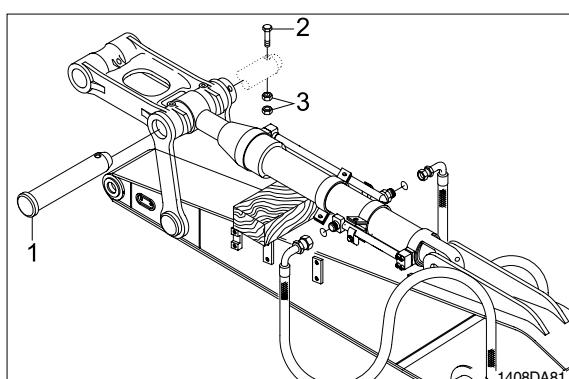

- ③ Disconnect bucket cylinder hoses(4) and put plugs(5) on cylinder pipe.

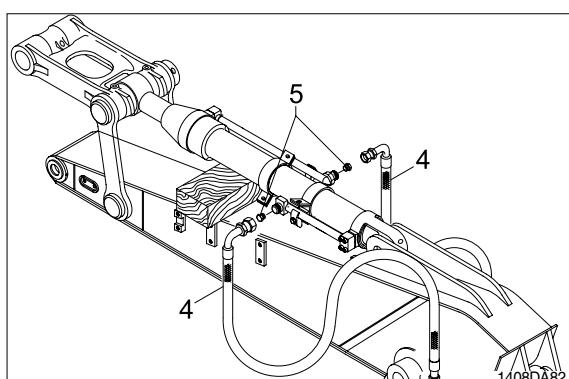

- ④ Sling bucket cylinder assembly(8) and remove bolt(6) then pull out pin (5).
- ⑤ Remove bucket cylinder assembly(8).
 - Weight : 90kg(200lb)

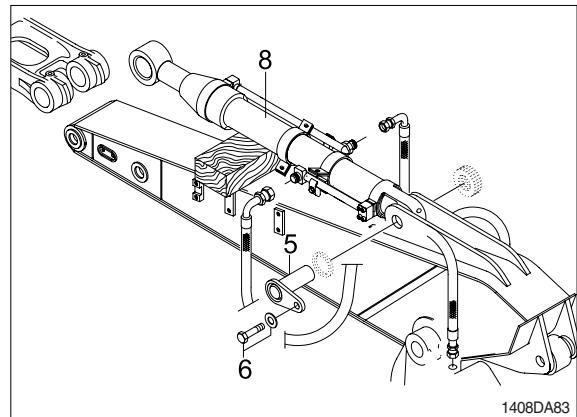

(2) Install

- ① Carry out installation in the reverse order to removal.

⚠ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.

- ※ Bleed the air from the bucket cylinder.
- ※ Confirm the hydraulic oil level and check the hydraulic oil leak or not.

2) ARM CYLINDER

(1) Removal

- ※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.
- ※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.


⚠ Loosen the breather slowly to release the pressure inside the hydraulic tank.

- ※ Escaping fluid under pressure can penetrate the skin causing serious injury.
Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.

- ① Set block between arm cylinder and boom.




13031GE18

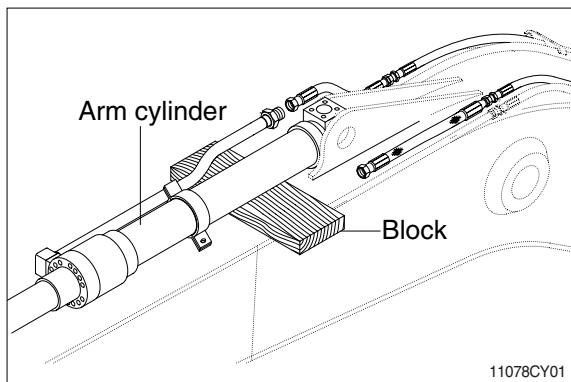


11078CY01

- ② Remove bolt(2) and pull out pin(1).
※ Tie the rod with wire to prevent it from coming out.

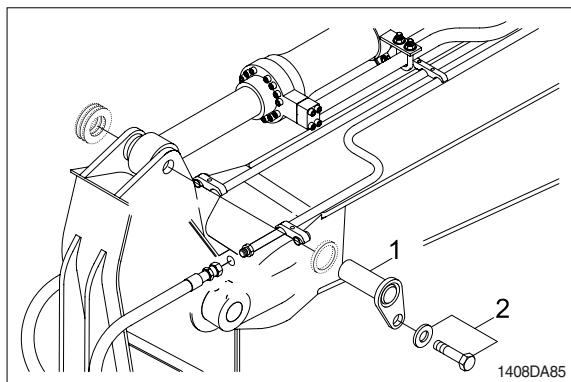


1408DA85

- ③ Disconnect arm cylinder hoses(3) and put plugs on cylinder pipe.
- ④ Disconnect greasing pipings(4).

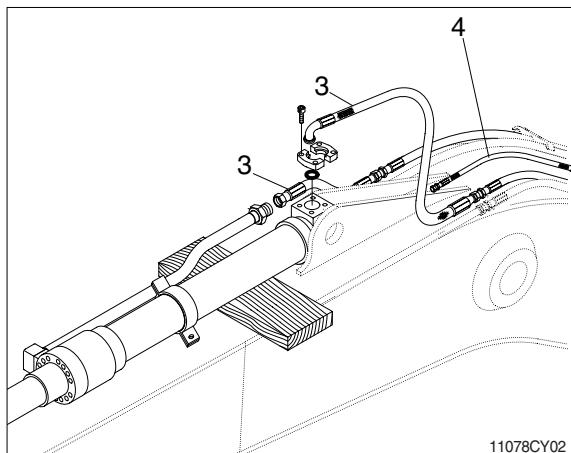

11078CY02

- ⑤ Sling arm assembly(7) and remove bolt
(6) then pull out pin(5).
- ⑥ Remove arm cylinder assembly(7).
 - Weight : 140kg(310lb)

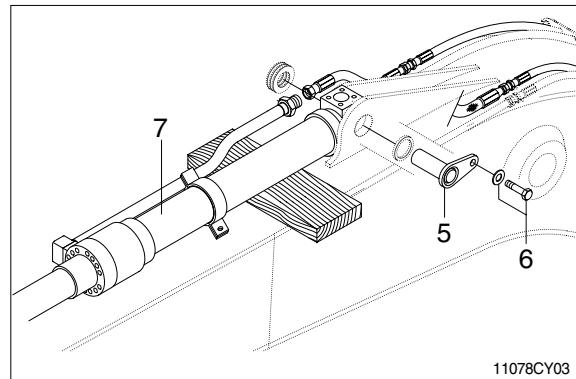

(2) Install

- ① Carry out installation in the reverse order to removal.

⚠ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.

- ※ Bleed the air from the arm cylinder.
- ※ Confirm the hydraulic oil level and check the hydraulic oil leak or not.

3) BOOM CYLINDER

(1) Removal


- ※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.
- ※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.

⚠ Loosen the breather slowly to release the pressure inside the hydraulic tank.

- ※ Escaping fluid under pressure can penetrate the skin causing serious injury.
Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.
- ① Disconnect greasing hoses(1).
- ② Sling boom cylinder assembly.




13031GE18

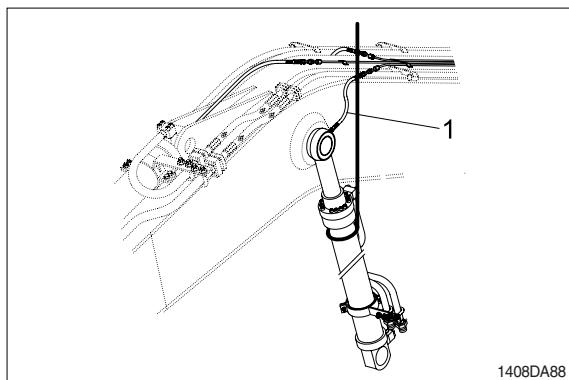


1408DA88

- ③ Remove bolt(4), stop plate(5) and pull out pin(2).
※ Tie the rod with wire to prevent it from coming out.

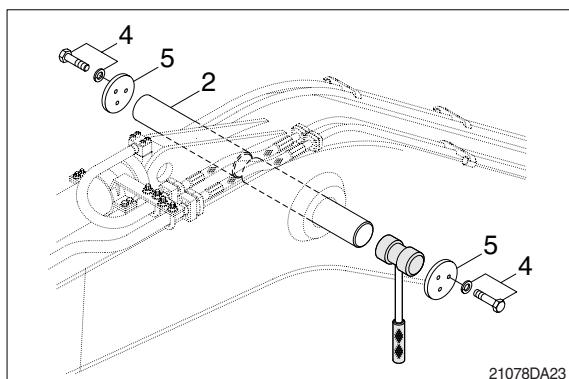


21078DA23

- ④ Lower the boom cylinder assembly(6) on a stand.

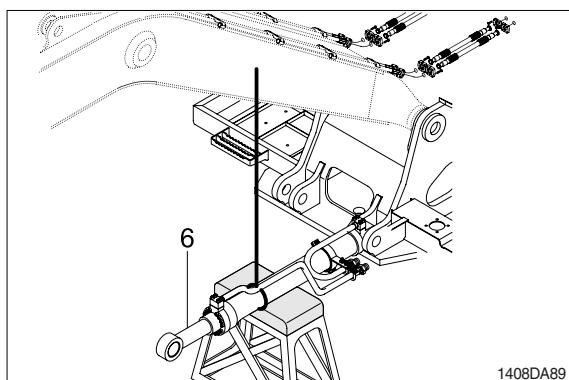


1408DA89

- ⑤ Disconnect boom cylinder hoses(7) and put plugs on cylinder pipe.

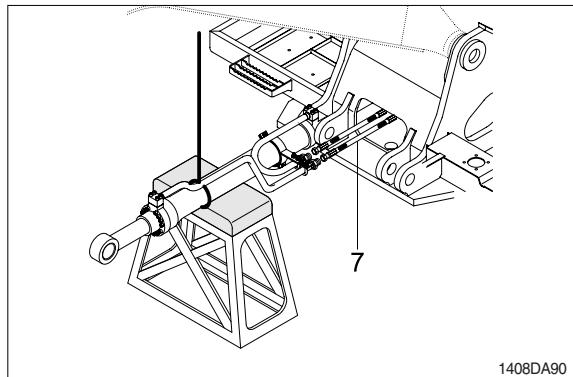

- ⑥ Remove bolt(9) and pull out pin(8).
⑦ Remove boom cylinder assembly(6).
· Weight : 115kg(255lb)

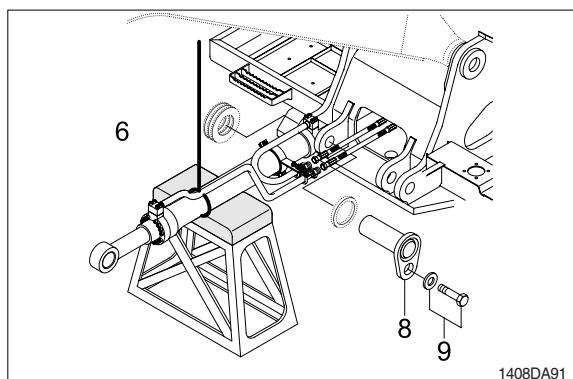

(2) Install

- ① Carry out installation in the reverse order to removal.


▲ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.

- * Bleed the air from the boom cylinder.
- * Conformed the hydraulic oil level and check the hydraulic oil leak or not.

2. DISASSEMBLY AND ASSEMBLY


1) STRUCTURE

(1) Bucket cylinder

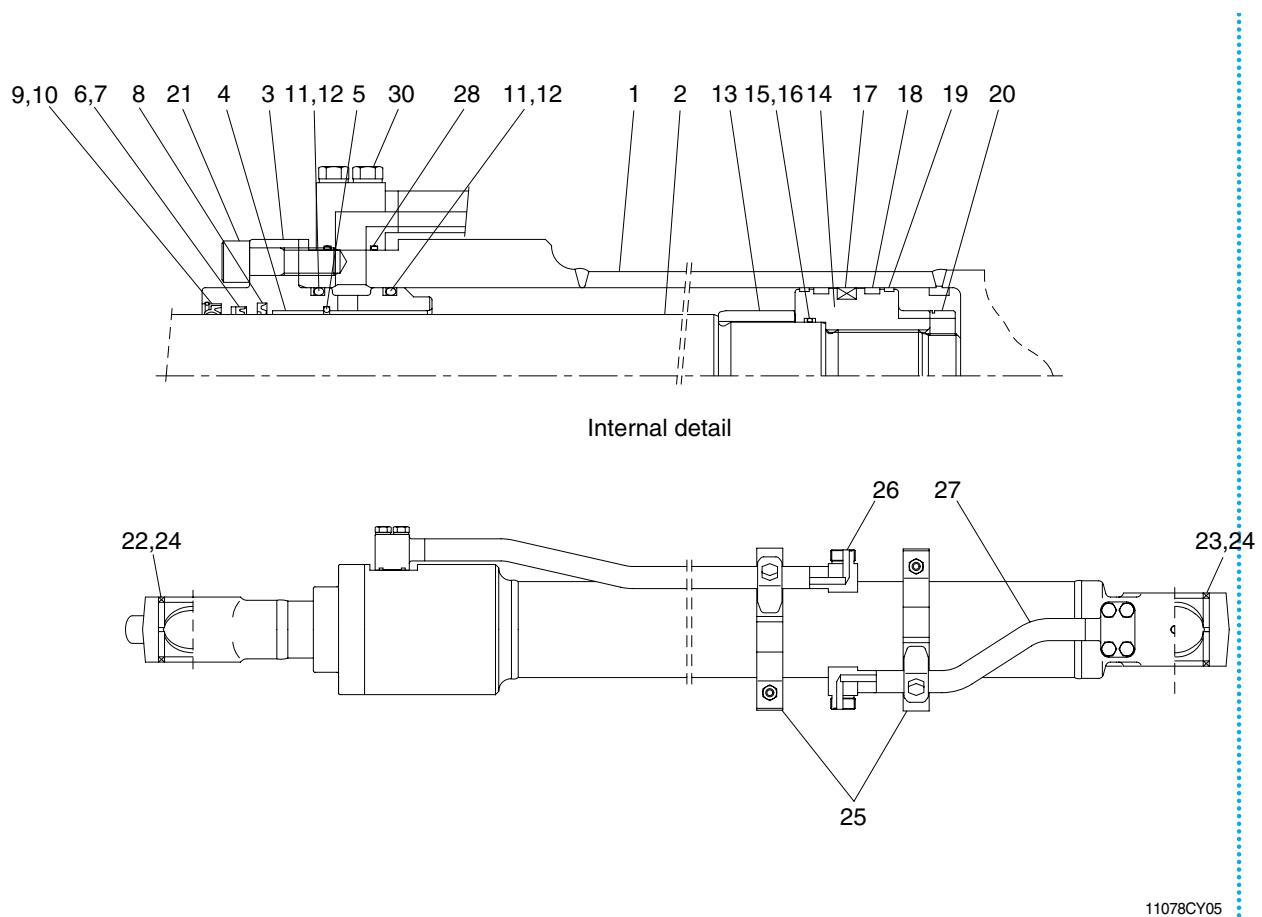

- | | | | | | |
|----|---------------|----|--------------|----|--------------------------|
| 1 | Tube assembly | 11 | O-ring | 21 | Hexagon socket head bolt |
| 2 | Rod assembly | 12 | Back up ring | 22 | Pin bush |
| 3 | Gland | 13 | Cushion ring | 23 | Pin bush |
| 4 | DD2 bush | 14 | Piston | 24 | Dust seal |
| 5 | Snap ring | 15 | O-ring | 25 | Band assembly |
| 6 | Rod seal | 16 | Back up ring | 26 | Pipe assembly(R) |
| 7 | Back up ring | 17 | Piston seal | 27 | Pipe assembly(B) |
| 8 | Buffer ring | 18 | Wear ring | 28 | O-ring |
| 9 | Dust wiper | 19 | Dust ring | 29 | O-ring |
| 10 | Snap ring | 20 | Lock nut | 30 | Hexagon socket head bolt |



(2) Arm cylinder

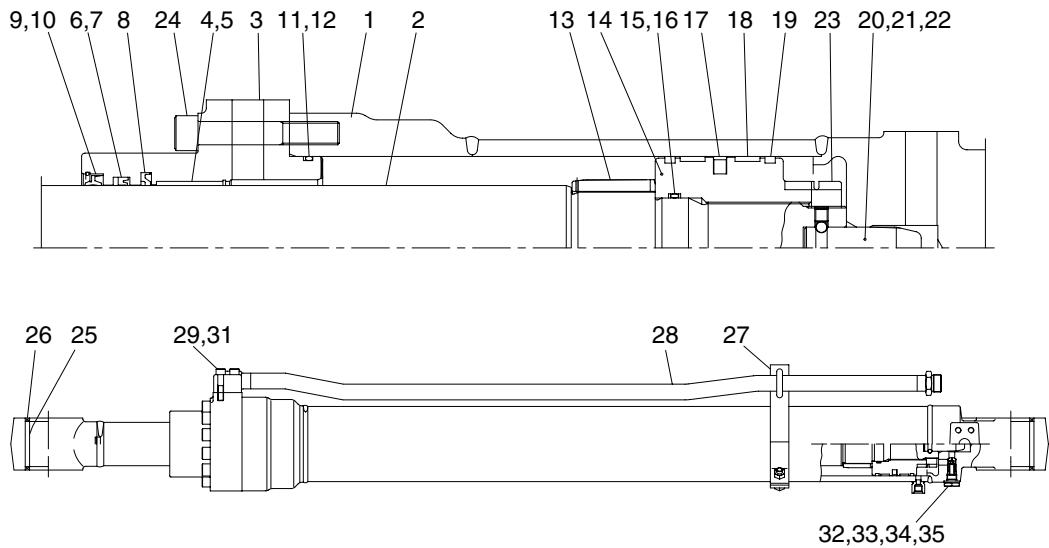

11078CY07

1	Tube assembly	13	Cushion ring	25	Pin bush
2	Rod assembly	14	Piston	26	Dust seal
3	Gland	15	O-ring	27	Band assembly
4	DD2 Bush	16	Back up ring	28	Pipe assembly(R)
5	Snap ring	17	Piston seal	29	O-ring
6	Rod seal	18	Wear ring	30	O-ring
7	Back up ring	19	Dust ring	31	Hexagon socket head bolt
8	Buffer ring	20	Cushion spear	32	Check valve
9	Dust wiper	21	Steel ball	33	Coil spring
10	Snap ring	22	Set screw	34	O-ring
11	O-ring	23	Lock nut	35	Plug
12	Back up ring	24	Hexagon socket head bolt		

(3) Boom cylinder

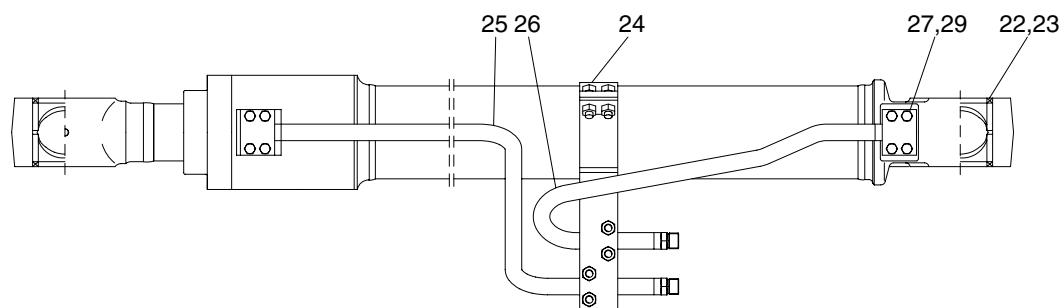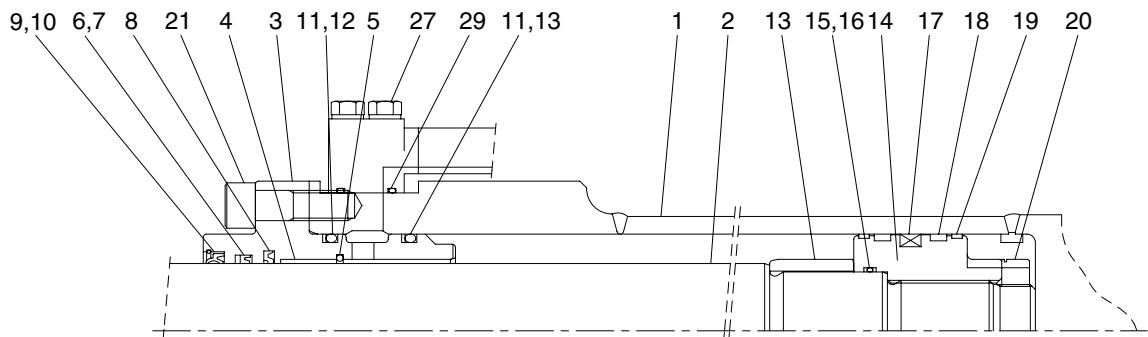


11078CY06

1	Tube assembly	11	O-ring	21	Hexagon socket head bolt
2	Rod assembly	12	Back up ring	22	Pin bush
3	Gland	13	Cushion ring	23	Dust seal
4	DD2 bush	14	Piston	24	Band assembly
5	Snapring	15	O-ring	25	Pipe assembly(R, LH/RH)
6	Rod seal	16	Back up ring	26	Pipe assembly(L, LH/RH)
7	Back up ring	17	Piston seal	27	O-ring
8	Buffer ring	18	Wear ring	28	O-ring
9	Dust wiper	19	Dust ring	29	Hexagon head bolt
10	Snap ring	20	Lock nut		

2) TOOLS AND TIGHTENING TORQUE

 (1) Tools

Tool name	B	Remark	
Allen wrench	16		
	18		
	10		
	45		
	50		
	55		
(-) Driver	Small and large sizes		
Torque wrench	Capable of tightening with the specified torques		

(2) Tightening torque


Part name	Item	Size	Torque	
			kgf · m	lbf · ft
Gland mounting bolt (Socket head bolt)	Bucket cylinder	21	M12	9.4±1 68.0±7.2
	Boom cylinder	21	M12	9.4±1 68.0±7.2
	Arm cylinder	24	M14	15.0±2.0 109±14.5
Pipe mounting bolt (Hexagon head bolt)	Bucket cylinder	30	M10	5.4±0.5 39.1±3.6
	Boom cylinder	29	M 8	2.7±0.3 19.6±1.8
	Arm cylinder	31	M10	5.4±0.5 39.1±3.6
Lock nut	Bucket cylinder	20	M40	100±10.0 723±72.3
	Boom cylinder	20	M40	100±10.0 723±72.3
	Arm cylinder	23	M50	100±10.0 723±72.3
Piston	Bucket cylinder	14	M45	150±15.0 1085±109
	Boom cylinder	15	M45	150±15.0 1085±109
	Arm cylinder	14	M55	150±15.0 1085±109

3) DISASSEMBLY


- (1) Remove cylinder head and piston rod
- * Procedures are based on the bucket cylinder.

- ① Hold the clevis section of the tube in a vise.
- * Use mouth pieces so as not to damage the machined surface of the cylinder tube. Do not make use of the outside piping as a locking means.


- ② Pull out rod assembly(2) about 200mm (7.1in). Because the rod assembly is rather heavy, finish extending it with air pressure after the oil draining operation.

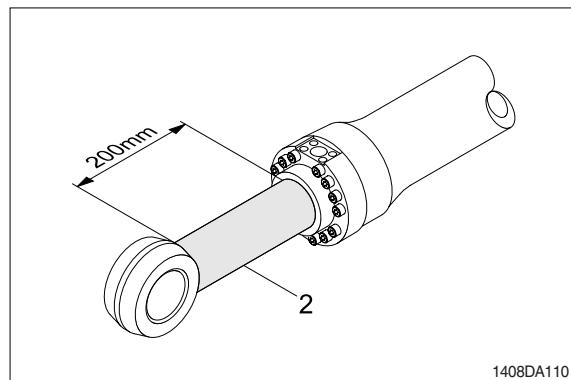

- ③ Loosen and remove socket bolts(21) of the gland in sequence.
- * Cover the extracted rod assembly(2) with rag to prevent it from being accidentally damaged during operation.

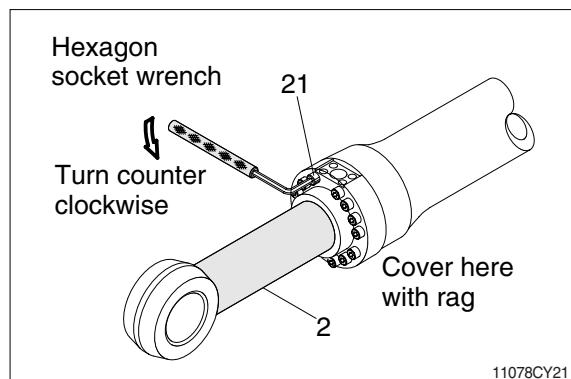


- ④ Draw out cylinder head and rod assembly together from tube assembly(1).
- * Since the rod assembly is heavy in this case, lift the tip of the rod assembly(2) with a crane or some means and draw it out. However, when rod assembly(2) has been drawn out to approximately two thirds of its length, lift it in its center to draw it completely.

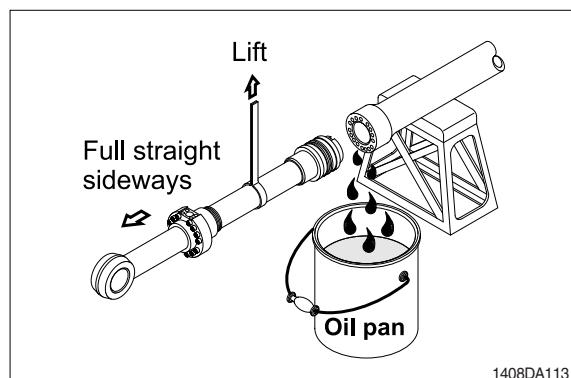


Note that the plated surface of rod assembly(2) is to be lifted. For this reason, do not use a wire sling and others that may damage it, but use a strong cloth belt or a rope.

- ⑤ Place the removed rod assembly on a wooden V-block that is set level.
- * Cover a V-block with soft rag.

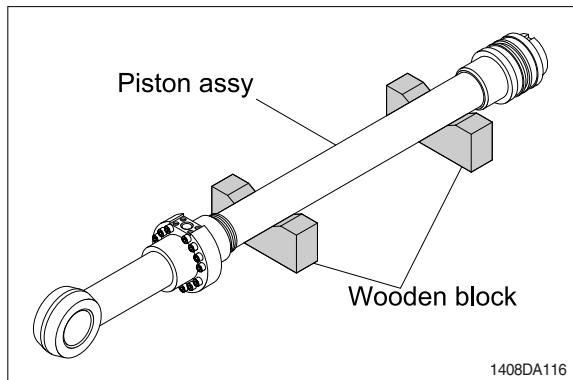


(2) Remove piston and cylinder head

- ① Remove lock nut(20).
- * Since lock nut(20) is tightened to a high torque, use a hydraulic and power wrench that utilizes a hydraulic cylinder, to remove the lock nut(20).
 - ② Remove piston assembly(14), back up ring(16), and O-ring(15).

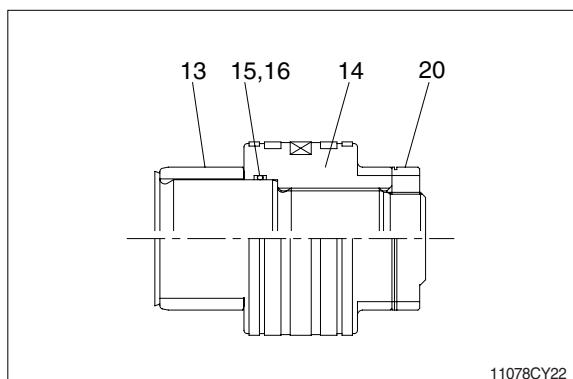


- ③ Remove the cylinder head assembly from rod assembly(2).
- * If it is too heavy to move, move it by striking the flanged part of cylinder head with a plastic hammer.
 - * Pull it straight with cylinder head assembly lifted with a crane. Exercise care so as not to damage the lip of rod bushing(4) and packing (5,6,7,8,9,10) by the threads of rod assembly(2).

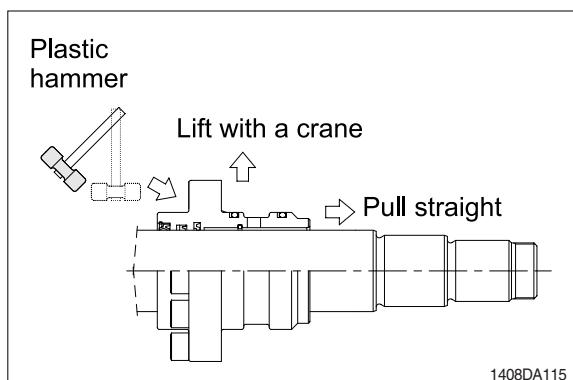

(3) Disassemble the piston assembly


- ① Remove wear ring(18).
- ② Remove dust ring(19) and piston seal (17).
- ※ Exercise care in this operation not to damage the grooves.

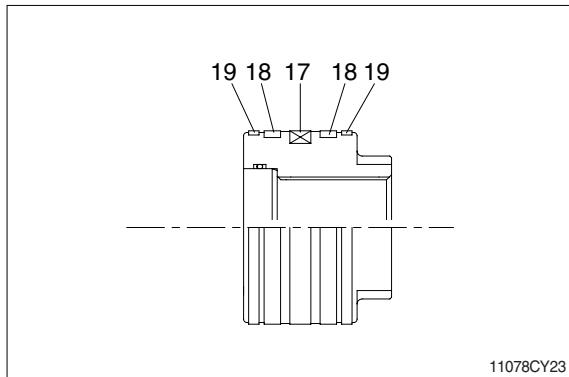

11078CY23

(4) Disassemble cylinder head assembly

- ① Remove back up ring(11) and O-ring (12).
- ② Remove snap ring(10), dust wiper(9).
- ③ Remove back up ring(7), rod seal(6) and buffer ring(8).
- ※ Exercise care in this operation not to damage the grooves.
- ※ Do not remove seal and ring, if does not damaged.

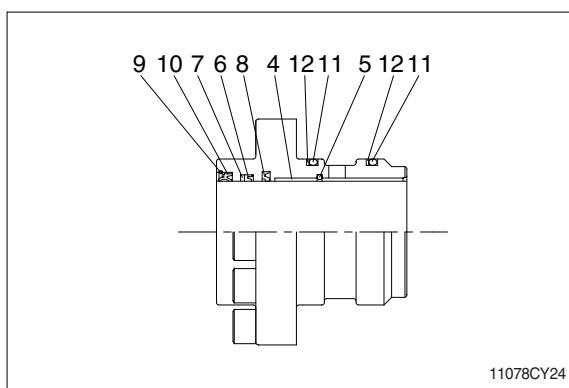


11078CY24

3) ASSEMBLY

(1) Assemble cylinder head assembly


- * Check for scratches or rough surfaces if found smooth with an oil stone.
- ① Coat the inner face of gland(3) with hydraulic oil.

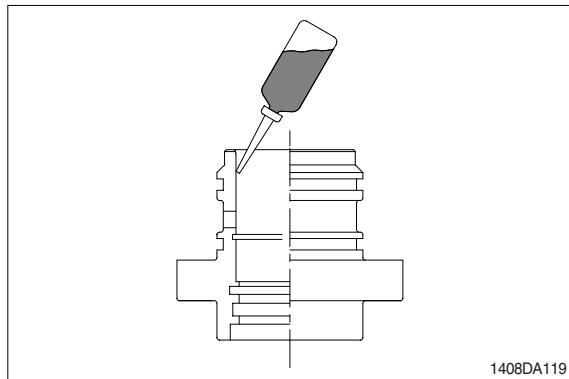

- ② Coat dust wiper(9) with grease and fit dust wiper(9) to the bottom of the hole of dust seal.

At this time, press a pad metal to the metal ring of dust seal.


- ③ Fit snap ring(10) to the stop face.

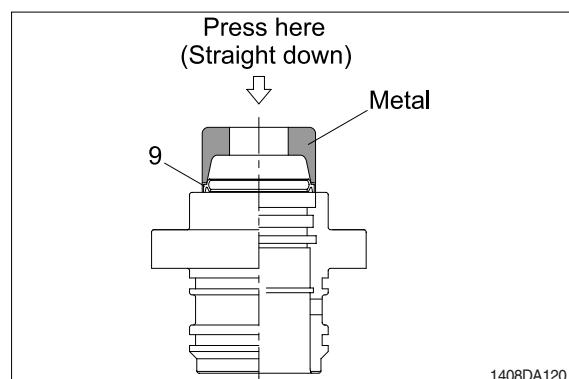

- ④ Fit back up ring(7), rod seal(6) and buffer ring(8) to corresponding grooves, in that order.


* Coat each packing with hydraulic oil before fitting it.

* Insert the backup ring until one side of it is inserted into groove.

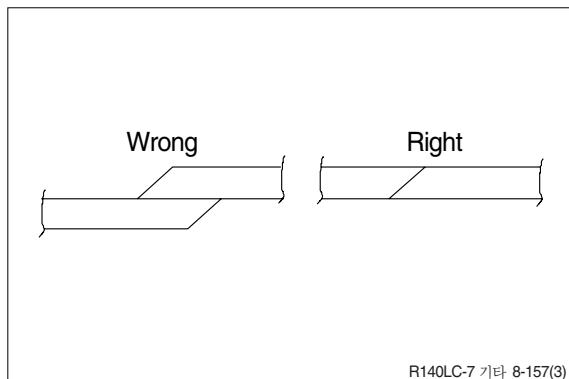


* Rod seal(6) has its own fitting direction. Therefore, confirm it before fitting them.

* Fitting rod seal(6) upside down may damage its lip. Therefore check the correct direction that is shown in fig.

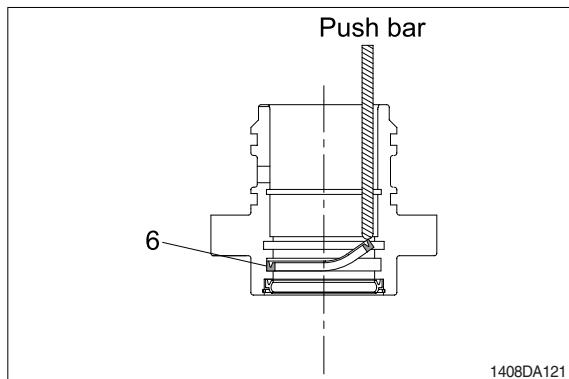


- ⑤ Fit back up ring(12) to gland(3).
 - * Put the backup ring in the warm water of 30~50°C.
- ⑥ Fit O-ring(11) to gland(3).

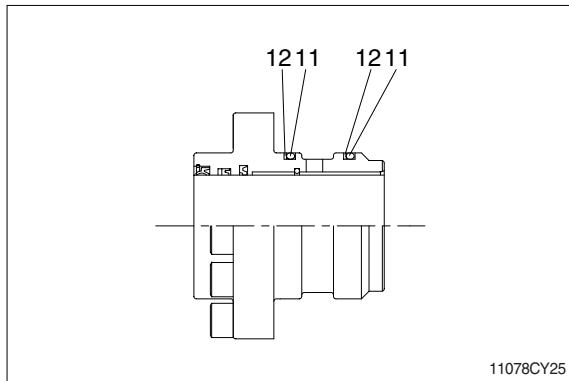


(2) Assemble piston assembly


- * Check for scratches or rough surfaces.
If found smooth with an oil stone.
- ① Coat the outer face of piston(14) with hydraulic oil.

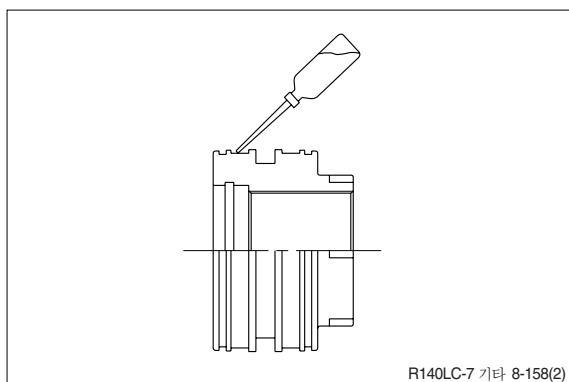

- ② Fit piston seal(17) to piston.
 - * Put the piston seal in the warm water of 60~100°C for more than 5 minutes.
 - * After assembling the piston seal, press its outer diameter to fit in.

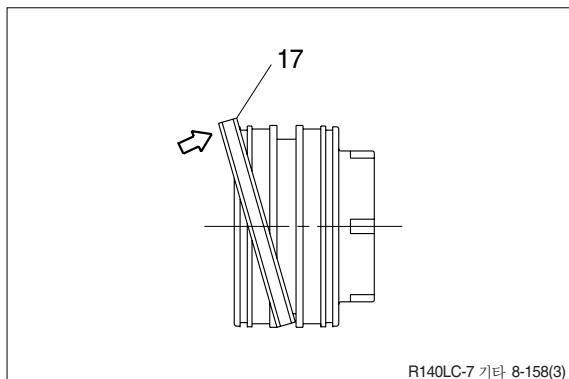


- ③ Fit wear ring(18) and dust ring(19) to piston(14).

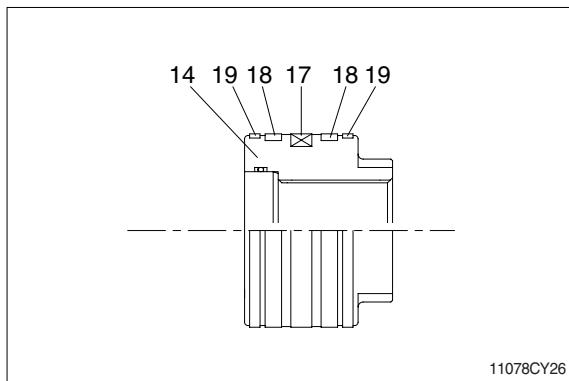


(3) Install piston and cylinder head

- ① Fix the rod assembly to the work bench.
- ② Apply hydraulic oil to the outer surface of rod assembly(2), the inner surface of piston and cylinder head.
- ③ Insert cylinder head assembly to rod assembly.

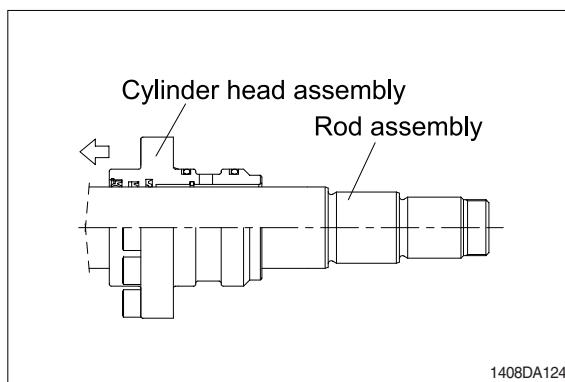

1408DA124


- ④ Insert cushion ring(13) to rod assembly.
※ Note that cushion ring(13) has a direction in which it should be fitted.

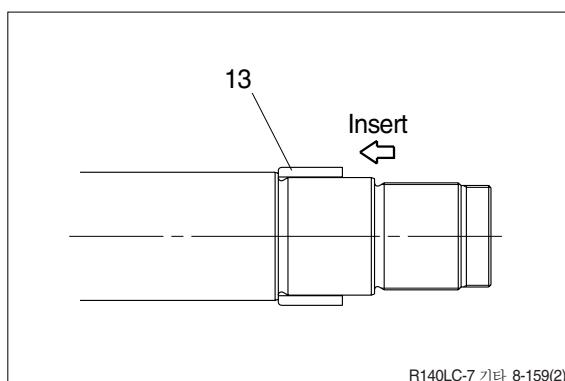

R140LC-7 8-159(2)

- ⑤ Fit piston assembly to rod assembly.

- Tightening torque : $150 \pm 15 \text{kgf} \cdot \text{m}$
 $(1085 \pm 109 \text{lbf} \cdot \text{ft})$

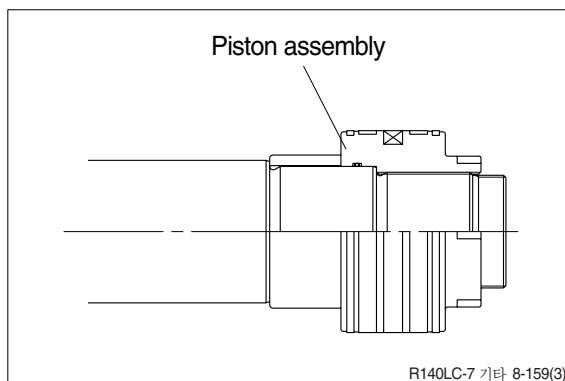


R140LC-7 8-159(3)

- ⑥ Fit lock nut(23) to piston.

- Tightening torque :

Item		kgf · m	lbf · ft
Bucket	20	100 ± 10	723 ± 72.3
Boom	20	100 ± 10	723 ± 72.3
Arm	23	100 ± 10	723 ± 72.3

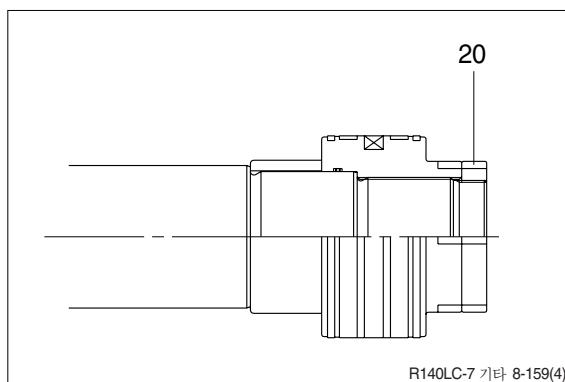

R140LC-7 8-159(4)

(3) Overall assemble

- ① Place a V-block on a rigid work bench.
Mount the tube assembly(1) on it and fix the assembly by passing a bar through the clevis pin hole to lock the assembly.
- ② Insert the rod assembly in to the tube assembly, while lifting and moving the rod assembly with a crane.
- * Be careful not to damage piston seal by thread of tube assembly.
- ③ Match the bolt holes in the cylinder head flange to the tapped holes in the tube assembly and tighten socket bolts to a specified torque.
- * Refer to the table of tightening torque.

