
GROUP 2 MODE SELECTION SYSTEM

1. POWER MODE SELECTION SYSTEM

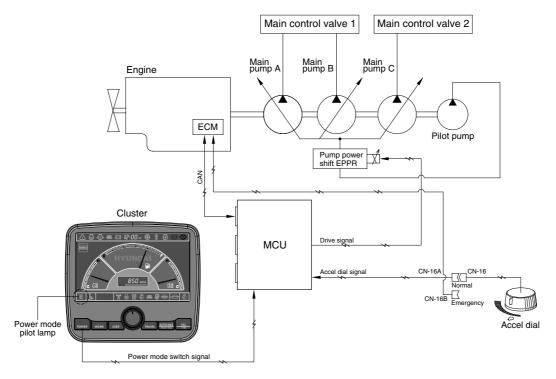

120095MS02

Mode selection system (micro computer based electro-hydraulic pump and engine mutual control system) optimizes the engine and pump performance.


The combination of 3 power modes (P, S, E) and accel dial position (10 set) makes it possible to use the engine and pump power more effectively corresponding to the work conditions from a heavy and great power requesting work to a light and precise work.

Power mode	Application	Engine rpm				Power shift by EPPR valve			
		Standard		Option		Standard		Option	
		Unload	Load	Unload	Load	Current (mA)	Pressure (kgf/cm ²)	Current (mA)	Pressure (kgf/cm ²)
Р	Heavy duty power	1800 ± 50	1750±50	1850 ± 50	$1800\!\pm\!50$	330 ± 30	10	160±30	0
S	Standard power	1700 ± 50	1650±50	1750±50	1700 ± 50	330 ± 30	10±3	280±30	7
E	Economy operation	1600 ± 50	1650±50	1650 ± 50	1700 ± 50	400±30	15±3	360 ± 30	12
AUTO DECEL	Engine deceleration	1100±100	-	1100±100	-	700±30	38±3	700±30	38±3
One touch decel	Engine quick deceleration	900±100	-	900±100	-	700±30	38±3	700±30	38±3
KEY START	Key switch start position	900±100	-	900±100	-	700±30	38±3	700±30	38±3

* Power shift (Standard/Option) can be changed by "Service menu" in "Management" on the cluster.

2. WORK MODE SELECTION SYSTEM

Work mode consists of the general operation (bucket) and the optional attachment (breaker, crusher).

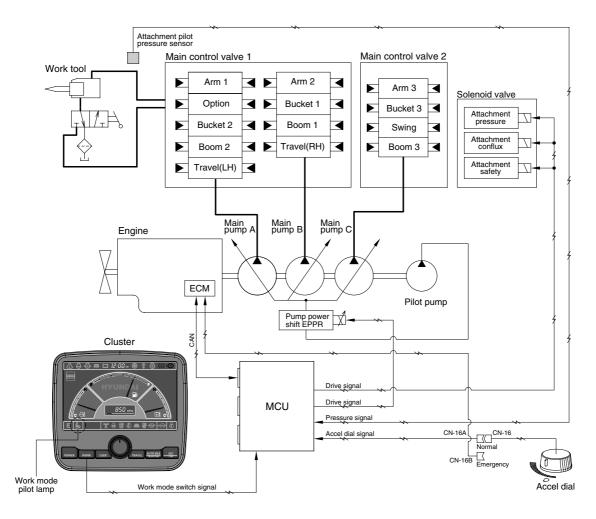

120095MS03

1) GENERAL WORK MODE (bucket)


This mode is used to general digging work.

2) ATT WORK MODE (breaker, crusher)

It controls the pump flow and system pressure according to the operation of breaker or crusher.

Desertition	General mode	Work tool		
Description	Bucket	Breaker	Crusher	
Attachment safety solenoid	OFF	ON	ON	
Attachment pressure solenoid	OFF	OFF	ON	
Attachment conflux solenoid	OFF	OFF	ON/OFF	
Attachment flow EPPR current	100 mA	100~700 mA	100~700 mA	

3. USER MODE SELECTION SYSTEM

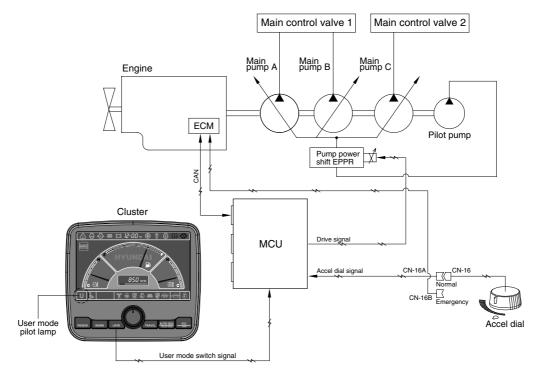

120095MS04

1) High idle rpm, auto idle rpm and EPPR pressure can be adjusted and memorized in the U-mode.

Step (])	Engine speed (rpm)	Idle speed (rpm)	Power shift (bar)
1	1300	800	0
2	1400	850	3
3	1500	900 (low idle)	6
4	1550	950	9
5	1600	1000	12
6	1650	1050	16
7	1700	1100 (decel rpm)	20
8	1750	1150	26
9	1800	1200	32
10	1850	1250	38

2) LCD segment vs parameter setting