

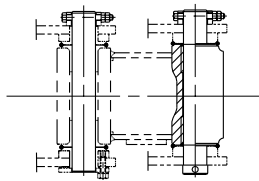


GROUP 11 WORK EQUIPMENT


1. STRUCTURE

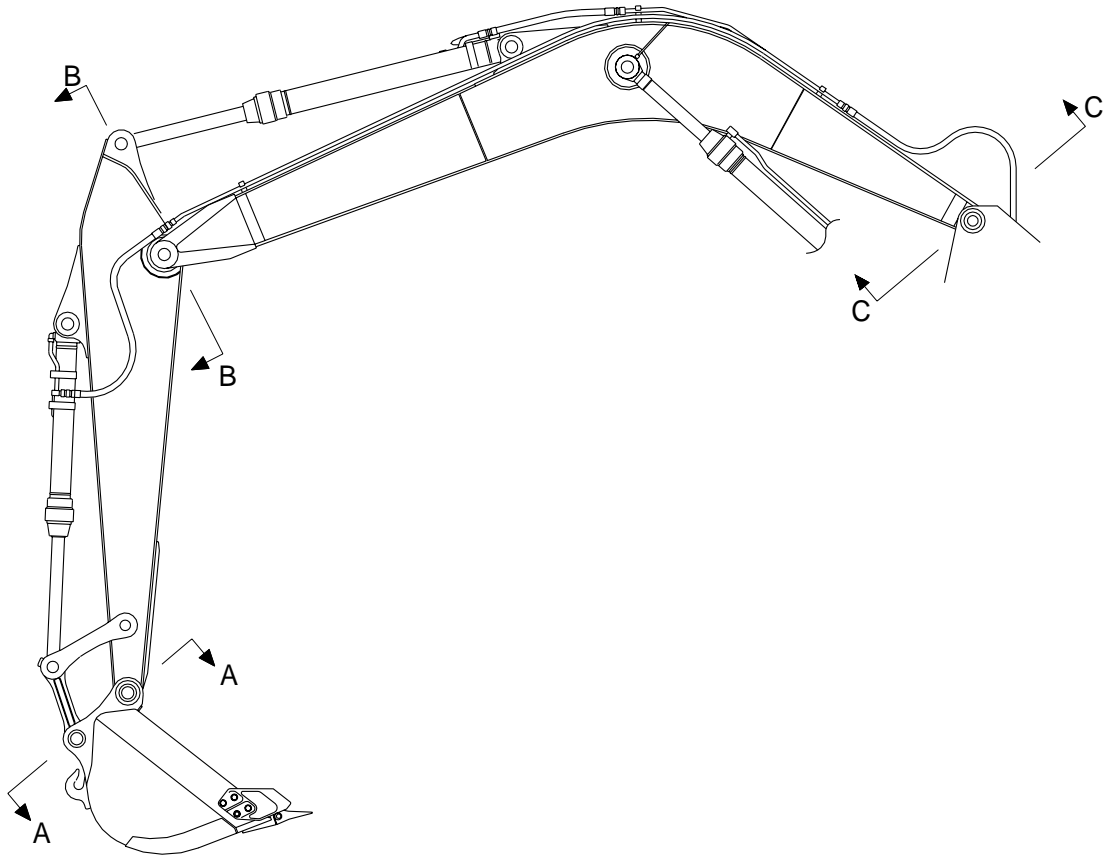

Section A

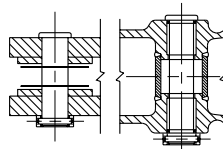

Section B

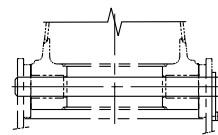


Section C

2. REMOVAL AND INSTALL


1) BUCKET ASSEMBLY

(1) Removal


- ① Lower the work equipment completely to ground with back of bucket facing down.

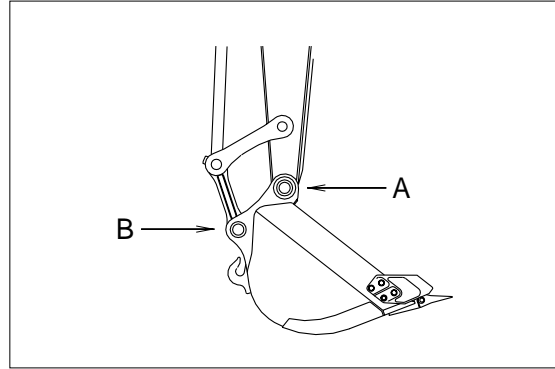

- ② Remove spring(1) and stopper pin(2) by means of a minus screwdriver and draw out the pin(A).

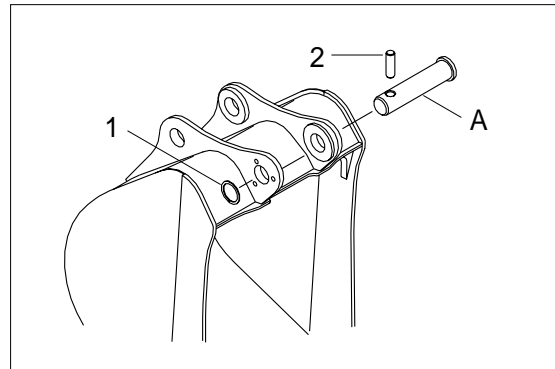


- ③ Remove spring(3) and stopper pin(4) by means of a minus screwdriver and draw out the pin(B).

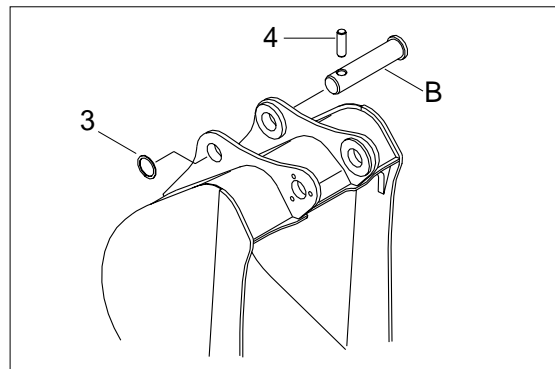

(2) Install

- ① Carryout installation in the reverse order to removal.
- ⚠ When aligning the mounting position of the pin, do not insert your fingers in the pin hole.
 - * Adjust the bucket clearance.
For detail, see OPERATION MANUAL

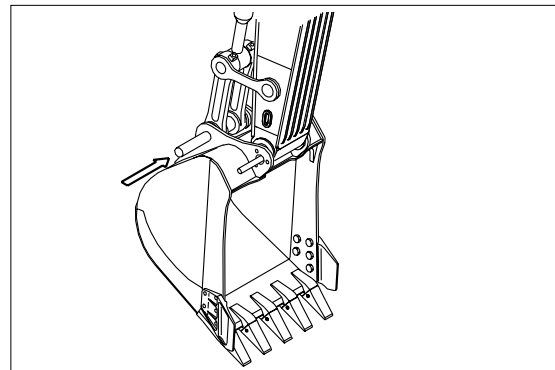

2) ARM ASSEMBLY

(1) Removal

※ Loosen the breather slowly to release the pressure inside the hydraulic tank.

▲ Escaping fluid under pressure can penetrate the skin causing serious injury.

① Remove bucket assembly.

For details, see REMOVAL OF BUCKET ASSEMBLY

② Disconnect bucket cylinder hose(1).

▲ Fit blind plugs in the piping at the chassis end securely to prevent oil from spurting out when the engine is started.

③ Sling arm cylinder assembly, remove spring, pin stopper and pull out pin.

※ Tie the rod with wire to prevent it from coming out.




For details, see REMOVAL OF ARM CYLINDER ASSEMBLY.

④ Place a wooden block under the cylinder and bring the cylinder down to it.

⑤ Remove spring(2), pin stopper(3) and pull out the pin(4) then remove the arm assembly.

· Weight : 373kg(822lb)

※ When lifting the arm assembly, always lift the center of gravity.

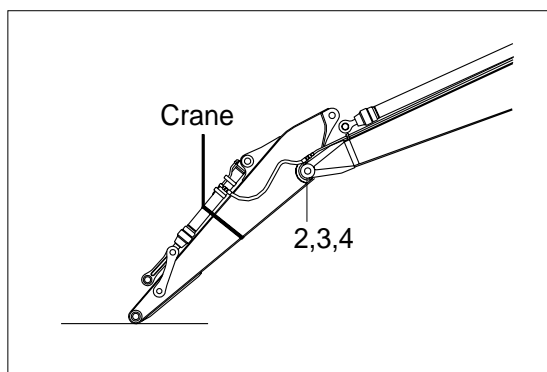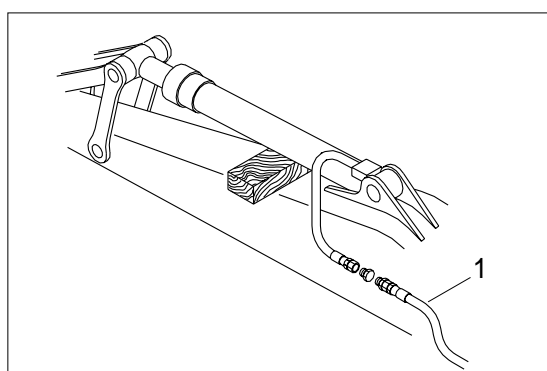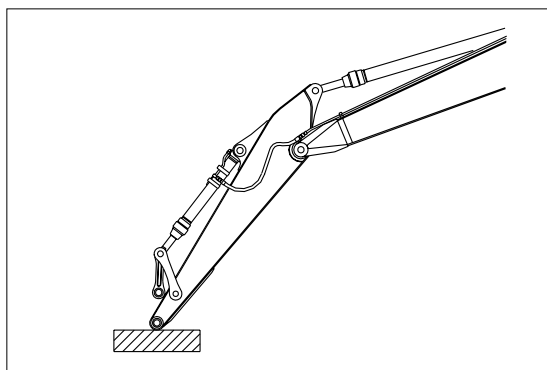


(2) Install

① Carry out installation in the reverse order to removal.

▲ When lifting the arm assembly, always lift the center of gravity.


 
※ Bleed the air from the cylinder.




3) BOOM CYLINDER

(1) Removal

- ① Remove arm and bucket assembly
For details, see REMOVAL OF ARM AND BUCKET ASSEMBLY
 - ② Remove boom cylinder assembly from boom.
For details, see REMOVAL OF BOOM CYLINDER ASSEMBLY
 - ③ Disconnect head lamp wiring.
 - ④ Disconnect bucket cylinder hose(2) and arm cylinder hose(1).
- ※ When the hose are disconnected, oil may spurt out.
- ⑤ Sling boom assembly(3).

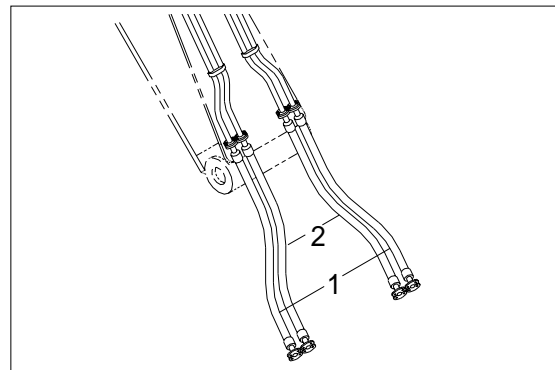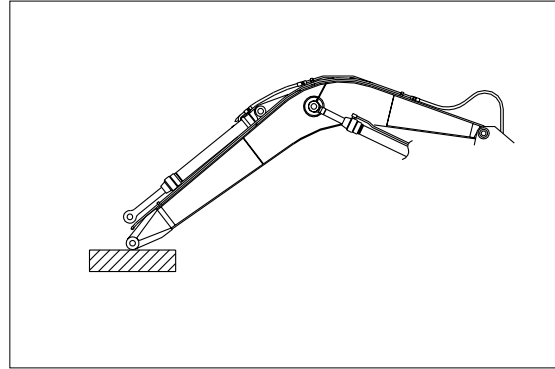

- ⑥ Remove spring(4), pin stopper(5) and pull out the pin(6) then remove boom assembly.
· Weight : 783kg(1726lb)
- ※ When lifting the boom assembly always lift the center of gravity.

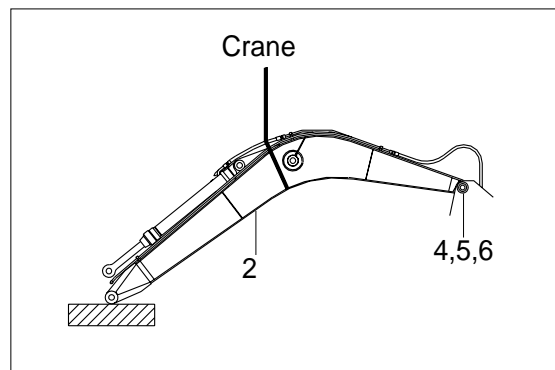

(2) Install

- ① Carry out installation in the reverse order to removal.
- ▲ When lifting the arm assembly, always lift the center of gravity.
- ※ Bleed the air from the cylinder.

