


SECTION 4 ELECTRICAL SYSTEM


GROUP 1 COMPONENT LOCATION

1. LOCATION 1

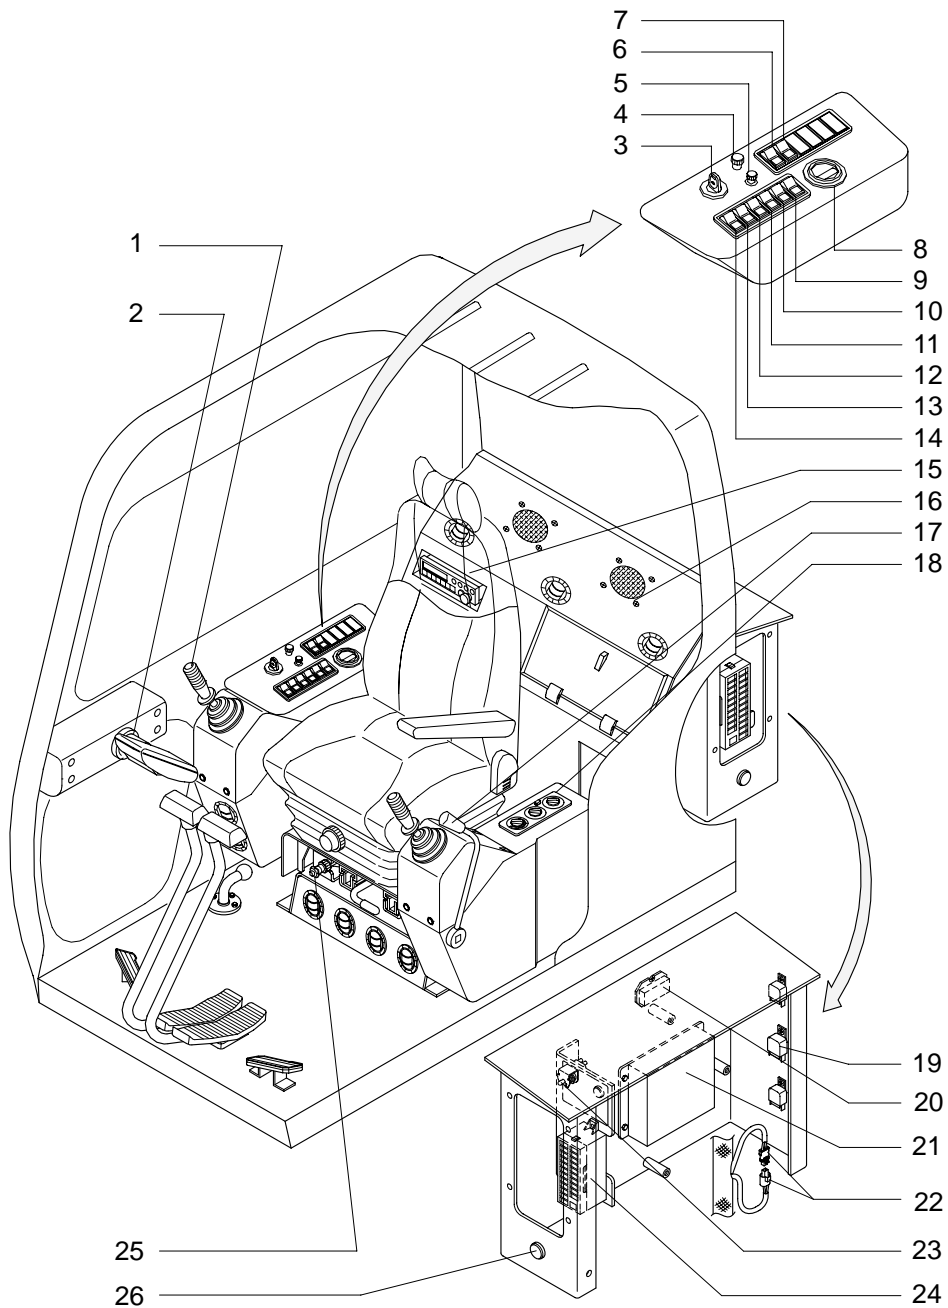

- | | | | | | |
|---|---------------------|----|------------------------|----|---|
| 1 | Horn switch | 10 | Cold start switch | 19 | Relay |
| 2 | Cluster | 11 | Arm half switch | 20 | Resistor |
| 3 | Starting switch | 12 | Aircon switch | 21 | CPU controller |
| 4 | Cigar lighter | 13 | Main light switch | 22 | Emergency engine starting connector |
| 5 | Swing speed switch | 14 | Wiper & washer switch | 23 | Prolix switch |
| 6 | Breaker switch | 15 | Cassette & radio | 24 | Fuse box |
| 7 | Beacon switch | 16 | Speaker | 25 | Emergency engine control lever
(Push pull cable) |
| 8 | Service meter | 17 | Safety lever | 26 | Master switch |
| 9 | Travel alarm switch | 18 | Aircon & heater switch | | |

2. LOCATION 2

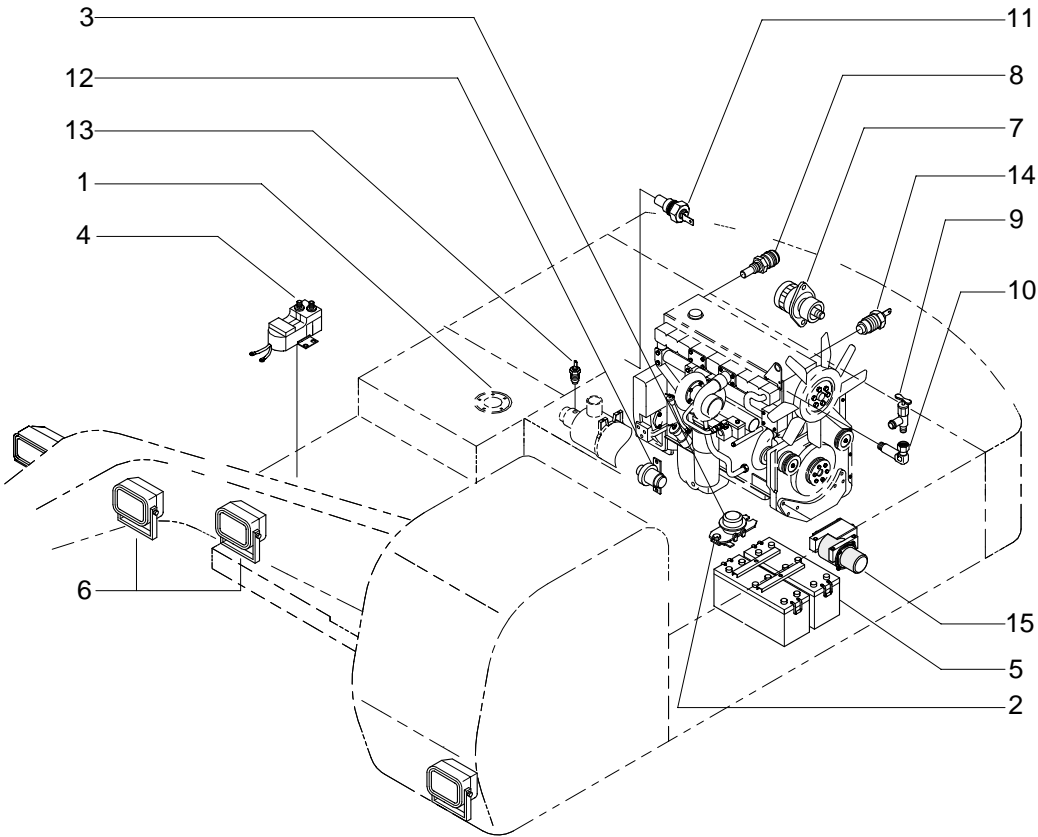

- | | | |
|--------------------|---------------------|-------------------------------|
| 1 Fuel sender | 6 Lamp | 11 Hyd temp sender |
| 2 Connector plate | 7 Alternator | 12 Start relay |
| 3 Battery relay | 8 Water temp sender | 13 Air cleaner switch |
| 4 Fuel filler pump | 9 Heater valve | 14 Engine oil pressure switch |
| 5 Battery | 10 Heater adapter | 15 Accel actuator |