


SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electrical Circuit	4-3
Group 3 Electrical Component Specification	4-21
Group 4 Connectors	4-29

SECTION 4 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION


1. LOCATION 1

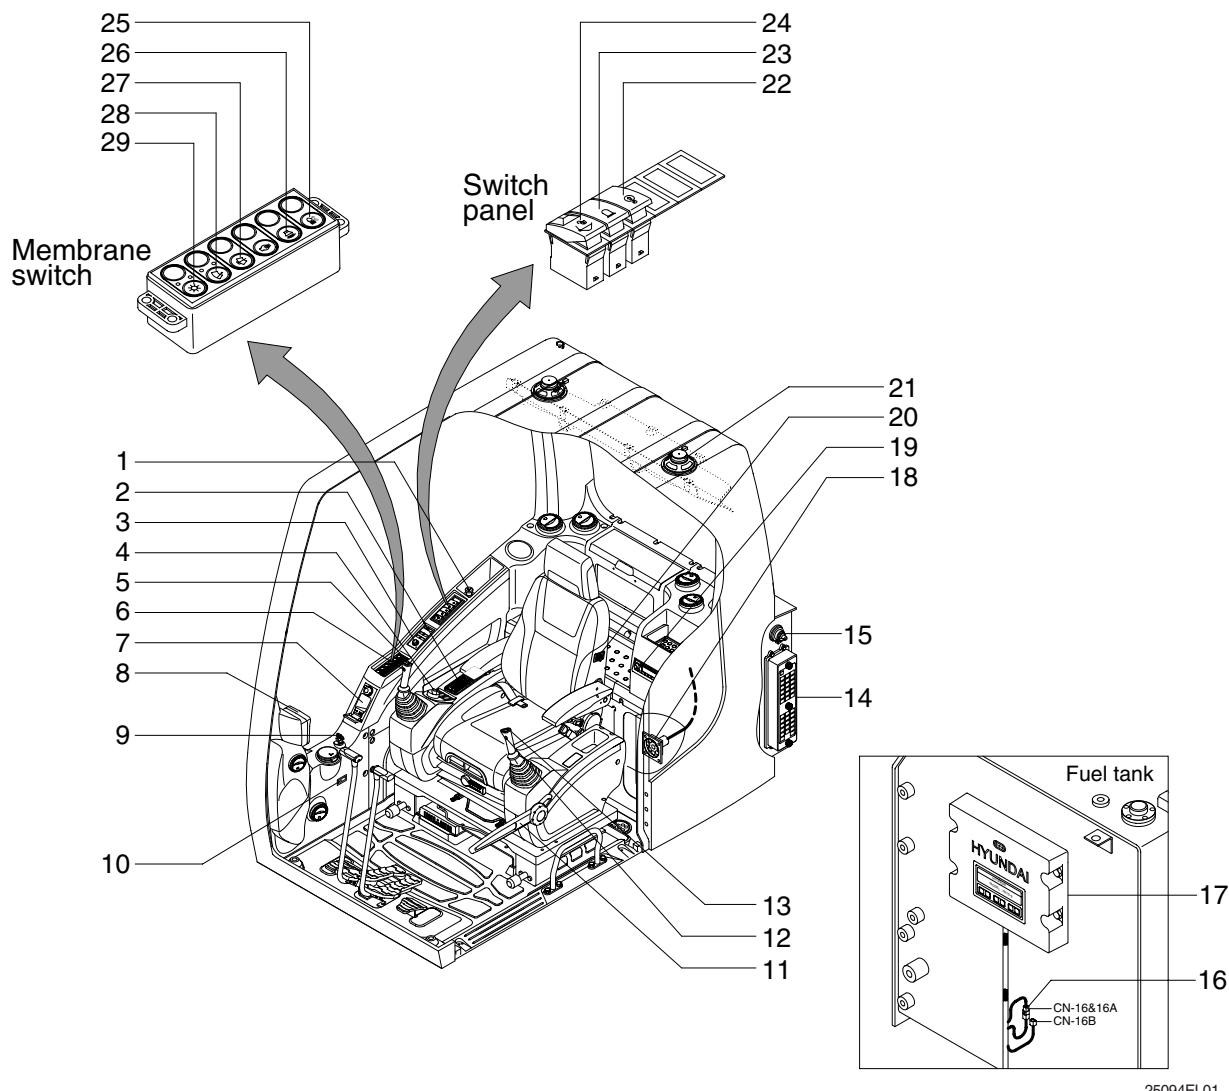

25094EL01

1	Cigar lighter	11	Safety lever	21	Speaker
2	Air conditioner switch	12	Power max switch	22	Overload switch
3	Remote controller	13	One touch decel switch	23	Beacon switch
4	Accel dial switch	14	Fuse & relay box	24	Quick clamp switch
5	Horn switch	15	Master switch	25	Cab light switch
6	Breaker operation switch	16	Emergency engine connector	26	Travel alarm switch
7	Handsfree	17	Machine control unit	27	Washer switch
8	Cluster	18	RS232 & J1939 service socket	28	Wiper switch
9	Start switch	19	Radio & CD/MP3 player	29	Main light switch
10	Hour meter	20	Heated seat switch		

2. LOCATION 2

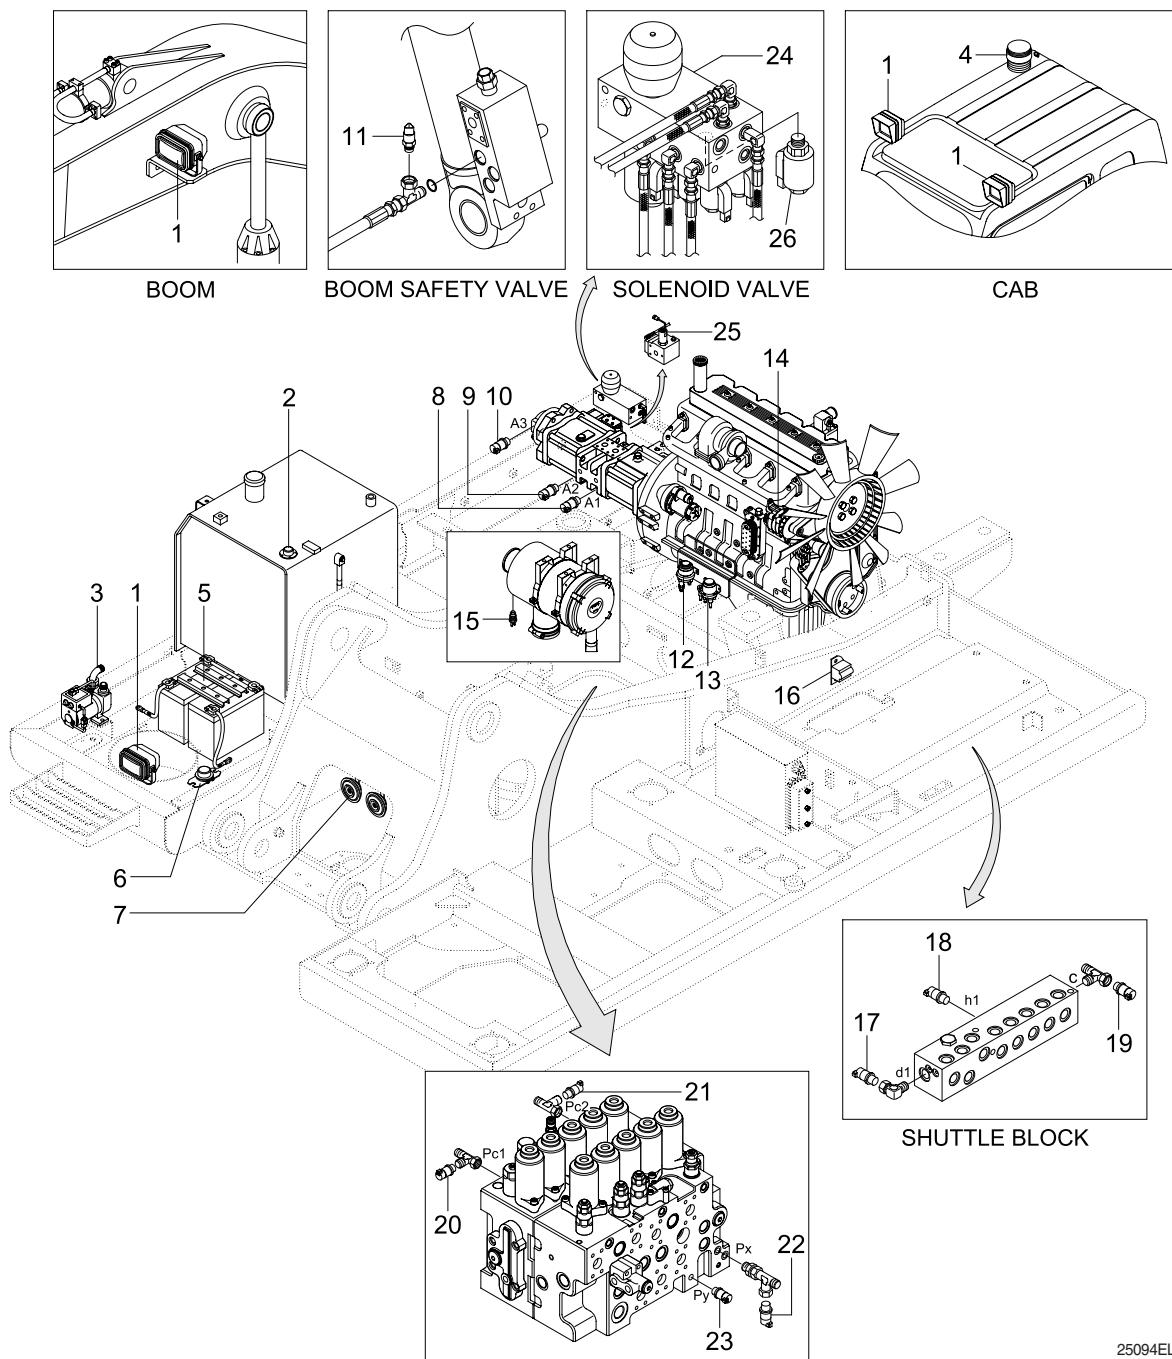

25094EL02

- | | | |
|----------------------|----------------------------------|--------------------------------|
| 1 Lamp | 10 P3 pressure sensor | 19 Swing pressure sensor |
| 2 Fuel sender | 11 Overload pressure sensor | 20 Posi-nega 1 pressure sensor |
| 3 Fuel filler pump | 12 Start relay | 21 Posi-nega 2 pressure sensor |
| 4 Beacon lamp | 13 Heater relay | 22 Attach pressure sensor |
| 5 Battery | 14 Alternator | 23 Travel pressure sensor |
| 6 Battery relay | 15 Air cleaner switch | 24 Solenoid valve |
| 7 Horn | 16 Travel alarm buzzer | 25 Pump EPPR valve |
| 8 P1 pressure sensor | 17 Arm/Bucket in pressure sensor | 26 Boom priority EPPR valve |
| 9 P2 pressure sensor | 18 Boom up pressure sensor | |