
## SECTION 5 MECHATRONICS SYSTEM

1	Outline	5-1
2	Mode Selection System	5-3
3	Automatic Deceleration System	5-6
4	Power Boost System	5-7
5	Travel Speed Control System	5-8
6	Automatic Warming Up Function	5-9
7	Engine Overheat Prevention Function	5-10
8	Anti-Restart System	5-11
9	Self-Diagnostic System	5-12
10	Engine Control System	5-15
11	EPPR(Electro Proportional Pressure Reducing) Valve	5-22
12	Prolix Switch (up to #0062)	5-25
13	Monitoring System	5-26
14	Outline (TIER II only)	5-40
15	Mode Selection System (TIER II only)	5-41
16	Automatic Deceleration System (TIER II only)	5-43
17	Power Boost System (TIER II only)	5-44
18	Automatic Warming Up Function (TIER II only)	5-45
19	Engine Overheat Prevention Function (TIER II only)	5-46
20	Self-Diagnostic System (TIER II only)	5-47
	2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19	<ul> <li>5 Travel Speed Control System</li> <li>6 Automatic Warming Up Function</li> <li>7 Engine Overheat Prevention Function</li> <li>8 Anti-Restart System</li> <li>9 Self-Diagnostic System</li> <li>10 Engine Control System</li> <li>11 EPPR(Electro Proportional Pressure Reducing) Valve</li> <li>12 Prolix Switch (up to #0062)</li> </ul>

## **GROUP 1 OUTLINE**

The NEW CAPO(Computer Aided Power Optimization) system controls engine and pump mutual power at an optimum and less fuel consuming state for the selected work by mode selection, autodeceleration, power boost function, etc. It monitors machine conditions, for instance, engine speed, coolant temperature, hydraulic oil temperature, and hydraulic oil pressure, etc.

It consists of a CPU controller, a cluster, an accel actuator, an EPPR valve, and other components. The CPU controller and the cluster protect themselves from over-current and high voltage input, and diagnose malfunctions caused by short or open circuit in electric system, and display error codes on the cluster.

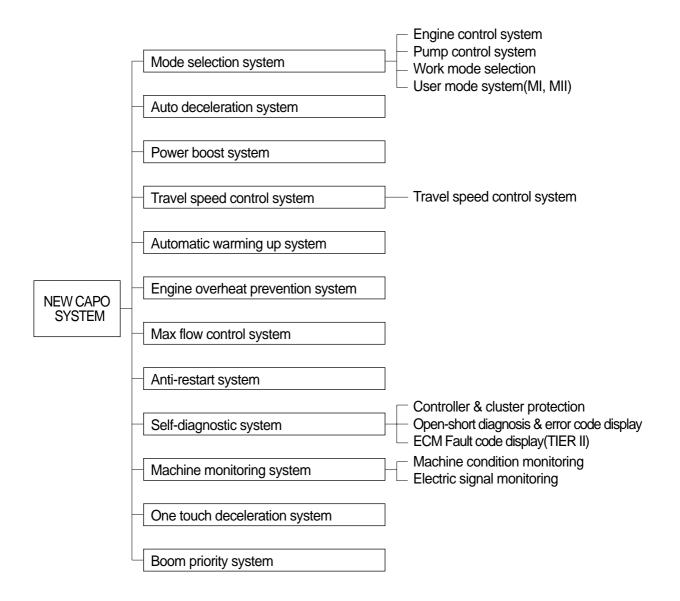

## SYSTEM DIAGRAM

