


GROUP 7 BATTERY CHARGE WARNING FUNCTION

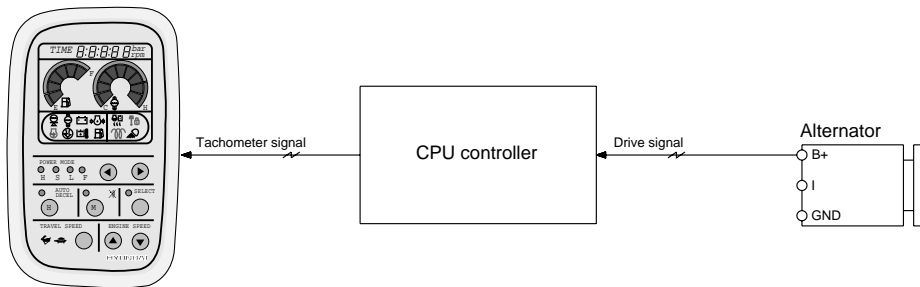

1. FUNCTION

When alternator generated voltage drops below 26V DC after engine starts, the CPU controller sends battery charge warning buzzer drive signal and lamp drive signal to cluster and the warning buzzer and work in condition of that the generated voltage by alternator is less than 26V DC.

2. LOGIC TABLE

Condition	$\geq 26V$	$< 26V$	Remark
Signal	High(5V)	Low(0V)	CPU Controller
Lamp & buzzer	OFF	ON	Cluster