

GROUP 5 CONNECTORS

1. CONNECTOR DESTINATION

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-1	SWP	14	I/conn(Engine harness-main harness)	S814-014000	S814-114000
CN-2	SWP	12	I/conn(Engine harness-main harness)	S814-012000	S814-112000
CN-3	SWP	6	I/conn(solenoid harness-main harness)	S814-006000	S814-106000
CN-4	SWP	12	I/conn(R.H harness-main harness)	S814-012000	S814-112000
CN-5	370FASTEN	2	I/conn(R.H harness-main harness)	S813-030200	S813-130200
CN-6	SWP	8	I/conn(Cabin harness-main harness)	S814-008000	S814-108000
CN-7	SWP	12	I/conn(Cabin harness-main harness)	S814-012000	S814-112000
CN-8	SWP	14	I/conn(Cabin harness-main harness)	S814-014000	S814-114000
CN-9	SWP	4	I/conn(Cabin harness-main harness)	S814-004000	S814-104000
CN-10	BS	2	I/conn(Boom harness-main harness)	S812-002011	-
CN-11	SWP	1	Emergency power supply(cluster)	S814-001000	S814-101000
CN-12	SWP	12	I/conn(Air evaporator)	S814-012000	S814-112000
CN-13	CN	4	I/conn(Wiper harness-main harness)	S810-004204	S810-104204
CN-14	CN	4	I/conn(Cabin harness-main harness)	S810-004204	-
CN-15	250FASTEN	8	I/conn(Air evaporator)	S810-008202	S810-108201
CN-19	SWP	2	I/conn(Overload spare)	S814-002000	S814-102000
CN-20	MARK- I	1	Horn	S819-010122	-
CN-21	CN	4	Wiper motor	S810-004204	-
CN-22	CN	2	Washer tank	S810-002202	-
CN-23	-	1	Speaker (LH)	S822-014004	S822-114004
CN-24	-	1	Speaker (RH)	S822-014004	S822-114004
CN-25	MARK- II	1	Horn	S819-010122	-
CN-27	PA	9	Cassette & radio	S811-009003	-
CN-28	PACKARD	2	Compressor	0297-3407	-
CN-29	-	2	Receiver dryer	S812-002001	-
CN-30	CN	13	Air-con controller	S811-013002	-
CN-36	SWP	12	Fuse box	S814-012000	-
CN-37	AMP	3	Fuse box	S810-003202	-
CN-38	SWP	8	Fuse box	S814-008000	-
CN-40	58-L	2	Fuse box	S813-030200	-
CN-45	RING-TERM	-	Start motor B ⁺	S820-310000	-
CN-47	CN	2	Resistor	S810-002202	-
CN-48	CN	2	Hour meter	S810-002202	-
CN-50	LC	10	CPU & controller	S815-010000	-
CN-51	LC	18	CPU & controller	S815-018000	-
CN-52	LC	24	CPU & controller	S815-024000	-
CN-53	PA	13	CPU & controller	AMP,172498-1	-
CN-56	ML	16	Cluster	AMP,174046-2	-

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-57	ML	12	Cluster	AMP,174045-2	-
CN-60	58-L	2	Fusible link	-	S813-130200
CN-61	-	1	Fuel filler pump	S822-015000	-
CN-65	-	1	Travel alarm	S822-014000	-
CN-66	J	2	Breaker solenoid	S816-002001	-
CN-68	J	2	Safety solenoid	S816-002001	-
CN-70	J	2	Travel solenoid	S816-002001	-
CN-74	RING-TERM	-	Alternator "I" terminal	S820-106000	-
CN-75	ECONO SEAL	2	Eppr valve	AMP,174354-2	AMP,174354-2
CN-76	58-X	4	Governor motor	S813-060400	-
CN-77	58-X	3	Potentiometer	S813-060300	-
CN-78	-	1	Cold start aid	S822-014004	S822-114004
CN-79	-	3	Fuel cut-off solenoid	S818-020311	PACKARD,12010791
CN-88	SWP	2	Power max. solenoid	S814-002000	S814-102000
• Relay					
CR-1	RING-TERM	-	Battery relay	S820-104000	-
CR-2	CN	4	Horn relay	S810-004202	-
CR-3	CN	4	Work lamp relay	S810-004202	-
CR-13	CN	4	Head lamp relay	S810-004202	-
CR-23	CN	2	Start relay	S816-002003	-
• Switch					
CS-1	-	1	Door switch	S810-014004	-
CS-2	SWP	6	Start key switch	S814-006000	-
CS-3	SWF	10	Wiper & Washer switch	SWF,593757	-
CS-4	CN	3	Safety switch	S810-003202	-
CS-5	-	1	Horn switch	S822-014000	S822-114000
CS-7	CN	6	Prolix switch	S810-006202	-
CS-16	SWF	10	Travel alarm switch	SWF,593757	-
CS-22	SWF	10	Cold start switch	SWF,593757	-
CS-23	SWF	10	Beacon switch	SWF593757	-
CS-26	-	1	Pedal switch	S822-014000	S822-114000
CS-27	SWF	10	Breaker switch	SWF,593757	-
CS-29	CA, CB	1	Power max switch	S822-014000	S822-114000
CS-39	SWF	10	Main light switch	SWF,593757	-
CS-54	SWF	10	Air-con switch	SWF,593757	-
CS-58	-	6	Blower switch	S810-006202	-
• Light					
CL-1	CN	2	Room lamp	YAZAKI,7123-8326	-
CL-2	-	1	Cigar lighter	S822-014004	S822-114004
CL-3	SWP	2	Head light	S814-002000	S814-102000
CL-4	BS	2	Head light	S812-002011	-

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CL-5	BS	2	Work lamp	S812-002011	-
CL-6	BS	2	Work lamp	S812-002011	-
CL-7	-	1	Rotary lamp	S822-014000	S822-114000
• Sensor,sendor					
CD-1	MARK- II	1	Hydraulic oil temp sender	S819-010112	-
CD-2	SWP	2	Fuel sender	S814-002000	S814-102000
CD-6	ST	1	Auto decel pressure switch	S819-010122	-
CD-7	ST	1	Auto decel pressure switch	S819-010122	-
CD-8	ST	1	Water temp sender	S819-010122	-
CD-9	-	1	Over heat sensor	S822-014000	-
CD-10	-	1	Air cleaner switch	S822-014000	S822-114000
CD-11	-	1	Travel alarm pressure switch	S822-014000	-
CD-12	-	1	Travel alarm pressure switch	S822-014000	-
CD-13	-	1	Travel alarm pressure switch	S822-014000	-
CD-14	-	1	Travel alarm pressure switch	S822-014000	-
CD-17	TWP	2	Speed sensor	-	S818-120221
CD-18	CN	1	Engine oil pressure switch	S810-001202	-