
## **GROUP 4 POWER BOOST SYSTEM**

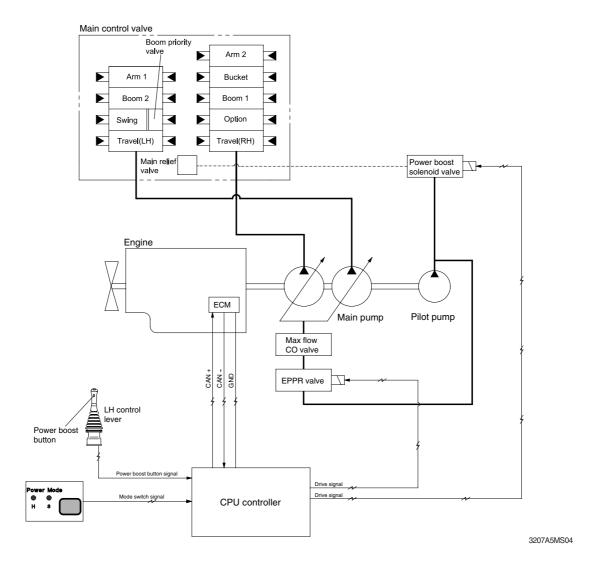

- · When the power boost switch on the left control lever knob is pushed ON, the maximum digging power is increased by 10%.
- · When the power set is at H or S and the power boost function is activated, the power boost solenoid valve pilot pressure raises the set pressure of the main relief valve to increase the digging power.

| Description                    | Power boost switch |   |
|--------------------------------|--------------------|---|
|                                | OFF                | ON  |
| Power seat                     | H or S             | Н   |
| Main relief valve set pressure | 330kgf/cm²         | 360kgf/cm <sup>2</sup>                                      |
| Time of operation              | -                  | Even when pressed continuously, it is canceled after 8 sec. |

\* Default - Power boolst solinoid valve : OFF