
## **GROUP 8 VARIABLE POWER CONTROL SYSTEM**

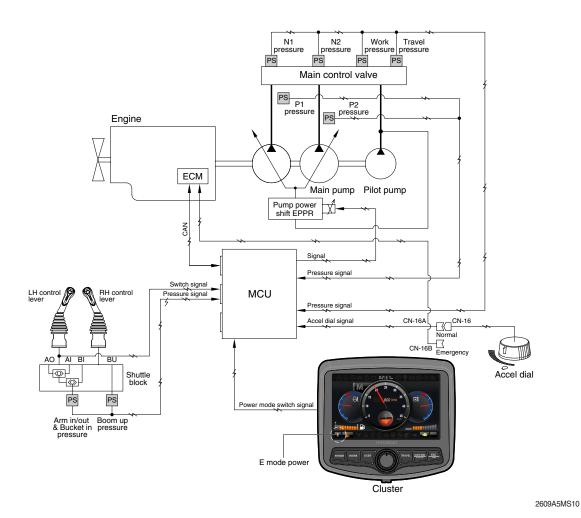

 The variable power control system controls the engine and pump mutual power according to RCV lever stroke and pump load.

It makes fuel saving and smooth control at precise work.

| Description     | Working condition |
|-----------------|-------------------|
| Power mode      | E                 |
| Work mode       | General (bucket)  |
| Pressure sensor | Normal            |

\* The variable power control function can be activated when the power mode is set to E mode.