


SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Monitoring system	4-3
Group 3 Electrical Circuit	4-10
Group 4 Electrical Component Specification	4-26
Group 5 Connectors	4-33

SECTION 4 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION


1. LOCATION 1

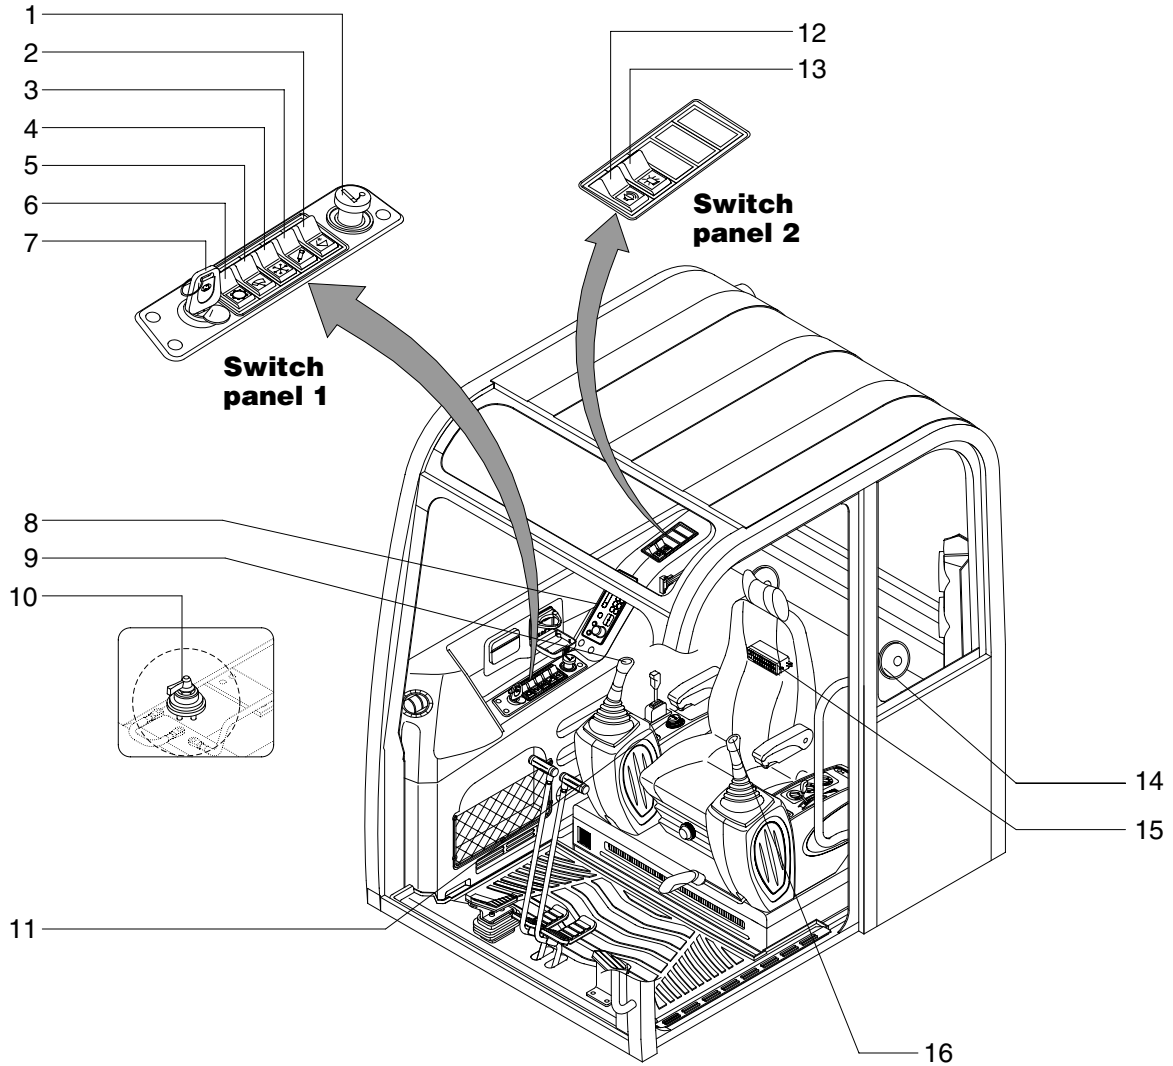

R5574EL02

- | | | |
|----------------------------|----------------------------|------------------------|
| 1 Cigar light | 7 Start switch | 12 Travel alarm switch |
| 2 Quick coupler switch | 8 Cassette & radio | 13 Beacon switch |
| 3 Breaker selection switch | 9 Breaker operation switch | 14 Speaker |
| 4 Aircon switch | 10 Master switch | 15 Fuse box |
| 5 Washer/wiper switch | 11 12V socket | 16 Horn switch |
| 6 Main light switch | | |

2. LOCATION 2

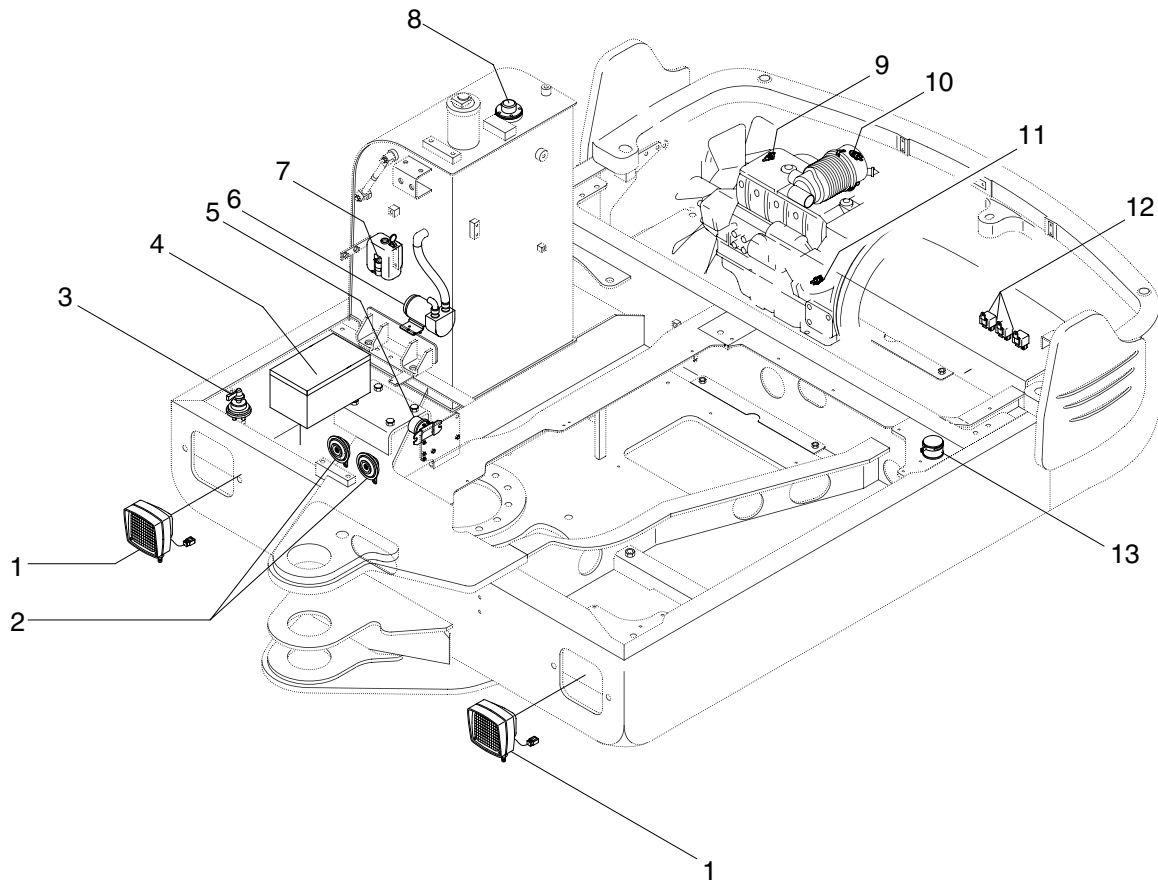

R6574EL03

- | | | | | | |
|---|---------------|---|--------------------|----|-----------------------------|
| 1 | Lamp | 6 | Fuel filler pump | 10 | Air clearer pressure switch |
| 2 | Horn | 7 | Washer pump | 11 | Engine oil pressure switch |
| 3 | Master switch | 8 | Fuel sender | 12 | Relays |
| 4 | Battery | 9 | Temperature sender | 13 | Travel alarm buzzer |
| 5 | Battery relay | | | | |