

## GROUP 5 SWING DEVICE

### 1. REMOVAL AND INSTALL OF MOTOR

#### 1) REMOVAL

(1) Lower the work equipment to the ground and stop the engine.

(2) Loosen the breather slowly to release the pressure inside the hydraulic tank.

**▲ Escaping fluid under pressure can penetrate the skin causing serious injury.**

※ When pipes and hoses are disconnected, the oil inside the piping will flow out, so catch it in oil pan.

(3) Disconnect pilot line hoses(2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16).

(4) Sling the swing motor assembly(1) and remove the swing motor mounting bolts(17).

- Motor device weight : 90kg(200lb)
- Tightening torque :  $25 \pm 2.5\text{kgf} \cdot \text{m}$   
( $180 \pm 18\text{lbf} \cdot \text{ft}$ )

(5) Remove the swing motor assembly.

※ When removing the swing motor assembly, check that all the piping have been disconnected.



#### 2) INSTALL

(1) Carry out installation in the reverse order to removal.

(2) Bleed the air from the swing motor.




- ① Remove the air vent plug.
- ② Pour in hydraulic oil until it over flows from the port.
- ③ Tighten plug lightly.
- ④ Start the engine, run at low idling, and check oil come out from plug.
- ⑤ Tighten plug fully.

(3) Confirmed the hydraulic oil level and check the hydraulic oil leak or not.

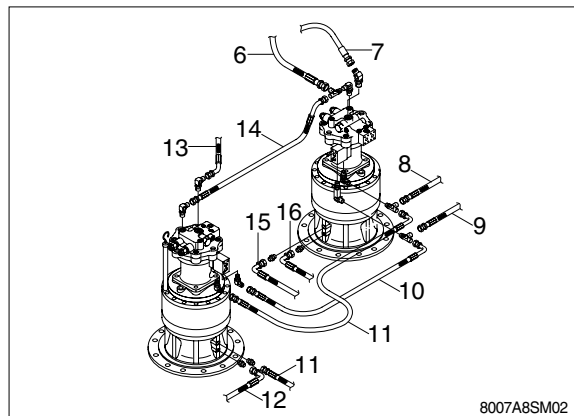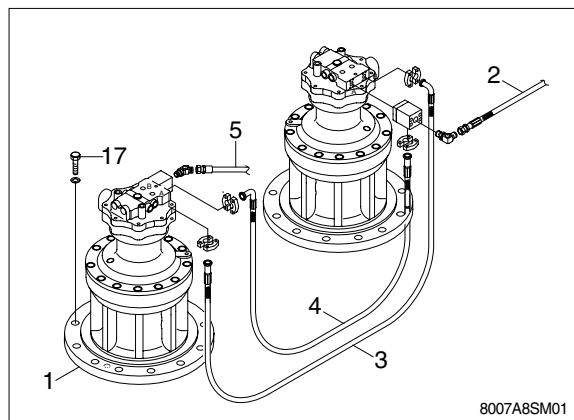

## 2. SWING MOTOR

### 1) STRUCTURE

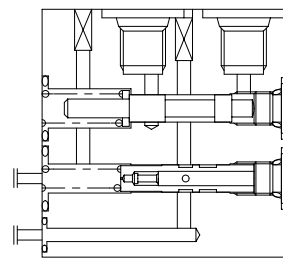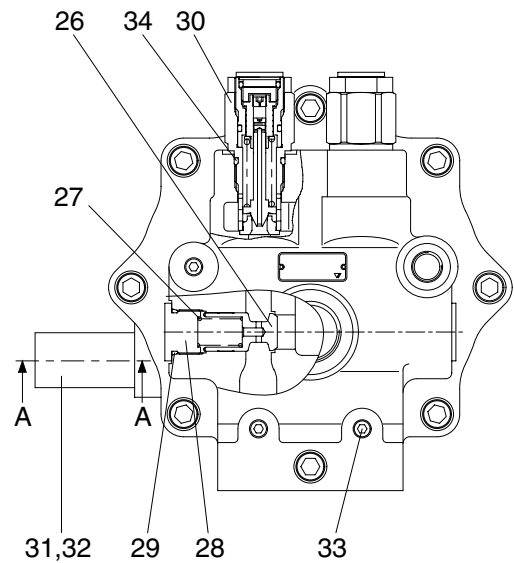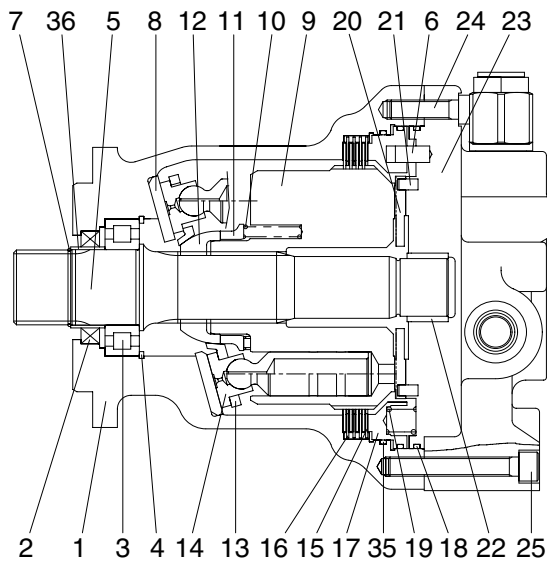


SECTION A-A

8007A2SM02

1	Body	13	Set plate	25	Wrench bolt
2	Oil seal	14	Piston assy	26	Poppet
3	Roller bearing	15	Friction plate	27	Spring
4	Snap ring	16	Plate	28	Plug
5	Shaft	17	Brake piston	29	O-ring
6	Pin	18	O-ring	30	Relief valve assy
7	Stop ring	19	Spring	31	Time delay valve
8	Shoe plate	20	Valve plate	32	Wrench bolt
9	Cylinder block	21	Pin	33	Plug
10	Spring	22	Needle bearing	34	O-ring
11	Ball guide seat	23	Rear cover	35	O-ring
12	Ball guide	24	Wrench bolt	36	Bushing

## 2) TOOLS AND TIGHTENING TORQUE

### (1) Tools

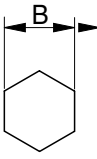Tool name	Remark	
Allen wrench	5	
	6	
	12	
	17	
Socket for socket wrench, spanner	36	
Torque wrench	Capable of tightening with the specified torques	
Snap ring plier(for holes, axis)	Snap ring(4)	
Solder hammer	Needle bearing(22), pin(6, 21)	
Oil seal inserting jig	Oil seal(2)	
Induction heating apparatus for bearing	Roller bearing(3)	


### (2) Tightening torque

Part name	Item	Size	Torque		Wrench size	
			kgf · m	lbf · ft	in	mm
Wrench bolt	24	M14	20.9	151.2	0.47	12
Wrench bolt	25	M14	20.9	151.2	0.47	12
Relief valve	30	M33	18.0	130.2	1.42	36
Wrench bolt	32	PF 1/4	6.9	49.9	0.20	5
Plug	33	PF 1/4	20.9	151.2	0.24	6

### 3) DISASSEMBLING


#### (1) Disassemble the sub of a TURNING AXIS

- ① Unloosing wrench bolt(32) and disassemble time delay valve assy(31) from rear cover(23)

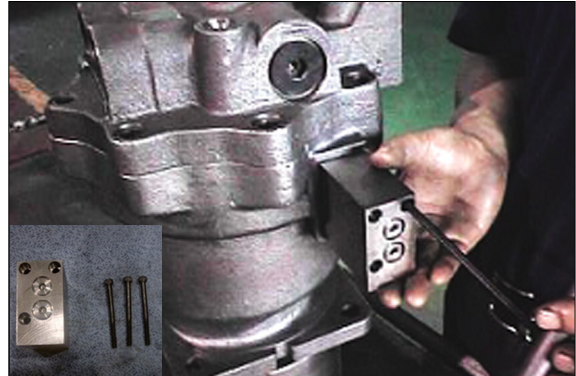


3607A8SM01/01A

- ② Hang rear cover(23) on hoist, unloose wrench bolt(24, 25) and disassemble from body(1).

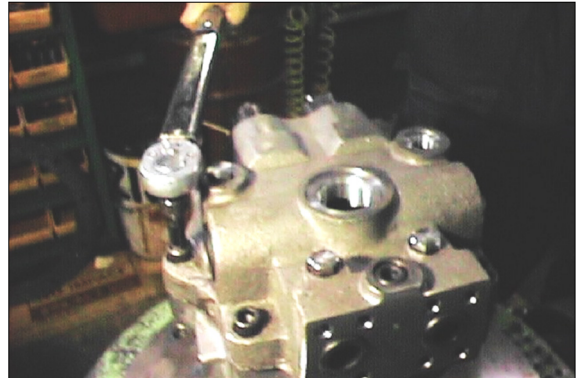

3607A8SM02

- ③ Using a jig, disassemble break piston(17) from body(1).

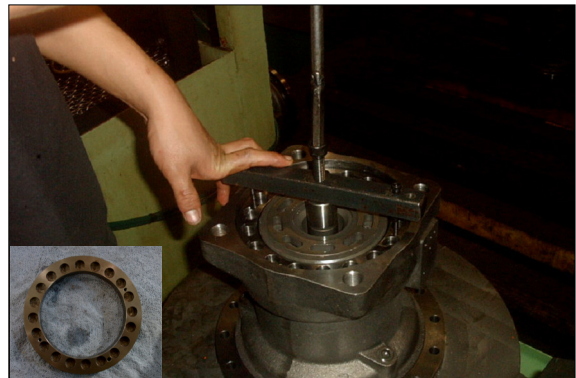

3607A8SM03


- ④ Disassemble respectively cylinder block assy, friction plate(15), plate(16) from body(1).



3607A8SM04



- ⑤ Disassemble shoe plate(8) from body(1).

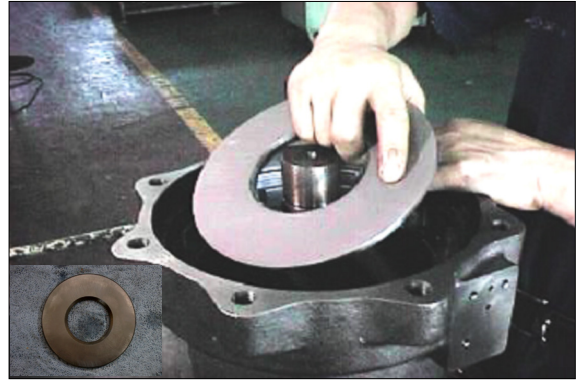

- ⑥ Using a plier jig, disassemble snap ring (4) and shaft assy(5).




**(2) Disassemble cylinder block assy sub**

- ① Disassemble piston assy(14), set plate (13) from cylinder block assy.



- ② Disassemble ball guide(12), friction plate(15), plate(16) and ball guide seat(11) from cylinder block(9).

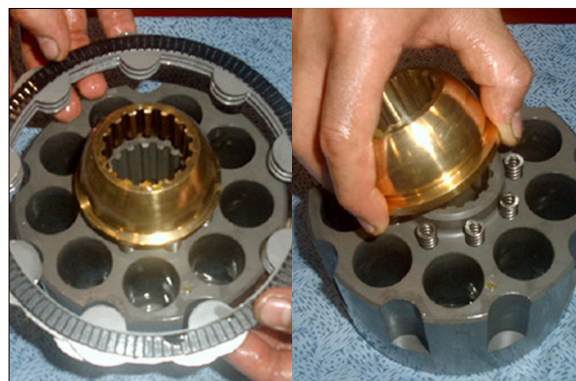

- ③ Disassemble spring(10) from cylinder block(9).



3607A8SM09

**(3) Disassemble rear cover assy sub**

- ① Disassemble pin(6, 21) and valve plate (20) from rear cover(23).



3607A8SM10/10A

- ② Using a torque wrench, disassemble relief valve assy(30) 2 set from rear cover(23).



3607A8SM11/11A

- ③ Disassemble make up check valve assy with a torque wrench from rear cover(23).



3607A8SM12/12A



#### 4) ASSEMBLING

##### (1) Assemble the sub of a turning axles

- ① Put roller bearing(3) on preheater and provide heat to inner wheel (compressing temp : 290°C for 2 minutes)
  - Roller bearing × 1EA




- ② After assembling and compressing preheated roller bearing(3), stop ring(7) into shaft(5).
  - Stop ring × 1EA
  - Shaft × 1EA



- ③ Using a compressing tool and steel stick, assemble oil seal(2) into body(1).
  - Oil seal × 1EA



- ④ Insert above shaft sub into body(1) and assemble it with a hammer.

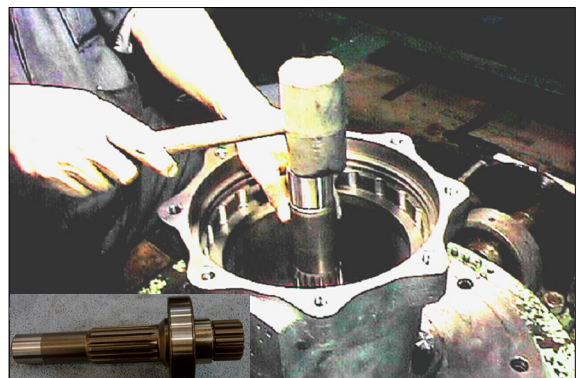

- ⑤ Fix snap ring(4) to shaft with a plier jig.  
· Snap ring × 1EA



- ⑥ Spread grease on shoe plate(8) and assemble on the body.  
· Shoe plate × 1EA




**(2) Assemble the sub of cylinder block assy**


- ① Assemble spring(10) 9 set into cylinder block(9).  
· Spring × 9EA



- ② Assemble ball guide(12) and ball guide seat(11) into cylinder block(9).  
· Ball guide × 1EA

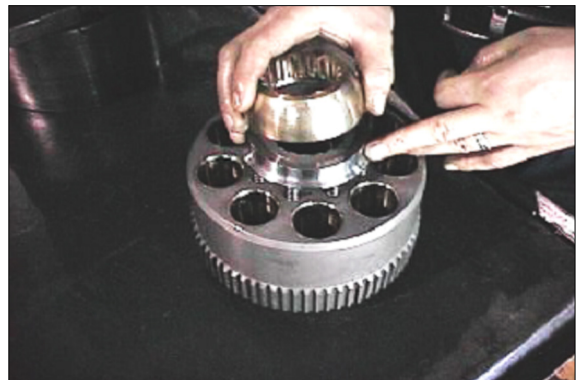

- ③ Assemble piston assy(14) 9 set into set plate(13).
- Piston assy × 9EA
  - Set plate × 1EA

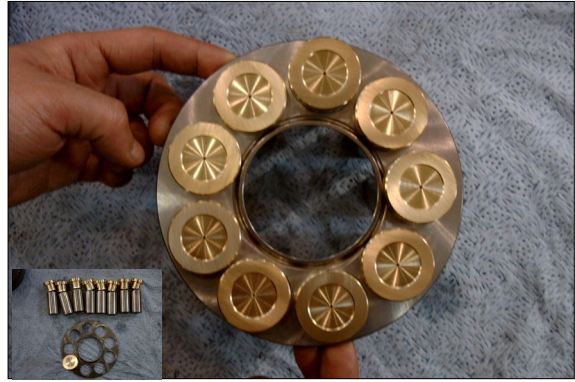

- ④ Assemble above item ② and ③.



- ⑤ Assemble cylinder block assy into body (1).



- ⑥ Assemble 4 set of lining plate(16), friction plate(15) respectively into body.
- Lining plate × 4EA
  - Friction plate × 4EA






- ⑦ Assemble O-ring(18) into break piston (17).  
 · O-ring × 2EA



3607A8SM30


- ⑧ Insert break piston assy into body(1) and assemble spring(19) into break piston (17).  
 · Spring × 19EA

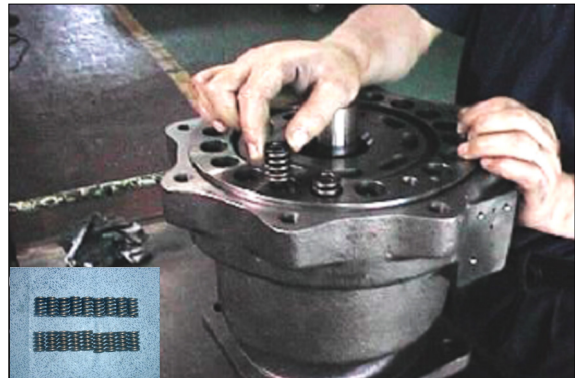

3607A8SM31/31A

**(3) Assemble the sub of rear cover assy sub**

- ① After assembling needle bearing(22) into rear cover(23), with a hammer assemble pin(6, 21).

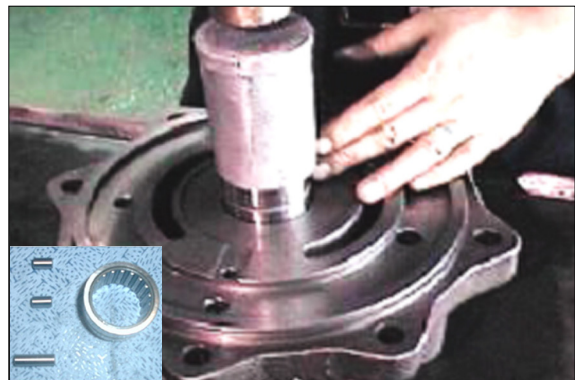

3607A8SM32/32A


- ② Assemble respectively make up check valve assy spring(27), poppet(26), plug(28) into rear cover(23) after then screw it torque wrench.  
 · Make up check sub × 2set  
 · Spring × 2EA  
 · Check × 3EA



3607A8SM33/12A




- ③ Assemble relief valve assy(30) 2set into rear cover(23) with a torque wrench.

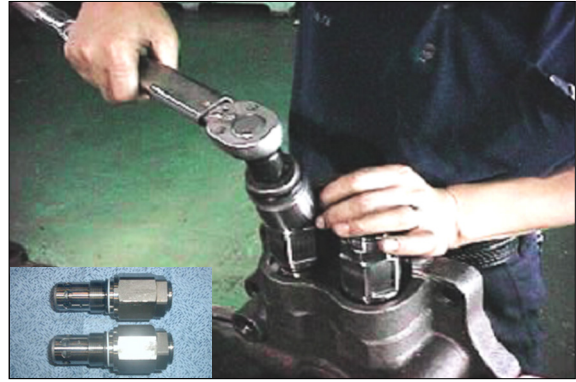


- ④ Spreading grease on valve plate(20), assemble into rear cover(23).  
· Valve plate × 1EA



- ⑤ Lift up rear cover assy on body(1) by a crane and assemble it with a wrench bolt(24, 25).

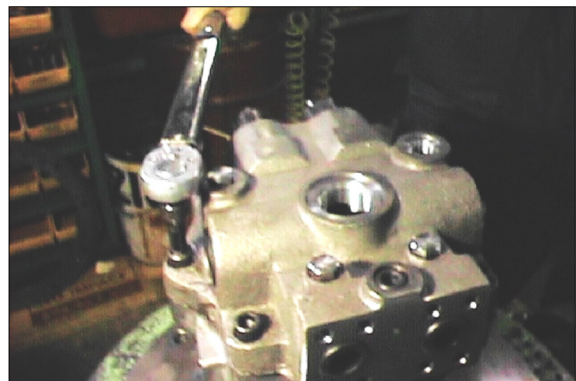


- ⑥ Assemble time delay valve assy(31) into rear cover(23) with a wrench bolt(32).

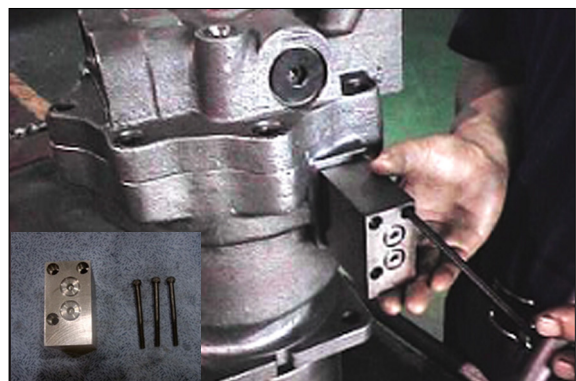

**(4) Air pressing test**


Be sure of leakage, after press air into assembled motor.

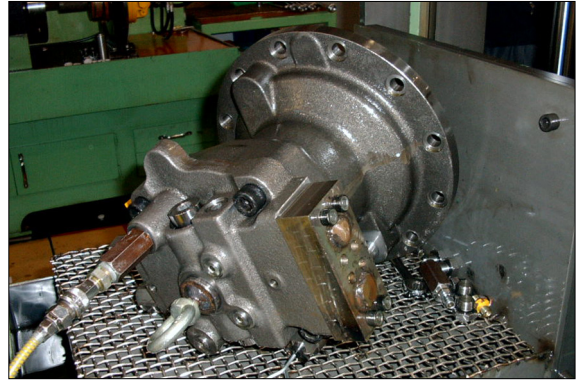

14078SM232

**(5) Leakage check**


After cleaning motor by color check No.1, paint No.3 and be sure of leakage.

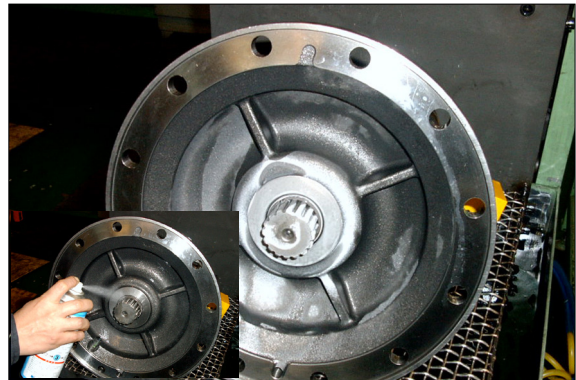

14078SM233/233A

**(6) Mount test bench**

Mounting motor test bench, test the availability of each part.

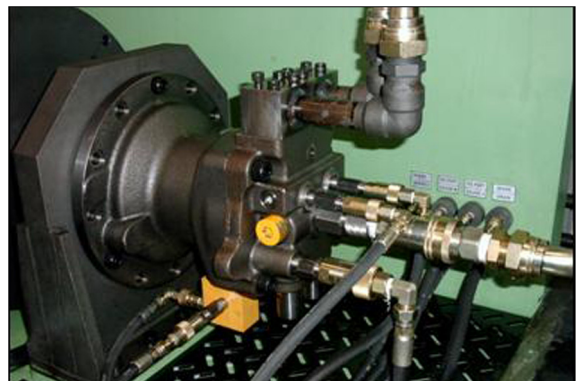

220078SM14

### 3. REMOVAL AND INSTALL OF REDUCTION GEAR


#### 1) REMOVAL

- (1) Remove the swing motor assembly.  
For details, see **removal of swing motor assembly**.
- (2) Sling reduction gear assembly(1) and remove mounting bolts(2).
- (3) Remove the reduction gear assembly.
  - Reduction gear device weight : 270kg  
(600lb)




#### 2) INSTALL

- (1) Carry out installation in the reverse order to removal.
  - Tightening torque :  $100 \pm 15 \text{ kgf} \cdot \text{m}$   
( $723 \pm 109 \text{ lbf} \cdot \text{ft}$ )

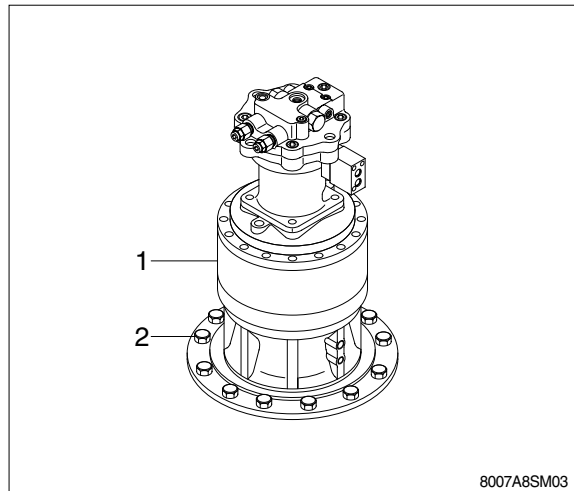

## 4. REDUCTION GEAR

### 1) STRUCTURE

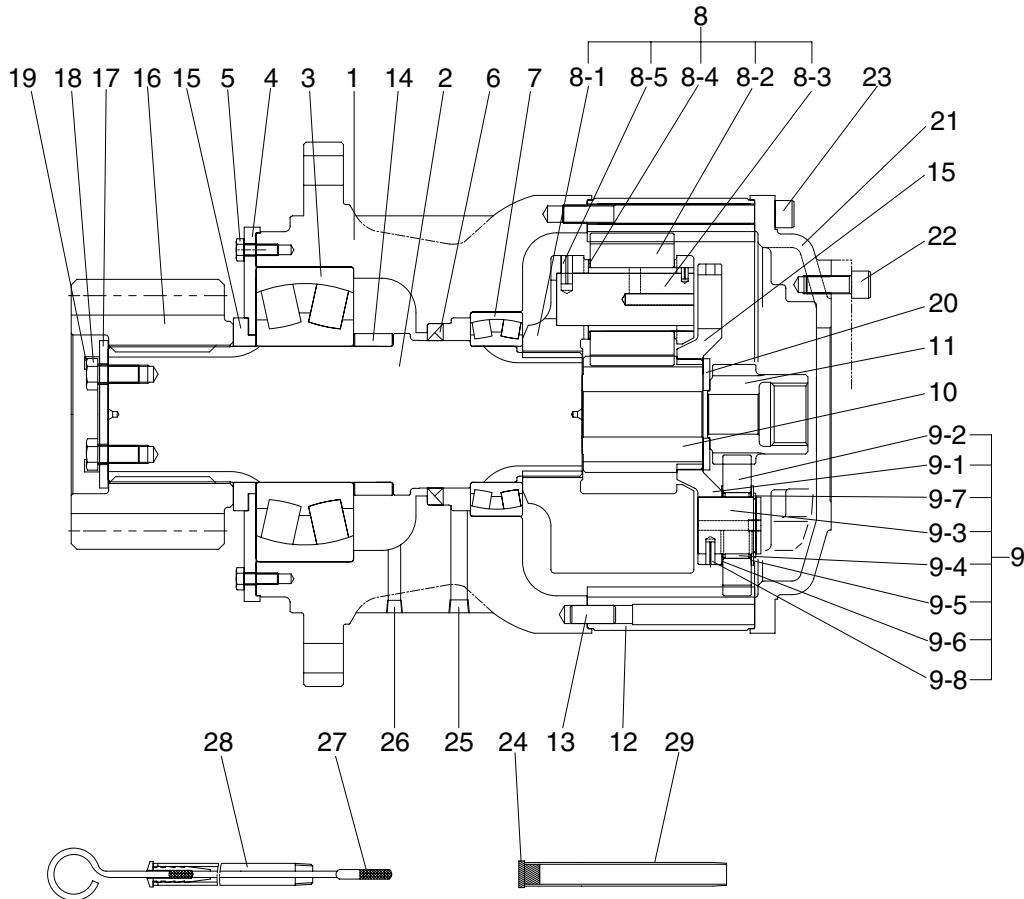

8007A2SM03

1	Casing	9-1	Carrier 1	16	Pinion gear
2	Drive shaft	9-2	Planetary gear 1	17	Lock plate
3	Roller bearing	9-3	Pin 1	18	Hex bolt
4	Cover plate	9-4	Needle cage	19	Lock washer
5	Hex bolt	9-5	Side plate 2	20	Thrust ring
6	Oil seal	9-6	Side plate 1	21	Cover
7	Roller bearing	9-7	Stop ring	22	Socket bolt
8	Carrier assy 2	9-8	Spring pin	23	Socket bolt
8-1	Carrier 2	10	Sun gear 2	24	Socket plug
8-2	Planet gear 2	11	Sun gear 1	25	Plug
8-3	Pin 2	12	Ring gear	26	Plug
8-4	Washer	13	Knock pin	27	Gauge bar
8-5	Spring pin	14	Spacer ring	28	Gauge pipe
9	Carrier assy 1	15	Spacer	29	Air breather assy




## 2) DISASSEMBLY

### (1) Removal of cover

- ※ Loosen the socket bolt(23) with 16mm hexagonal socket and remove the cover(21).

### (2) Removal of sun gear 1 and thrust ring assembly


Remove carrier 1(9), install eye bolt to tap hole(M10) and remove carrier 1 assembly itself.

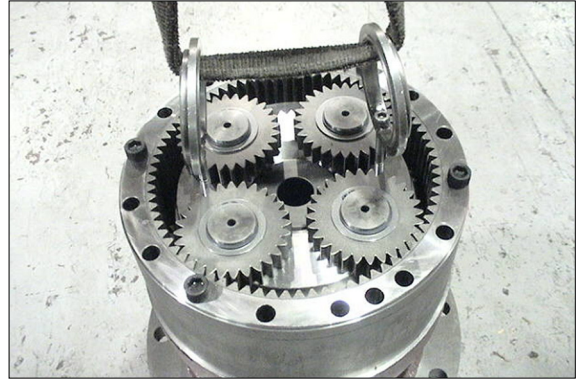

3607A8SR03

### (3) Removal of sun gear 2


Remove sun gear 2(10), install eye bolt to tap(M10) of carrier 2(8) and remove carrier 2 assembly itself.

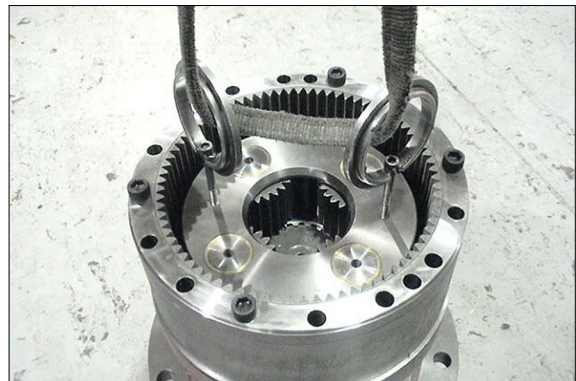

3607A8SR04


### (4) Disassembly of 2nd carrier assembly

- ① Insert spring pin(8-5) into pin assy 2(8-3) by hammering.
- ※ Do not reuse spring pin after removal.

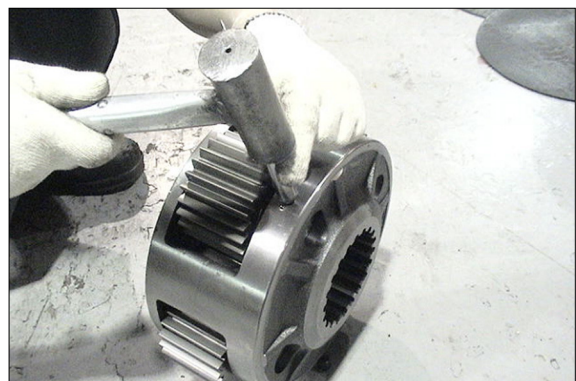

3607A8SR05

- ② Remove pin assy 2(8-3) from carrier 2(8-1), planetary gear 2(8-2) and thrust washer (8-4) with hands.

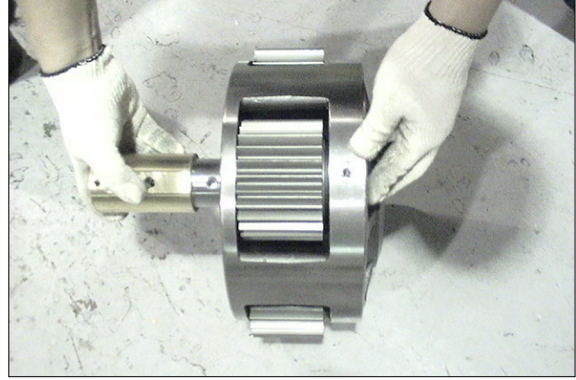


3607A8SR06

**(5) Removal of ring gear**

Remove ring gear(12) from casing(1).

- ※ Fluid packing is applied on contacting face of ring gear and gear casing.


Therefore, remove ring gear from casing by minus screw driver.

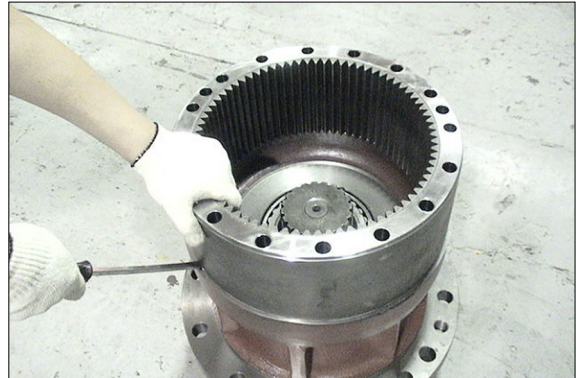

3607A8SR07

**(6) Removal of drive shaft(2) assembly**

- ① Spread off the corners of spacer(15), cover plate(4) and hex bolt(5) with a tool.

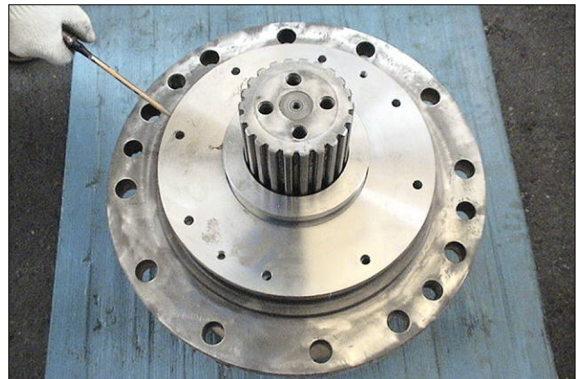

3607A8SR08

- ② Install hydraulic press at the end face of shaft, and remove drive shaft(2), spacer ring(14), and roller bearing(3) as assembly.


- ※ Do not reuse oil seal after removal.



3607A8SR09



- ③ Remove roller bearing(7) from gear casing(1).

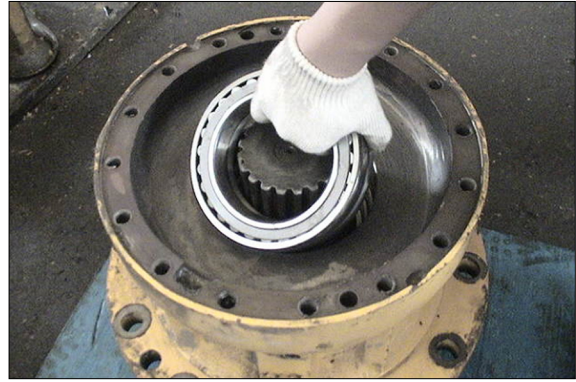

3607A8SR10

- ④ Remove oil seal(6) from gear casing(1).



3607A8SR11

**(7) Disassembly of shaft assembly**

Insert motor side of shaft(2) into steel tube (inner dia :  $\varnothing$  145mm) and push the end of output shaft side with hydraulic press and then remove roller bearing(3), and spacer ring(14) as assembly from drive shaft(2).



3607A8SR12

### 3) ASSEMBLY

#### (1) Assembly of drive shaft assembly

- ① After assembly drive shaft (2), heat roller bearing(3) up to 50°C plus surrounding temperature and assemble it to shaft with hydraulic press and then assemble spacer ring(14) in this order.
- ※ Pay attention to the assembling direction of cover plate(4).



3607A8SR13

#### (2) Installation of oil seal

Remove oil from assembled face of oil seal of gear casing(1) and oil seal(6). Apply fluid packing(three bond of white color) on outer face of oil seal and assemble at pressing jig of gear casing. After inserting with press, lubricate oil seal with grease.



3607A8SR14

#### (3) Assembly of drive shaft assembly


- ① Be careful lest oil seal lip damage by spline of drive shaft(2). Assemble drive shaft assembly by using seal guide.
- ② Put drive shaft of gear casing(1) upward. Assemble drive shaft assembly to gear casing by tightening eye bolt into tap hole (M16) of output side of drive shaft(2).
- ※ Place support (approx 150mm) below of gear case(1) for seal protector contact with work table.



3607A8SR15

#### (4) Install of roller bearing


Put gear casing under output shaft and heat roller bearing(7) up to 50°C plus surrounding temperature and then assemble it to the shaft.

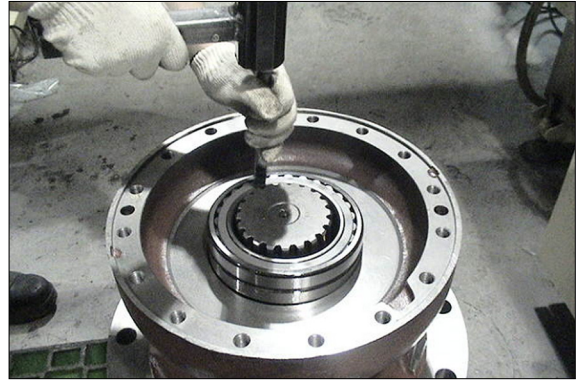

3607A8SR16

#### (5) Assembly of ring gear

- ① Remove oil from mating faces between gear casing(1) and ring gear(12), and knock pin(13). Assemble collar of gear casing and apply fluid packing(three bond of grey color).

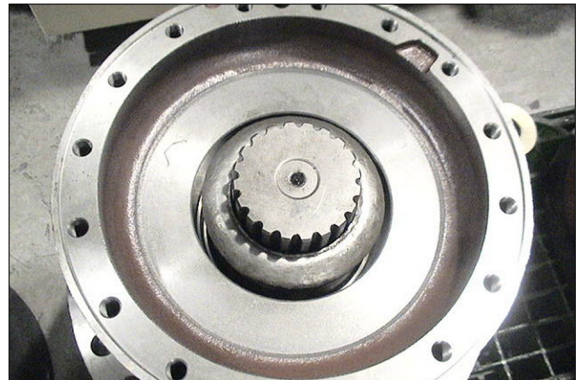

3607A8SR17


- ② Assemble ring gear(12).



36078SR18

#### (6) Assembly of carrier 2 assembly


- ① Assemble planetary gear 2(8-2) to carrier 2(8-1) with thrust washer(8-4) and insert pin assy 2(8-3).
- ※ Lubricate gear oil to inside of gear and outside of shaft.

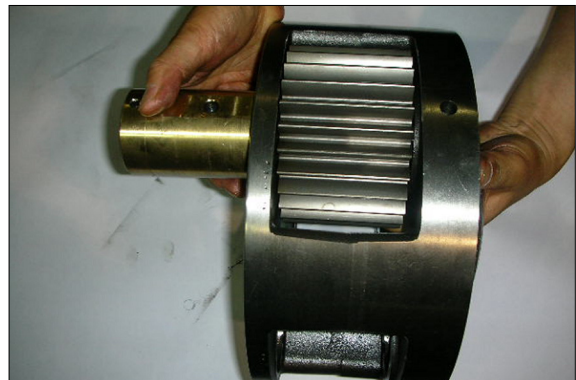

3607A8SR19




- ② Insert spring pin(8-5) by hammering.
- ※ Insert as the clearance between spring pins toward planetary gear 2(8-2).

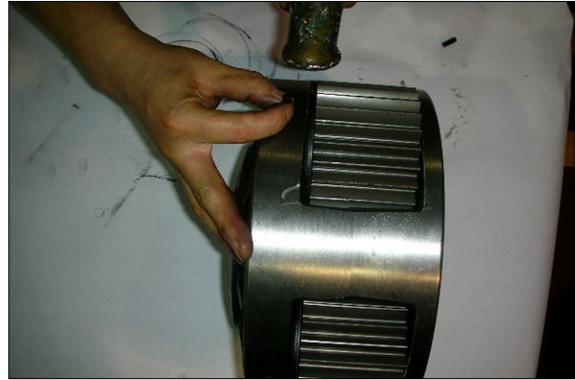

3607A8SR20

**(7) Assembly of carrier 2 assembly and sun gear 2**

- ① Mount eye bolt into tap hole(M10) of carrier 2(8) and lift carrier assembly and then insert carrier assembly being engaged with internal teeth of ring gear (12). Rotate carrier assembly lightly so that splines of drive shaft(2) are engaged.

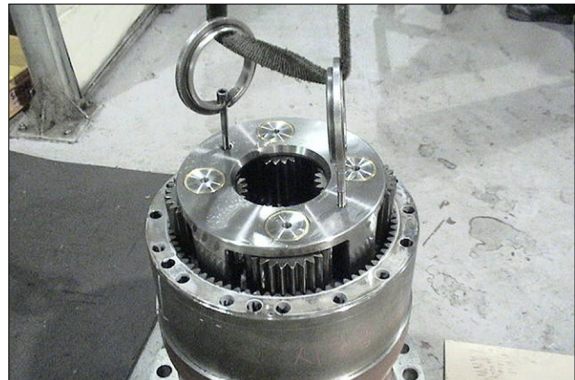

3607A8SR21


- ② Insert sun gear 2(10) to planetary gear 2 (8-2).



3607A8SR22


**(8) Assembly of sun gear 1, carrier 1 assembly**

- ① Mount eye bolt into tap hole(M10) of lift carrier assembly and then insert carrier assembly being engaged with internal teeth of ring gear(12). Rotate holder assembly lightly so that sun gear 2(10) is engaged with teeth of carrier 1(9-1).

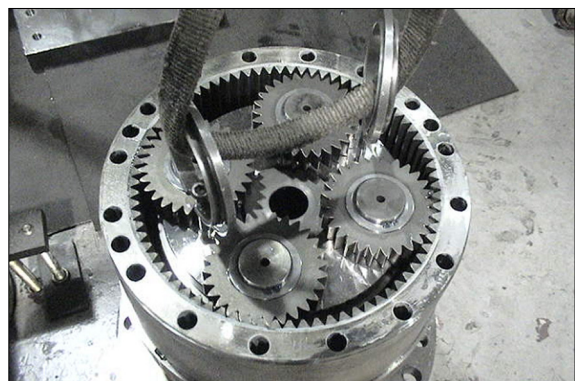

3607A8SR23

- ② Insert sun gear 1(11) to planetary gear 1 (9-2).

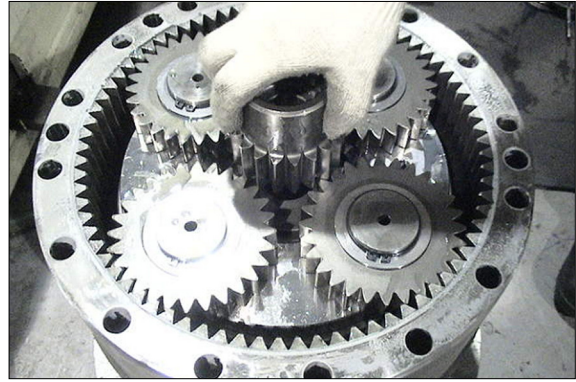

- (9) Check rotation of sun gear by turning plunge part of gear casing with hands.

**(10) Assembly of cover**

Remove oil from mating faces between ring gear(12) and cover(21) and apply fluid packing.

Assemble cover(21) and tighten socket bolt(23) with 16mm hexagonal socket.

Tightening torque :  $25 \pm 2.5 \text{kgf} \cdot \text{m}$   
( $180 \pm 18 \text{lb} \cdot \text{ft}$ )

This completes assembly

