


SECTION 6 ELECTRICAL SYSTEM

Group 1 Component Location	6-1
Group 2 Electrical Circuit	6-3
Group 3 Monitoring System	6-4
Group 4 Connectors	6-11

SECTION 6 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION


1. LOCATION 1

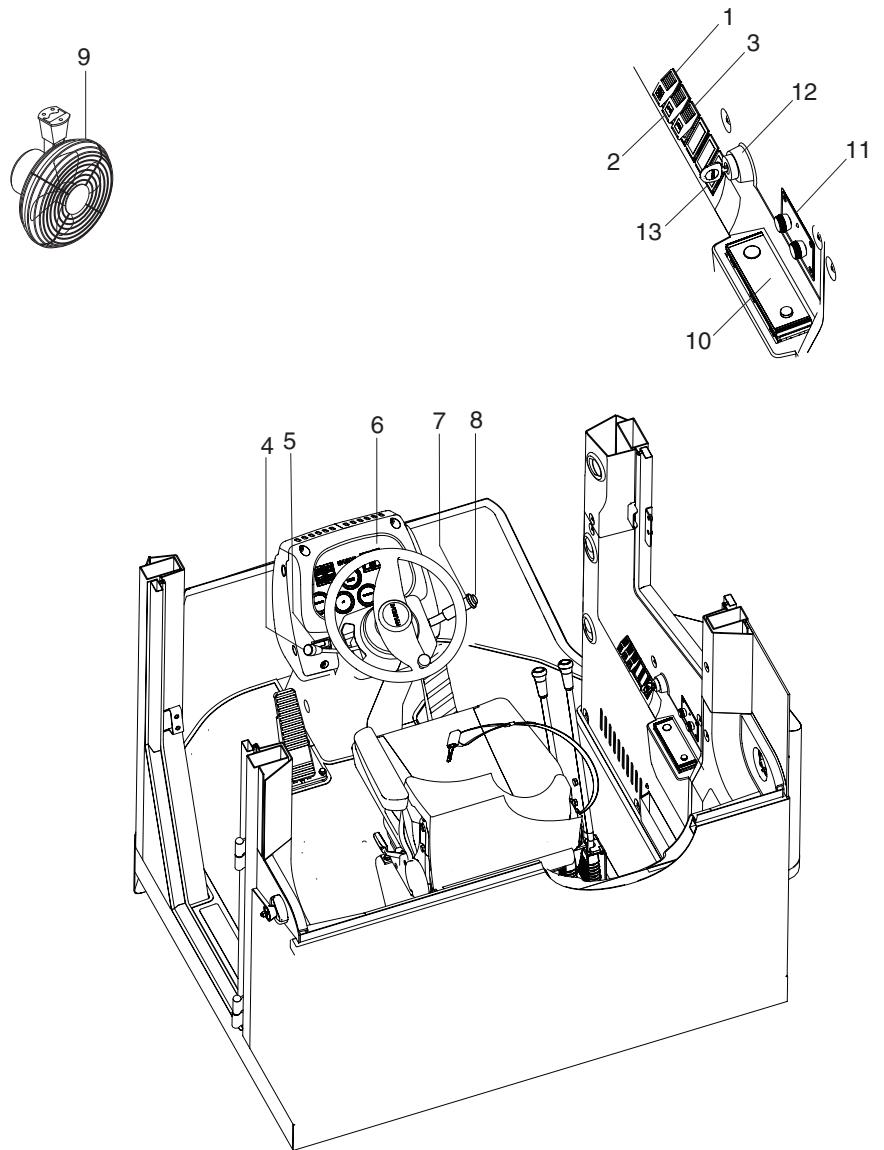

830S3CD02

- | | | |
|--------------------------|-------------------------|-----------------------------|
| 1 Head lamp switch | 6 Dashboard | 11 Aircon and heater switch |
| 2 Work lamp switch | 7 Multi function switch | 12 Starting Switch |
| 3 Beacon switch (option) | 8 Horn button | 13 Engine stop switch |
| 4 Gear selector lever | 9 Electric fan | |
| 5 Hazard switch | 10 Radio and MP3 player | |

2. LOCATION 2

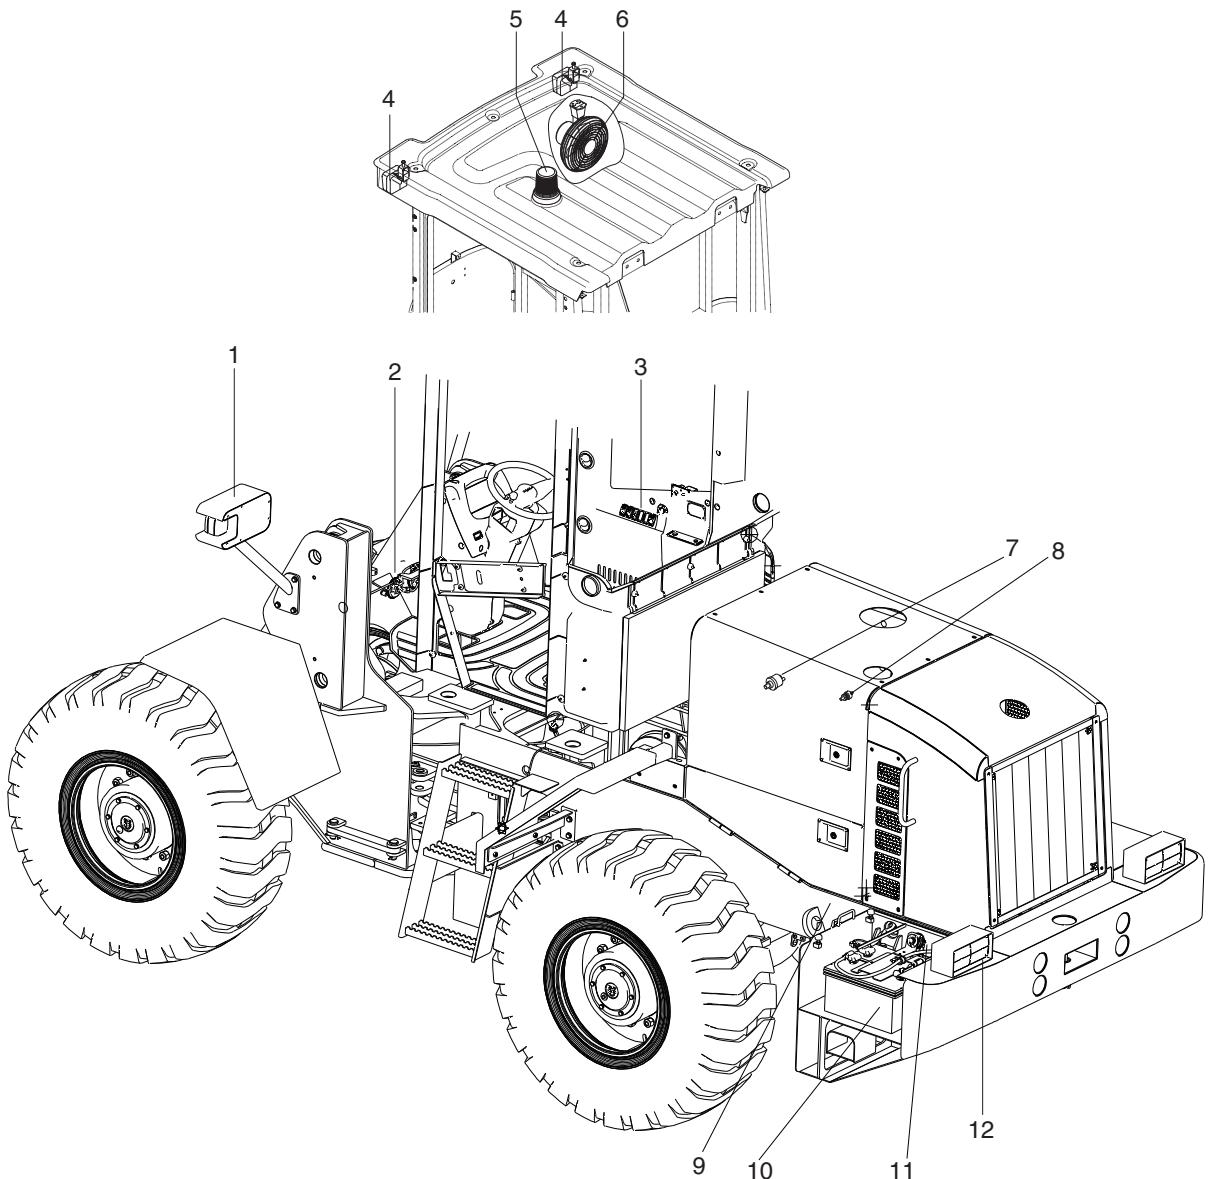

830S6EL01

- | | | |
|-------------------------|------------------------------|--------------------|
| 1 Head lamp | 6 Electric fan | 11 Power switch |
| 2 Horn | 7 Coolant temperator sensor | 12 Rear combi lamp |
| 3 Multi function switch | 8 Engine oil pressure sensor | |
| 4 Work lamp | 9 Reverse warning tone | |
| 5 Beacon lamp | 10 Battery | |