

## GROUP 4 CONNECTOR

### 1. MAIN HARNESS

Connector number	Type	No. of pin	Destination	Connector part no.
CN-35	J/C	3	TO FUSE BOX	DJ7031-7.8-11
CN-36		10		DJ7101-6.3-11
CN-37		12		DJ7121-6.3-11
CS-2	KET	6	START SWITCH	MG615330
CN-171	J/C	2	SERVICE SOCKET	DJ7028-6.3-21
CR-30	J/C	5	HIGH BEAM	DJJ7057-6.3-21
CR-40			LOW BEAM	
CR-2			HORN RELAY	
CR-26				
CR-27				
CR-30				
CR-55				
CR-63				
CR-96				
CR-56				
CR-11	J/C	5	FLASHER UNIT RELAY	DJJ7058A-6.3-21
CN-26	TYCO	2	WARNING BUZZER	174198-1
CN-1	J/C	3	REAR FRAME SIDE 1	DJ7031-7.8-11
CN-2	J/C	14	REAR FRAME SIDE 2	DJ141-6.3-21
CN-3	J/C	8	REAR FRAME SIDE 3	DJ7081-6.3-21
CN-11	J/C	8	HEATER SIDE	DJ7021A-7.8-21
EARTH4	J/C	1	-	Y10-10
CN-9	J/C	8	TO FRONT	DJ7081-6.3-21
CN-7	J/C	8	TO CABIN	DJ7081-6.3-21
CN-4	TYCO	16	TO DASH	368047-1
CN-5	TYCO	15	TO DASH	85223-1
CS-21	SWF	10	WORK LAMP	SW593757
CS-36			ILL HEAD LAMP	

## 2. CAB HARNESS

Connector number	Type	No. of pin	Destination	Connector part no.
CN-7	J/C	8	CAB CHASSIS SIDE	DJ7081-6.3-11
CL-7	TYCO	2	BEACON	174198-1
CN-23 CN-24	-	2	SPEAKER	7123-1520
CL-1	J/C	2	ROOM LAMP	DJ7021-6.3-21
CN-27	-	16	CASSETTE RADIO	PK145-16017
CL-5	J/C	2	WORK LAMP FRONT LH	DJ7021-1.5-20
CL-6	J/C	2	WORK LAMP FRONT RH	DJ7021-1.5-20
CS-23	SWF	10	BEACON	593757
EARTH7	J/C	1	RING TERMINAL	DJ431-10
AC-3	J/C	2	FAN	MATING WITH DJ7021-6.3-10

## 3. DASHBOARD HARNESS

Connector number	Type	No. of pin	Destination	Connector part no.
CS-11	J/C	8	TURN LEVER	172497-1
CN-21	J/C	6	FRONT WIPER	DJ7061-6.3-21
CS-41	SWF	10	HAZARD SWITCH	593757
CN-56	TYCO	16	GAUGE BOARD SIDE	368047-1
CN-4	TYCO	16	TO MAIN	368050-1
CN-5	TYCO	15	TO MAIN	2-85262-1
CS-35	SWF	10	WIPER	593757
CS-36	SWF	10	WORK LAMP SWITCH	593757
CS-45	SWF	2	BACK-UP SWITCH	MATING WITH DJ7021-6.3-10
EARTH1 EARTH2	J/C	1	TO EARTH	Y10-10
CN-9	J/C	8	TO FRONT HARNESS	DJ7081-6.3-21
CD-4	J/C	1	STOP LAMP SWITCH	DJ431-5
CS-26	J/C	3	PARKING LEVEL	DJ7031-6.3-21

#### 4. REAR FRAME HARNESS

Connector number	Type	No. of pin	Destination	Connector part no.
CD-49	J/C	1	TM TEMP	DJ431-5
CD-48	KSC 2620	1	TM OIL PRESSURE	R1.25-4
CD-3	J/C	1×2	AIR PRESSURE	DJ431-5
CL-23	DEUTSCH	2	WORK LAMP-RH	DT06-2S
CL-22	DEUTSCH	2	WORK LAMP-LH	DT06-2S
CN-65	DEUTSCH	2	BACK BUZZER	DT06-2S
CL-16A	J/C	3	REAR COMBI-RH	DJ7031-1.5-21
CL-16B		2		DJ7021-1.5-21
CL-15A	J/C	3	REAR COMBI-LH	DJ7031-1.5-21
CL-15B		2		DJ7021-1.5-21
CN-95	MTA	-	-	03.21000
				03.01080
				03.21210
	HHI PARTS	-	-	21LM-03180
CN-94	MTA	-	-	03.21000
				03.01040
				03.21210
	HHI PARTS	-	-	21LM-03180
CN-1	J/C	3	-	DJ7031-7.8-11
CN-2	J/C	14	-	DJ7141-6.3-21
CN-3	J/C	8	-	DJ7081-6.3-11
CN-12	J/C	12	-	DJ7121-6.3-21
CN-74	J/C	1×2	MASTER SWITCH	Y10-10
CR-1A	KET	4	POWER RELAY	MG612017
CR-1B				
EARTH2	J/C	1	RING TERMINAL	Y10-10
GROMMET	HHI	-	-	21LB-34020

#### 5. FRONT HARNESS

Connector number	Type	No. of pin	Destination	Connector part no.
CN-9	J/C	8	FRONT FRAME, SIDE	DJ7081-6.3-11
CL-3	TYCO	3	COMBI-FRONT, LH	174200-1
CL-24	TYCO	2	HEAD LIGHT, LH	174198-1
CN-20	MOLEX	2	HORN-LOW	36825-0211
CN-25	MOLEX	2	HORN-HIGH	36825-0211
CL-4	TYCO	3	COMBI-FRONT, LH	174200-1
CL-25	TYCO	2	HEAD LIGHT, LH	174198-1
EARTH3	J/C	1	RING TERMINAL	DJ431-10

## 6. GAUGE HARNESS

Connector number	Type	No. of pin	Destination	Connector part no.
CN-55 CN-53 CN-54 CN-52 CN-51	SWF KSC2620	2 1×3	BARO METER TC TEMP GAUGE HOUR METER ENGINE COOLANT TEMP TM OIL PRESSURE	913328 R 1.25-4
CL-51 A,B CL-52 A,B CL-26 A,B CL-53 A,B	SWF	2×2	TURN-LH, CHARGE HIGH BEAM, BRAKE LOW PRESSURE PARKING TURN-RH, ENGINE OIL PRESSURE	913328
CN-56	TYCO	16	GAUGE BOARD	368050-1

## 7. ENGINE HARNESS

Connector number	Type	No. of pin	Destination	Connector part no.
CN-79	J/C	3	FUEL CUT OFF SOL	1201-5793
CD-18	KSC 2620	1	ENGINE OIL PRESSURE	R1.25-4
CD-8	TYCO	1	COOLANT TEMP	R1.25-4
CR-23	KET	2×2	START RELAY	ST710384-2 ST710589-2
CN-45	KSC 2620 KET	1 1	STARTER	R14-12 ST710289
CN-74	KSC 2620 KSC 2620	1 1	ALTERNATOR	R14-8 R1.25-4
CN-12	J/C	12	ENGINE SIDE	DJ7121-6.3-11
CN-96	KSC 2620 KSC 2620	1 1	POWER EARTH	R2.0-4 R2.0-12
CN-97	TYCO	2	FAN CLUTCH	282080-1
CN-97A	TYCO	-	CAVITY PLUG	282080-1
EARTH 6	KSC 2620	1	EARTH	R3.0-14