


SECTION 6 ELECTRICAL SYSTEM

Group 1 Component location	6-1
Group 2 Electrical circuit	6-3
Group 3 Monitoring system	6-4
Group 4 Connector	6-8

SECTION 6 ELECTRICAL SYSTEM


GROUP 1 COMPONENT LOCATION

1. LOCATION 1

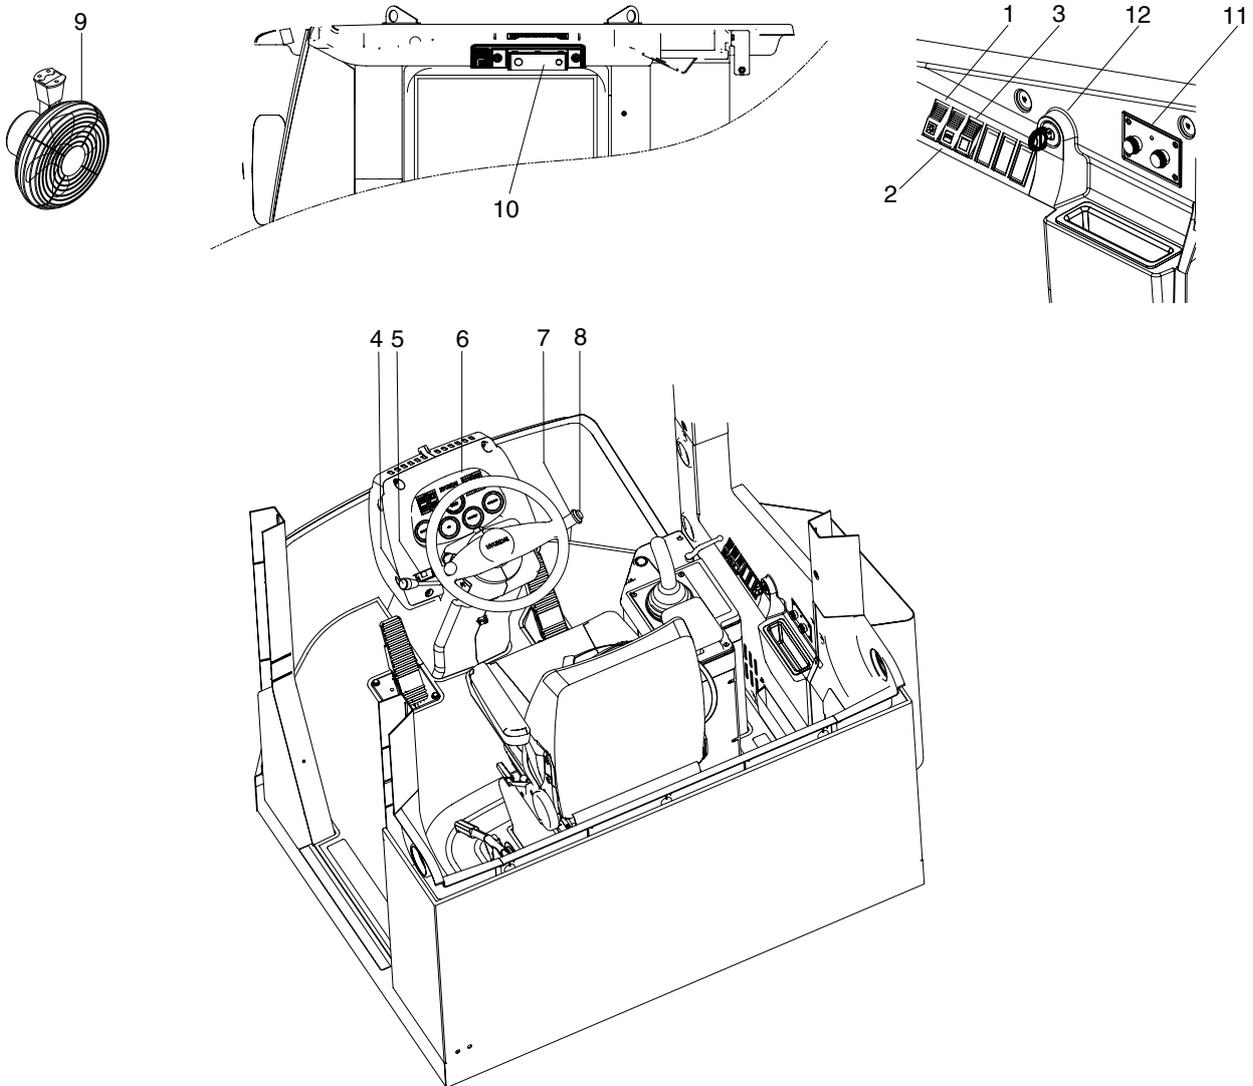

- | | | | | | |
|---|---------------------|---|-----------------------|----|--------------------------|
| 1 | Head lamp switch | 5 | Hazard switch | 9 | Electric fan |
| 2 | Work lamp switch | 6 | Cluster | 10 | Radio and MP3 player |
| 3 | Beacon switch | 7 | Multi function switch | 11 | Aircon and heater switch |
| 4 | Gear selector lever | 8 | Horn button | 12 | Starting Switch |

2. LOCATION 2

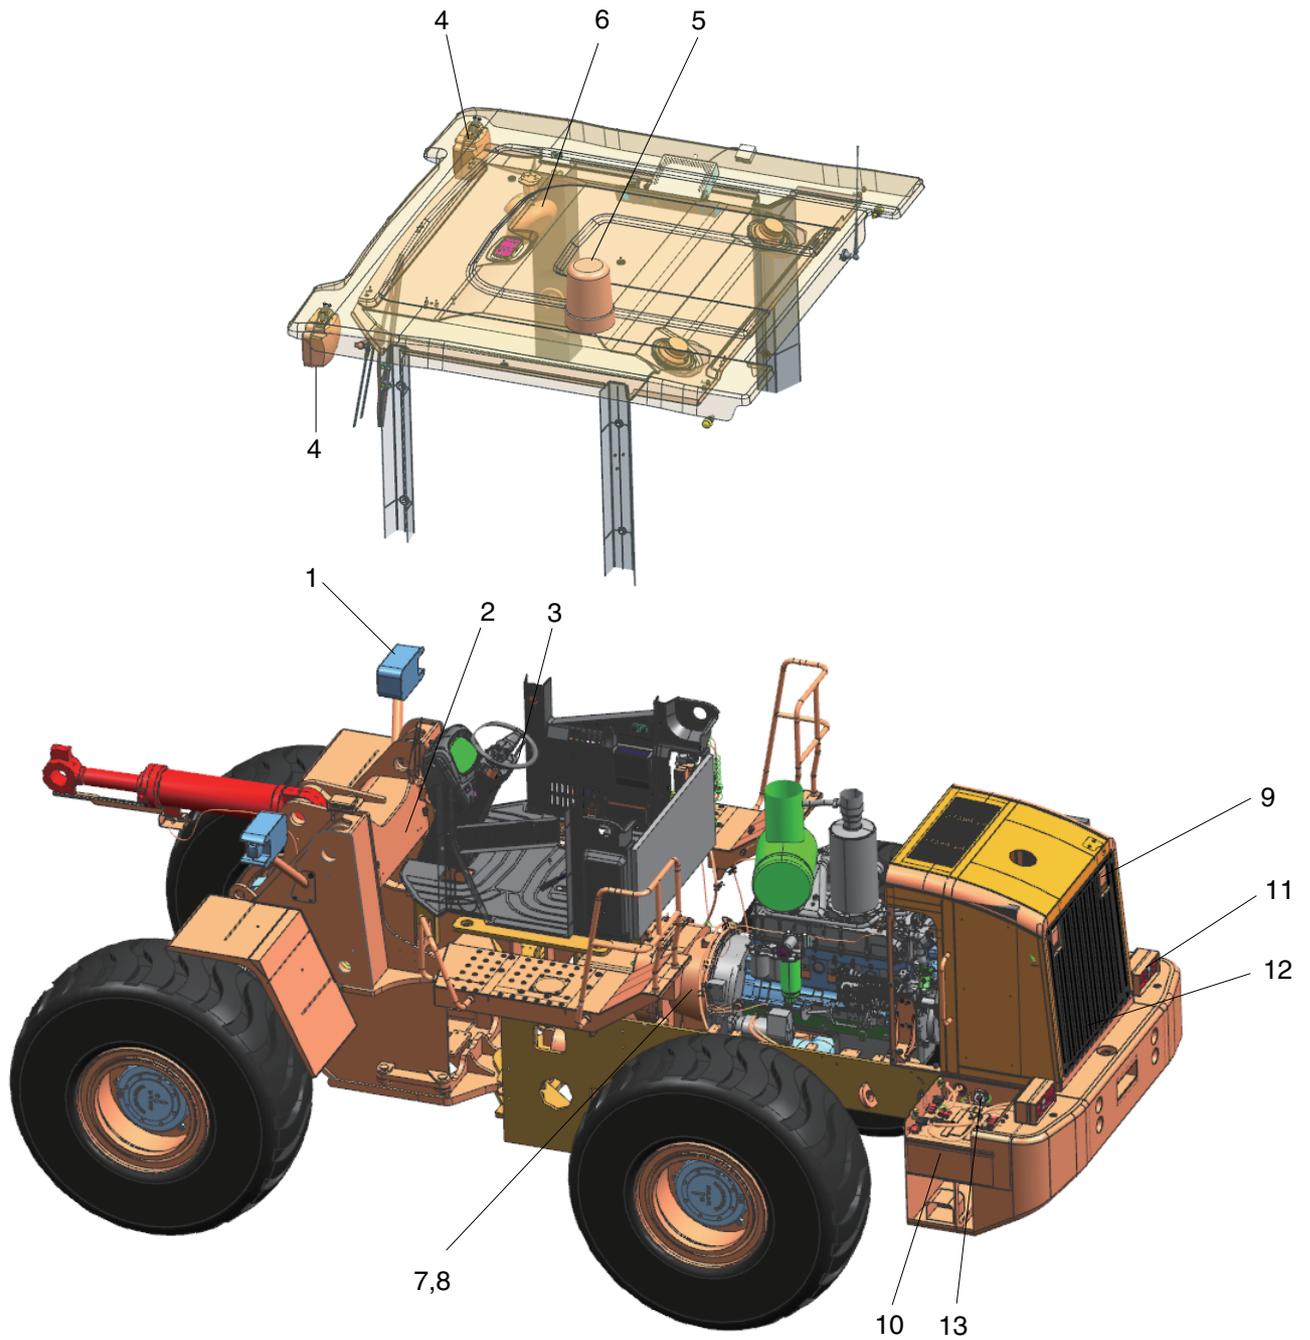

851S7EL01

- 1 Head lamp
- 2 Horn
- 3 Multi-function switch
- 4 Work lamp
- 5 Beacon lamp

- 6 Fan
- 7 Coolant temperature sensor
- 8 Engine oil pressure sensor
- 9 Work lamp
- 10 Battery

- 11 Rear combi lamp
- 12 Back buzzer
- 13 Battery relay