

# **GROUP 3 SWING DEVICE**

## 1. STRUCTURE

Swing device consists swing motor, swing reduction gear.


Swing motor include mechanical parking valve, relief valve, make up valve and time delay valve.

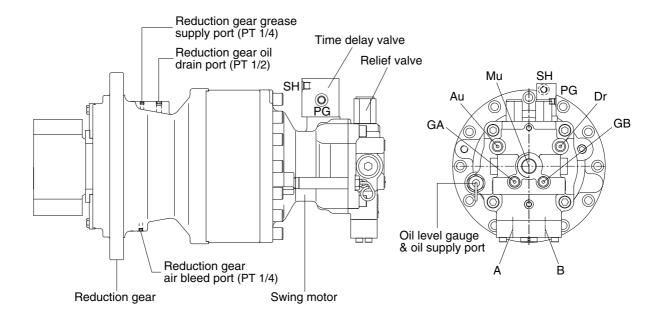


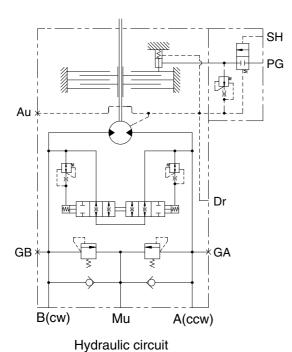

| Port   | Port name                   | Port size |  |
|--------|-----------------------------|-----------|--|
| Α      | Main port                   | ø 20      |  |
| В      | Main port                   | ø 20      |  |
| Dr     | Drain port                  | PF 1/2    |  |
| Mu     | Make up port                | PF 1      |  |
| PG     | Brake release stand by port | PF 1/4    |  |
| SH     | Brake release pliot port    | PF 1/4    |  |
| GA, GB | Gauge port                  | PF 1/4    |  |
| Au     | Air vent port               | PF 1/4    |  |

# 1) SWING MOTOR

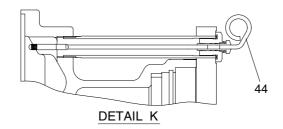

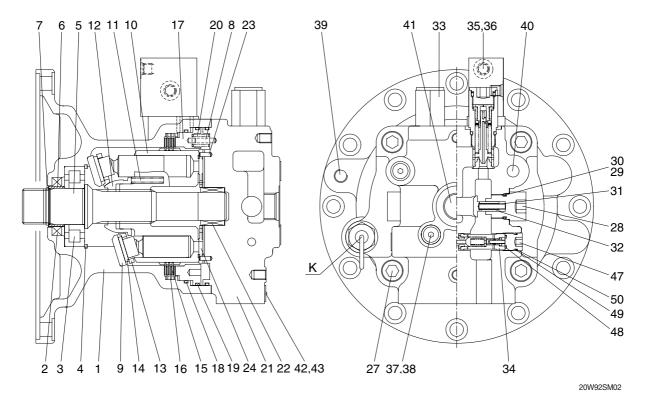


| 1  | Body           |
|----|----------------|
| 2  | Oil seal       |
| 3  | Roller bearing |
| 4  | Snap ring      |
| 5  | Shaft          |
| 6  | Bushing        |
| 7  | Stop ring      |
| 8  | Pin            |
| 9  | Shoe plate     |
| 10 | Cylinder block |
| 11 | Spring         |
| 12 | Ball guide     |
| 13 | Set plate      |
| 14 | Piston assy    |
| 15 | Friction plate |
| 16 | Plate          |

| 18 | O-ring               |
|----|----------------------|
| 19 | O-ring               |
| 20 | Spring               |
| 21 | Rear cover           |
| 22 | Needle bearing       |
| 23 | Pin                  |
| 24 | Valve plate          |
| 27 | Wrench bolt          |
| 28 | Plug                 |
| 29 | Back up ring         |
| 30 | O-ring               |
| 31 | Spring               |
| 32 | Check                |
| 33 | Relief valve         |
| 34 | Anti-inversion valve |
|    |                      |

17 Brake piston

| 35 | Time delay valve |
|----|------------------|
| 36 | Wrench bolt      |
| 37 | Plug             |
| 38 | O-ring           |
| 39 | Plug             |
| 40 | Plug             |
| 41 | Plug             |
| 42 | Name plate       |
| 43 | Rivet            |
| 44 | Level gauge      |
| 47 | Plug             |
| 48 | O-ring           |
| 49 | O-ring           |
| 50 | Back up ring     |
|    |                  |
|    |                  |

# 2) REDUCTION GEAR

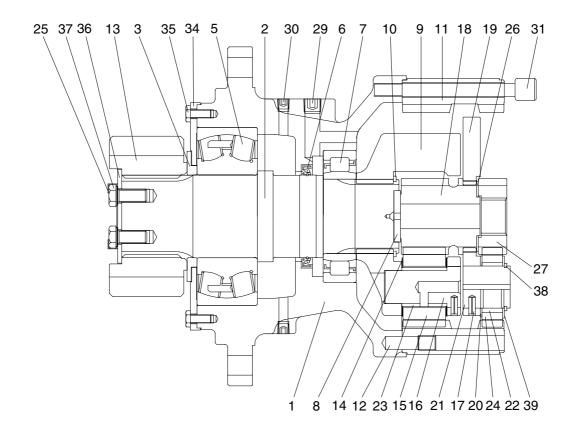

| 1  | Casing         | 14 | Thrust washer | 26 | Side plate 3 |
|----|----------------|----|---------------|----|--------------|
| 2  | Drive shaft    | 15 | Planet gear 2 | 27 | Sun gear 1   |
| 3  | Spacer         | 16 | Pin & bushing | 29 | Plug         |
| 5  | Roller bearing | 17 | Spring pin    | 30 | Plug         |
| 6  | Oil seal       | 18 | Sun gear 2    | 31 | Socket bolt  |
| 7  | Roller bearing | 19 | Carrier 1     | 34 | Cover plate  |
| 8  | Thrust plate   | 20 | Side plate 1  | 35 | Hexagon bolt |
| 9  | Carrier 2      | 21 | Pin 1         | 36 | Lock plate   |
| 10 | Stop ring      | 22 | Needle cage   | 37 | Hexagon bolt |
| 11 | Ring gear      | 23 | Bushing 2     | 38 | Stop ring    |
| 12 | Knock pin      | 24 | Planet gear 1 | 39 | Side plate 2 |
| 13 | Pinion gear    | 25 | Lock washer   |    |              |

#### 2. PRINCIPLE OF DRIVING

## 2.1 Generating the turning force

The high hydraulic supplied from a hydraulic pump flows into a cylinder (10) through valve casing of motor (21), and valve plate (24).

The high hydraulic is built as flowing on one side of Y-Y line connected by the upper and lower sides of piston (14).


The high hydraulic can generate the force,  $F1=P\times A$  (P : supplied pressure, A : water pressure area), like following pictures, working on a piston.

This force, F1, is divided as N1 thrust partial pressure and W1 radial partial pressure, in case of the plate of a tilt angle,  $\alpha$ .

W1 generates torque, T=W1+R1, for Y-Y line connected by the upper and lower sides of the piston as following pictures.

The sum of torque ( $\Sigma$ W1×R1), generated from each piston (4~5 pieces) on the side of a high hydraulic, generates the turning force.

This torque transfers the turning force to a cylinder (10) through a piston; because a cylinder is combined with a turning axis and spline, a turning axis rotates and a turning force is sent.

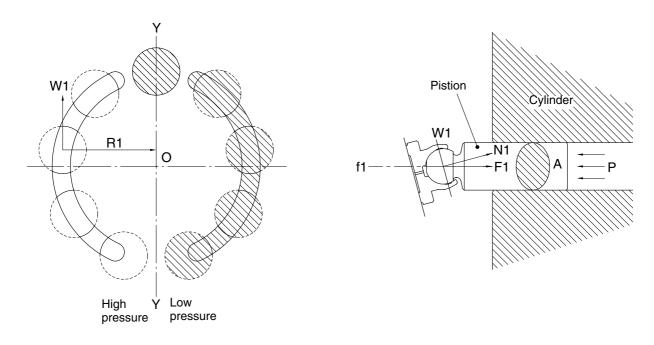

21078TM05


#### 2) MAKE UP VALVE

In the system using this type of motor, there is no counter balance functioning valve and there happens the case of revolution exceeding hydraulic supply of motor. To prevent the cavitation caused by insufficient oil flow there is a make up valve to fill up the oil insufficiency.


A make up valve is provided immediately before the port leading to the hydraulic oil tank to secure feed pressure required when the hydraulic motor makes a pumping action. The boost pressure acts on the hydraulic motor's feed port via the make up valve.

Pressurized oil into the port B, the motor rotate counterclockwise.

If the plunger of MCV moves neutral position, the oil in the motor is drain via left relief valve, the drain oil run into motor via right make up valve, which prevent the cavitation of motor.

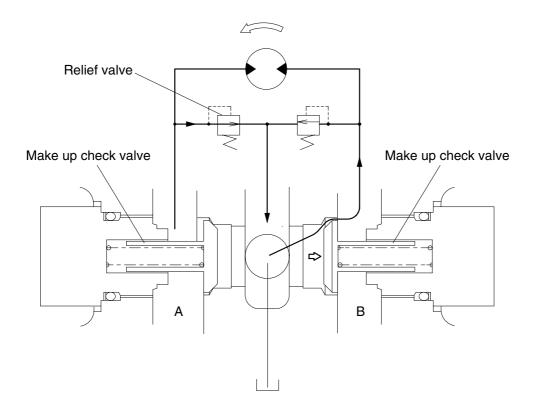

# 3) RELIEF VALVE

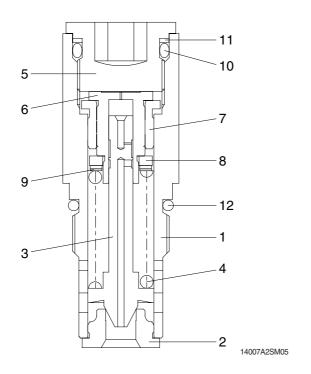


- 1 Body
- 2 Seat
- 3 Plunger
- 4 Spring
- 5 Adjusting screw
- 6 Piston
- 7 Bushing
- 8 Spring seat
- 9 Shim
- 10 O-ring
- 11 Back up ring
- 12 O-ring

## (1) Construction of relief valve


The valve casing contains two cartridge type relief valves that stop the regular and reverse rotations of the hydraulic motor. The relief valves relieve high pressure at start or at stop of swing motion and can control the relief pressure in two steps, high and low, in order to insure smooth operation.

## (2) Function of relief valve

Figure illustrates how the pressure acting on the relief valve is related to its rising process. Here is given the function, referring to the figure following page.

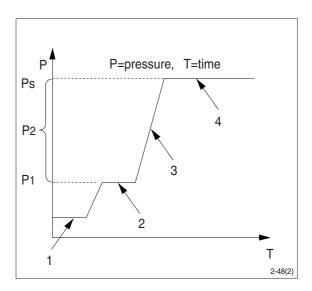

① Ports (P,R) at tank pressure.

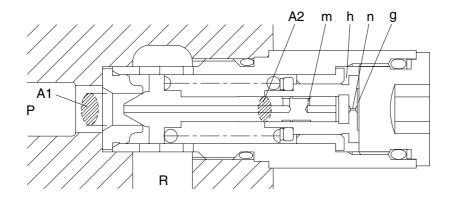


14007A2SM06

 $\$  When hydraulic oil pressure (P $\times$ A1) reaches the preset force (FsP) of spring (4), the plunger (3) moves to the right as shown.


$$P1 \times A1=Fsp+Pg \times A2$$

$$P1 = \frac{Fsp + Pg \times A2}{A1}$$

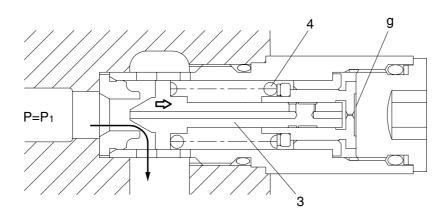

14007A2SM07

③ The oil flow chamber g via orifice m and n. When the pressure of chamber g reaches the preset force (FSP) of spring (4), the piston (6) moves left and stop the piston (6) hits the bottom of bushing (7).

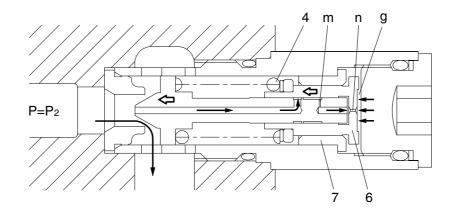


14007A2SM08

④ When piston (6) hits the bottom of bushing (7), it stops moving to the left any further. As the result, the pressure in chamber (g) equals (Ps).

$$Ps \times A1=Fsp+Ps \times A2$$

$$Ps = \frac{Fsp}{A_1 - A_2}$$

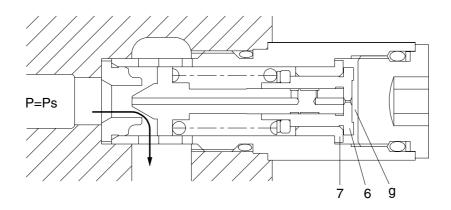


14007A2SM09

#### 4) BRAKE SYSTEM

#### (1) Control valve swing brake system

This is the brake system to stop the swing motion of the excavator during operation. In this system, the hydraulic circuit is throttled by the swing control valve, and the resistance created by this throttling works as a brake force to slow down the swing motion.

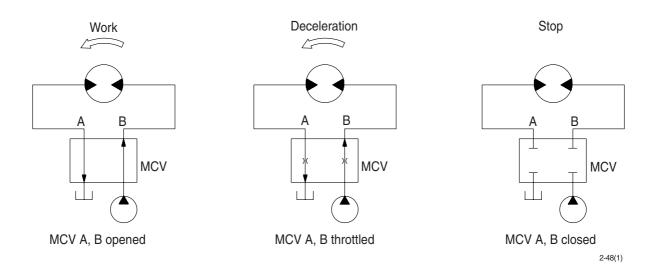


# (2) Mechanical swing parking brake system

This is function as a parking brake only when all of the RCV lever (except travel pedal) are not operated.

#### ① Brake assembly

Circumferential rotation of separate plate (16) is constrained by the groove located at housing (1). When housing is pressed down by brake spring (20) through friction plate (15), separate plate (16) and brake piston (17), friction force occurs there.

Cylinder block (10) is constrained by this friction force and brake acts, while brake releases when hydraulic force exceeds spring force.

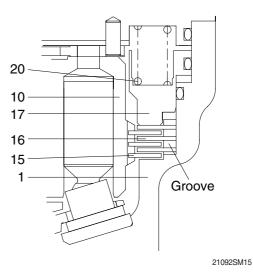


Housing
Separate plate
Cylinder block
Brake piston
Friction plate
Spring

## ② Operating principle

a. When one of the RCV lever (1) is set to the operation position, the each spool is shifted to left or right and the pilot oil flow is blocked. Then the pilot oil go to SH of the time delay valve (35). This pressure moves spool (5) to the leftward against the force of the spring(8), so pilot pump charged oil (P3) goes to the chamber G through port PG.

This pressure is applied to move the piston (17) to the upward against the force of the spring (20). Thus, it releases the brake force.

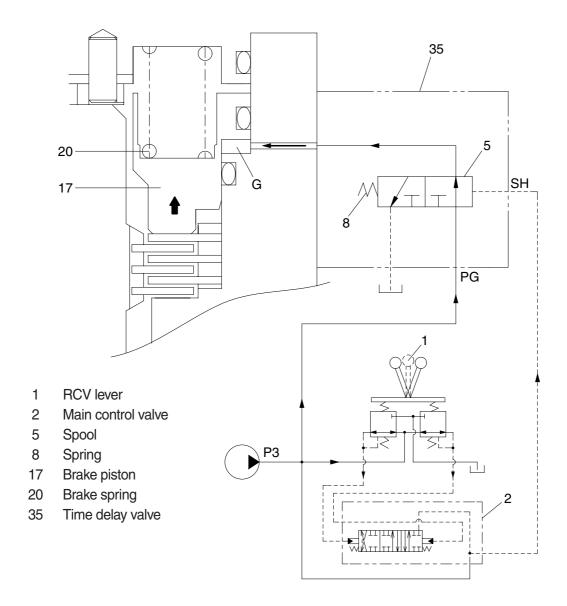

b. When all of the RCV lever (1) are set the neutral position, the spool (5) returns to right.Then, the brake piston (17) is moved lower by spring force and the return oil from the chamber G flows back to tank port.

At this time, the brake works.

