

## GROUP 2 ENGINE SPEED & STALL RPM

### 1. TEST CONDITION

- 1) Normal temperature of the whole system
  - Coolant : Approx 80°C (176°F)
  - Hydraulic oil : 45 ± 5°C (113 ± 10°F)
  - Transmission oil : 75 ± 5°C (167 ± 10°F)
- 2) Normal operating pressure : See page 6-92, 93.

### 2. SPECIFICATION


Engine speed, rpm							
Model	High idle (backhoe)	High idle (loader)	Low idle	Hyd stall (backhoe)	Hyd stall (loader)	Converter stall	Full stall
H930S	2300 ± 50	2340 ± 50	1000 ± 50	2220 ± 70	2220 ± 70	1980 ± 70	1720 ± 100
H940S	2300 ± 50	2380 ± 50	1000 ± 50	2230 ± 70	2230 ± 70	2030 ± 70	1690 ± 100

### 3. ENGINE RPM CHECK

Remark : If the checked data is not normal, it indicates that the related system is not working properly. Therefore, it is required to check the related system pressure : See page 6-92, 93.


#### 1) Hydraulic stall rpm (loader / backhoe)

- Start the engine and raise the bucket approx 45 cm (1.5 ft) as the figure.
- Press the accelerator pedal fully and operate the loader/backhoe bucket control lever to the retract position fully.
- Check the engine rpm at the above condition.

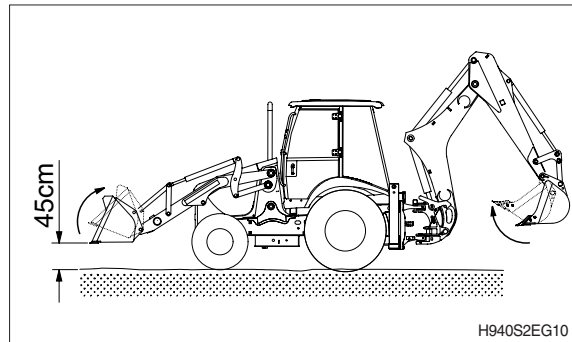

#### 2) Converter stall rpm

- Start the engine and lower the loader bucket on the ground as the figure.
- Press the brake pedal and accelerator pedal fully.
- Shift the transmission lever to the 4th forward position.
- Check the engine rpm at the above condition.

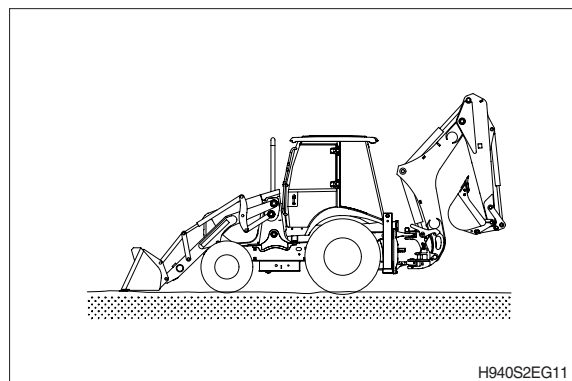

#### 3) Full stall rpm

- Start the engine and raise the loader bucket approx 45 cm (1.5 ft) as the figure.
- Press the brake pedal and accelerator pedal fully.
- Shift the transmission lever to the 4th forward position and operate the loader bucket lever to the retract position fully.
- Check the engine rpm at the above condition.

