

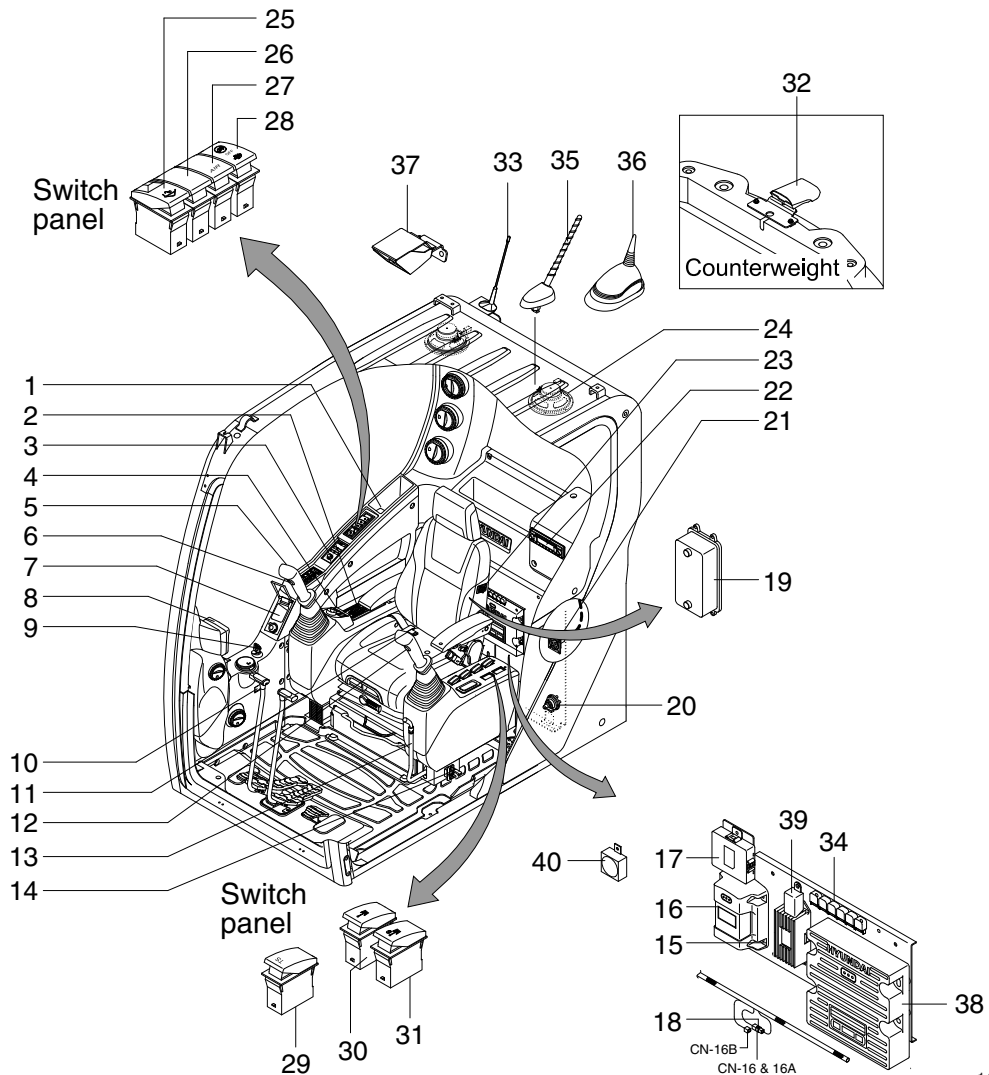
SECTION 4 ELECTRICAL SYSTEM

Group 1 Component Location	4-1
Group 2 Electrical Circuit	4-3
Group 3 Electrical Component Specification	4-23
Group 4 Connectors	4-35

SECTION 4 ELECTRICAL SYSTEM

GROUP 1 COMPONENT LOCATION

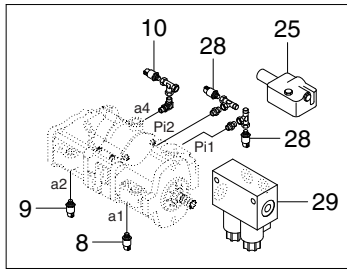
1. LOCATION 1



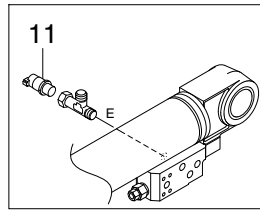
145A4EL01

- | | | |
|---------------------------------|-----------------------------------|---------------------------------|
| 1 Cigar lighter | 15 DC/DC converter | 29 Travel straight switch |
| 2 Aircon and heater switch | 16 Remote controller unit | 30 Fine swing switch |
| 3 Remote controller | 17 Handsfree control unit | 31 Swing lock switch |
| 4 Accel dial switch | 18 Emergency engine connector | 32 Around view camera (rear) |
| 5 Horn switch | 19 Fuse box assy | 33 Satellite antenna |
| 6 Breaker operation switch | 20 Master switch | 34 Relay - 5P |
| 7 USB & socket assy | 21 RS232 & J1939 service socket | 35 Intergrated or AM/FM antenna |
| 8 Cluster | 22 Radio & USB player | 36 Mobile antenna |
| 9 Start switch | 23 Heated seat switch | 37 Around view camera (front) |
| 10 Service meter | 24 Speaker | 38 Machine control unit |
| 11 One touch decel switch | 25 Quick clamp switch | 39 Power relay |
| 12 Power max switch | 26 Option attachment switch | 40 Warning buzzer |
| 13 Safety lever | 27 Air compressor switch | |
| 14 Emergency engine stop switch | 28 Exhaust system cleaning switch | |

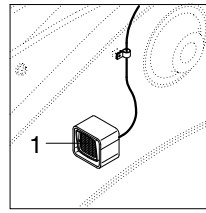
2. LOCATION 2



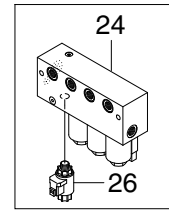
MAIN PUMP



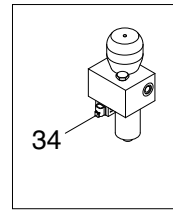
BOOM SAFETY VALVE



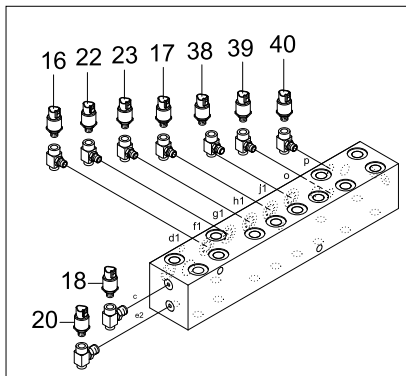
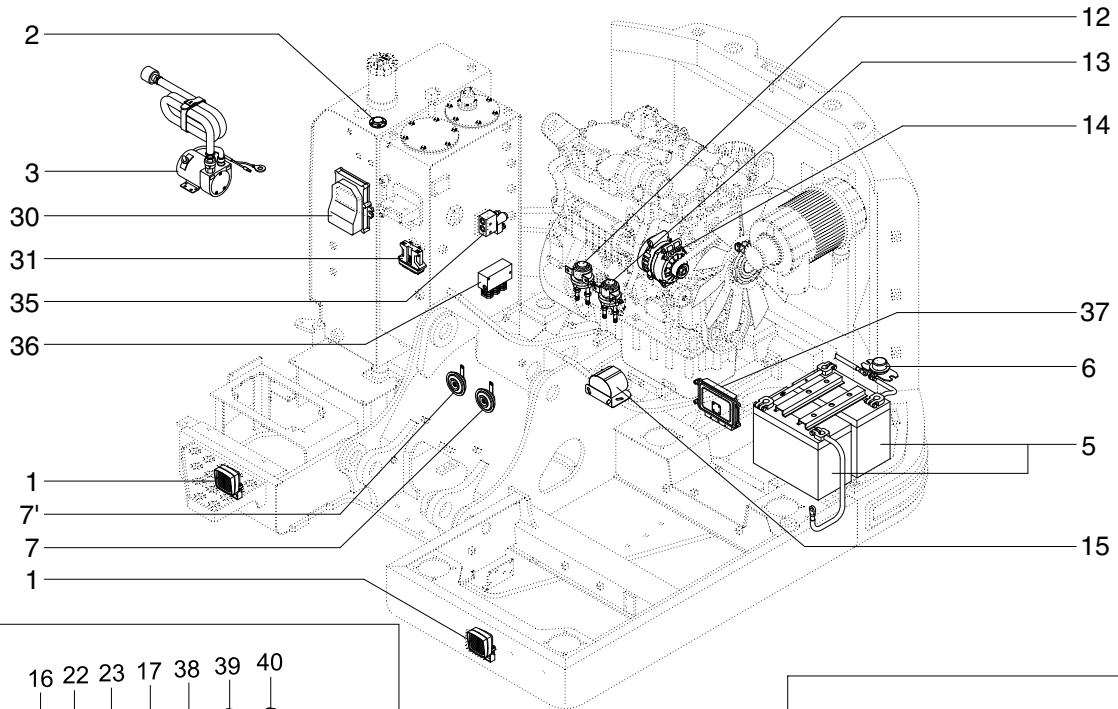
BOOM



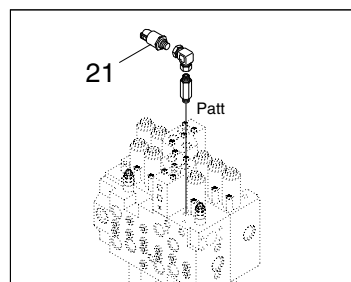
4-CARTRIDGE VALVE



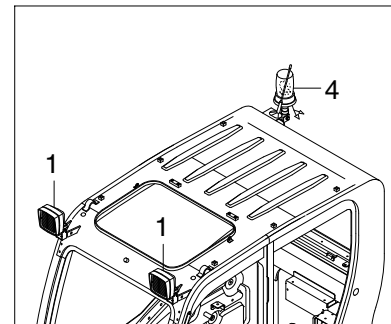
1-CARTRIDGE VALVE



TERMINAL BLOCK



MAIN CONTROL VALVE



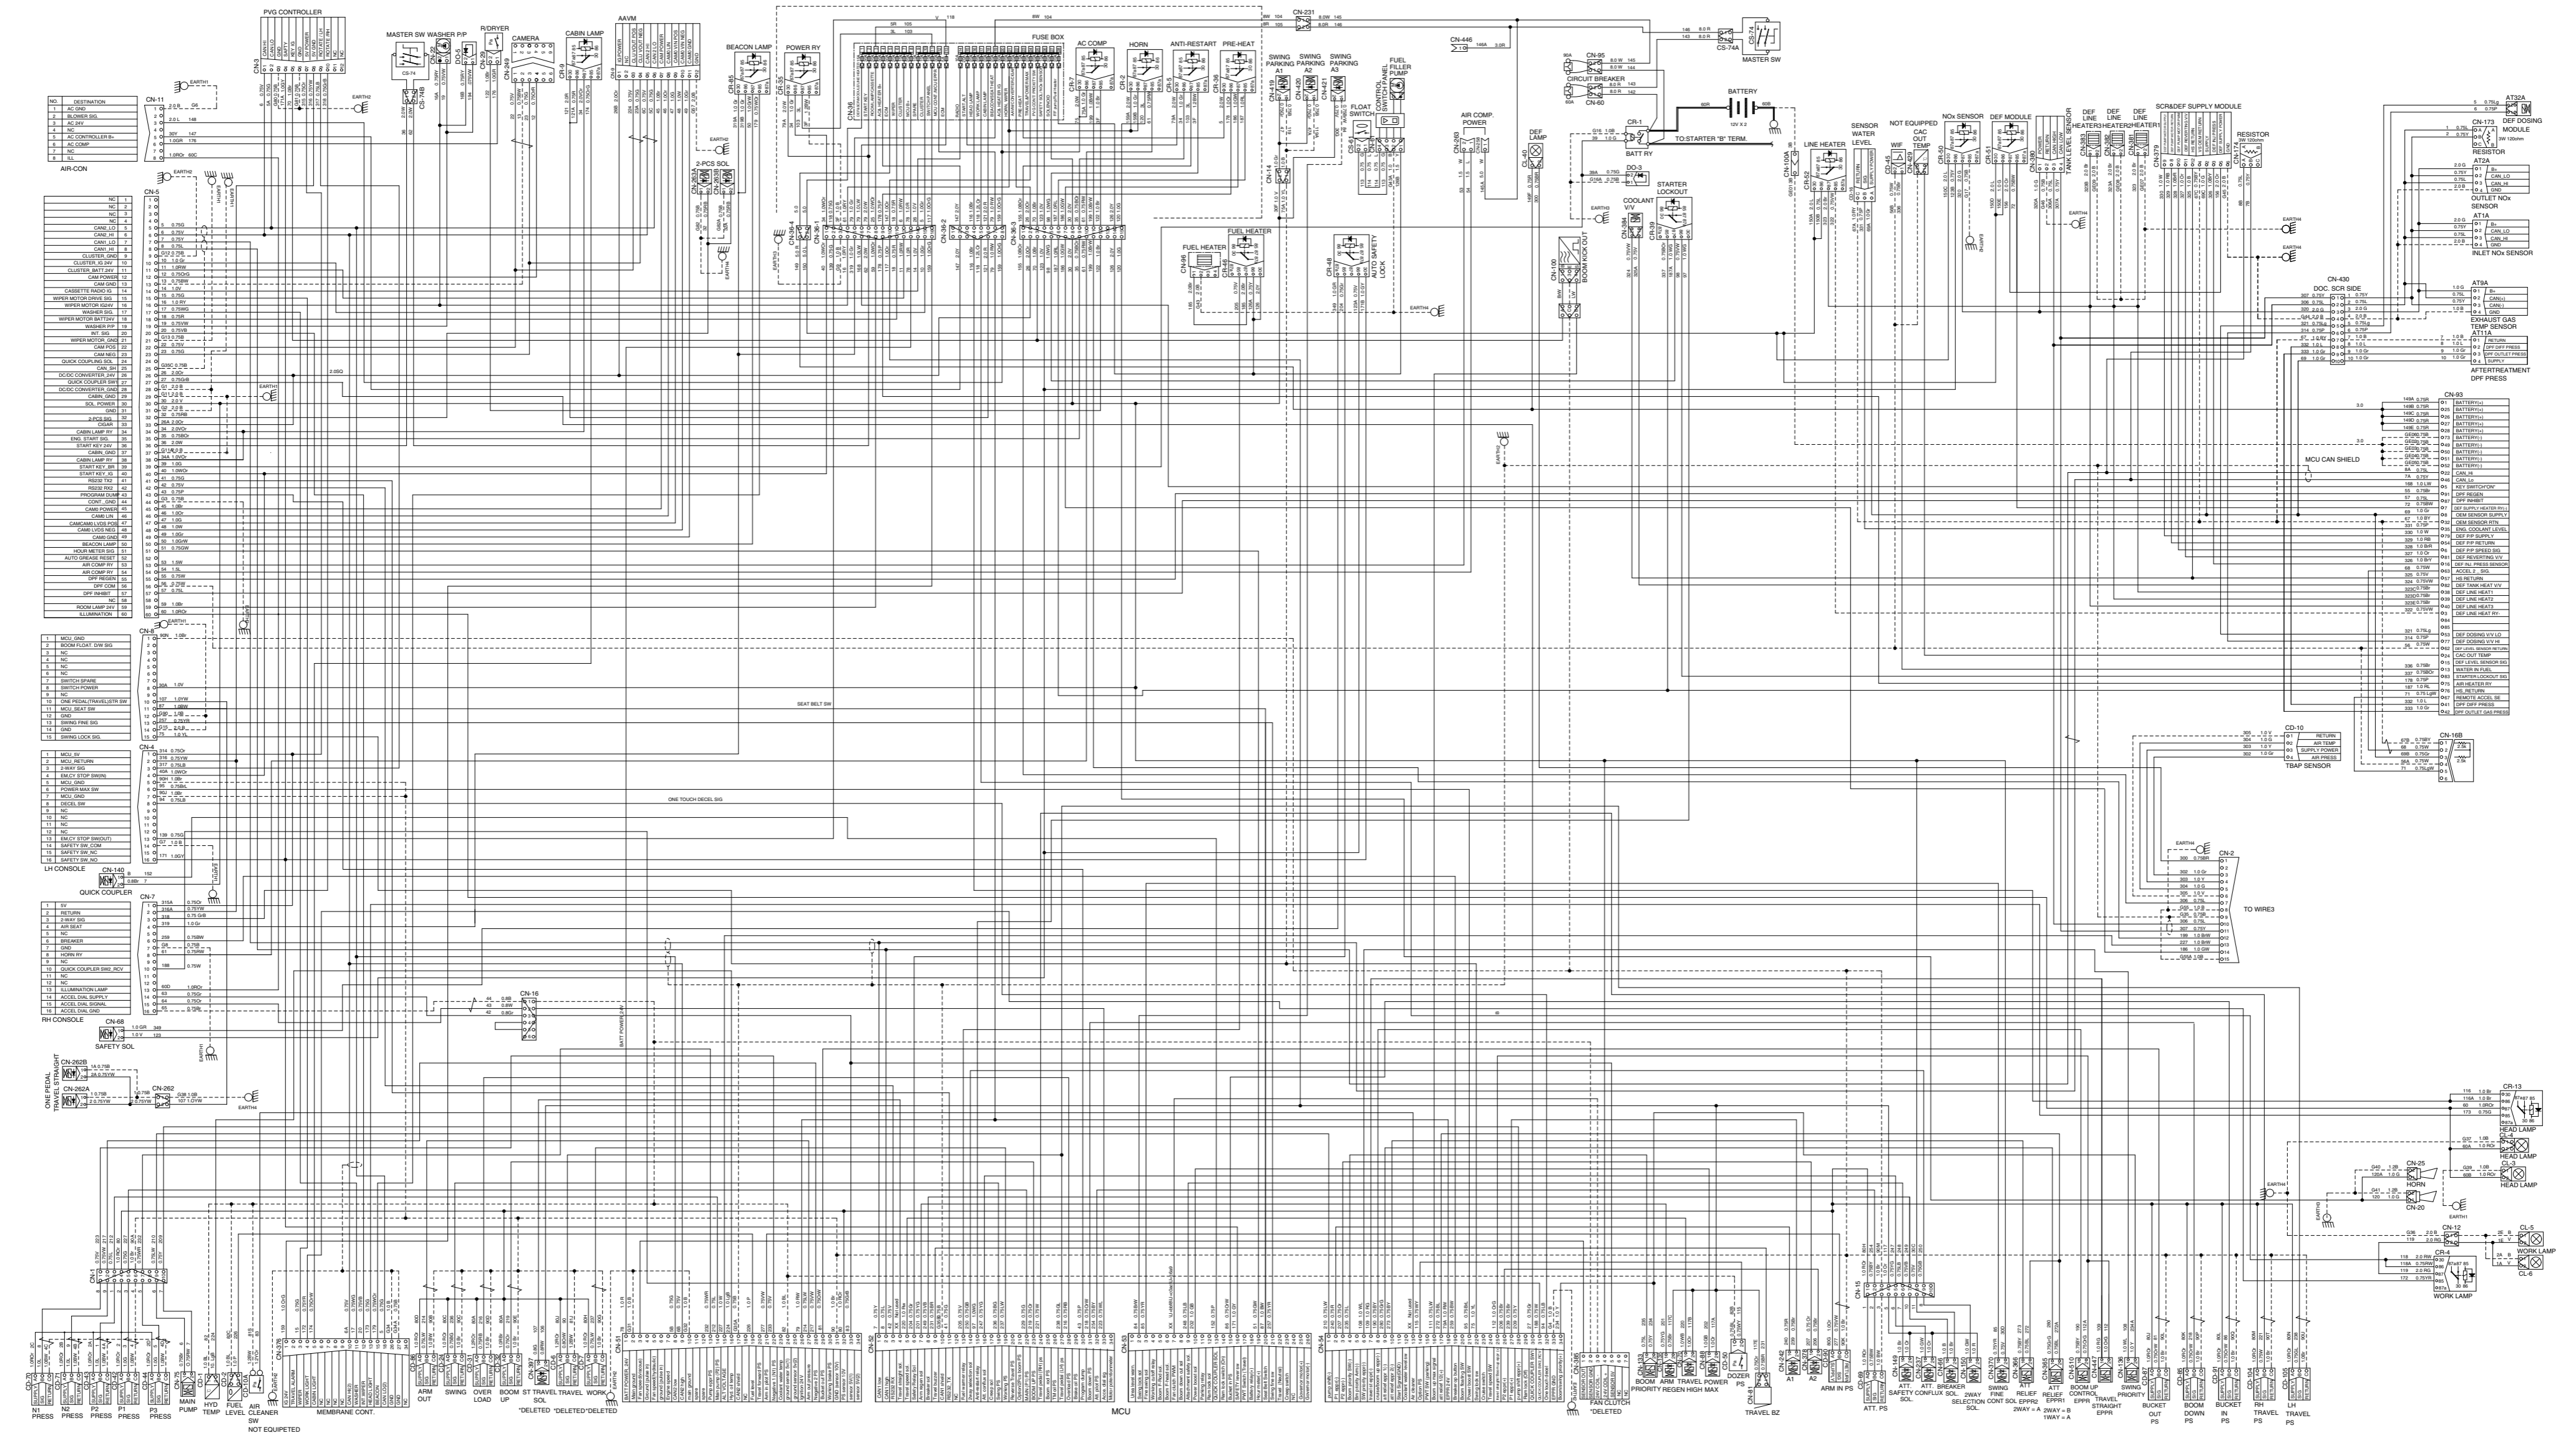
CAB

145A4EL02

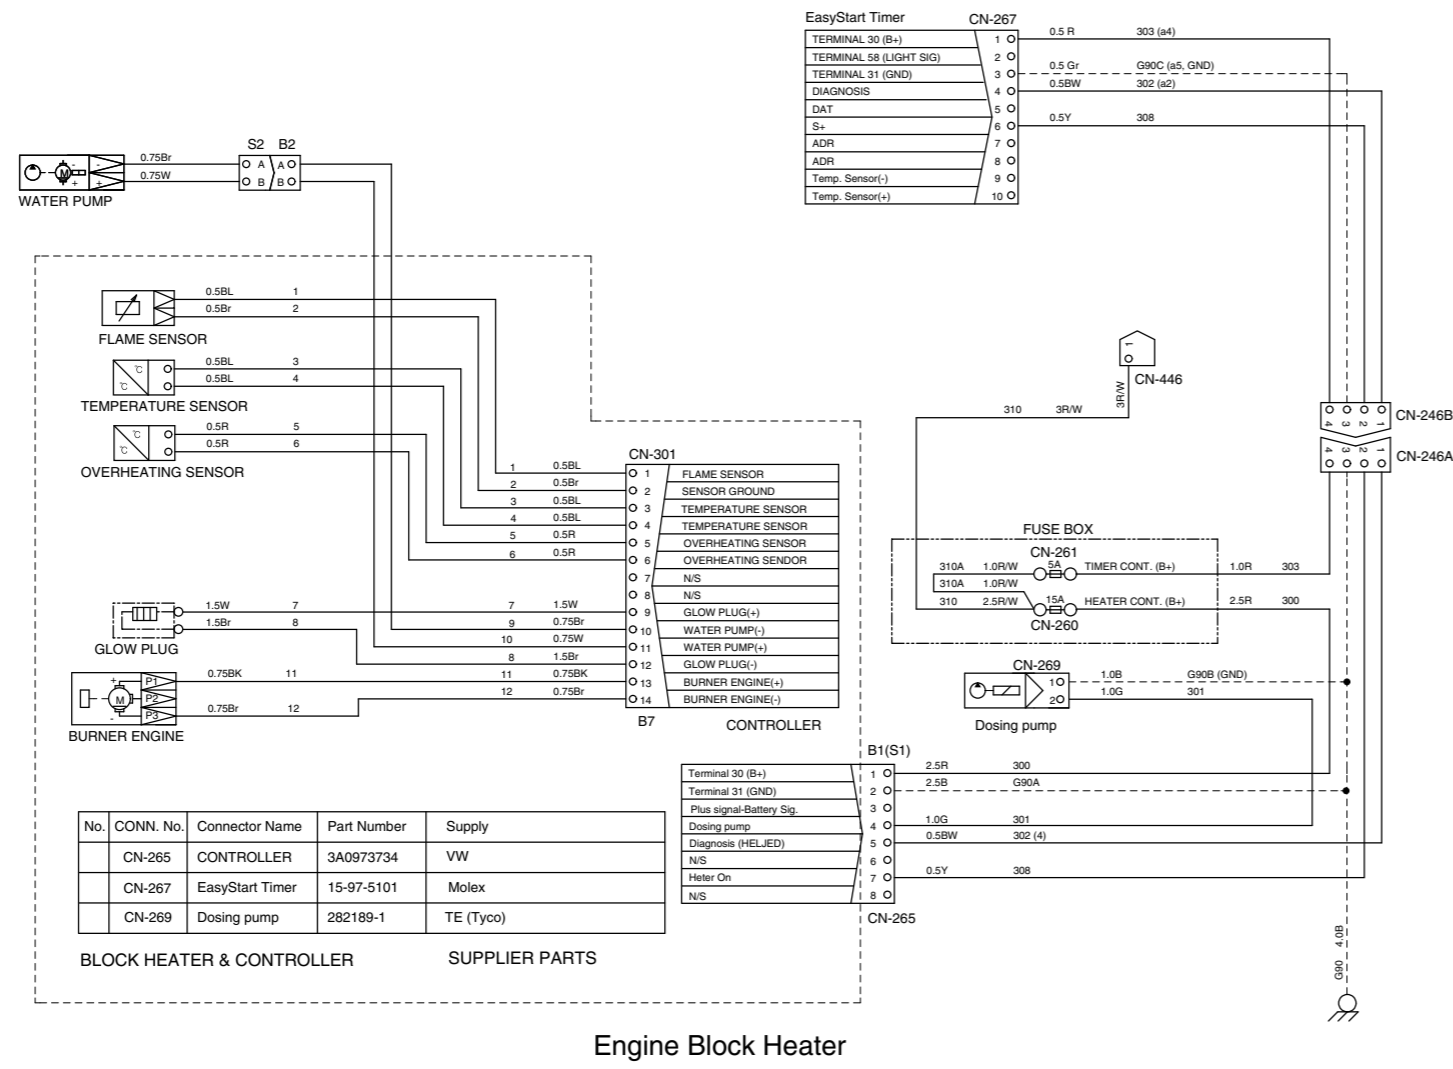
- | | | |
|-----------------------------|------------------------------|---------------------------------|
| 1 Lamp | 13 Heater relay | 28 Nega-control pressure sensor |
| 2 Fuel sender | 14 Alternator | 29 Flow control EPPR valve |
| 3 Fuel filler pump | 15 Travel alarm buzzer | 30 Relay drive unit |
| 4 Beacon lamp | 16 Arm out pressure sensor | 31 PVG 32 controller |
| 5 Battery | 17 Boom up pressure sensor | 34 Safety solenoid valve |
| 6 Battery relay | 18 Swing pressure sensor | 35 Swing fine solenoid valve |
| 7 Horn - high | 20 Arm in pressure sensor | 36 Swing lock solenoid valve |
| 7' Horn - low | 21 Attach pressure sensor | 37 AAVM controller |
| 8 A1 pressure sensor | 22 Bucket in pressur sensor | 38 Boom down pressure sensor |
| 9 A2 pressure sensor | 23 Bucket out pressur sensor | 39 LH travel pressure sensor |
| 10 EPPR pressure sensor | 24 4 cartridge valve | 40 RH travel pressure sensor |
| 11 Overload pressure sensor | 25 Pump EPPR valve | |
| 12 Start relay | 26 Boom priority EPPR valve | |

GROUP 2 ELECTRICAL CIRCUIT (1/2)

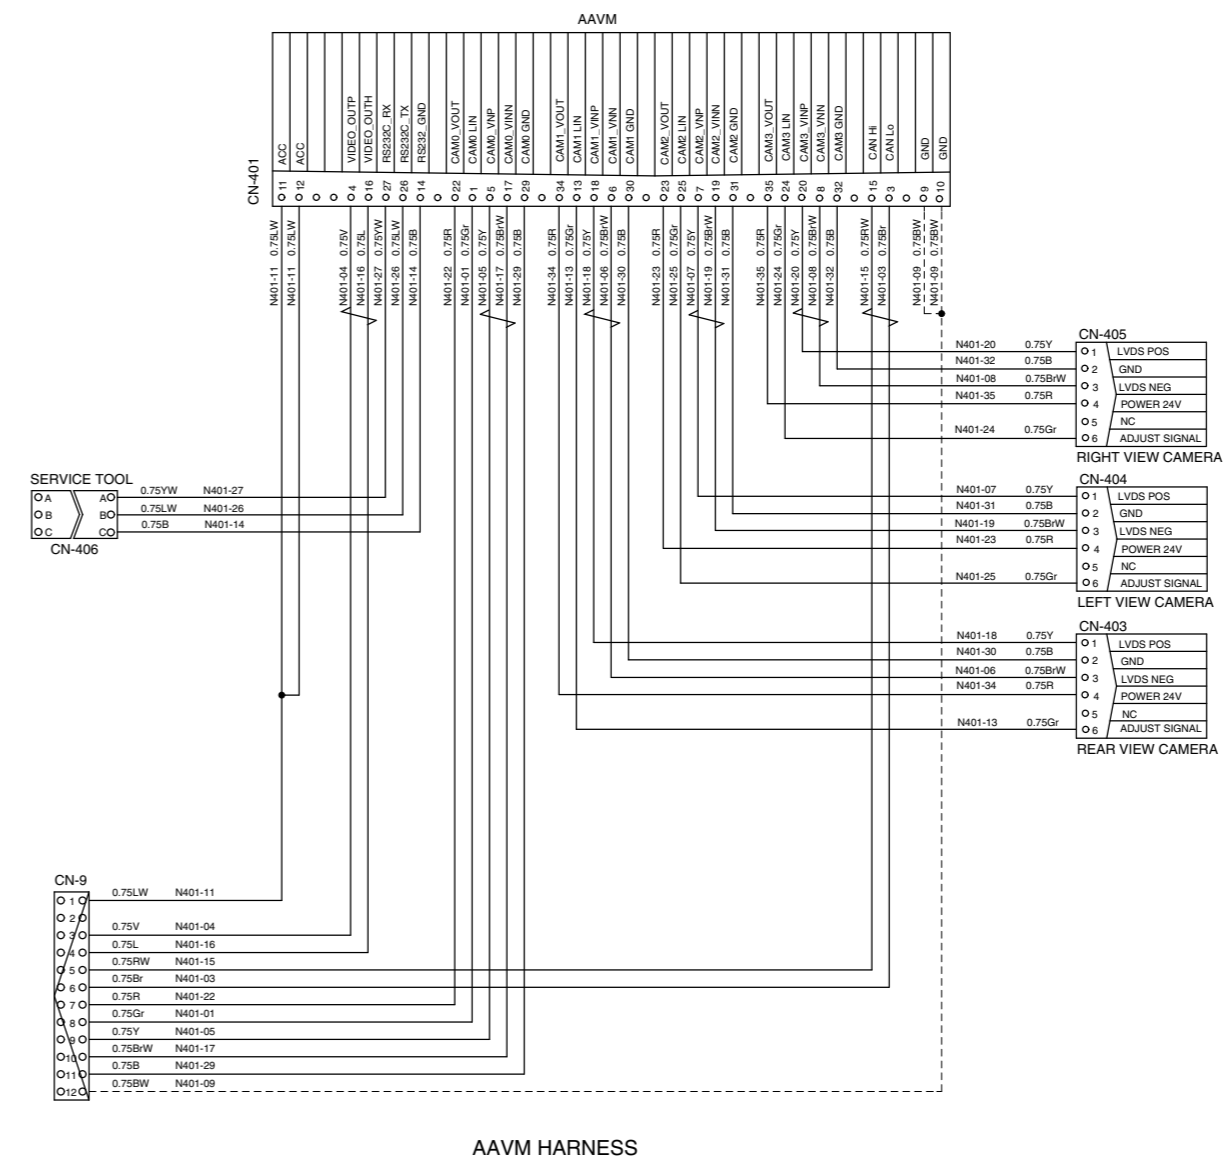
ELECTRICAL CIRCUIT (1/3)



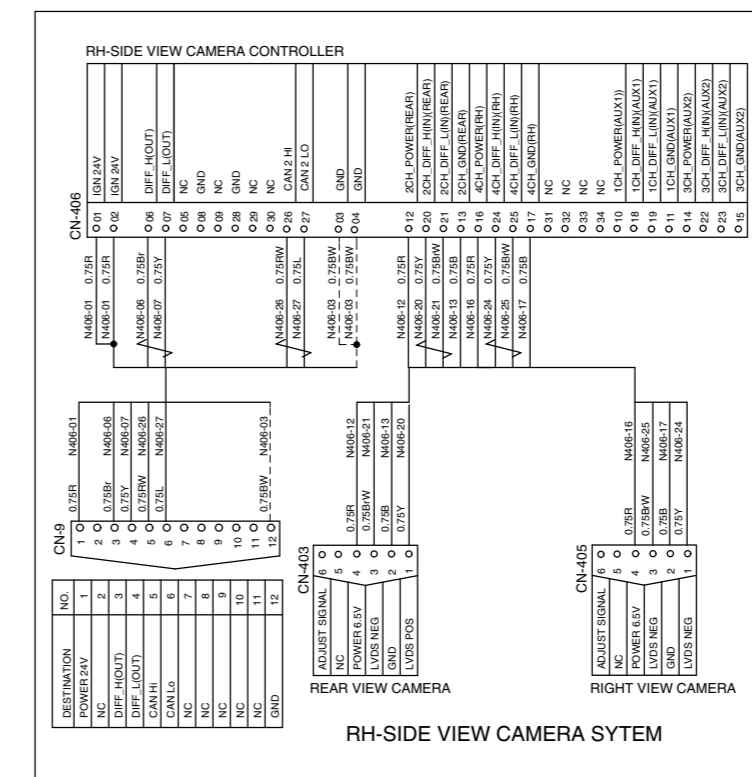
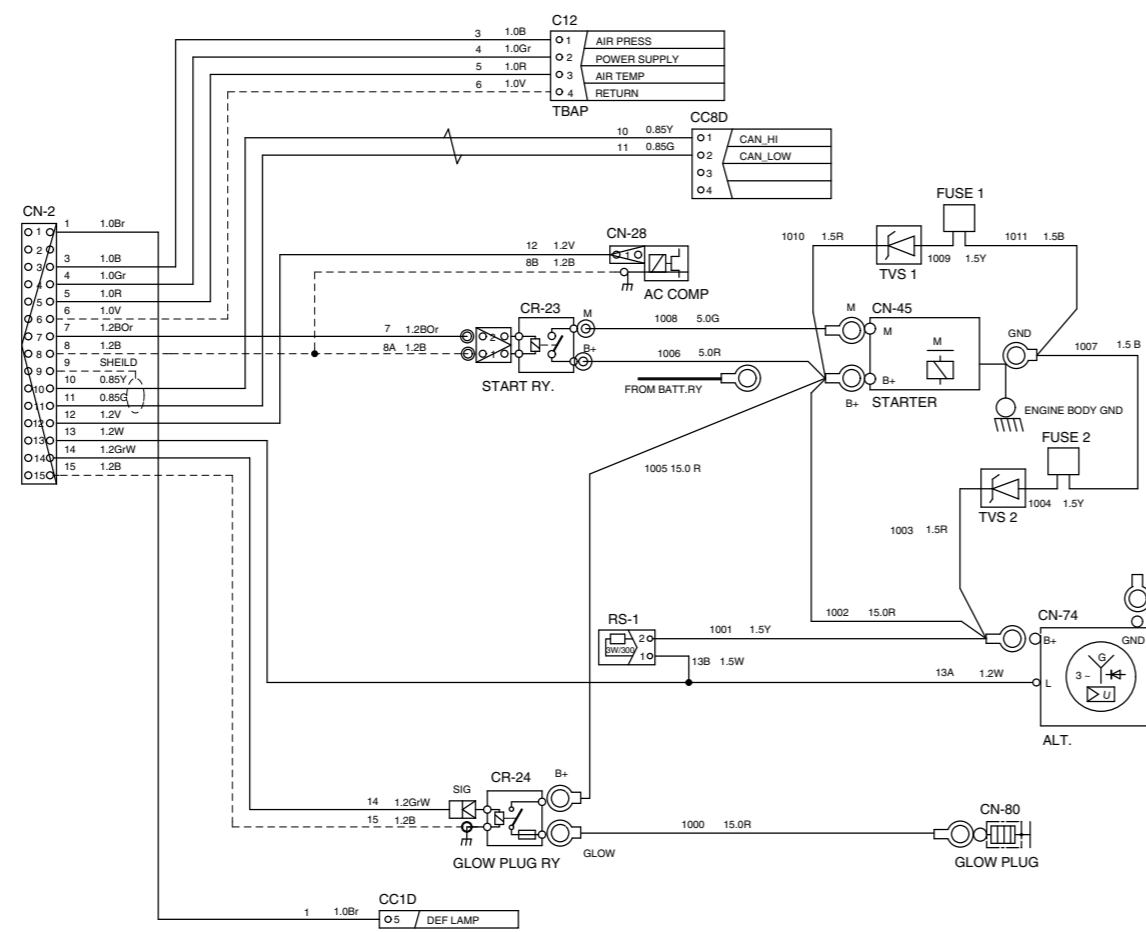
ELECTRICAL CIRCUIT (3/3)



Engine Block Heater



AAVM HARNESS



RH-SIDE VIEW CAMERA SYSTEM

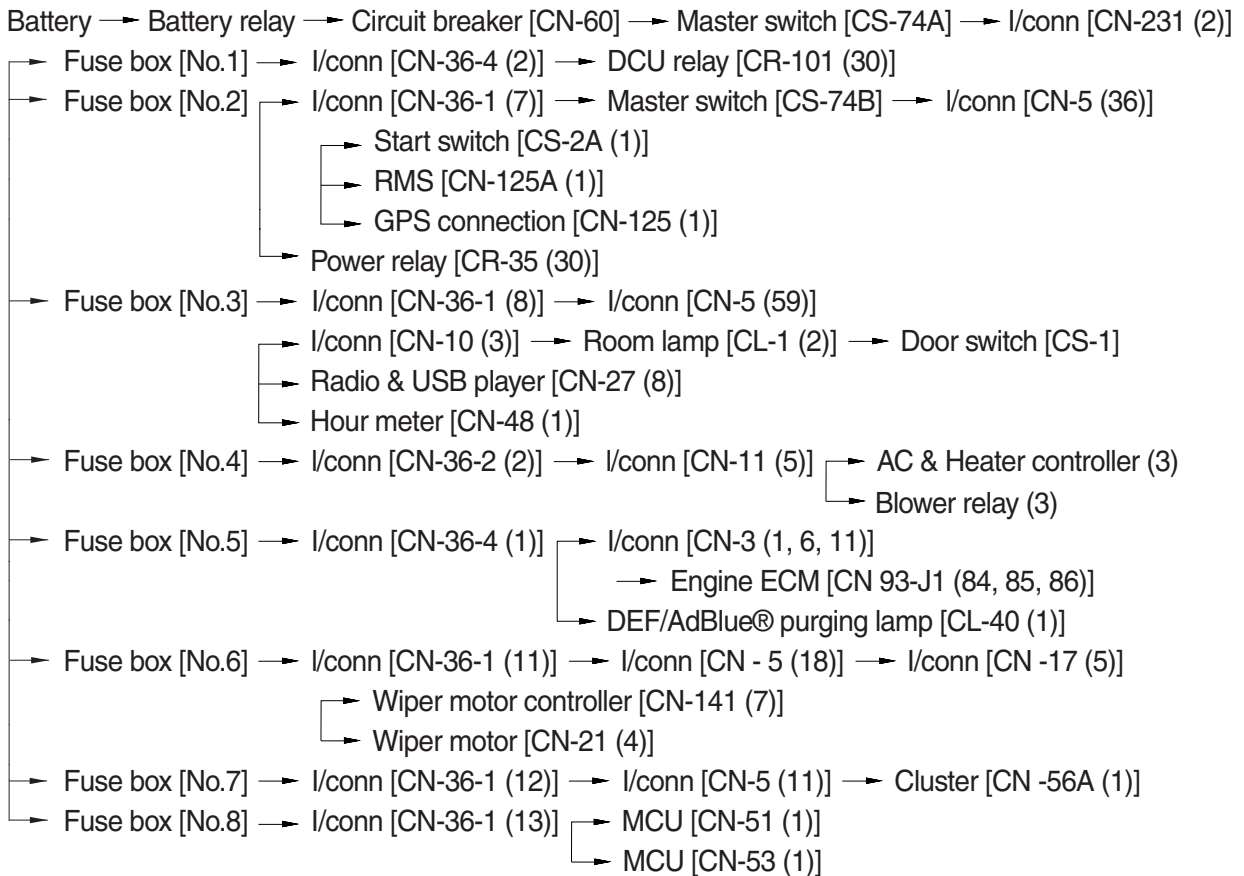
MEMORANDUM

1. POWER CIRCUIT

The negative terminal of battery is grounded to the machine chassis.

When the start switch is in the OFF position, the current flows from the positive battery terminal as shown below.

1) OPERATING FLOW



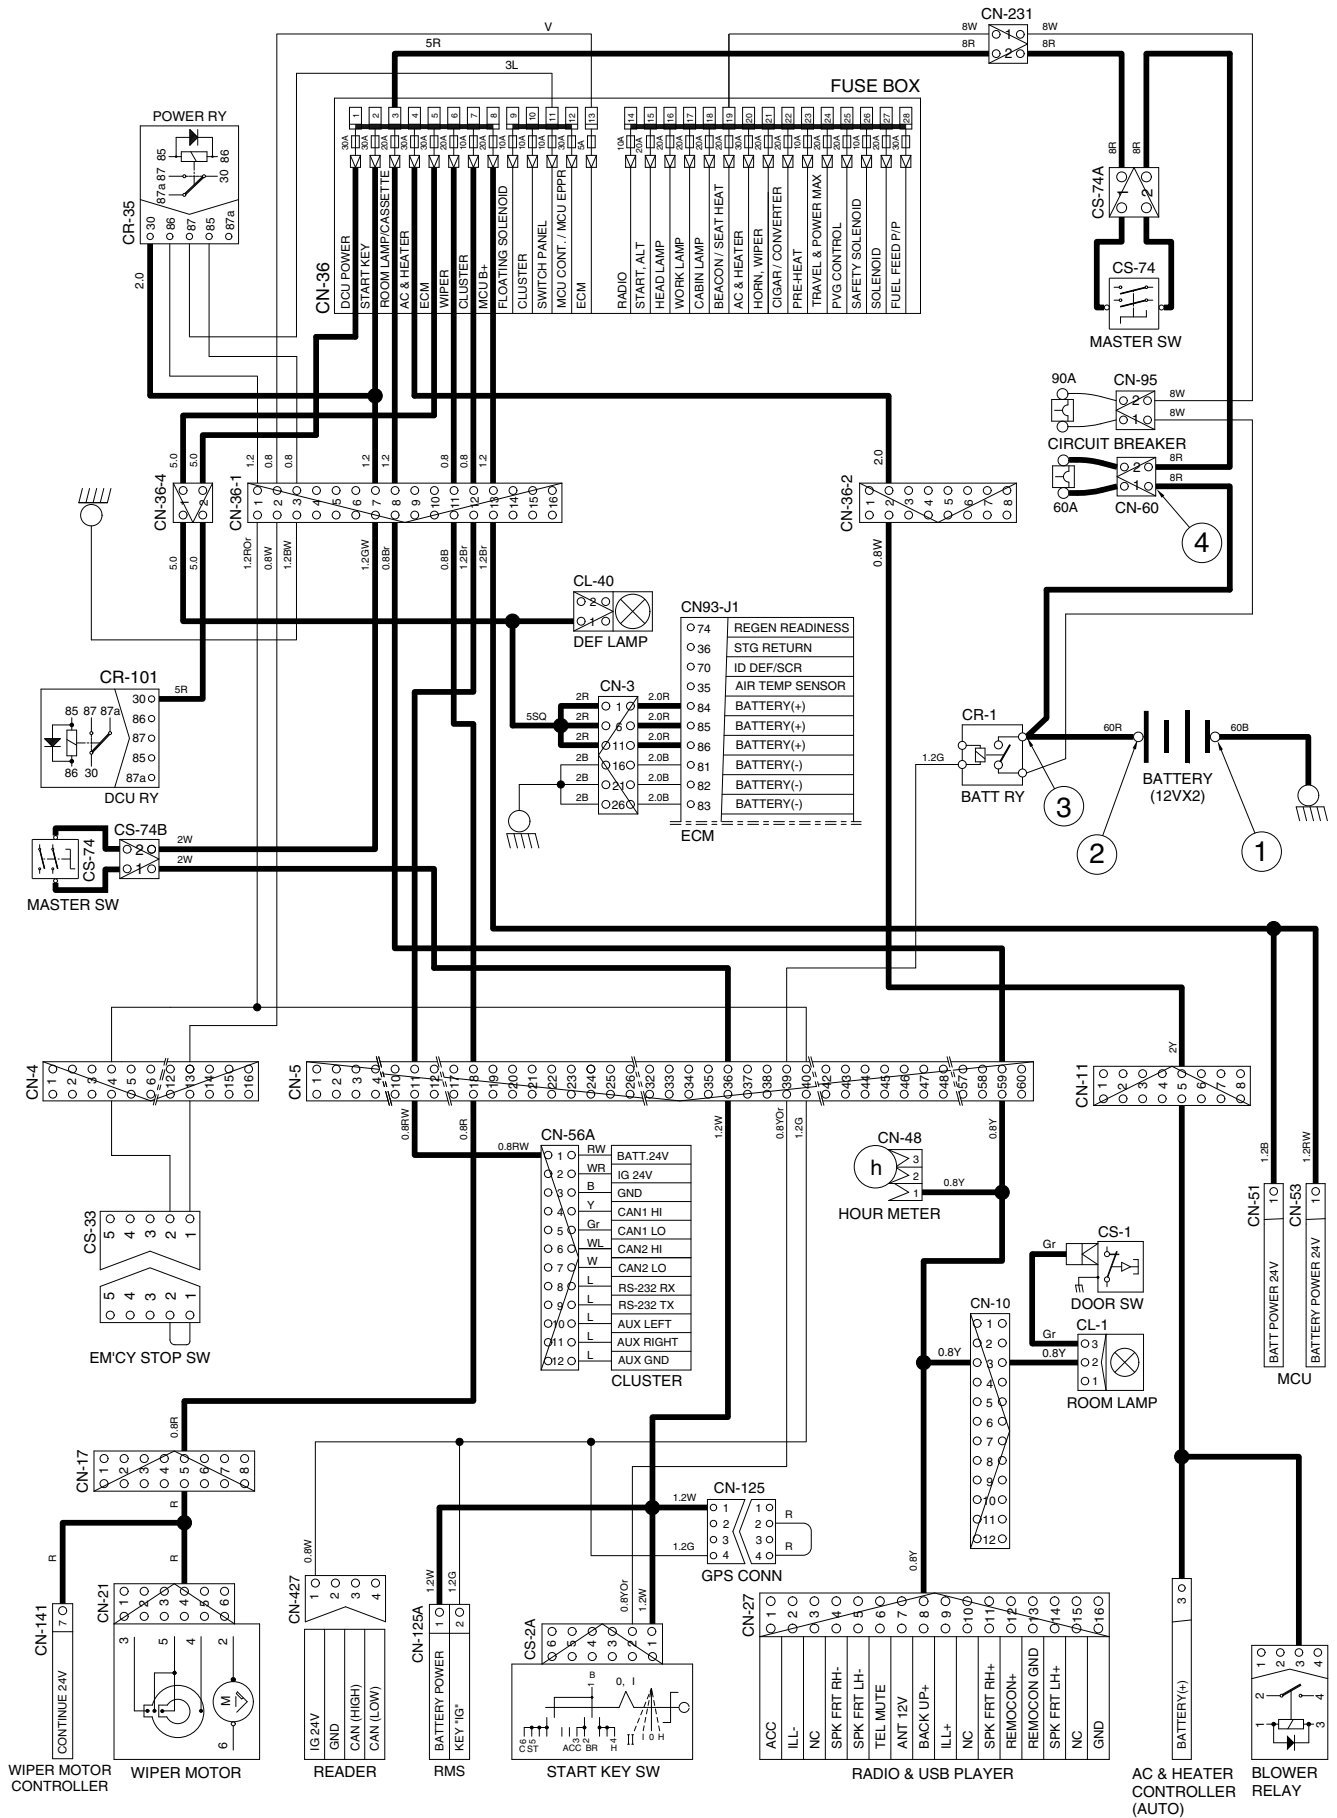
※ I/conn : Intermediate connector

2) CHECK POINT

Engine	Start switch	Check point	Voltage
OFF	OFF	① - GND (battery 1EA)	10~12.5V
		② - GND (battery 2EA)	20~25V
		③ - GND (battery relay)	20~25V
		④ - GND (circuit breaker)	20~25V

※ GND : Ground

POWER CIRCUIT



145ZF4EL05

2. STARTING CIRCUIT

1) OPERATING FLOW

Battery (+) terminal → Battery relay [CR-1] → Circuit breaker [CN-60] → Master switch [CS-74A]
 → I/conn [CN-231 (2)] → Fuse box [No.2] → I/conn [CN-36-1 (7)] → Master switch [CS-74B]
 → I/conn [CN-5 (36)] → Start switch [CS-2A (1)]

(1) When start key switch is in ON position

Start switch ON [CS-2A (2)] → I/conn [CN-5 (39)]
 → Battery relay [CR-1] → Battery relay operating (all power is supplied with the electric component)
 Start switch ON [CS-2A (3)] → GPS conn [CN-125 (2)→(4)]
 I/conn [CN-5 (40)] → I/conn [CN-36-1 (1)] → Power relay [CR-35 (86)→(87)]
 → Fuse box [No.9~12]
 I/conn [CN-4 (4)] → Emergency engine stop sw [CS-33 (2)→(1)]
 → I/conn [CN-4 (13)] → I/conn [CN-36-1 (2)] → Fuse box [No. 13]
 → I/conn [CN-36-1 (6)] → I/conn [CN-2 (6)]
 → Engine ECM [CN 93-J1 (69)]
 Reader [CN-427 (1)]
 RMS [CN-125A (2)]

(2) When start key switch is in START position

Start switch START [CS-2A (6)] → I/conn [CN-5 (35)] → I/conn [CN-36-3 (9)]
 → Anti-restart relay [CR-5 (86)→(87)] → I/conn [CN-36-3 (1)] → I/conn [CN-2 (16)]
 → Start relay [CR-23 (2)] → Starter motor operating

2) CHECK POINT

Engine	Start switch	Check point	Voltage
OPERATING	START	① - GND (battery) ② - GND (start key) ③ - GND (battery relay M4) ④ - GND (starter B ⁺) ⑤ - GND (starter M) ⑥ - GND (start relay) ⑦ - GND (battery relay M8)	20~25V

3. CHARGING CIRCUIT

When the starter is activated and the engine is started, the operator releases the starting switch to the ON position.

Charging current generated by operating the alternator flows into the battery through the battery relay [CR-1].

The current also flows from the alternator to each electrical component and controller through the fuse box.

1) OPERATING FLOW

(1) Warning flow

Alternator [CN-74 (2)] → I/conn [CN-2 (18)] → MCU alternator level [CN-52 (27)]
 → Cluster charging warning lamp (via CAN interface)

(2) Charging flow

Alternator "B+" terminal → Starter motor [CN-45 (B+)]
 → Battery relay

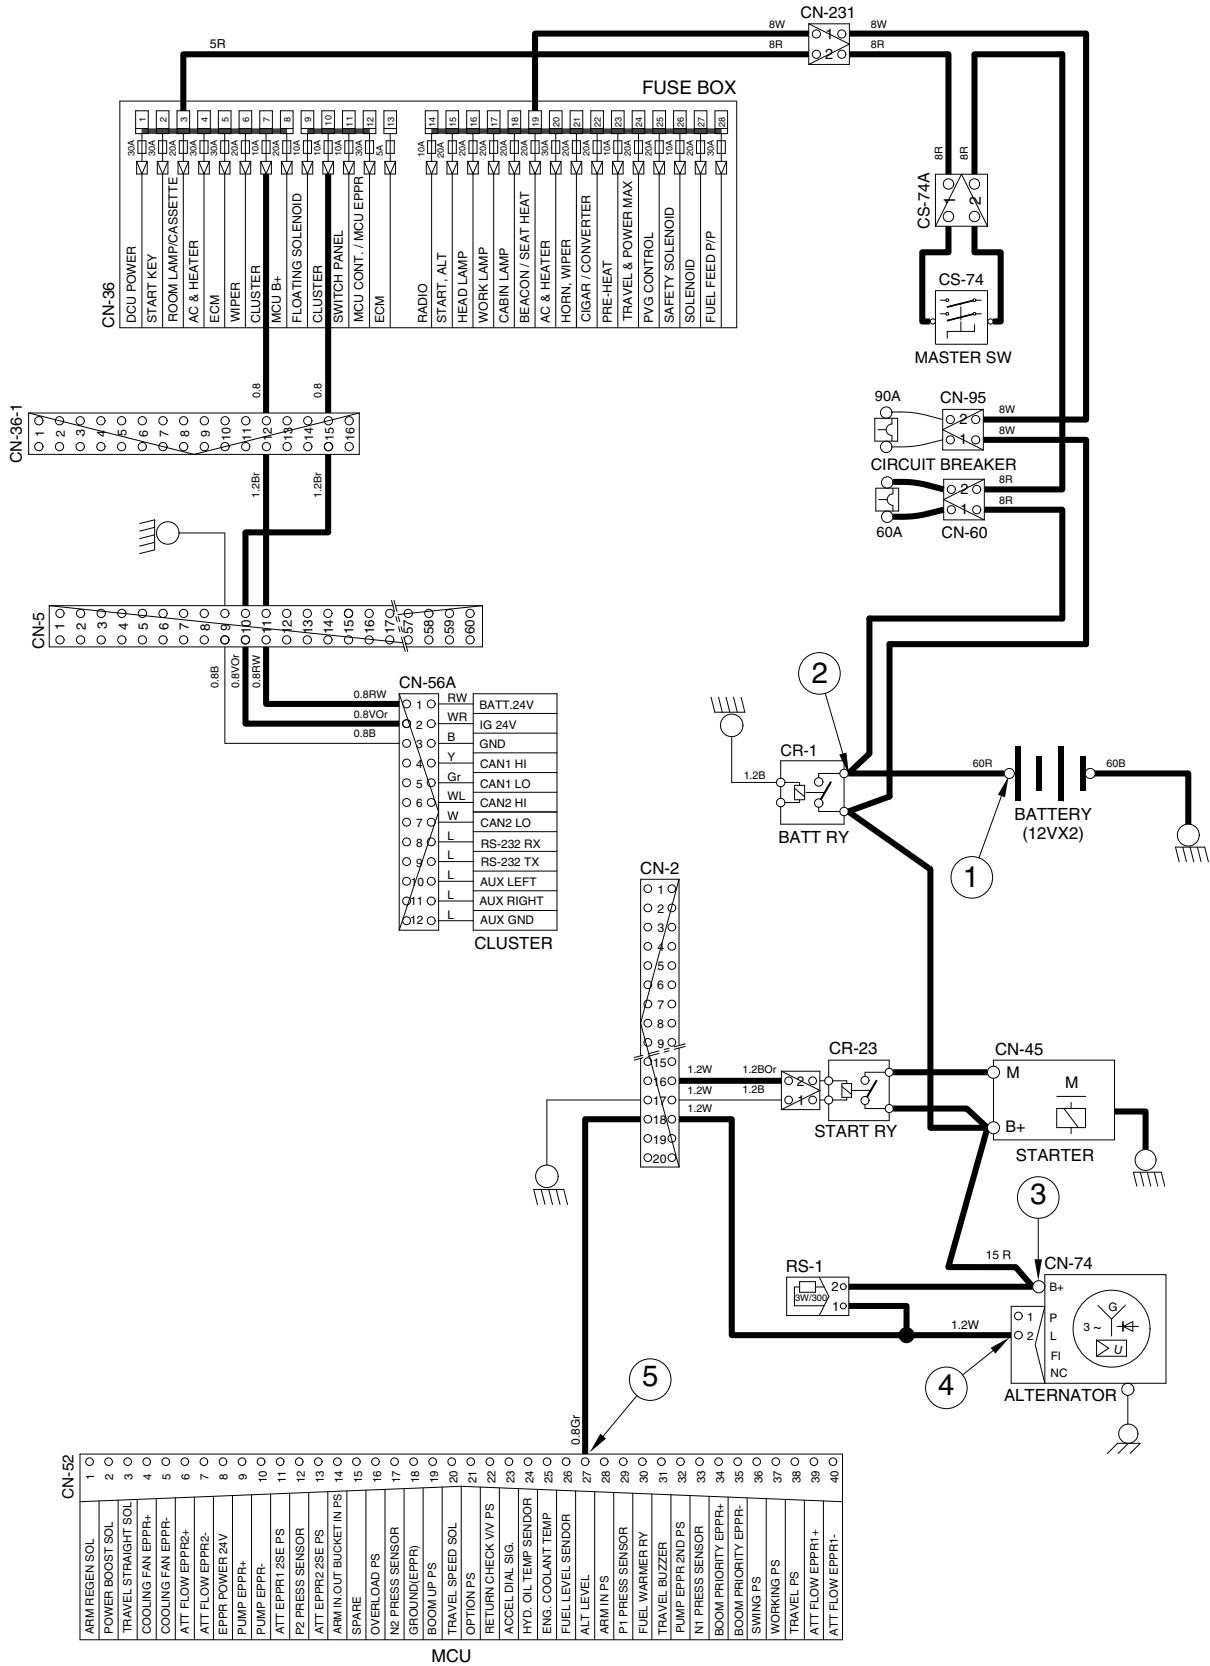
- Battery (+) terminal
- Circuit breaker [CN-60] → Master switch [CS-74A] → I/conn [CN-231 (2)]
 → Fuse box [No. 1~8]
- Circuit breaker [CN-95] → I/conn [CN-231 (1)] → Fuse box [No. 14~28]

2) CHECK POINT

Engine	Start switch	Check point	Voltage
Run	ON	① - GND (battery voltage) ② - GND (battery relay) ③ - GND (alternator B ⁺ terminal) ④ - GND (alternator L terminal) ⑤ - GND (MCU)	20~25V

※ GND : Ground

CHARGING CIRCUIT



4. HEAD AND WORK LIGHT CIRCUIT

1) OPERATING FLOW

Fuse box (No.16) → I/conn [CN-36-2 (4)] → Head light relay [CR-13 (30, 86)]

Fuse box (No.17) → I/conn [CN-36-2 (5)] → Work light relay [CR-4 (30, 86)]

(1) Head light switch ON

Head light switch ON [CN-376 (13)] → Head light relay [CR-13 (85) → (87)]

→ Head light ON [CL-3 (2), CL-4 (2)]

→ I/conn [CN-7 (13)] → Accel dial LED ON [CN-267 (2)]

→ I/conn [CN-5 (60)] → Radio & USB player illumination ON [CN-27 (9)]

→ Remote controller illumination ON [CN-245A (9)]

→ USB & socket illumination ON [CN-246 (7)]

→ Cigar lighter [CL-2]

→ I/conn [CN-11 (8)] → AC & heater controller illumination ON (4)

(2) Work light switch ON

Work light switch ON [CN-376 (4)] → Work light relay [CR-4 (85) → (87)]

→ I/conn [CN-12 (2)] → Work light ON [CL-5 (2), CL-6 (2)]

2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (fuse box) ② - GND (head light switch power output) ③ - GND (head light relay) ④ - GND (head light) ⑤ - GND (fuse box) ⑥ - GND (work light switch power output) ⑦ - GND (work light relay) ⑧ - GND (work light)	20~25V

※ GND : Ground

5. BEACON LAMP AND CAB LIGHT CIRCUIT

1) OPERATING FLOW

Fuse box (No.19) → I/conn [CN-36-1 (5)] → Beacon lamp relay [CR-85 (30, 86)]

Fuse box (No.18) → I/conn [CN-36-2 (6)] → Cab light relay [CR-9 (30, 86)]

(1) Beacon lamp switch ON

Beacon lamp switch ON [CN-376 (15)] → Beacon lamp relay [CR-85 (85)→ (87)]

→ I/conn [CN-5 (50)] → I/conn [CN-10 (10)] → Beacon lamp ON [CL-7]

(2) Cab light switch ON

Cab light switch ON [CN-376 (5)] → Cab lamp relay [CR-9 (85)→ (87)]

→ I/conn [CN-5 (34, 38)]

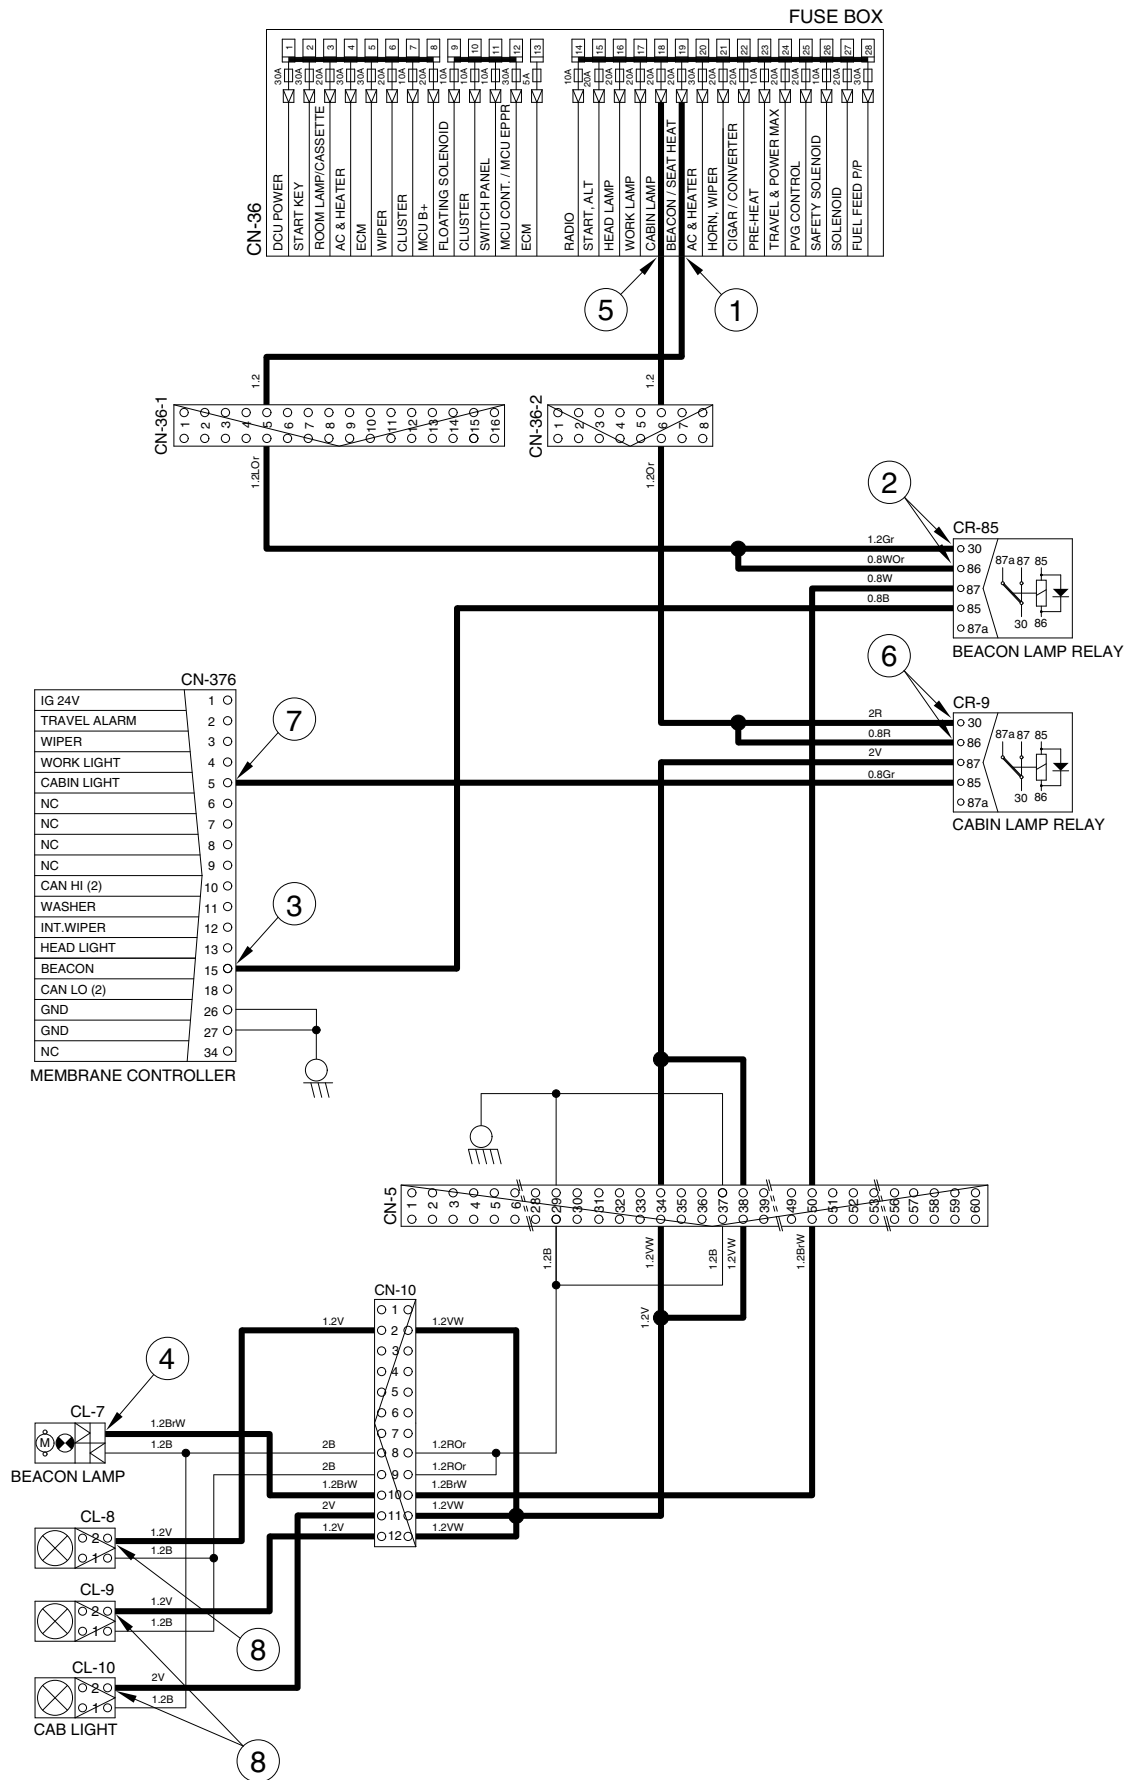
- I/conn [CN-10 (2)] → Cab light ON [CL-8 (2)]
- I/conn [CN-10 (12)] → Cab light ON [CL-9 (2)]
- I/conn [CN-10 (11)] → Cab light ON [CL-10 (2)]

2) CHECK POINT

Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (fuse box) ② - GND (beacon lamp relay) ③ - GND (beacon lamp switch power output) ④ - GND (beacon lamp) ⑤ - GND (fuse box) ⑥ - GND (cab light relay) ⑦ - GND (cab light switch power output) ⑧ - GND (cab light)	20~25V

※ GND : Ground

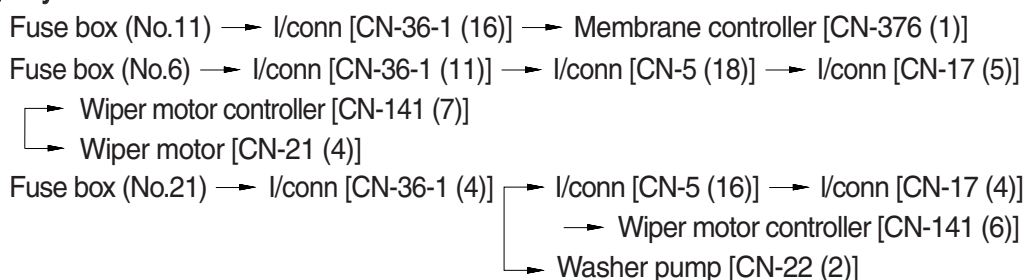
BEACON LAMP AND CAB LIGHT CIRCUIT



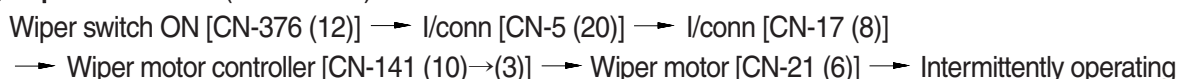
6. WIPER AND WASHER CIRCUIT

1) OPERATING FLOW

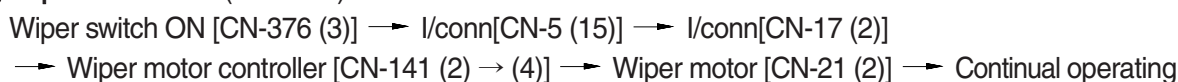
(1) Key switch ON



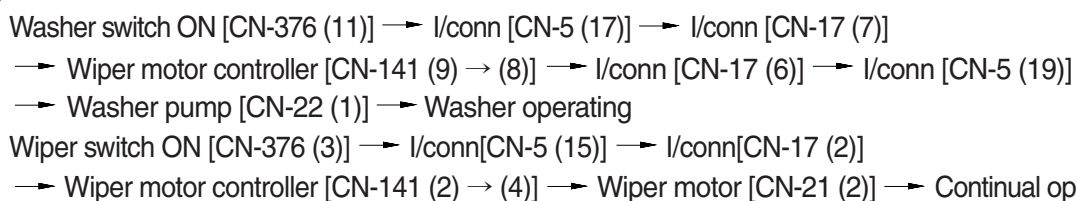
(2) Wiper switch ON (Intermittent)



(3) Wiper switch ON (continual)



(4) Washer switch ON



(5) Auto parking (when switch OFF)

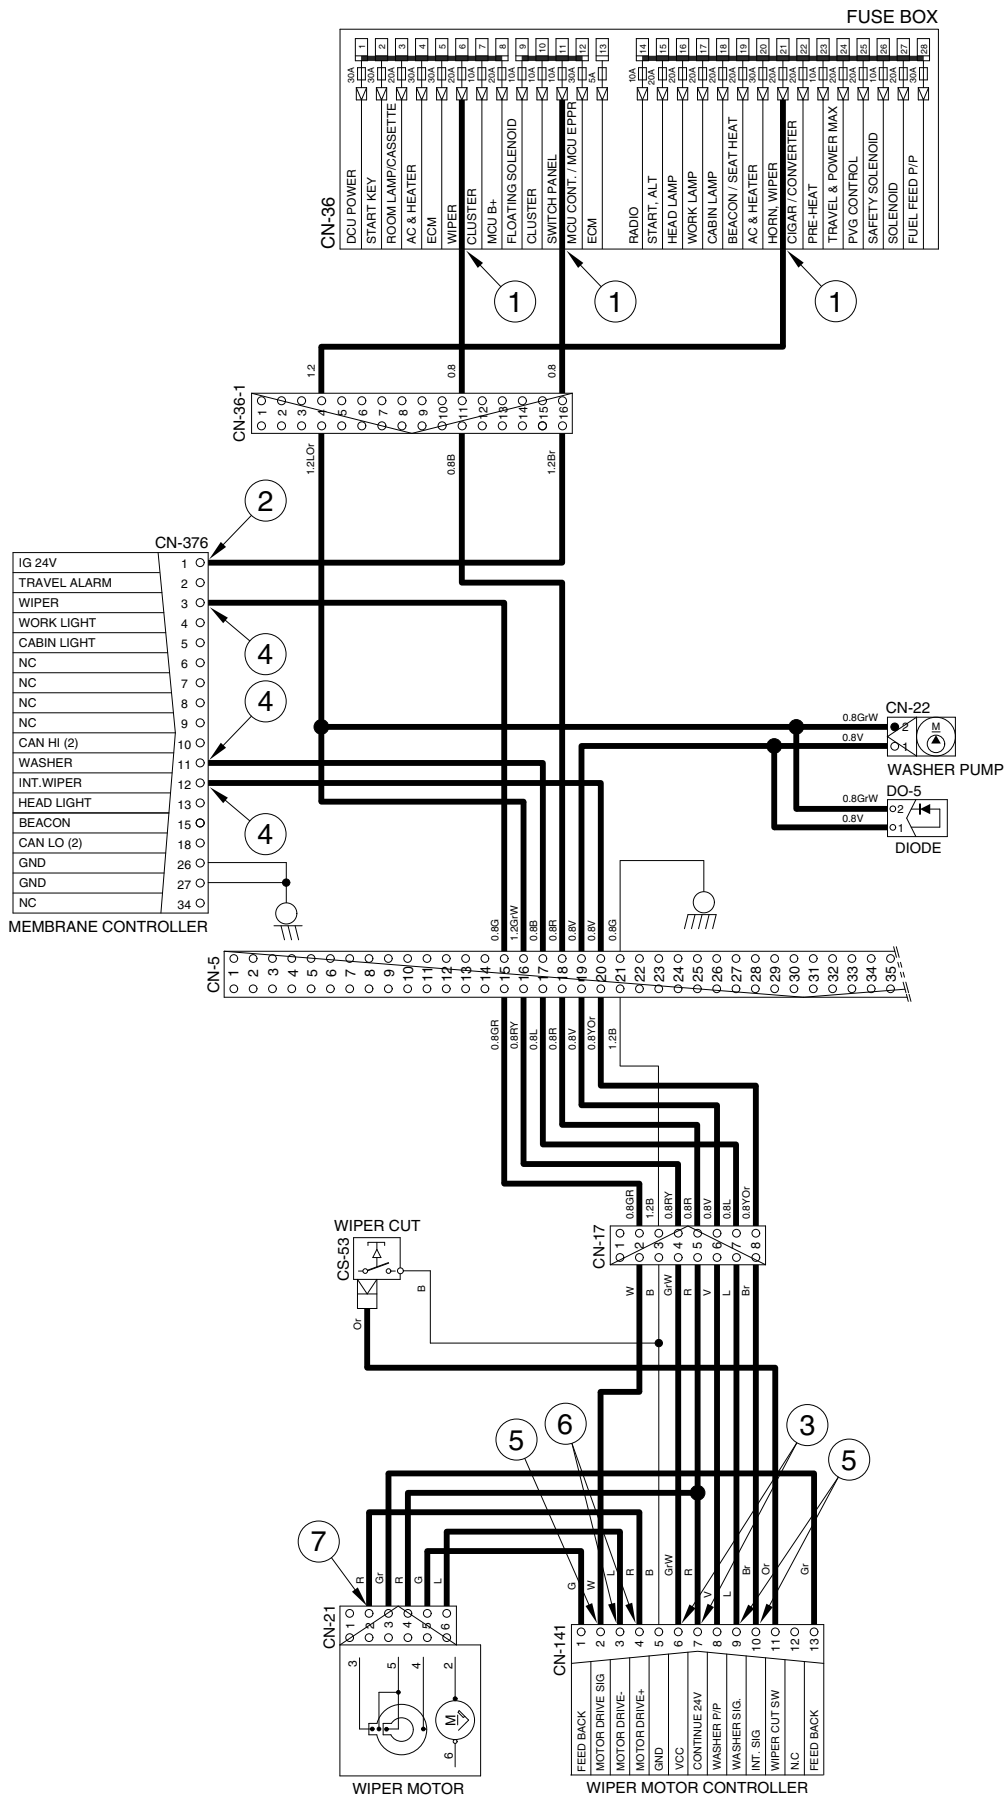


3) CHECK POINT

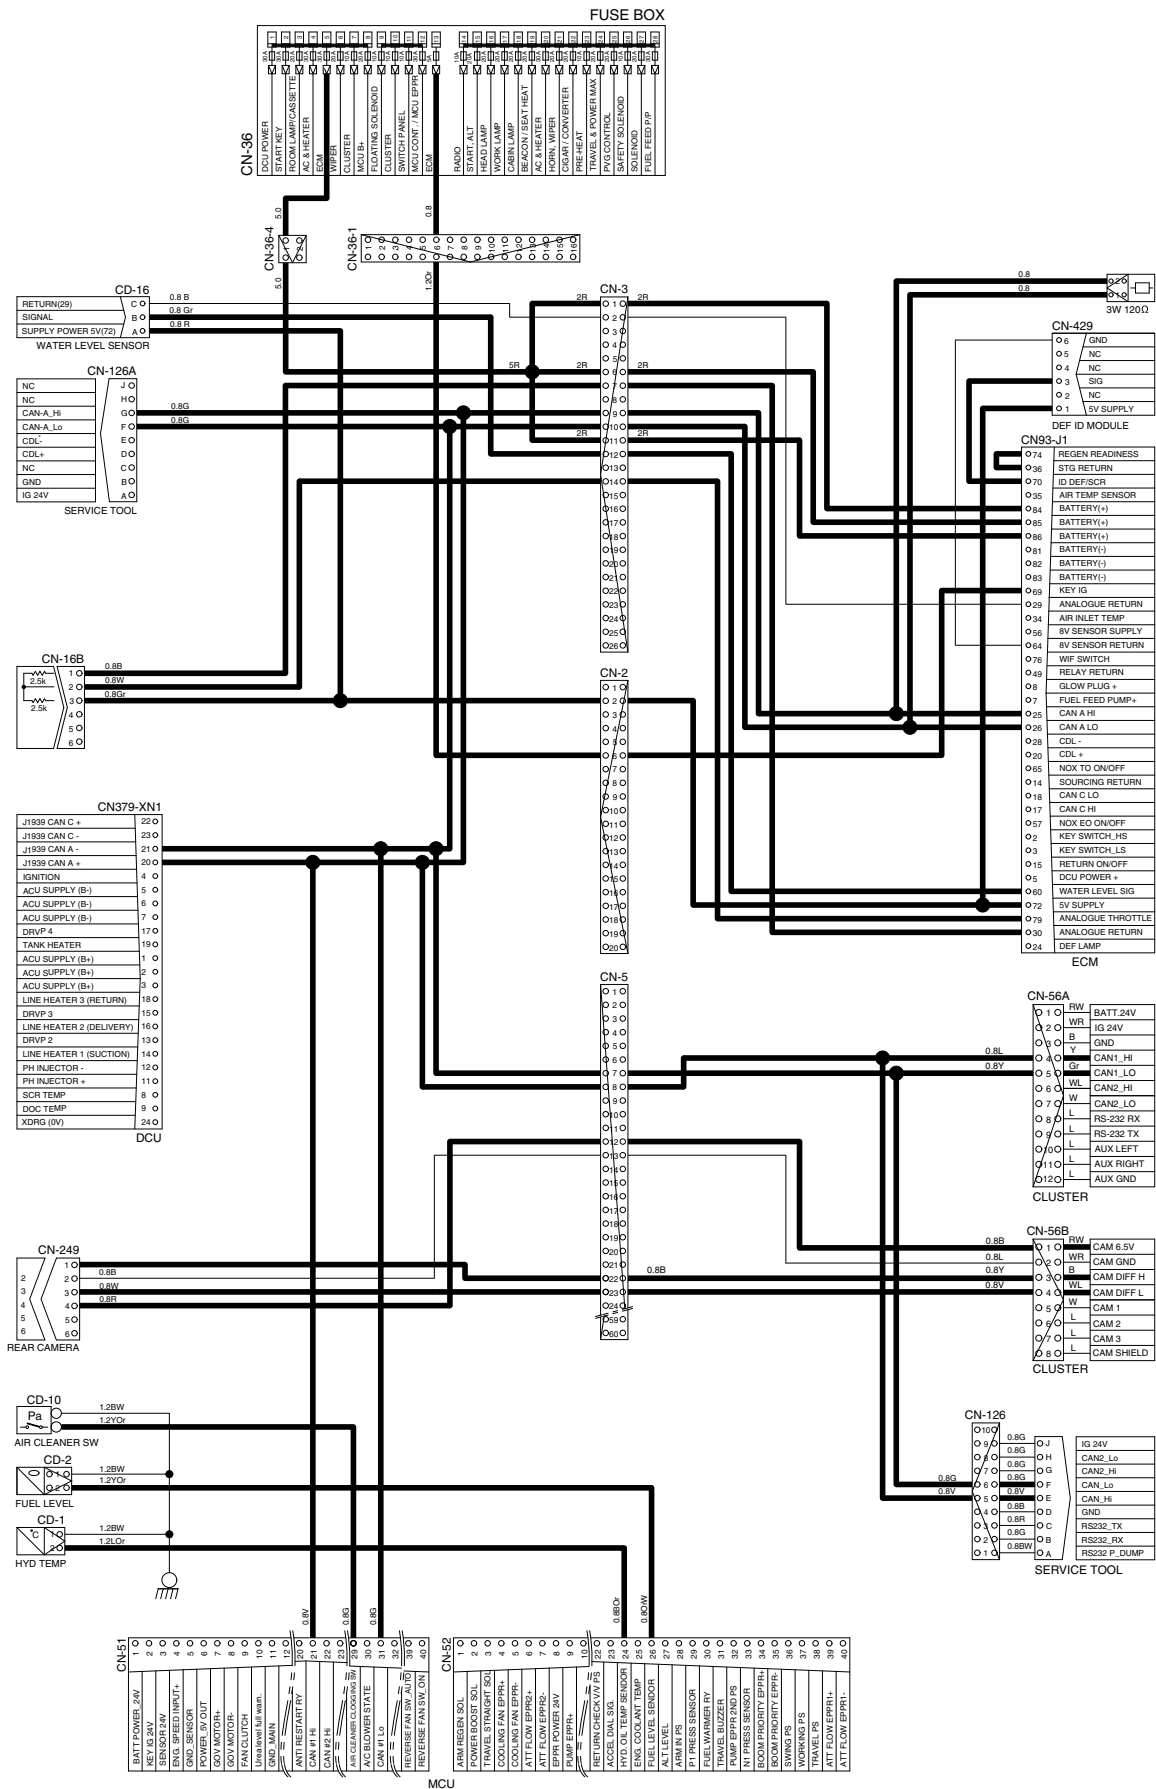
Engine	Start switch	Check point	Voltage
STOP	ON	① - GND (fuse box)	20~25V
		② - GND (switch power input)	
		③ - GND (wiper power input)	
		④ - GND (switch power output)	0 ~ 5V
		⑤ - GND (wiper power input)	
		⑥ - GND (wiper power output)	24V
		⑦ - GND (wiper motor)	0 or 24V

※ GND : Ground

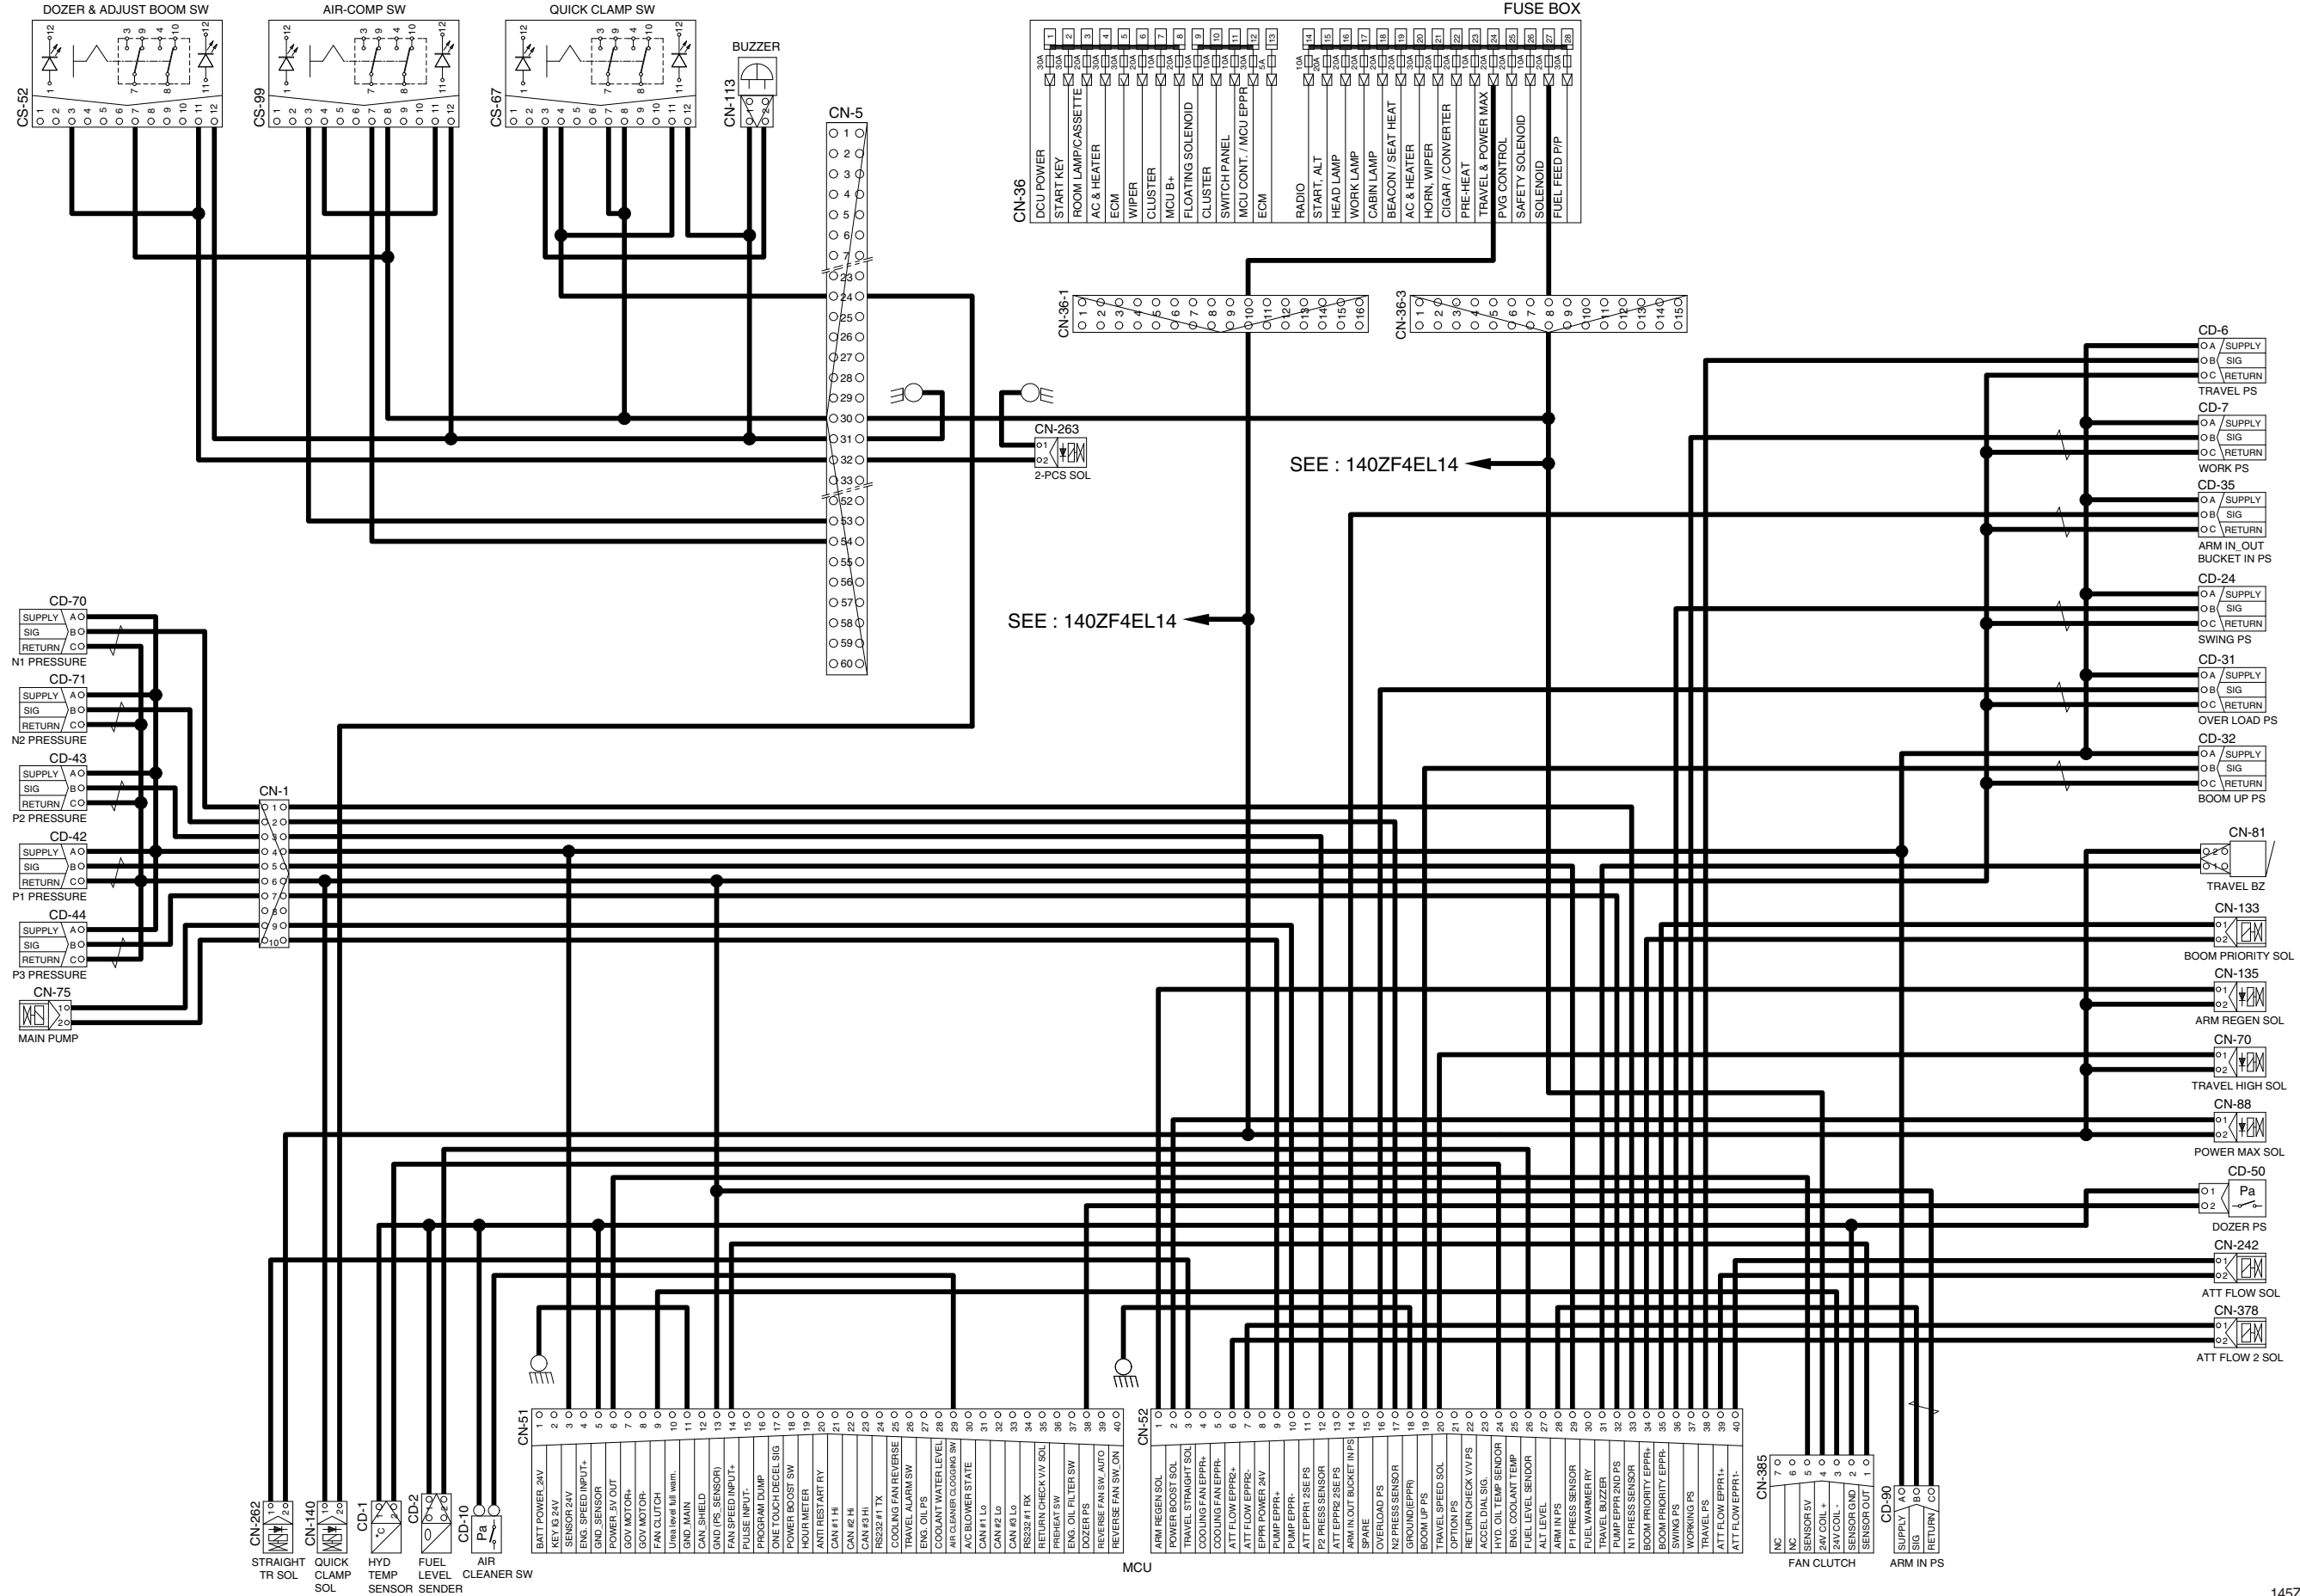
WIPER AND WASHER CIRCUIT



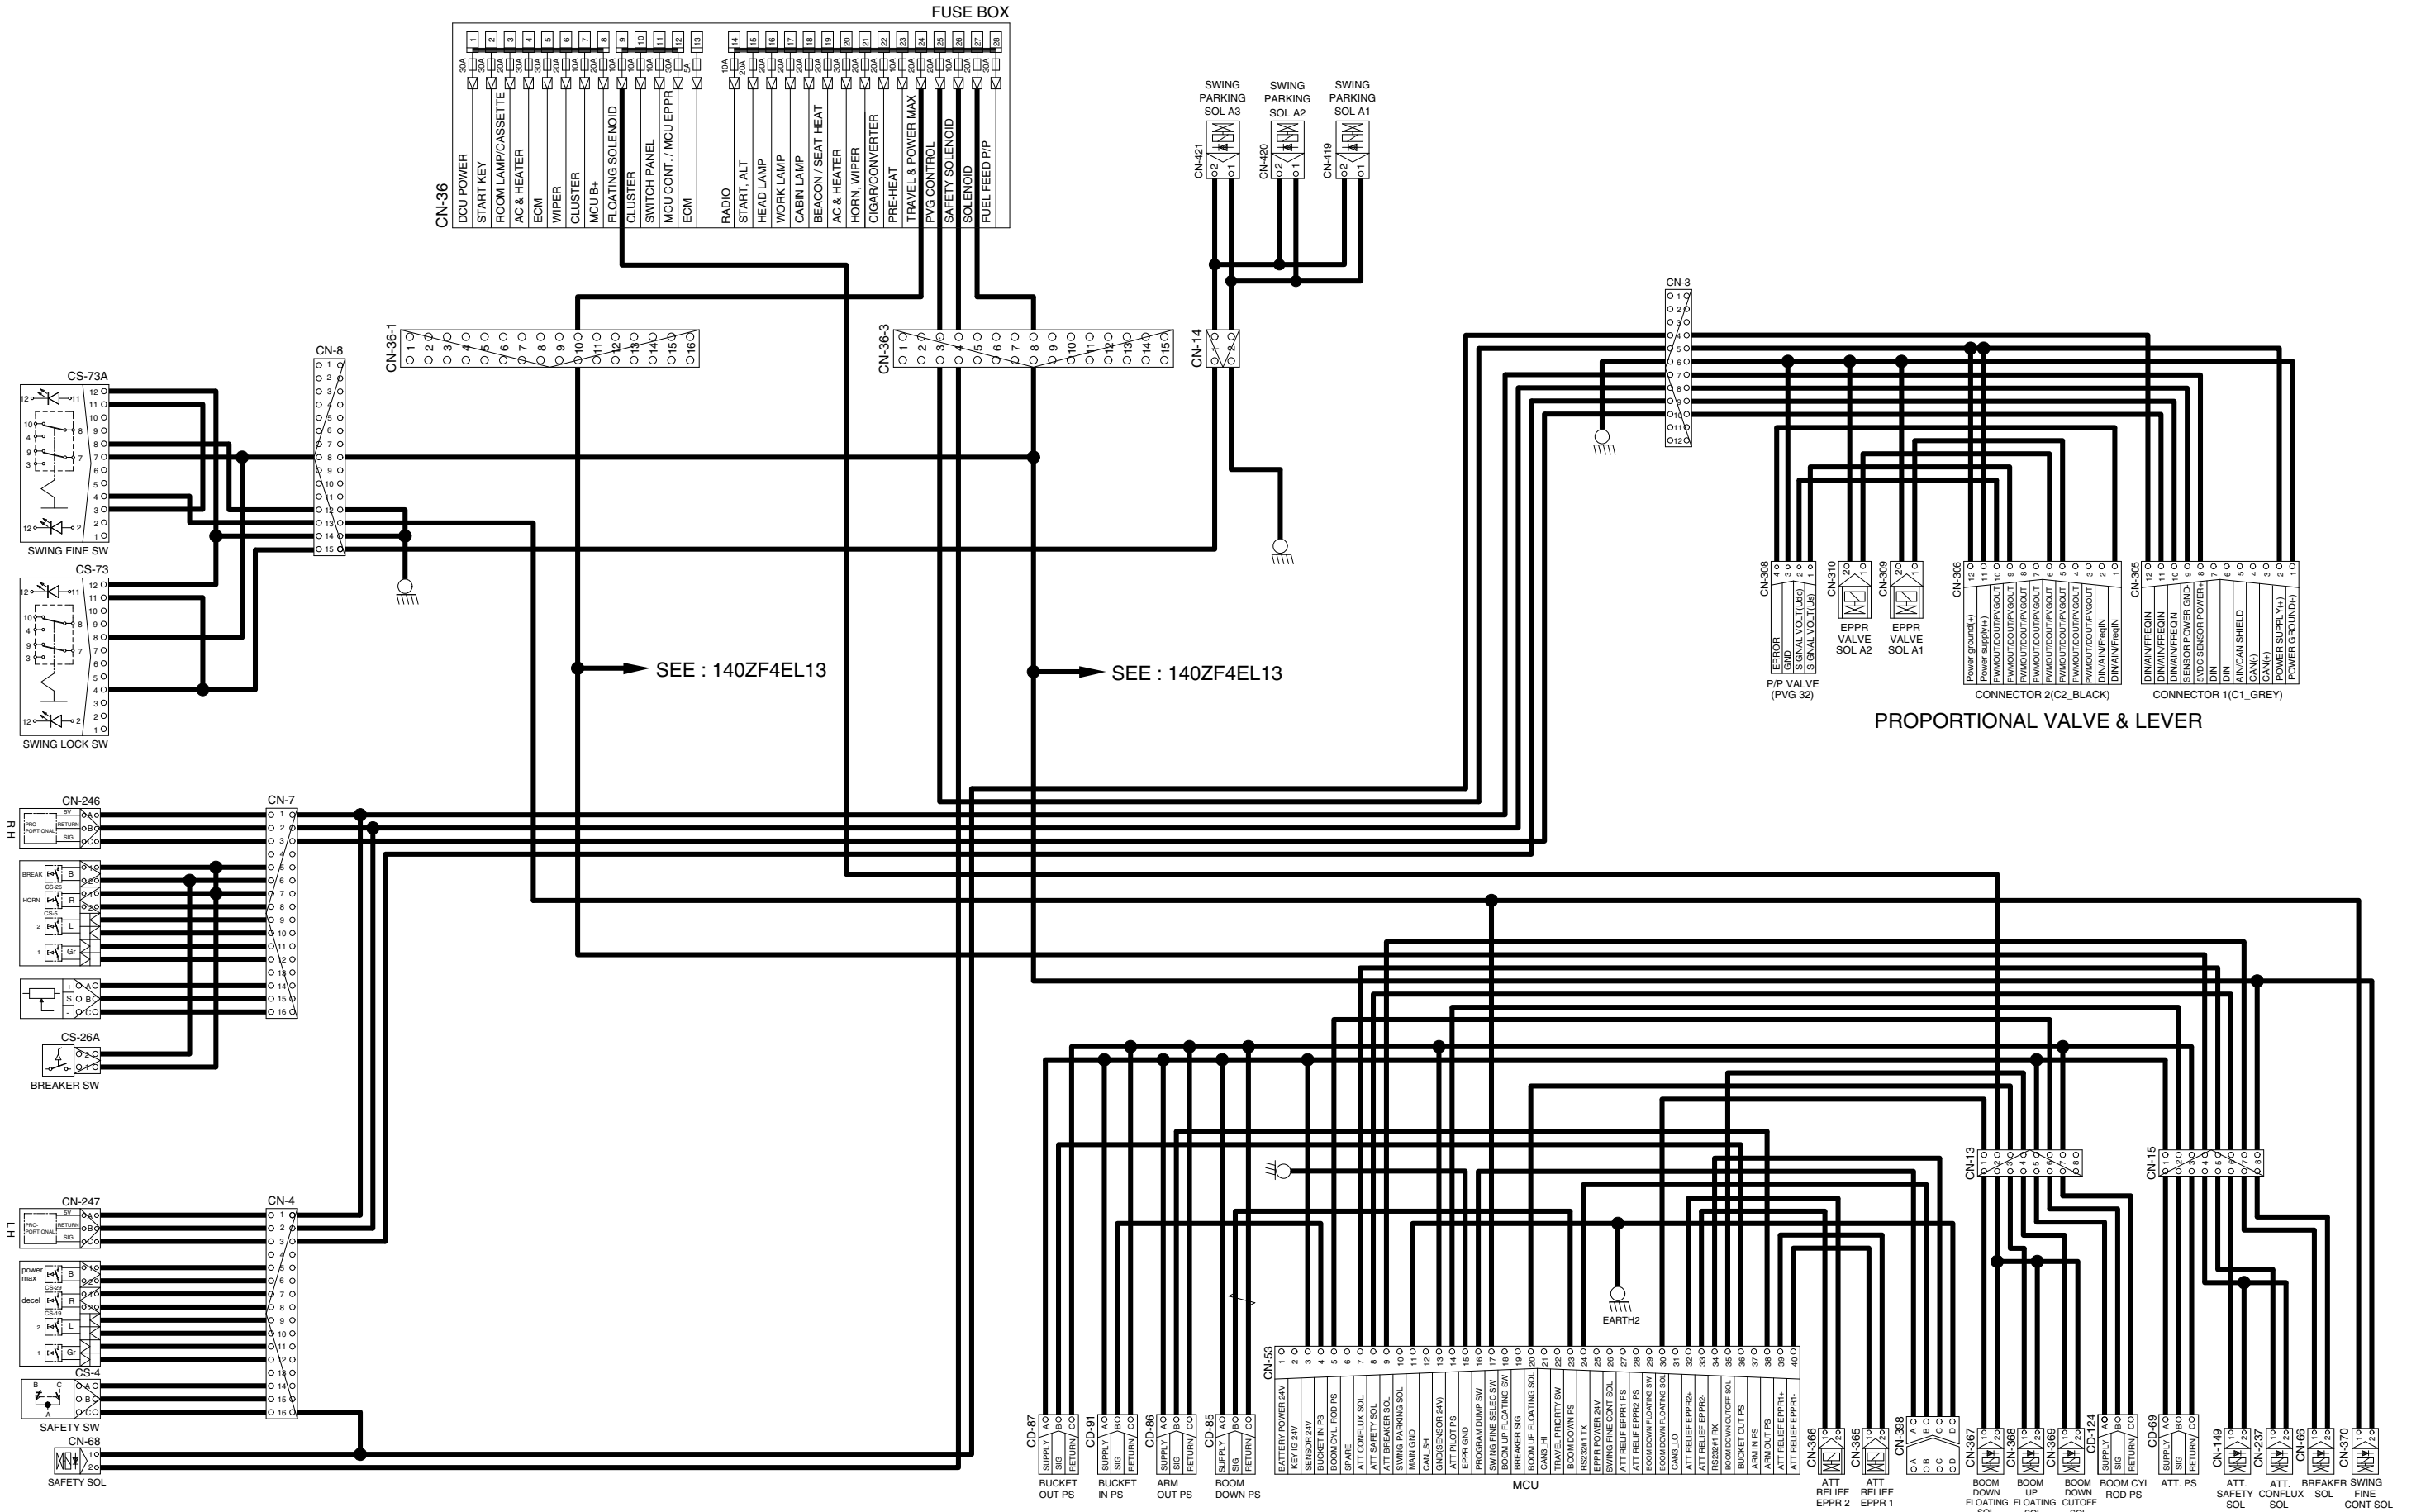
MONITORING CIRCUIT



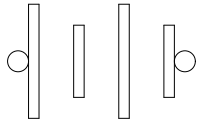
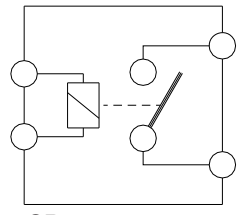
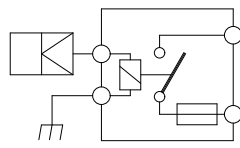
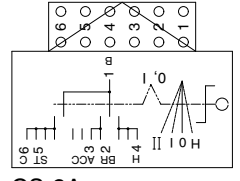
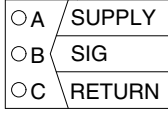
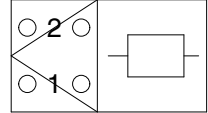
ELECTRIC CIRCUIT FOR HYDRAULIC (1/2)

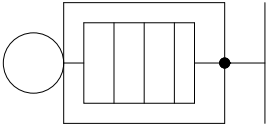
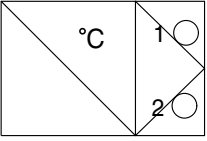
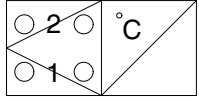
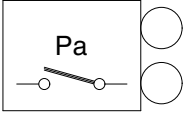
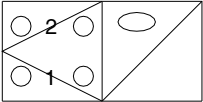
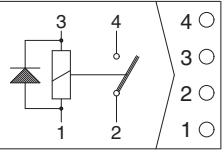


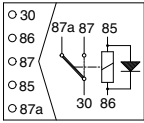
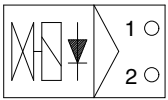
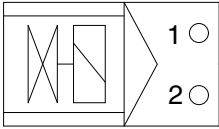
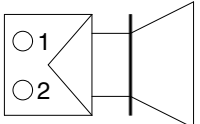
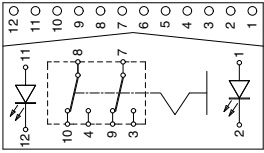
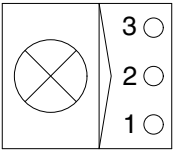
ELECTRIC CIRCUIT FOR HYDRAULIC (2/2)

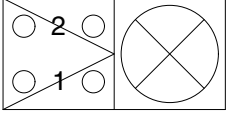
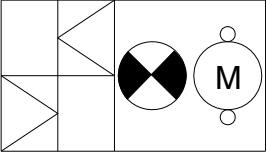
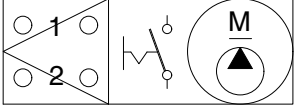
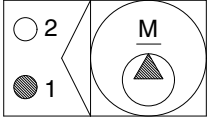
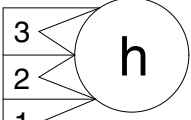
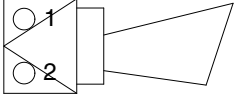


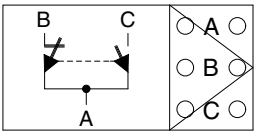
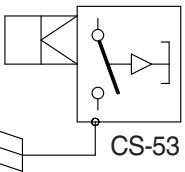
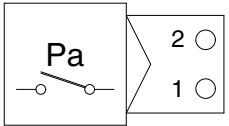
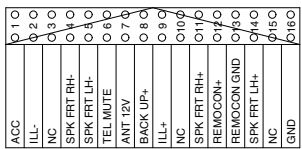
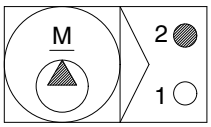
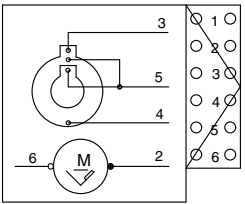
GROUP 3 ELECTRICAL COMPONENT SPECIFICATION

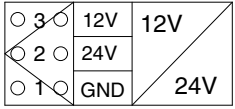
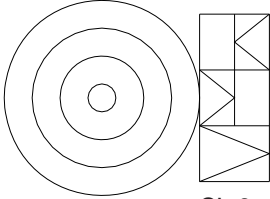
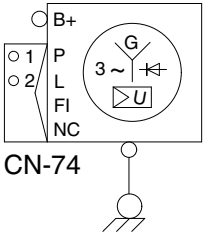

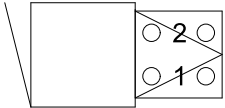
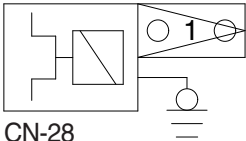
Part name	Symbol	Specifications	Check
Battery		12V × 100Ah (2EA)	※ Check specific gravity 1.280 over : Over charged 1.280 ~ 1.250 : Normal 1.250 below : Recharging
Battery relay	 <p style="text-align: center;">CR-1</p>	Rated load : 24V 100A (continuity) 1000A (30 seconds)	※ Check coil resistance(M4 to M4) Normal : About 50Ω ※ Check contact Normal : ∞Ω
Glow plug relay	 <p style="text-align: center;">CR-24</p>	24V 200A	※ Check contact Normal : 0.942Ω (For terminal 1-GND)
Start key	 <p style="text-align: center;">CS-2A</p>	B-BR : 24V 1A B-ACC : 24V 10A B-C : 24V 40A	※ Check contact OFF : ∞Ω (for each terminal) ON : 0Ω (for terminal 1-3 and 1-2) START : 0Ω (for terminal 1-6)
Pressure sensor	 <p> CD-6 CD-7 CD-24 CD-31 CD-32 CD-35 CD-42 CD-43 CD-44 CD-69 CD-70 CD-71 CD-85 CD-86 CD-87 CD-90 CD-91 CD-124 </p>	8~30V	※ Check contact Normal : 0.1Ω
Resistor		3W 120Ω	※ Check resistance 1-2 : 120Ω

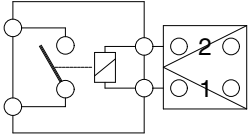
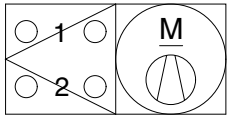
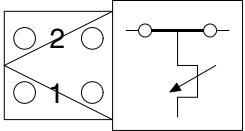
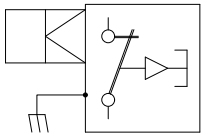
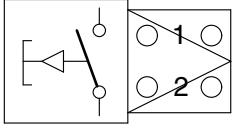
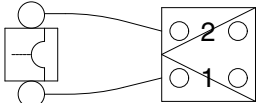
Part name	Symbol	Specifications	Check
Glow plug	 <p>CN-80</p>	24V 200A	※ Check resistance 0.25-0.12Ω
Temperature sensor (hydraulic)	 <p>CD-1</p>	-	※ Check resistance 50°C : 804Ω 80°C : 310Ω 100°C : 180Ω
Air inlet temperature sensor	 <p>CD-98 CD-98A</p>	-	-
Air cleaner pressure switch	 <p>CD-10</p>	N.O TYPE	※ Check contact High level : ∞Ω Low level : 0Ω
Fuel level sender	 <p>CD-2</p>	-	※ Check resistance Full : 50Ω 6/12 : 350Ω 11/12 : 100Ω 5/12 : 400Ω 10/12 : 150Ω 4/12 : 450Ω 9/12 : 200Ω 3/12 : 500Ω 8/12 : 250Ω 2/12 : 550Ω 7/12 : 300Ω 1/12 : 600Ω Empty warning : 700Ω
Relay (air con blower)		24V 16A	※ Check resistance Normal : About 200Ω (for terminal 1-3) ∞Ω (for terminal 2-4)

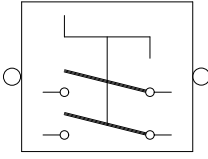
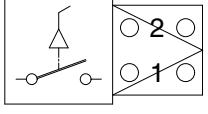
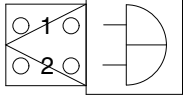
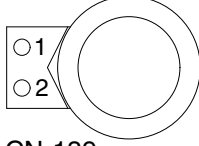
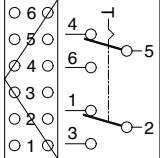
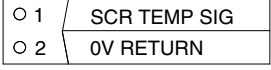
Part name	Symbol	Specifications	Check
Relay	 <p>CR-2 CR-4 CR-5 CR-7 CR-9 CR-13 CR-35 CR-36 CR-85 CR-95 CR-101</p>	24V 16A	※ Check resistance Normal : About 160 Ω (for terminal 85-86) 0 Ω (for terminal 30-87a) ∞ Ω (for terminal 30-87)
Solenoid valve	 <p>CN-66 CN-68 CN-70 CN-88 CN-135 CN-140 CN-149 CN-237 CN-262 CN-263 CN-367 CN-368 CN-369 CN-370 CN-419 CN-420 CN-421</p>	24V 1A	※ Check resistance Normal : 15~25 Ω (for terminal 1-2)
EPPR valve	 <p>CN-75 CN-133 CN-242 CN-309 CN-310 CN-365 CN-366 CN-378</p>	700mA	※ Check resistance Normal : 15~25 Ω (for terminal 1-2)
Speaker	 <p>CN-23(LH) CN-24(RH)</p>	20W 86 ± 2dB	※ Check resistance Normal : A few Ω
Switch (locking type)	 <p>CS-52 CS-67 CS-73 CS-73A CS-99</p>	24V 1.5A	※ Check contact Normal ON : 0 Ω (for terminal 7-3) ∞ Ω (for terminal 7-9) OFF : ∞ Ω (for terminal 7-3) 0 Ω (for terminal 7-9)
Room lamp	 <p>CL-1</p>	24V 10W	※ Check disconnection Normal : 1.0 Ω ON : 0 Ω (For terminal 1-2) ∞ Ω (For terminal 1-3) OFF : ∞ Ω (For terminal 1-2) 0 Ω (For terminal 1-3)

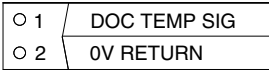
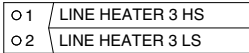
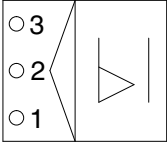
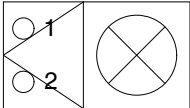
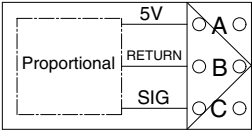
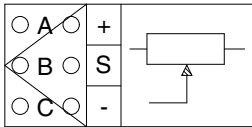
Part name	Symbol	Specifications	Check
Head lamp, Work lamp, Cab lamp	 <p>CL-3 CL-4 CL-5 CL-6 CL-8 CL-9 CL-10</p>	24V 65W (H3 Type)	※ Check disconnection Normal : 1.2Ω
Beacon lamp	 <p>CL-7</p>	24V 70W (H1 Type) 2.4W (LED Type)	※ Check disconnection Normal : A fewΩ
Fuel filler pump	 <p>CN-61</p>	24V 10A 35 l /min	※ Check resistance Normal : 1.0Ω
Fuel feed pump	 <p>CN-145</p>	24V	-
Hour meter	 <p>CN-48</p>	16~32V	※ Check operation Supply power(24V) to terminal No.2 and connect terminal No.1 and ground
Horn	 <p>CN-20 CN-25</p>	22~28V 2A	※ Check operation Supply power(24V) to each terminal and connect ground.

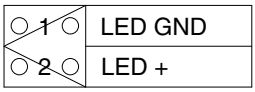
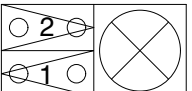
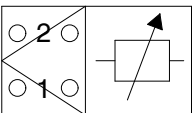
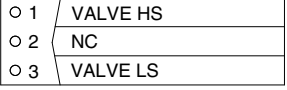
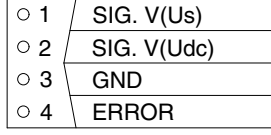
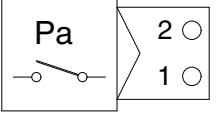
Part name	Symbol	Specifications	Check
Safety switch	 <p>CS-4</p>	24V 15A (N.C TYPE)	※ Check contact Normal : 1.0Ω ON : 0Ω (for terminal A-B) ∞Ω (for terminal A-C) OFF : ∞Ω (for terminal A-B) 0Ω (for terminal A-C)
Wiper cut switch	 <p>CS-53</p>	24V (N.O TYPE)	※ Check contact Normal : 0Ω (one pin to ground)
Receiver dryer	 <p>CN-29</p>	24V 2.5A (N.O TYPE)	※ Check contact Normal : ∞Ω
Radio & USB player	 <p>CN-27</p>	24V 2A	※ Check voltage 20~25V (for terminal 1-3, 3-8)
Washer pump	 <p>CN-22</p>	24V 3.8A	※ Check contact Normal : 10.7Ω (for terminal 1-2)
Wiper motor	 <p>CN-21</p>	24V 2A	※ Check disconnection Normal : 7Ω (for terminal 2-6)

Part name	Symbol	Specifications	Check
DC/DC Converter	 <p>CN-138</p>	24V 3A	※ Check voltage 24V (for terminal 1-2) 12V (for terminal 1-3)
Cigar lighter	 <p>CL-2</p>	24V 5A 1.4W	※ Check coil resistance Normal : About 1M Ω ※ Check contact Normal : $\infty \Omega$ Operating time : 5~15sec
Alternator	 <p>CN-74</p>	Delco Remy 24V 100A	※ Check contact Normal : 0 Ω (for terminal B ⁺ -2) Normal : 24~27.5V
Starter	 <p>CN-45</p>	24V 4.5kW	※ Check contact Normal : 0.1 Ω
Travel alarm	 <p>CN-81</p>	24V 0.5A	※ Check contact Normal : 5.2 Ω
Air conditioner compressor	 <p>CN-28</p>	24V 79W	※ Check contact Normal : 13.4 Ω

Part name	Symbol	Specifications	Check
Start relay	 <p>CR-23</p>	24V 300A	※ Check contact Normal : 0.94Ω (for terminal 1-2)
Blower motor		24V 14A	※ Check resistance Normal : 2.5Ω (for terminal 1-2)
Air conditioner duct sensor (switch)		1°C OFF 4°C ON	※ Check resistance Normal : 0Ω (for terminal 1-2), the atmosphere temp : Over 4°C
Door switch	 <p>CS-1</p>	24V 2W	※ Check resistance Normal : About 5MΩ
Switch (power max, one touch decel, horn, breaker)	 <p>CS-5 CS-19 CS-26 CS-29</p>	24V 6A	※ Check resistance Normal : ∞Ω
Circuit breaker	 <p>CN60 CN-95</p>	CN-60 : 60A CN-95 : 90A	※ Check disconnection Normal : 0Ω (connect ring terminal and check resist between terminal 1 and 2)

Part name	Symbol	Specifications	Check
Master switch	 <p>CS-74A CS-74B</p>	6-36V	※ Check disconnection Normal : 0.1Ω
Breaker pedal switch	 <p>CS-26A</p>	-	-
Quick clamp buzzer	 <p>CN-113</p>	24V 80mA Min 65dB	-
12V Socket	 <p>CN-139</p>	12V 10A	-
Engine emergency stop switch	 <p>CS-33</p>	24V	※ Check contact Normal 0Ω (for terminal 1-2)
SCR temperature sensor	 <p>CN-425</p>	-	-

Part name	Symbol	Specifications	Check
DOC temperature sensor	 <p>CN-426</p>	-	-
DEF/AdBlue® line heater	 <p>CN-381 CN-382 CN-383</p>	-	-
WIF sensor	 <p>CD-45</p>	-	※ Check disconnection Normal : 68.8~4.94Ω
DEF/AdBlue® fill up warning lamp (LED)	 <p>CL-40</p>	-	-
Proportional valve sensor	 <p>CN-246(RH) CN-247(LH)</p>	-	-
Accel dial	 <p>CN-142</p>	5V, 8mA	-

Part name	Symbol	Specifications	Check
Accel dial LED	 CN-267	24V	-
DEF/AdBlue® full lamp	 CL-41	-	-
Temperature sensor (A/C incar, A/C ambient, water)		-	-
Coolant diverter valve	 CN-384	-	-
Proportional valve sensor	 CN-308	-	-
Dozer act pressure switch	 CD-50	N.O type	※ Check resistance Normal : ∞Ω (open)

Part name	Symbol	Specifications	Check												
Water level sensor	<table border="1"> <tr><td>○ C</td><td>RETURN(29)</td></tr> <tr><td>○ B</td><td>SIGNAL</td></tr> <tr><td>○ A</td><td>SUPPLY POWER 5V(72)</td></tr> </table> <p>CD-16</p>	○ C	RETURN(29)	○ B	SIGNAL	○ A	SUPPLY POWER 5V(72)	5V 12.5mA	-						
○ C	RETURN(29)														
○ B	SIGNAL														
○ A	SUPPLY POWER 5V(72)														
DEF/AdBlue® injector	<table border="1"> <tr><td>○ 1</td><td>UREA INJECTOR LS</td></tr> <tr><td>○ 2</td><td>UREA INJECTOR HS</td></tr> </table> <p>CN-424</p>	○ 1	UREA INJECTOR LS	○ 2	UREA INJECTOR HS	-	-								
○ 1	UREA INJECTOR LS														
○ 2	UREA INJECTOR HS														
Camera	<table border="1"> <tr><td>○ 1</td><td>LVDS POS</td></tr> <tr><td>○ 2</td><td>GND</td></tr> <tr><td>○ 3</td><td>LVDS NEG</td></tr> <tr><td>○ 4</td><td>POWER 24V</td></tr> <tr><td>○ 5</td><td>NC</td></tr> <tr><td>○ 6</td><td>ADJUST SIGNAL</td></tr> </table> <p>CN-249</p>	○ 1	LVDS POS	○ 2	GND	○ 3	LVDS NEG	○ 4	POWER 24V	○ 5	NC	○ 6	ADJUST SIGNAL	7V 100mA	-
○ 1	LVDS POS														
○ 2	GND														
○ 3	LVDS NEG														
○ 4	POWER 24V														
○ 5	NC														
○ 6	ADJUST SIGNAL														
NOx sensor (tail out, turbo out)	<table border="1"> <tr><td>○ 6</td><td>J1939 HI</td></tr> <tr><td>○ 5</td><td>J1939 LO</td></tr> <tr><td>○ 4</td><td>GND</td></tr> <tr><td>○ 3</td><td>ADDRESS SELEC</td></tr> <tr><td>○ 2</td><td>J1939-</td></tr> <tr><td>○ 1</td><td>BATT+</td></tr> </table> <p>CN-J7A CN-J7B</p>	○ 6	J1939 HI	○ 5	J1939 LO	○ 4	GND	○ 3	ADDRESS SELEC	○ 2	J1939-	○ 1	BATT+	-	-
○ 6	J1939 HI														
○ 5	J1939 LO														
○ 4	GND														
○ 3	ADDRESS SELEC														
○ 2	J1939-														
○ 1	BATT+														
Ammonia sensor	<table border="1"> <tr><td>○ 1</td><td>BATT +</td></tr> <tr><td>○ 2</td><td>J1939 CAN C +</td></tr> <tr><td>○ 3</td><td>J1939 CAN C -</td></tr> <tr><td>○ 4</td><td>GND</td></tr> </table> <p>CN-422</p>	○ 1	BATT +	○ 2	J1939 CAN C +	○ 3	J1939 CAN C -	○ 4	GND	-	-				
○ 1	BATT +														
○ 2	J1939 CAN C +														
○ 3	J1939 CAN C -														
○ 4	GND														
DEF/AdBlue® Id module	<table border="1"> <tr><td>○ 6</td><td>GND</td></tr> <tr><td>○ 5</td><td>NC</td></tr> <tr><td>○ 4</td><td>NC</td></tr> <tr><td>○ 3</td><td>SIG</td></tr> <tr><td>○ 2</td><td>NC</td></tr> <tr><td>○ 1</td><td>5V SUPPKY</td></tr> </table> <p>CN-429</p>	○ 6	GND	○ 5	NC	○ 4	NC	○ 3	SIG	○ 2	NC	○ 1	5V SUPPKY	-	-
○ 6	GND														
○ 5	NC														
○ 4	NC														
○ 3	SIG														
○ 2	NC														
○ 1	5V SUPPKY														

Part name	Symbol	Specifications	Check																								
Fan clutch	<table border="1" data-bbox="485 264 671 461"> <tr><td>○ 1</td><td>SENSOR OUT</td></tr> <tr><td>○ 2</td><td>SENSOR GND</td></tr> <tr><td>○ 3</td><td>24V COIL -</td></tr> <tr><td>○ 4</td><td>24V COIL +</td></tr> <tr><td>○ 5</td><td>SENSOR 5V</td></tr> <tr><td>○ 6</td><td>NC</td></tr> <tr><td>○ 7</td><td>NC</td></tr> </table> <p data-bbox="485 465 579 495">CN-385</p>	○ 1	SENSOR OUT	○ 2	SENSOR GND	○ 3	24V COIL -	○ 4	24V COIL +	○ 5	SENSOR 5V	○ 6	NC	○ 7	NC	-	-										
○ 1	SENSOR OUT																										
○ 2	SENSOR GND																										
○ 3	24V COIL -																										
○ 4	24V COIL +																										
○ 5	SENSOR 5V																										
○ 6	NC																										
○ 7	NC																										
PVG 32 controller	<table border="1" data-bbox="512 544 651 752"> <tr><td>○ 1</td><td>CAN HI</td></tr> <tr><td>○ 2</td><td>CAN LO</td></tr> <tr><td>○ 3</td><td>GND</td></tr> <tr><td>○ 4</td><td>SAFETY</td></tr> <tr><td>○ 5</td><td>KEY IG</td></tr> <tr><td>○ 6</td><td>GND</td></tr> <tr><td>○ 7</td><td>5V POWER</td></tr> <tr><td>○ 8</td><td>5V GND</td></tr> <tr><td>○ 9</td><td>ROTATE /LH</td></tr> <tr><td>○ 10</td><td>ROTATE /RH</td></tr> <tr><td>○ 11</td><td>NC</td></tr> <tr><td>○ 12</td><td>NC</td></tr> </table> <p data-bbox="512 757 590 786">CN-3A</p>	○ 1	CAN HI	○ 2	CAN LO	○ 3	GND	○ 4	SAFETY	○ 5	KEY IG	○ 6	GND	○ 7	5V POWER	○ 8	5V GND	○ 9	ROTATE /LH	○ 10	ROTATE /RH	○ 11	NC	○ 12	NC	-	-
○ 1	CAN HI																										
○ 2	CAN LO																										
○ 3	GND																										
○ 4	SAFETY																										
○ 5	KEY IG																										
○ 6	GND																										
○ 7	5V POWER																										
○ 8	5V GND																										
○ 9	ROTATE /LH																										
○ 10	ROTATE /RH																										
○ 11	NC																										
○ 12	NC																										

GROUP 4 CONNECTORS

1. CONNECTOR DESTINATION

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-1	AMP	10	l/conn (Frame harness-Pump PS harness)	S816-010002	S816-110002
CN-2	AMP	20	l/conn (Frame harness-Engine harness)	936777-2	936780-2
CN-3	-	26	l/conn (Frame harness-Engine harness)	1897009-2	1897013-2
CN-3A	AMP	12	PVG controller harness	174661-2	368537-1
CN-4	AMP	16	l/conn (Console harness LH-Frame harness)	368047-1	368050-1
CN-5	DEUTSCH	60	l/conn (Side harness RH-Frame harness)	DRB16-60SAE-L018	DRB14-60PAE-L018
CN-7	AMP	16	l/conn (Console harness RH-Frame harness)	368047-1	368050-1
CN-8	AMP	15	l/conn (Console harness LH-Frame harness)	2-85262-1	S816-112002
CN-10	TYCO	12	l/conn (Cab harness-Side harness RH)	368542-1	368507-1
CN-11	DEUTSCH	8	l/conn (Frame harness-Aircon harness)	DT06-8S	-
CN-12	DEUTSCH	2	l/conn (Frame harness-Boom wire harness)	DT06-2S-EP06	DT04-2P-E005
CN-13	AMP	8	l/conn (Frame harness-Boom floating harness)	174982-2	174984-2
CN-14	DEUTSCH	2	l/conn (Frame harness-Swing parking harness)	DT06-2S-EP06	DT04-2P
CN-15	AMP	8	l/conn (Frame harness-2 way harness)	174982-2	174984-2
CN-16	AMP	6	Emergency engine start & speed control	-	S816-106002
CN-16A	AMP	6	Emergency engine start & speed control	S816-006002	-
CN-16B	AMP	6	Emergency engine start & speed control	S816-006002	S816-106002
CN-17	DEUTSCH	8	l/conn (Side harness RH-Wiper harness)	DT06-8S-EP06	DT04-8P
CN-20	MOLEX	2	Horn	36812-0211	-
CN-21	AMP	6	Wiper motor	S810-006202	-
CN-22	KET	2	Washer tank	MG640605	-
CN-23	KET	2	Speaker-LH	MG610070	-
CN-24	KET	2	Speaker-RH	MG610070	-
CN-25	MOLEX	2	Horn	36812-0211	-
CN-27	KUM	16	Radio & USB player	PK145-16017	-
CN-27A	AMP	8	Radio & USB player	-	S816-108002
CN-28	KUM	1	Air conditioner compressor	NMWP01F-B	-
CN-29	KET	2	Receiver dryer	MG640795	-
CN-36-1	AMP	16	To fuse box	368047-1	-
CN-36-2	KET	8	To fuse box	MG610051	-
CN-36-3	-	26	To fuse box	1897009-2	-
CN-36-4	KET	2	To fuse box	MG610557-5	-
CN-45	RING-TERM	-	Starter motor B ⁺	S820-108000	-
CN-48	KET	1	Hour meter	2-520193-2	-

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-51	DEUTSCH	40	MCU	DRC26-40SA	-
CN-52	DEUTSCH	40	MCU	DRC26-40SB	-
CN-53	DEUTSCH	40	MCU (option)	DRC26-40SA	-
CN-56A	AMP	12	Cluster	-	174663-2
CN-56B	AMP	8	Cluster	-	174984-2
CN-60	YAZAKI	2	Circuit breaker	-	7122-4125-50
CN-61	DEUTSCH	2	Fuel filler pump	DT06-2S-EP06	-
CN-66	DEUTSCH	2	Breaker solenoid	DT06-2S-EP06	-
CN-68	DEUTSCH	2	Safety solenoid	DT06-2S-EP06	-
CN-70	DEUTSCH	2	Travel high solenoid	DT06-2S-EP06	-
CN-74	RING-TERM	2	Alternator "L" terminal	-	S820-108000
CN-75	AMP	2	Pump EPPR valve	S816-002002	-
CN-80	RING-TERM	-	Glow plug	S820-306000	-
CN-81	DEUTSCH	2	Travel buzzer	DT06-2S-EP06	DT04-2P-E005
CN-88	DEUTSCH	2	Power max solenoid	DT06-2S-EP06	-
CN-93-J1	DEUTSCH	86	ECM	DRCP28-86SA	-
CN-95	-	2	Circuit breaker	-	S813-130201
CN-113	KET	2	Buzzer	MG651205-5	-
CN-125	Econoseal J	4	GPS connector	S816-004002	S816-104002
CN-125A	DEUTSCH	12	RMS	DT06-12S-EP06	DT04-12P
CN-126	AMP	10	I/conn (Service tool-Frame harness)	S816-010002	S816-110002
CN-126A	-	9	Service tool	-	HD10-9-96P
CN-133	DEUTSCH	2	Boom priority solenoid	DT06-2S-EP06	-
CN-135	DEUTSCH	2	Arm regeneration solenoid	DT06-2S-EP06	-
CN-138	FASTEN	3	DC/DC Converter	S810-003202	-
CN-139	FASTEN	2	12V socket	172434-2	-
CN-140	DEUTSCH	2	Quick clamp solenoid	DT06-2S-EP06	DT04-2P-E005
CN-141	AMP	13	Wiper motor controller	172498-1	-
CN-142	DEUTSCH	3	Accel dial	DT06-3S-EP06	-
CN-144A	KET	20	Handsfree	MG610240	-
CN-144E	-	8	Handsfree	175964-2	-
CN-145	DEUTSCH	2	Fuel filler pump	DT06-2S-EP06	-
CN-149	DEUTSCH	2	Attach safety solenoid	DT06-2S-EP06	-
CN-156	-	2	Air seat heat	-	S816-102002
CN-157	AMP	1	Antena power	S822-014002	-
CN-231	-	2	To fuse box	S813-030201	-
CN-237	DEUTSCH	2	Attach conflux solenoid	DT06-2S-EP06	-
CN-242	DEUTSCH	2	Attach EPPR 1	DT06-2S-EP06	-

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-245	FCI	2	PTC power	-	-
CN-245A	AMP	12	Remote controller assy	368542-1	-
CN-245E	AMP	12	Remote controller assy	174045-2	-
CN-246	AMP	12	USB & socket assy	174045-2	-
CN-246	DEUTSCH	3	Proportional valve-RH	DT06-3S	DT04-3P
CN-247	DEUTSCH	3	Proportional valve-LH	DT06-3S	DT04-3P
CN-249	DEUTSCH	6	Rear view camera	-	DT04-6P
CN-259	AMP	6	Camera	S816-006002	S816-106002
CN-262	DEUTSCH	2	Straight travel solenoid	DT06-2S-EP06	DT04-2P-E005
CN-263	DEUTSCH	2	2 Piece solenoid	DT06-2S-EP06	DT04-2P-E005
CN-267	AMP	2	Accel dial LED	S816-002002	-
CN-305	DEUTSCH	12	To PVG controller	DTM06-12SA	-
CN-306	DEUTSCH	12	To PVG controller	DTM06-12SB	-
CN-307	DEUTSCH	3	Proportional-Service tool	DT06-3S-EP06	DT04-3P-E005
CN-308	AMP	4	Proportional-PVG32	2-967059-1	-
CN-309	DEUTSCH	2	Proportional-EPPR valve A1	DT06-2S-EP06	-
CN-310	DEUTSCH	2	Proportional-EPPR valve A2	DT06-2S-EP06	-
CN-365	DEUTSCH	2	Attach relief EPPR valve 1	DT06-2S-EP06	-
CN-366	DEUTSCH	2	Attach relief EPPR valve 2	DT06-2S-EP06	DT04-2P-E005
CN-367	DEUTSCH	2	Boom down floating solenoid	DT06-2S-E005	-
CN-368	DEUTSCH	2	Boom up floating solenoid	DT06-2S-E005	-
CN-369	DEUTSCH	2	Boom down cut off solenoid	DT06-2S-E005	-
CN-370	DEUTSCH	2	Swing fine control solenoid	DT06-2S-EP06	DT04-2P-E005
CN-376	AMP	34	Membrane controller	4-1437290-1	-
CN-378	DEUTSCH	2	Attach EPPR 2	DT06-2S-EP06	-
CN-379-XN1	DEUTSCH	24	DCU module	HDP24-24-31ST	-
CN-381	DEUTSCH	2	DEF/AdBlue® line heater 2	DT06-2S-EP06	-
CN-382	DEUTSCH	2	DEF/AdBlue® line heater 1	DT06-2S-EP06	-
CN-383	DEUTSCH	2	DEF/AdBlue® line heater 3	DT06-2S-EP06	-
CN-384	AMP	3	Coolant diverter valve	1-1418448-1	-
CN-385	-	7	Fan clutch	965570	-
CN-398	DEUTSCH	4	Service tool	DT06-4S	-
CN-398	DEUTSCH	4	Service tool	DT06-4S	DT04-4P
CN-419	DEUTSCH	2	Swing parking solenoid-A1	DT06-2S-EP06	-
CN-420	DEUTSCH	2	Swing parking solenoid-A2	DT06-2S-EP06	-
CN-421	DEUTSCH	2	Swing parking solenoid-A3	DT06-2S-EP06	-
CN-422	AMP	4	Ammonia sensor	1-1418390-1	-

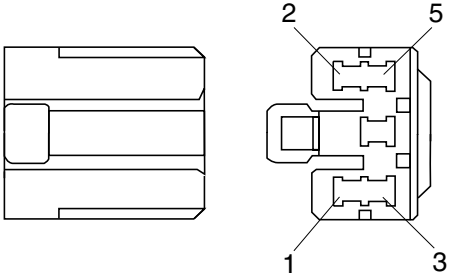
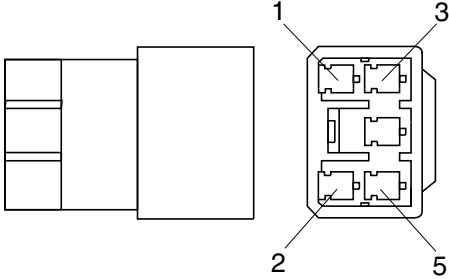
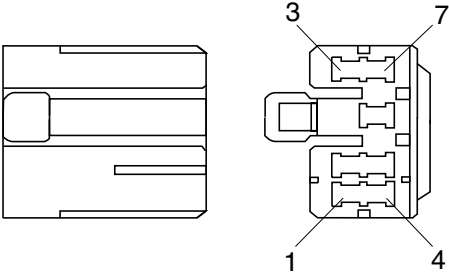
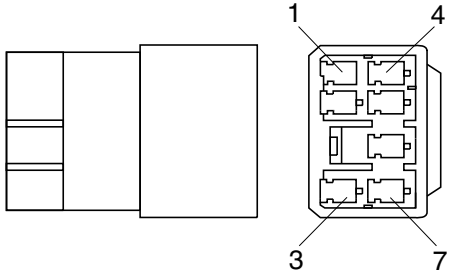
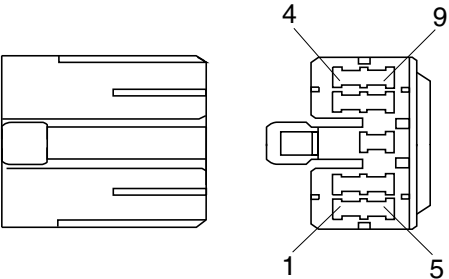
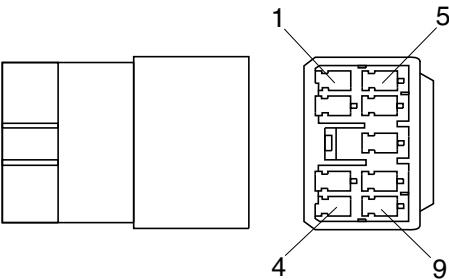
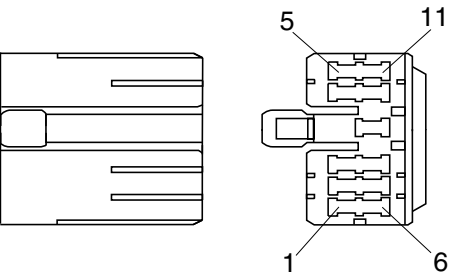
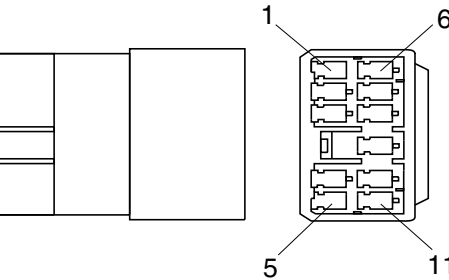
Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CN-423	DEUTSCH	4	Tank header unit	DT06-4S	-
CN-424	AMP	2	DEF/AdBlue® injector temperature sensor	2098557-1	-
CN-425	AMP	2	SCR temperature sensor	282080-1	-
CN-426	AMP	2	DOC temperature sensor	282080-1	-
CN-427	MOLEX	4	Reader-RMS	039012040	026013096
CN-429	AMP	6	DEF/AdBlue® ID module sensor	776433-3	-
CN-J7A	AMP	6	NOx sensor (tail)	776433-2	-
CN-J7B	AMP	6	NOx sensor (turbo out)	776433-1	-
· Relay					
CR-1	RING-TERM	-	Battery relay	ST710289-2	-
CR-2	-	5	Horn relay	-	-
CR-4	-	5	Work lamp relay	8JA 003 526-001	-
CR-5	-	5	Anti restart relay	-	-
CR-7	-	5	Aircon compressor relay	-	-
CR-9	-	5	Cabin lamp relay	8JA 003 526-001	-
CR-13	-	5	Head lamp relay	8JA 003 526-001	-
CR-23	KET	2	Start relay	-	MG640322
CR-24	RING TERM	1	Preheat relay	S822-014000	-
CR-35	-	5	Power relay	-	-
CR-36	-	5	Preheat relay	-	-
CR-85	-	5	Beacon lamp relay	8JA 003 526-001	-
CR-95	-	5	Feed pump relay	8JA 003 526-001	-
CR-101	-	5	DCU relay	8JA 003 526-001	-
· Switch					
CS-1	SHUR	1	Door switch	S822-014002	-
CS-2A	WP	6	Start key switch	S814-006100	-
CS-2B	DEUTSCH	3	Start button	DT06-3S-EP06	DT04-3P-E005
CS-4	AMP	3	Safety switch	S816-003002	-
CS-5	DEUTSCH	2	Horn switch	-	DT04-2P-E005
CS-19	DEUTSCH	2	One touch decel switch	-	DT04-2P-E005
CS-26	DEUTSCH	2	Breaker switch	DT06-2S-EP06	-
CS-26A	AMP	2	Breaker pedal switch	S816-002002	S816-102002
CS-29	DEUTSCH	2	Power max switch	DT06-2S-EP06	-
CS-33	AMP	6	Emergency engine stop switch	S816-006002	S816-106002
CS-52	SWF	12	Adjust & dozer switch	SWF589790	-
CS-53	AMP	1	Wiper cut switch	S822-014002	-
CS-67	SWF	12	Quick clamp switch	SWF589790	-
CS-73	SWF	12	Swing lock switch	SWF589790	-
CS-73A	SWF	12	Swing fine switch	SWF589790	-

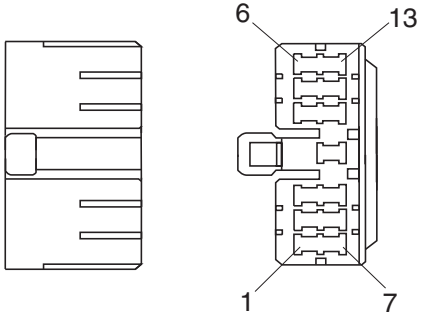
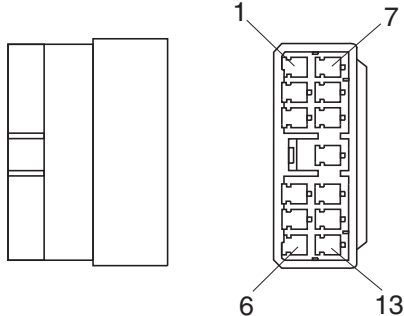
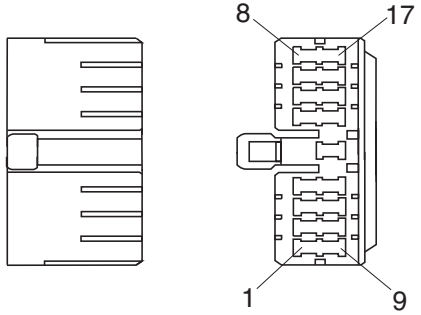
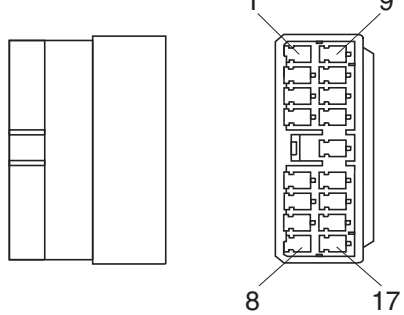
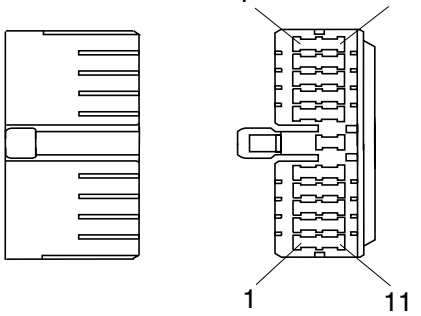
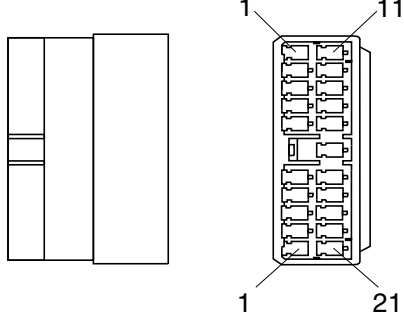
Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CS-74A	AMP	2	Master switch	S813-030201	-
CS-74B	AMP	2	Master switch	S813-030201	-
CS-83	SWF	12	Spare switch	SWF589790	-
CS-99	SWF	12	Air compressor switch	SWF589790	-
CS-100	SWF	12	Spare switch	SWF589790	-
CS-107	SWF	12	Travel straight switch	SWF589790	-
CS-111	SWF	12	Boom floating switch	SWF589790	-
· Light					
CL-1	KET	3	Room lamp	MG651032	-
CL-2	AMP	1	Cigar lighter	S822-014002	S822-114002
CL-3	DEUTSCH	2	Head lamp-LH	DT06-2S-EP06	-
CL-4	DEUTSCH	2	Head lamp-RH	DT06-2S-EP06	-
CL-5	DEUTSCH	2	Work lamp-LH	DT06-2S-EP06	-
CL-6	DEUTSCH	2	Work lamp-RH	DT06-2S-EP06	-
CL-7	SHUR	1	Beacon lamp	S822-014002	S822-114002
CL-8	DEUTSCH	2	Cab light-LH	DT06-2S-EP06	DT04-2P
CL-9	DEUTSCH	2	Cab light-RH	DT06-2S-EP06	DT04-2P
CL-10	DEUTSCH	2	Cab light-rear	DT06-2S-EP06	DT04-2P
CL-40	DEUTSCH	2	DEF/AdBlue® purging lamp	DT06-2S-EP06	DT04-2P
CL-41	AMP	1	DEF/AdBlue® F/warning lamp	S822-010400	S822-101400
· Sensor, sendor					
CD-1	AMP	2	Hydraulic oil temp sender	85202-1	-
CD-2	DEUTSCH	2	Fuel sender	DT06-2S-EP06	-
CD-6	DEUTSCH	3	Travel pressure switch	DT06-3S-EP06	-
CD-7	DEUTSCH	3	Working pressure switch	DT06-3S-EP06	-
CD-10	AMP	2	Air cleaner switch	85202-1	-
CD-16	DELPHI	3	Water level sensor	12110293	-
CD-24	DEUTSCH	3	Swing pressure sensor	DT06-3S-EP06	-
CD-31	DEUTSCH	3	Overload pressure sensor	DT06-3S-EP06	DT04-3P-E004
CD-32	DEUTSCH	3	Boom up pressure sensor	DT06-3S-EP06	-
CD-35	DEUTSCH	3	Arm in/out pressure sensor	DT06-3S-EP06	-
CD-42	DEUTSCH	3	Pump pressure sensor 1	DT06-3S-EP06	-
CD-43	DEUTSCH	3	Pump pressure sensor 2	DT06-3S-EP06	-
CD-44	DEUTSCH	3	Pump pressure sensor 3	DT06-3S-EP06	-
CD-45	AMP	3	WIF sensor	776429-3	-
CD-50	KET	2	Dozer pressure sensor	MG640795	-
CD-69	DEUTSCH	3	Attach pressure sensor	DT06-3S-EP06	-
CD-70	DEUTSCH	3	N1 pressure sensor	DT06-3S-EP06	-

Connector number	Type	No. of pin	Destination	Connector part No.	
				Female	Male
CD-71	DEUTSCH	3	N2 pressure sensor	DT06-3S-EP06	-
CD-85	DEUTSCH	3	Boom down sensor	DT06-3S-EP06	-
CD-86	DEUTSCH	3	Arm out pressure sensor	DT06-3S-E005	-
CD-87	DEUTSCH	3	Bucket out pressure sensor	DT06-3S-E005	-
CD-90	DEUTSCH	3	Arm in pressure sensor	DT06-3S-EP06	-
CD-91	DEUTSCH	3	Bucket in pressure sensor	DT06-3S-E005	-
CD-98	AMP	2	Air inlet temperature sensor	776427-1	-
CD-98A	AMP	2	Air intake temperature sensor	776427-1	-
CD-124	DEUTSCH	3	Boom cylinder rod pressure snensor	DT06-3S-E005	-

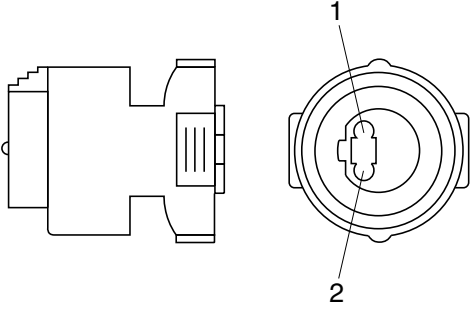
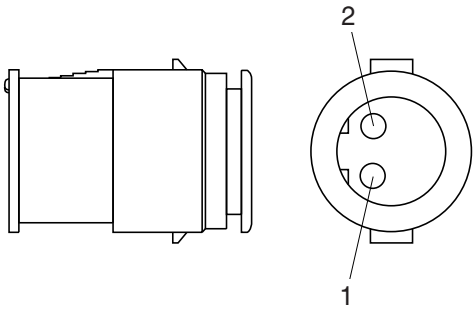
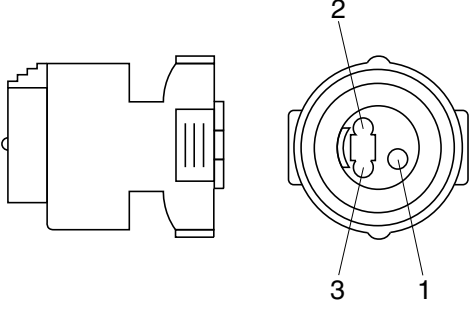
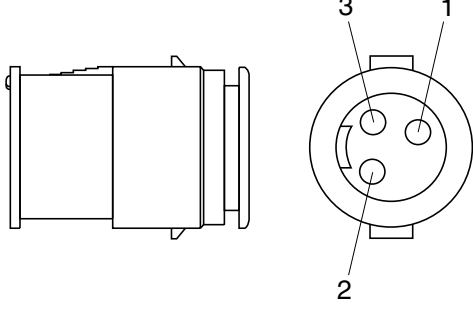
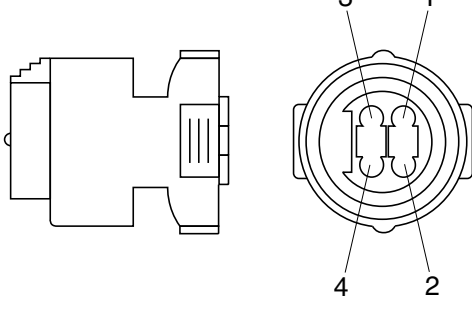
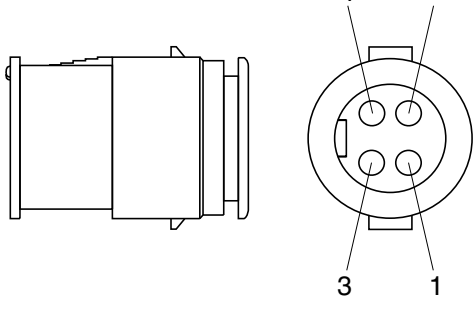
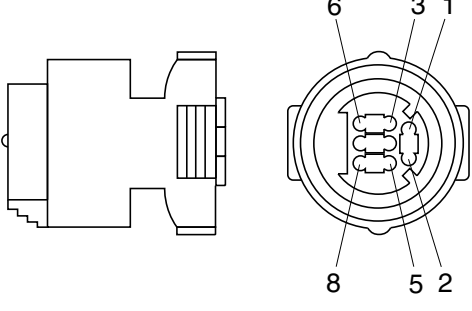
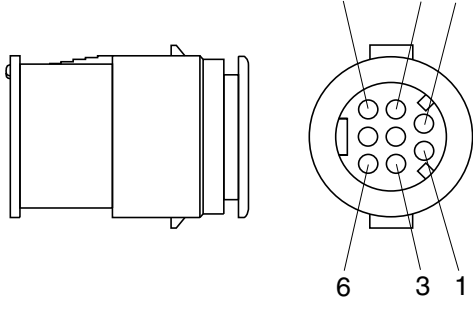
2. CONNECTION TABLE FOR CONNECTORS

1) PA TYPE CONNECTOR

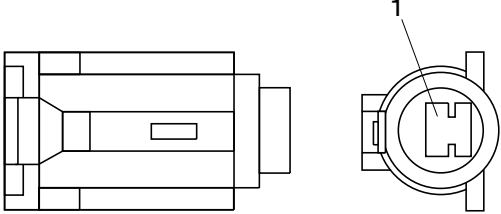
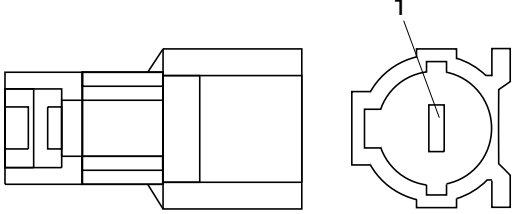
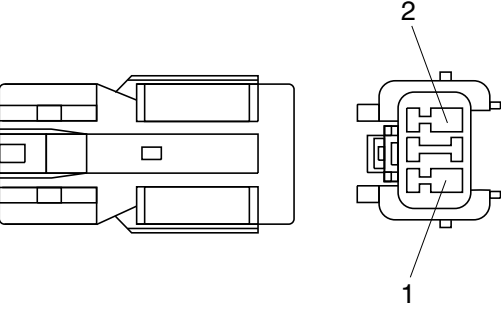
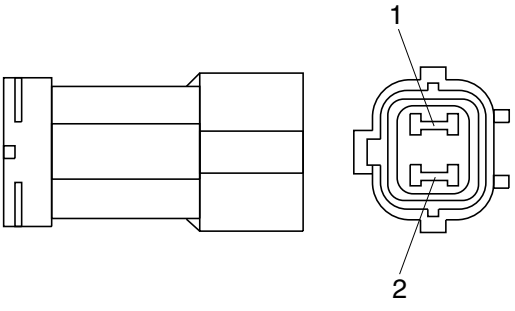
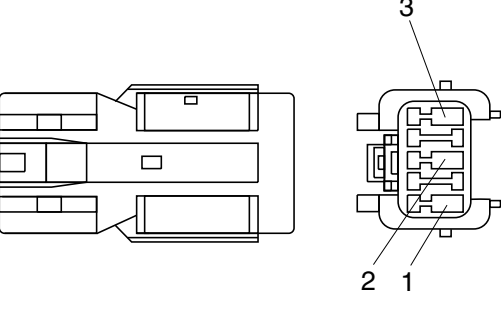
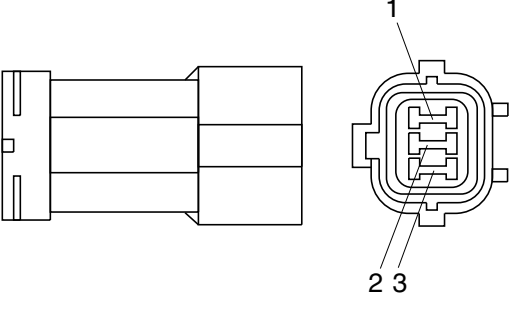
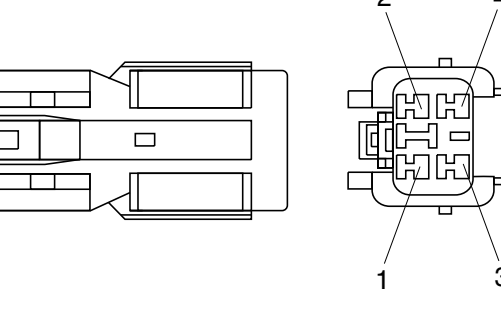
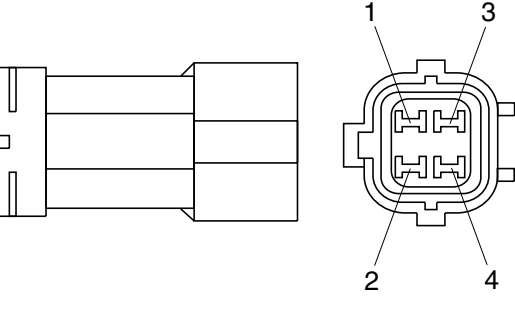
No. of pin	Receptacle connector (female)	Plug connector (male)
5	 <p style="text-align: center;">S811-005002</p>	 <p style="text-align: center;">S811-105002</p>
7	 <p style="text-align: center;">S811-007002</p>	 <p style="text-align: center;">S811-107002</p>
9	 <p style="text-align: center;">S811-009002</p>	 <p style="text-align: center;">3S811-109002</p>
11	 <p style="text-align: center;">S811-011002</p>	 <p style="text-align: center;">S811-111002</p>

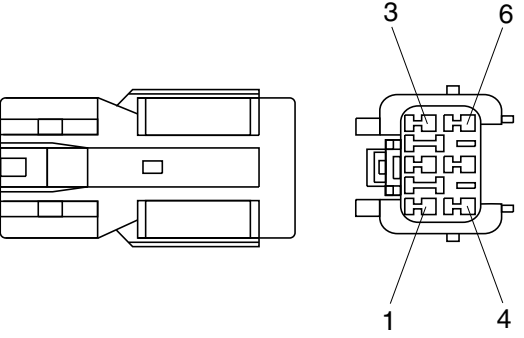
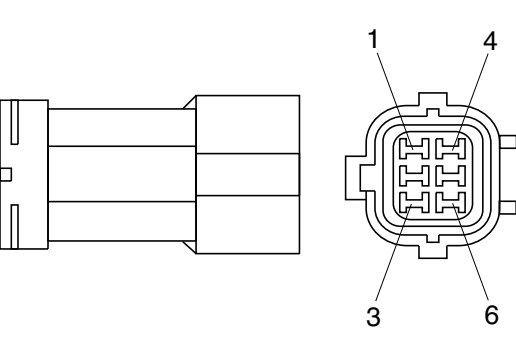
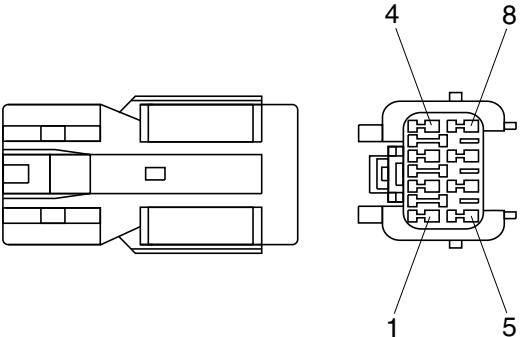
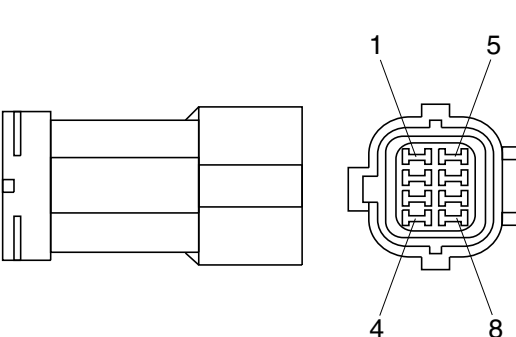
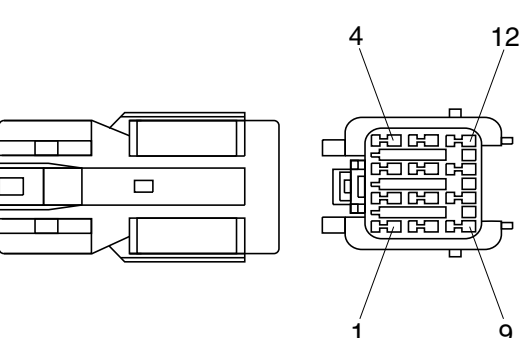
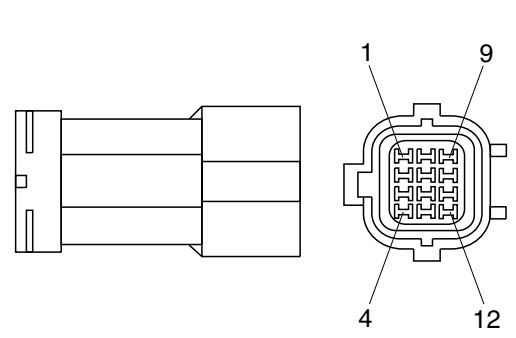
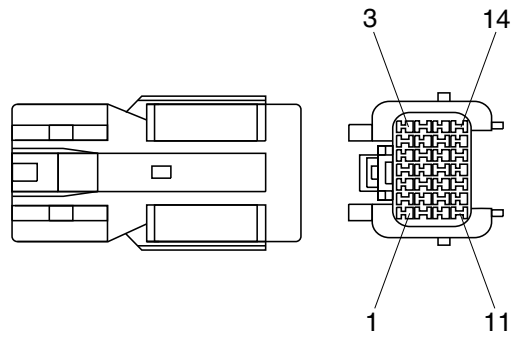
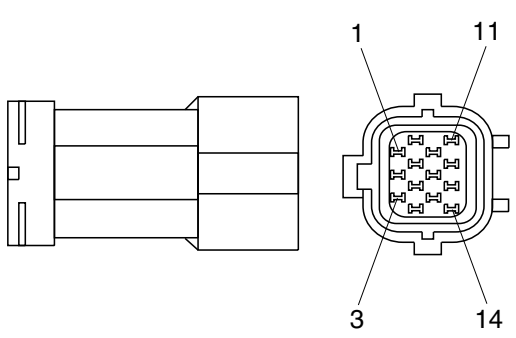
No. of pin	Receptacle connector (female)	Plug connector (male)
13	 <p data-bbox="689 638 837 667">S811-013002</p>	 <p data-bbox="1244 638 1393 667">S811-113002</p>
17	 <p data-bbox="689 1046 837 1075">S811-017002</p>	 <p data-bbox="1244 1046 1393 1075">S811-117002</p>
21	 <p data-bbox="689 1453 837 1482">S811-021002</p>	 <p data-bbox="1244 1453 1393 1482">S811-121002</p>

2) J TYPE CONNECTOR

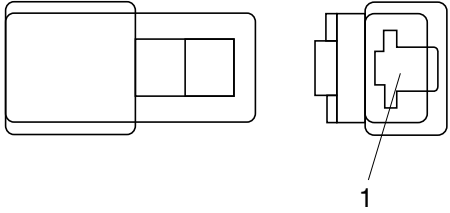
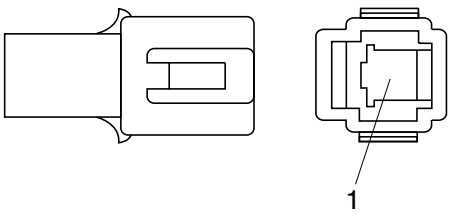
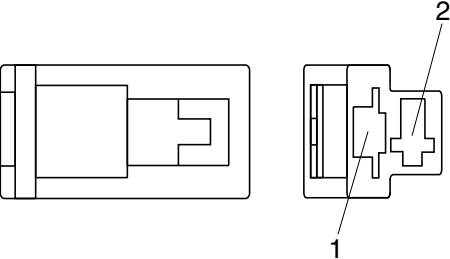
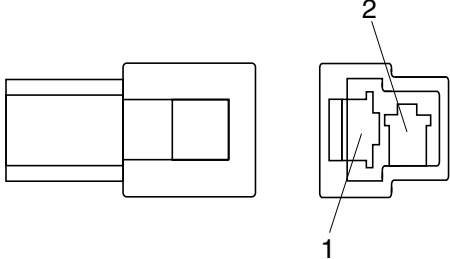
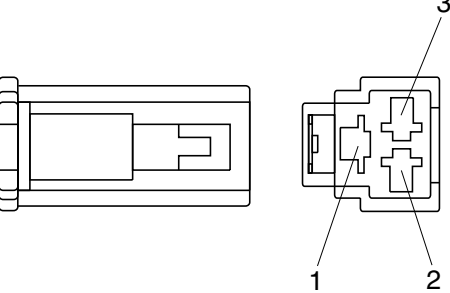
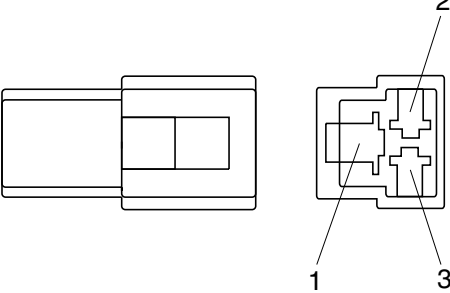
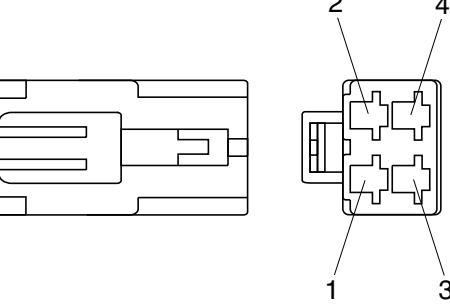
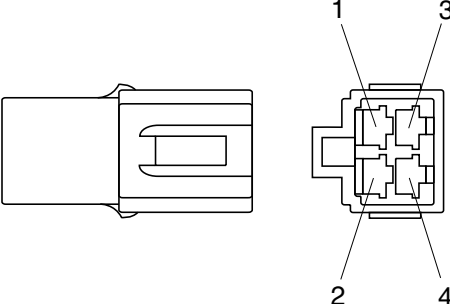
No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p style="text-align: center;">S816-002001</p>	 <p style="text-align: center;">S816-102001</p>
3	 <p style="text-align: center;">S816-003001</p>	 <p style="text-align: center;">S816-103001</p>
4	 <p style="text-align: center;">S816-004001</p>	 <p style="text-align: center;">S816-104001</p>
8	 <p style="text-align: center;">S816-008001</p>	 <p style="text-align: center;">S816-108001</p>

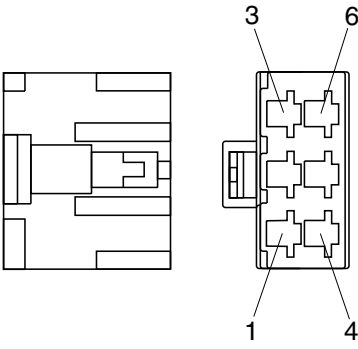
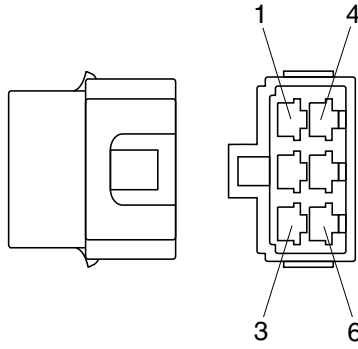
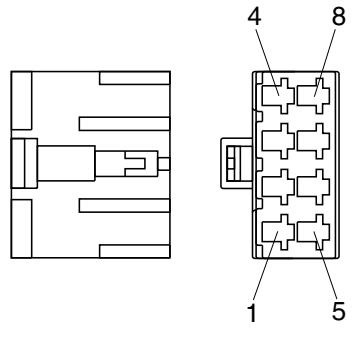
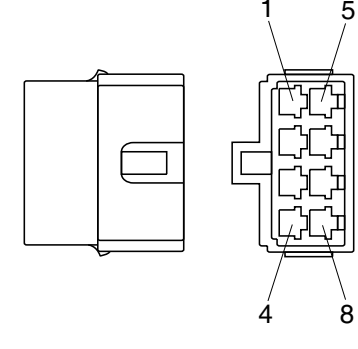
3) SWP TYPE CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p data-bbox="687 680 836 712">S814-001000</p>	 <p data-bbox="1241 680 1390 712">S814-101000</p>
2	 <p data-bbox="687 1088 836 1120">S814-002000</p>	 <p data-bbox="1241 1088 1390 1120">S814-102000</p>
3	 <p data-bbox="687 1498 836 1529">S814-003000</p>	 <p data-bbox="1241 1498 1390 1529">S814-103000</p>
4	 <p data-bbox="687 1908 836 1939">S814-004000</p>	 <p data-bbox="1241 1908 1390 1939">S814-104000</p>

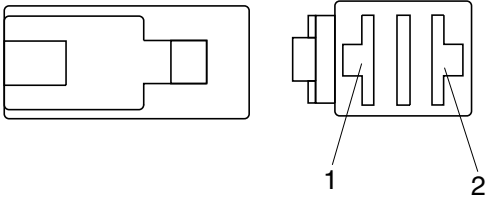
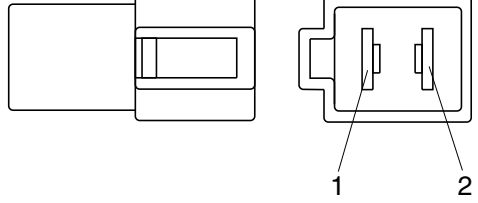
No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p data-bbox="686 638 837 672">S814-006000</p>	 <p data-bbox="1244 638 1396 672">S814-106000</p>
8	 <p data-bbox="686 1041 837 1075">S814-008000</p>	 <p data-bbox="1244 1041 1396 1075">S814-108000</p>
12	 <p data-bbox="686 1449 837 1482">S814-012000</p>	 <p data-bbox="1244 1449 1396 1482">S814-112000</p>
14	 <p data-bbox="686 1856 837 1890">S814-014000</p>	 <p data-bbox="1244 1856 1396 1890">S814-114000</p>

4) CN TYPE CONNECTOR

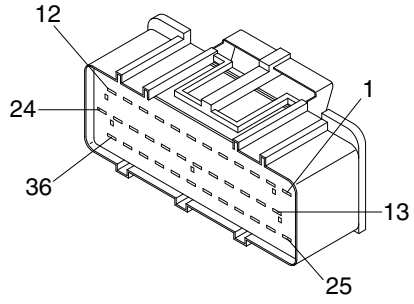
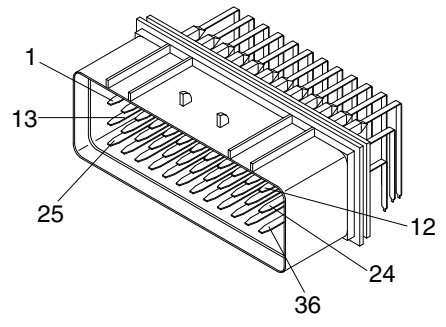
No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p style="text-align: center;">S810-001202</p>	 <p style="text-align: center;">S810-101202</p>
2	 <p style="text-align: center;">S810-002202</p>	 <p style="text-align: center;">S810-102202</p>
3	 <p style="text-align: center;">S810-003202</p>	 <p style="text-align: center;">S810-103202</p>
4	 <p style="text-align: center;">S810-004202</p>	 <p style="text-align: center;">S810-104202</p>

No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p data-bbox="686 638 837 672">S810-006202</p>	 <p data-bbox="1244 638 1396 672">S810-106202</p>
8	 <p data-bbox="686 1041 837 1075">S810-008202</p>	 <p data-bbox="1244 1041 1396 1075">S810-108202</p>

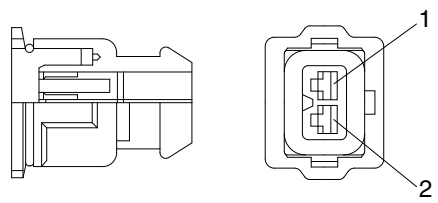
5) 375 FASTEN TYPE CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p style="text-align: center;">S810-002402</p>	 <p style="text-align: center;">S810-102402</p>

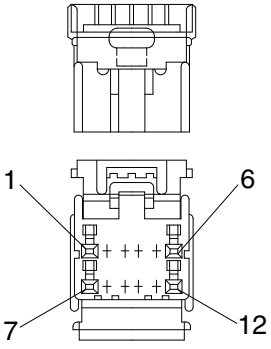
6) AMP ECONOSEAL CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
36	 <p style="text-align: center;">344111-1</p>	 <p style="text-align: center;">344108-1</p>

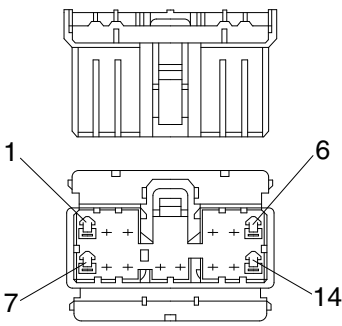
7) AMP TIMER CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p style="text-align: center;">85202-1</p>	

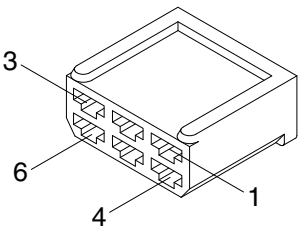
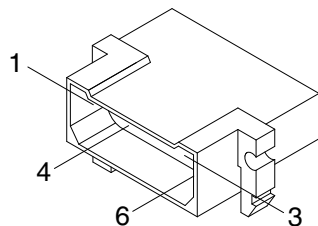
8) AMP 040 MULTILOCK CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
12		

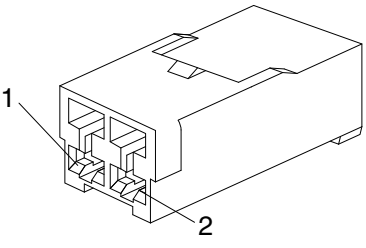
9) AMP 070 MULTILOCK CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
14		

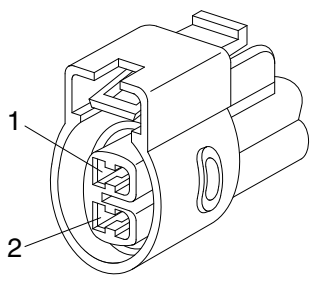
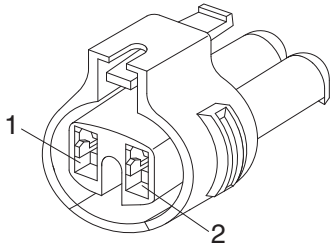
10) AMP FASTIN - FASTON CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
6		

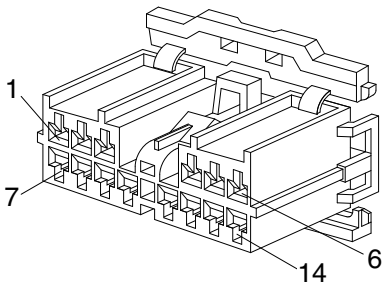
11) KET 090 CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p style="text-align: right;">MG610070</p>	

12) KET 090 WP CONNECTORS

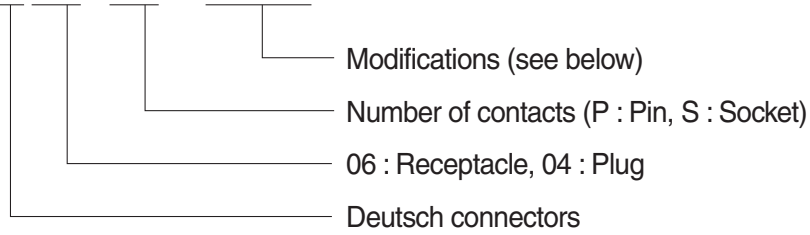
No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p style="text-align: right;">MG640605</p>	
2	 <p style="text-align: right;">MG640795</p>	

13) KET SDL CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
14	 <p data-bbox="710 672 837 705">MG610406</p>	

14) DEUTSCH DT CONNECTORS

DT 06 - 3S - ★★☆☆



※ Modification

E003 : Standard end cap - gray

E004 : Color of connector to be black

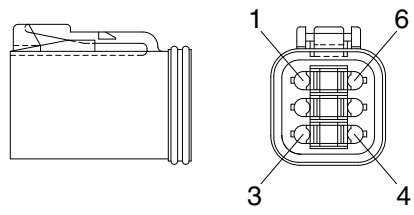
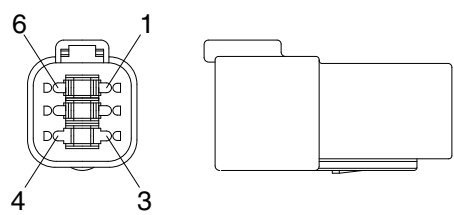
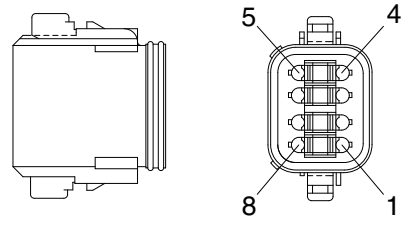
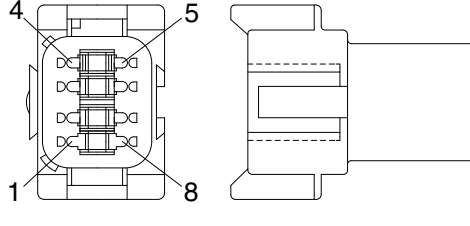
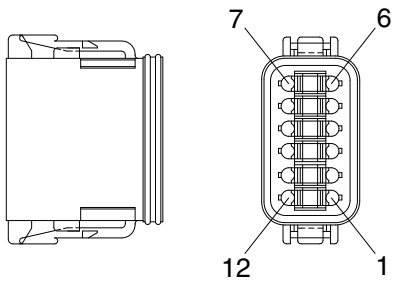
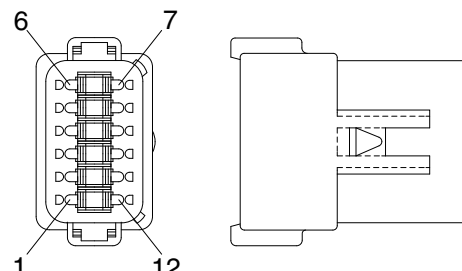
E005 : Combination - E004 & E003

EP04 : End cap

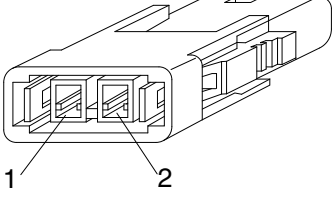
EP06 : Combination P012 & EP04

P012 : Front seal enhancement - connectors color to black for 2, 3, 4 & 6pin

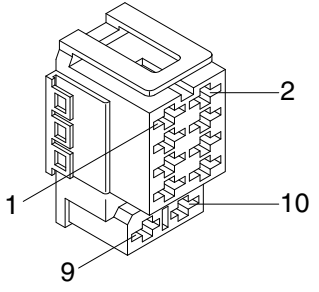
No. of pin	Receptacle connector (female)	Plug connector (male)
2	<p>DT06-2S</p>	<p>DT04-2P</p>
3	<p>DT06-3S</p>	<p>DT04-3P</p>
4	<p>DT06-4S</p>	<p>DT04-4P</p>

No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p style="text-align: center;">DT06-6S</p>	 <p style="text-align: center;">DT04-6P</p>
8	 <p style="text-align: center;">DT06-8S</p>	 <p style="text-align: center;">DT04-8P</p>
12	 <p style="text-align: center;">DT06-12S</p>	 <p style="text-align: center;">DT04-12P</p>

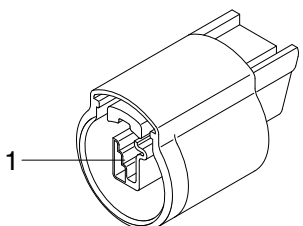
15) MOLEX 2CKTS CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p data-bbox="702 683 837 705">35215-0200</p>	

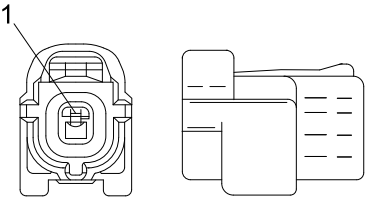
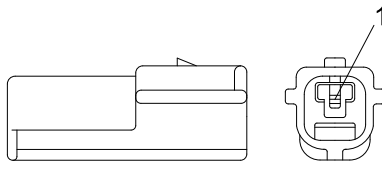
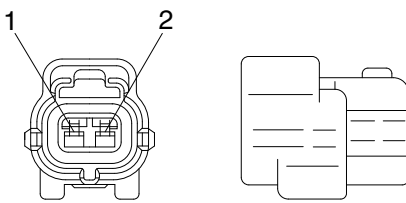
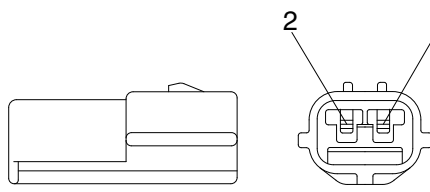
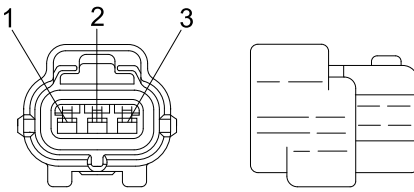
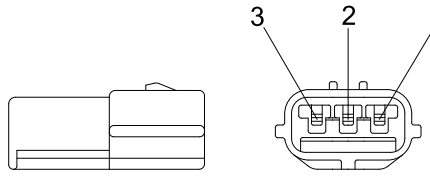
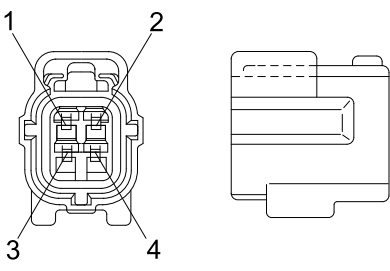
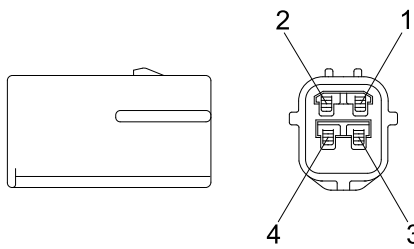
16) ITT SWF CONNECTOR

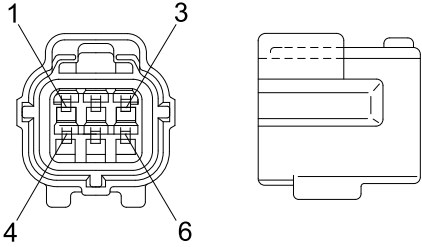
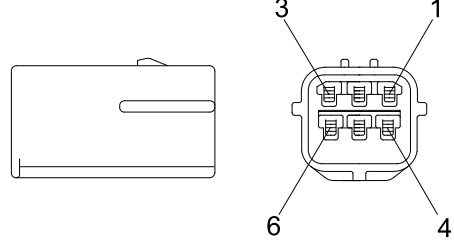
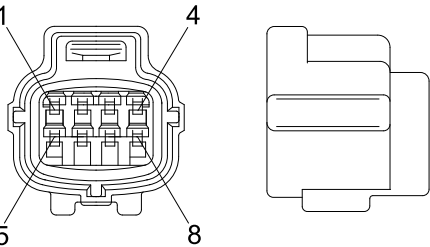
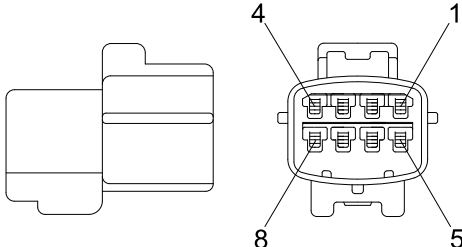
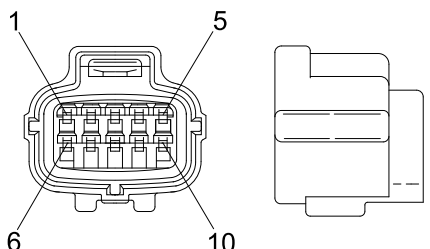
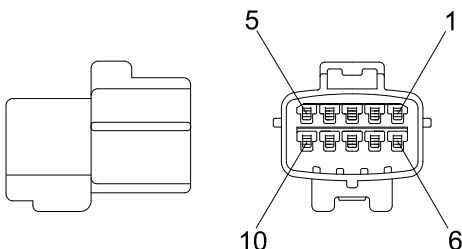
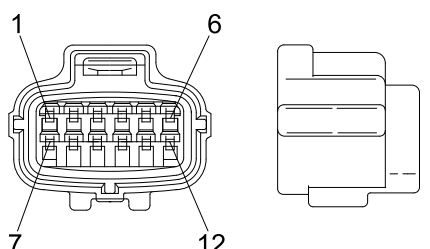
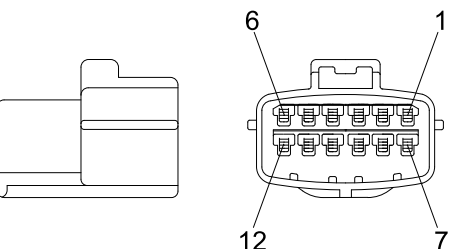
No. of pin	Receptacle connector (female)	Plug connector (male)
10	 <p data-bbox="694 1288 837 1310">SWF593757</p>	

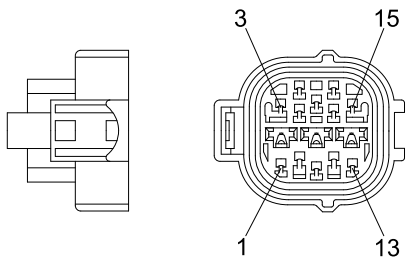
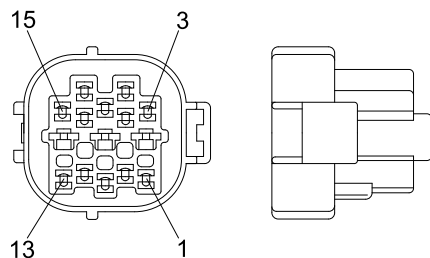
17) MWP NMWP CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p data-bbox="686 1892 837 1915">NMWP01F-B</p>	

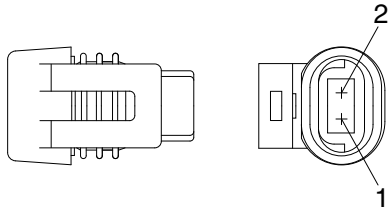
18) ECONOSEAL J TYPE CONNECTORS

No. of pin	Receptacle connector (female)	Plug connector (male)
1	 <p style="text-align: center;">S816-001002</p>	 <p style="text-align: center;">S816-101002</p>
2	 <p style="text-align: center;">S816-002002</p>	 <p style="text-align: center;">S816-102002</p>
3	 <p style="text-align: center;">S816-003002</p>	 <p style="text-align: center;">S816-103002</p>
4	 <p style="text-align: center;">S816-004002</p>	 <p style="text-align: center;">S816-104002</p>

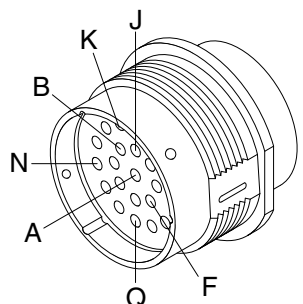
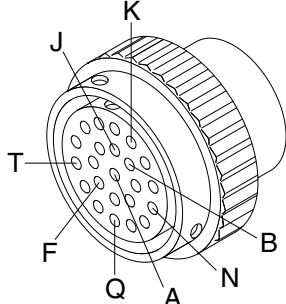
No. of pin	Receptacle connector (female)	Plug connector (male)
6	 <p data-bbox="686 638 837 672">S816-006002</p>	 <p data-bbox="1236 638 1388 672">S816-106002</p>
8	 <p data-bbox="686 1041 837 1075">S816-008002</p>	 <p data-bbox="1236 1041 1388 1075">S816-108002</p>
10	 <p data-bbox="686 1444 837 1478">S816-010002</p>	 <p data-bbox="1236 1444 1388 1478">S816-110002</p>
12	 <p data-bbox="686 1848 837 1881">S816-012002</p>	 <p data-bbox="1236 1848 1388 1881">S816-112002</p>

No. of pin	Receptacle connector (female)	Plug connector (male)
15	 <p style="text-align: right;">368301-1</p>	 <p style="text-align: right;">2-85262-1</p>

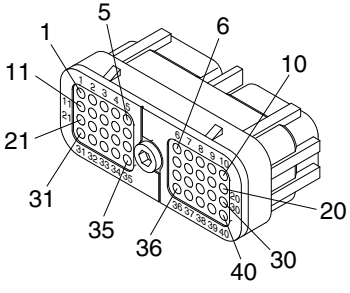
19) METRI-PACK TYPE CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
2	 <p style="text-align: right;">12040753</p>	

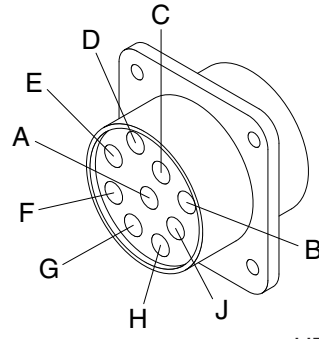
20) DEUTSCH HD30 CONNECTOR

No. of pin	Receptacle connector (female)	Plug connector (male)
23	 <p style="text-align: right;">HD36-24-23SN</p>	 <p style="text-align: right;">HD34-24-23PN</p>

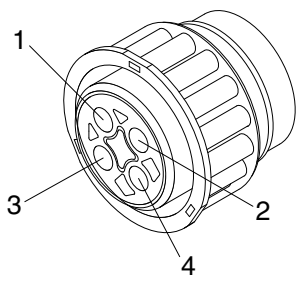
21) DEUTSCH MCU CONNECTOR

No. of pin	Receptacle connector (Female)	Plug connector (Male)
40	 <p style="text-align: right;">DRC26-40SA/B</p>	

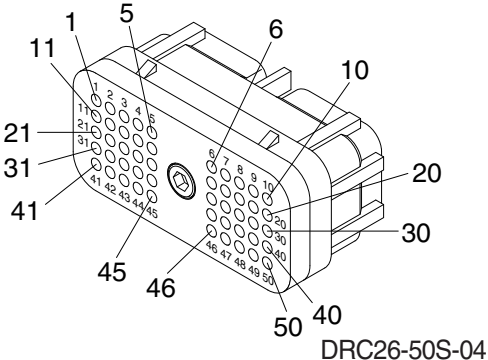
22) DEUTSCH SERVICE TOOL CONNECTOR

No. of pin	Receptacle connector (Female)	Plug connector (Male)
9	 <p style="text-align: right;">HD10-9-96P</p>	

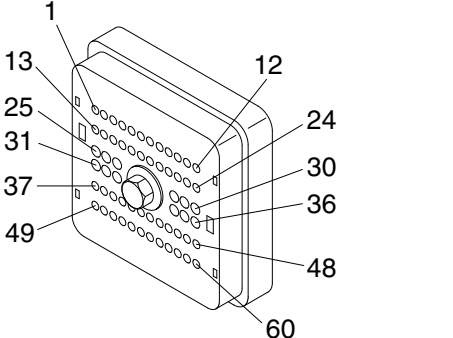
23) AMP FUEL WARMER CONNECTOR

No. of pin	Receptacle connector (Female)	Plug connector (Male)
4	 <p style="text-align: right;">2-967325-3</p>	

24) DEUTSCH ENGINE ECM CONNECTOR

No. of pin	Receptacle connector (Female)	Plug connector (Male)
50	 <p style="text-align: right;">DRC26-50S-04</p>	

25) DEUTSCH INTERMEDIATE CONNECTOR

No. of pin	Receptacle connector (Female)	Plug connector (Male)
60	 <p style="text-align: right;">DRB16-60SAE-L018</p>	