Group	1 Safety Hints	1-1
Group	2 Specifications	1-10


GROUP 1 SAFETY

FOLLOW SAFE PROCEDURE

Unsafe work practices are dangerous. Understand service procedure before doing work; Do not attempt shortcuts.

WEAR PROTECTIVE CLOTHING


Wear close fitting clothing and safety equipment appropriate to the job.

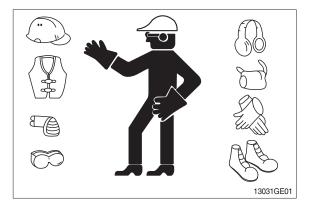

WARN OTHERS OF SERVICE WORK

Unexpected machine movement can cause serious injury.

Before performing any work on the excavator, attach a **Do Not Operate** tag on the right side control lever.

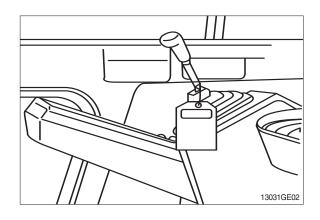


USE HANDHOLDS AND STEPS

Falling is one of the major causes of personal injury.

When you get on and off the machine, always maintain a three point contact with the steps and handrails and face the machine. Do not use any controls as handholds.

Never jump on or off the machine. Never mount or dismount a moving machine.

Be careful of slippery conditions on platforms, steps, and handrails when leaving the machine.

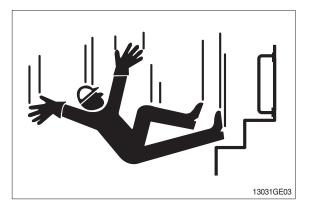


PREPARE FOR EMERGENCIES

Be prepared if a fire starts.


Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

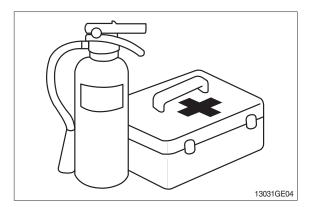

PROTECT AGAINST FLYING DEBRIS


Guard against injury from flying pieces of metal or debris; Wear goggles or safety glasses.

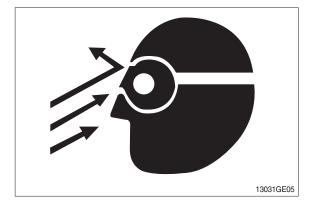

PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.


Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

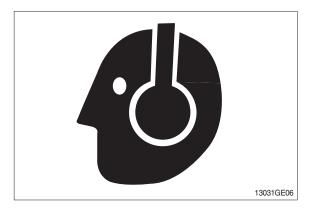

AVOID POWER LINES

Serious injury or death can result from contact with electric lines.

Never move any part of the machine or load closer to electric line than 3m(10ft) plus twice the line insulator length.

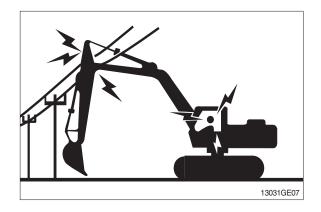

KEEP RIDERS OFF EXCAVATOR

Only allow the operator on the excavator. Keep riders off.

Riders on excavator are subject to injury such as being struck by foreign objects and being thrown off the excavator. Riders also obstruct the operator's view resulting in the excavator being operated in an unsafe manner.

MOVE AND OPERATE MACHINE SAFELY

Bystanders can be run over. Know the location of bystanders before moving, swinging, or operating the machine.


Always keep the travel alarm in working condition. It warns people when the excavator starts to move.


Use a signal person when moving, swinging, or operating the machine in congested areas. Coordinate hand signals before starting the excavator.

OPERATE ONLY FORM OPERATOR'S SEAT

Avoid possible injury machine damage. Do not start engine by shorting across starter terminals.

NEVER start engine while standing on ground. Start engine only from operator's seat.

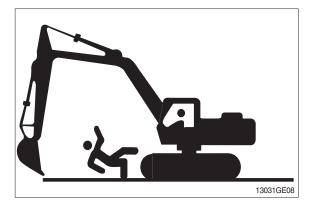

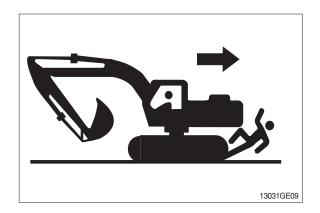



PARK MACHINE SAFELY

Before working on the machine:

- \cdot Park machine on a level surface.
- \cdot Lower bucket to the ground.
- \cdot Turn auto idle switch off.
- \cdot Run engine at 1/2 speed without load for 2 minutes.
- Turn key switch to OFF to stop engine. Remove key from switch.
- · Move pilot control shutoff lever to locked position.
- · Allow engine to cool.

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.


Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load.

Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands.

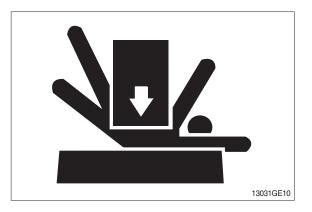



HANDLE FLUIDS SAFELY-AVOID FIRES


Handle fuel with care; It is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks. Always stop engine before refueling machine. Fill fuel tank outdoors.



Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; They can ignite and burn spontaneously.

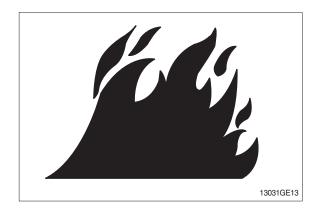

BEWARE OF EXHAUST FUMES

Prevent asphyxiation. Engine exhaust fumes can cause sickness or death.

If you must operate in a building, be positive there is adequate ventilation. Either use an exhaust pipe extension to remove the exhaust fumes or open doors and windows to bring enough outside air into the area.

REMOVE PAINT BEFORE WELDING OR HEATING

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:


• If you sand or grind paint, avoid breathing the dust.

Wear an approved respirator.

 If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

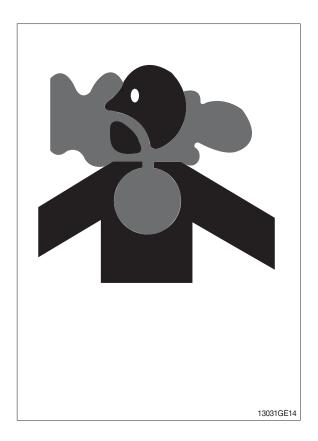



SERVICE MACHINE SAFELY


Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.


Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

STAY CLEAR OF MOVING PARTS

Entanglements in moving parts can cause serious injury.

To prevent accidents, use care when working around rotating parts.

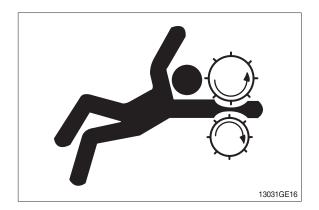

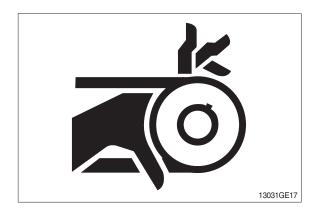

AVOID HIGH PRESSURE FLUIDS


Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result.



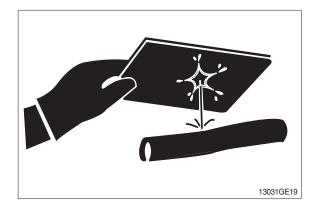

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials.

Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area. Install fire resisting guards to protect hoses or other materials.



PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; It may explode. Warm battery to 16° C (60° F).



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


- 1. Filling batteries in a well-ventilated area.
- 2. Wearing eye protection and rubber gloves.
- 3. Avoiding breathing fumes when electrolyte is added.
- 4. Avoiding spilling of dripping electrolyte.
- 5. Use proper jump start procedure.

If you spill acid on yourself:

- 1. Flush your skin with water.
- 2. Apply baking soda or lime to help neutralize the acid.
- 3. Flush your eyes with water for 10-15 minutes. Get medical attention immediately.

If acid is swallowed:

- 1. Drink large amounts of water or milk.
- 2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
- 3. Get medical attention immediately.

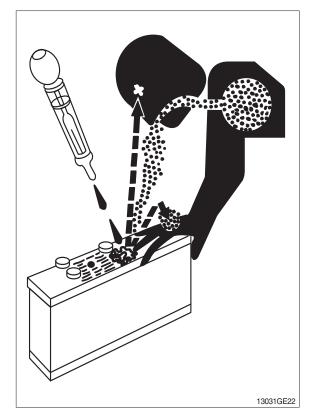


USE TOOLS PROPERLY

Use tools appropriate to the work. Makeshift tools, parts, and procedures can create safety hazards.

Use power tools only to loosen threaded tools and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only recommended replacement parts. (See Parts catalogue.)

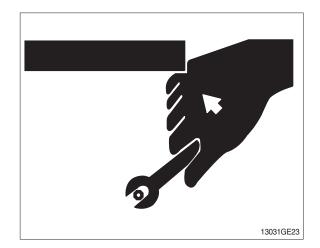


DISPOSE OF FLUIDS PROPERLY

Improperly disposing of fluids can harm the environment and ecology. Before draining any fluids, find out the proper way to dispose of waste from your local environmental agency.


Use proper containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

DO NOT pour oil into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters, batteries, and other harmful waste.

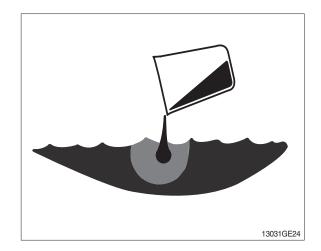

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

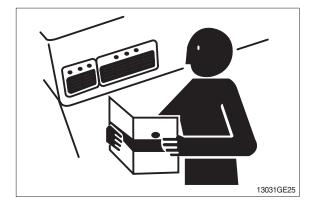


LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

GROUP 2 SPECIFICATIONS

1. MAJOR COMPONENT

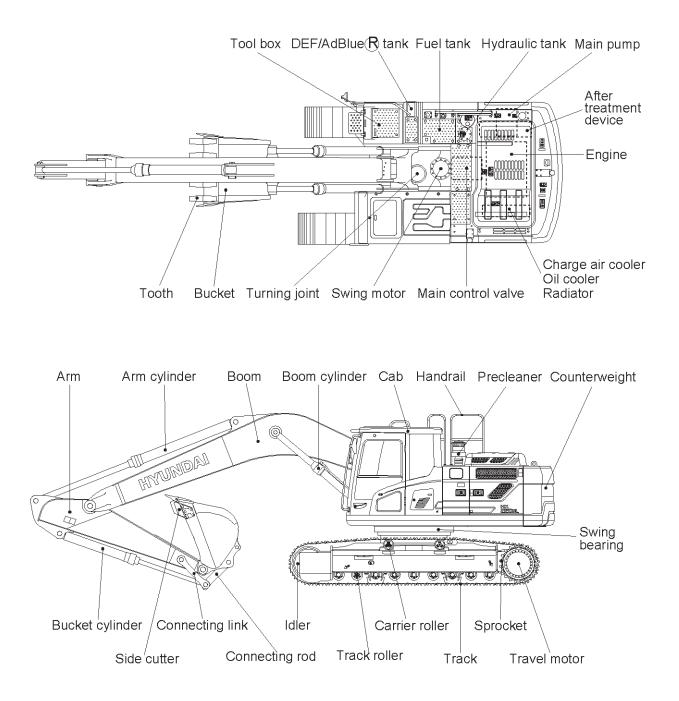


220F2SP01

2. SPECIFICATIONS

1) HX220 NL

· 5.65 m (18' 6") BOOM and 2.92 m (9' 7") ARM

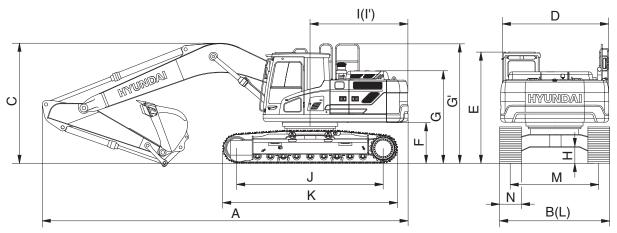


220F2SP02

Description		Unit	Specification
Operating weight		kg (lb)	22300 (49160)
Bucket capacity (SAE heaped), standar	ſd	m ³ (yd ³)	0.87 (1.14)
Overall length	Α		9510 (31' 2")
Overall width, with 500mm shoe	В		2500 (8' 2")
Overall height of boom	С		3100 (10' 2")
Superstructure width	D		2530 (8' 4")
Overall height of cab	E		3000 (9' 10")
Ground clearance of counterweight	F		1060 (3' 6")
Overall height of engine hood	G		2468 (8' 1")
Overall height of guardrail	G'	(t , in)	3211 (10' 6")
Minimum ground clearance	Н	mm (ft-in)	480 (1' 7")
Rear-end distance			2770 (9' 1")
Rear-end swing radius	ľ		2850 (9' 4")
Distance between tumblers	J		3650 (12' 0")
Undercarriage length	K		4440 (14' 7")
Undercarriage width	L		2500 (8' 2")
Track gauge	М		2000 (6' 7")
Track shoe width, standard	N		500 (20")
Travel speed (low/high)		km/hr (mph)	3.4/5.3 (2.1/3.3)
Swing speed		rpm	12.0
Gradeability		Degree (%)	35 (70)
Ground pressure (600 mm shoe)		kgf/cm² (psi)	0.57 (8.11)
Max traction force		kg (lb)	21100 (46500)

3. WORKING RANGE

· 5.65 m (18' 6") MONO BOOM

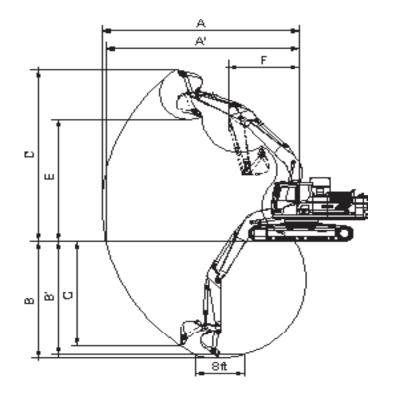


220NF2SP02

Description		2.0 m (6' 7") Arm	2.4 m (7' 10") Arm	2.92 m (9' 7") Arm
Max digging reach	А	9140 mm (30' 0")	9510 mm (31' 2")	9960 mm (32' 8")
Max digging reach on ground	A'	8960 mm (29' 5")	9340 mm (30' 8")	9800 mm (32' 2")
Max digging depth	В	5750 mm (18'10")	6150 mm (20' 2")	6640 mm (21' 9")
Max digging depth (8 ft level)	B'	5520 mm (18' 1")	5950 mm (19' 6")	6470 mm (21' 3")
Max vertical wall digging depth	С	5320 mm (17' 5")	5780 mm (19' 0")	6250 mm (20' 6")
Max digging height	D	9270 mm (30' 5")	9500 mm (31' 2")	9740 mm (31'11")
Max dumping height	Е	6450 mm (21' 2")	6660 mm (21' 10")	6900 mm (22' 8")
Min swing radius	F	3710 mm (12' 2")	3630 mm (11' 11")	3580 mm (11' 9")
		133.4 [144.8] kN	133.4 [144.8] kN	133.4 [144.8] kN
	SAE	13600 [14770] kgf	13600 [14770] kgf	13600 [14770] kgf
Puakat diaging force		29980 [32550] lbf	29980 [32550] Ibf	29980 [32550] Ibf
Bucket digging force		152.0 [165.0] kN	152.0 [165.0] kN	152.0 [165.0] kN
	ISO	15500 [16830] kgf	15500 [16830] kgf	15500 [16830] kgf
		34170 [37100] lbf	34170 [37100] Ibf	34170 [37100] lbf
		144.2 [156.5] kN	102.0 [110.7] kN	119.6 [129.9] kN
	SAE	14700 [15960] kgf	10400 [11290] kgf	12200 [13250] kgf
Arm diaging force		32410 [35190] lbf	22930 [24900] Ibf	26900 [29210] lbf
Arm digging force		151.0 [164.0] kN	106.9 [116.1] kN	125.5 [136.3] kN
	ISO	15400 [16720] kgf	10900 [11830] kgf	12800 [13900] kgf
		33950 [36860] lbf	24030 [26090] Ibf	28220 [30640] lbf

[]: Power boost

2) 5.65 m (18' 6") HYDRAULIC ADJUSTABLE BOOM

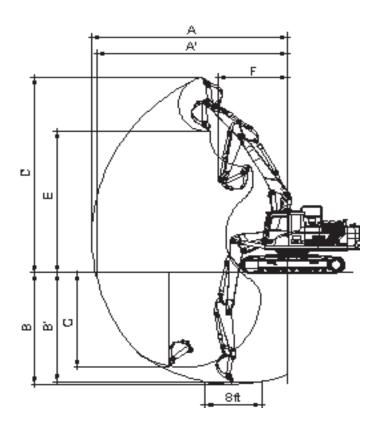

220NF2SP03

Description		2.0 m (6' 7") Arm	2.4 m (7' 10") Arm	2.92 m (9' 7") Arm
Max digging reach	А	9120 mm (29' 11")	9530 mm (31' 3")	10020 mm (32' 10")
Max digging reach on ground	A'	8940 mm (29' 4")	9360 mm (30' 9")	9860 mm (32' 4")
Max digging depth	В	5480 mm (18' 0")	5890 mm (19' 4")	6400 mm (21' 0")
Max digging depth (8 ft level)	B'	5360 mm (17' 7")	5770 mm (18' 11")	6300 mm (20' 8")
Max vertical wall digging depth	С	4560 mm (15' 0")	4990 mm (16' 4")	5530 mm (18' 2")
Max digging height	D	10300mm (33' 10")	10670 mm (35' 0")	11080 mm (36' 4")
Max dumping height	Е	7390 mm (24' 3")	7740 mm (25' 5")	8160 mm (26' 9")
Min swing radius	F	2870 mm (9'5")	2670 mm (8' 9")	2540 mm (8'4")
		133.4 [144.8] kN	133.4 [144.8] kN	133.4 [144.8] kN
	SAE	13600 [14770] kgf	13600 [14770] kgf	13600 [14770] kgf
Pueket digging foree		29980 [32550] Ibf	29980 [32550] lbf	29980 [32550] lbf
Bucket digging force		152.0 [165.0] kN	152.0 [165.0] kN	152.0 [165.0] kN
	ISO	15500 [16830] kgf	15500 [16830] kgf	15500 [16830] kgf
		34170 [37100] Ibf	34170 [37100] lbf	34170 [37100] lbf
		144.2 [156.5] kN	119.6 [129.9] kN	102.0 [110.7] kN
	SAE	14700 [15960] kgf	12200 [13250] kgf	10400 [11290] kgf
Arm diaging force		32410 [35190] Ibf	26900 [29210] lbf	22930 [24900] Ibf
Arm digging force		151.0 [164.0] kN	125.5 [136.3] kN	106.9 [116.1] kN
	ISO	15400 [16720] kgf	12800 [13900] kgf	10900 [11830] kgf
		33950 [36860] lbf	28220 [30640] lbf	24030 [26090] lbf

[]: Power boost

4. WEIGHT

1) HX220 NL

li a con	HX2	20 NL		
Item	kg	lb		
Upper structure assembly	•			
· Main frame weld assembly	1720	3800		
· Engine assembly	1485	3270		
· Main pump assembly	136	300		
· Main control valve assembly	220	490		
· Swing motor assembly	250	550		
· Hydraulic oil tank assembly	165	360		
· Fuel tank assembly	138	304		
· Counterweight	4700	10360		
· Cab assembly	500	1100		
Lower chassis assembly				
· Track frame weld assembly	2525	5570		
· Swing bearing	290	640		
· Travel motor assembly	300	660		
· Turning joint	57	126		
· Track recoil spring	140	310		
· Idler	151	333		
· Carrier roller	20	45		
· Track roller	48	106		
· Sprocket	56	123		
 Track-chain assembly (500 mm standard triple grouser shoe) 	1309	2886		
Front attachment assembly				
· 5.65 m boom assembly	1370	3020		
· 2.92 m arm assembly	760	1680		
· 0.87 m ³ SAE heaped bucket	800	1760		
· Boom cylinder assembly	180/1EA	400/1EA		
· Arm cylinder assembly	290	640		
· Bucket cylinder assembly	175	390		
· Bucket control link assembly	170	370		

* This information is different with operating and transportation weight because it is not including harness, pipe, oil, fuel so on.

* Refer to Transportation for actual weight information and Specifications for operating weight.

5. LIFTING CAPACITIES

1) HX220 NL

(1) 5.65 m (18' 6") boom, 2.00 m (6' 7") arm equipped with 0.87 m³ (SAE heaped) bucket, 500 mm (20") triple grouser shoe.

ľ	:	Rating over-front	
---	---	-------------------	--

• E Rating over-side or 360 degree

					Load	radius				At	max. rea	ch
Load p	oint	3.0 m	(10 ft)	4.5 m	(15 ft)	6.0 m	6.0 m (20 ft)		7.5 m (25 ft)		Capacity	
height				ľ		ľ		ľ		ľ	⋐⋕⋑	m (ft)
7.5 m (25 ft)	kg Ib									*4000 *8820	3810 8400	6.61 (21.7)
6.0 m (20 ft)	kg Ib					*4420 *9740	4380 9660			*4060 *8950	2800 6170	7.75 (25.4)
4.5 m (15 ft)	kg Ib			*5670 *12500	*5670 *12500	*4840 *10670	4230 9330			*4200 *9260	2340 5160	8.41 (27.6)
3.0 m (10 ft)	kg Ib			*7430 *16380	6170 13600	*5600 *12350	3990 8800	*4830 *10650	2750 6060	*4360 *9610	2130 4700	8.71 (28.6)
1.5 m (5 ft)	kg Ib			*8990 *19820	5700 12570	*6390 *14090	3760 8290	*5190 *11440	2640 5820	4330 9550	2080 4590	8.71 (28.6)
Ground Line	kg Ib			*9720 *21430	5490 12100	*6930 *15280	3610 7960	5380 11860	2570 5670	4570 10080	2190 4830	8.40 (27.6)
-1.5 m (-5 ft)	kg Ib	*14170 *31240	10580 23320	*9690 *21360	5460 12040	*7030 *15500	3560 7850			*4930 *10870	2540 5600	7.73 (25.4)
-3.0 m (-10 ft)	kg Ib	*12680 *27950	10790 23790	*8900 *19620	5570 12280	*6390 *14090	3650 8050			*4910 *10820	3380 7450	6.58 (21.6)

Note 1. Lifting capacity are based on SAE J1097 and ISO 10567.

- 2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm, level ground or 87% of full hydraulic capacity.
- 3. The load point is a hook located on the back of the bucket.
- 4. *indicates load limited by hydraulic capacity.

* Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools, ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your Hyundai dealer regarding the lifting capacities for specific work tools and attachments.

▲ Failure to comply to the rated load can cause possible personal injury or property damage. Make adjustments to the rated load as necessory for non-standard configurations. (2) 5.65 m (18' 6") boom, 2.40 m (7' 10") arm equipped with 0.87 m³ (SAE heaped) bucket and 500 mm (20") triple grouser shoe.

						Load	radius					Atı	max. rea	ach
Load po	oint	1.5 m	(5 ft)	3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m	(25 ft)	Cap	acity	Reach
height		ŀ	⋐⋕₽	ŀ		ľ	⋳ ⋳ ⋤	ŀ	⋳ ⋣⋼	ŀ		ľ		m (ft)
7.5 m	kg											*3690	3360	7.12
(25 ft)	lb											*8140	7410	(23.4)
6.0 m	kg							*3990	*3990			*3780	2540	8.18
(20 ft)	lb							*8800	*8800			*8330	5600	(26.8)
4.5 m	kg							*4460	4280	*4050	2860	*3910	2140	8.80
(15 ft)	lb							*9830	9440	*8930	6310	*8620	4720	(28.9)
3.0 m	kg					*6850	6280	*5260	4020	*4560	2760	*4080	1950	9.09
(10 ft)	lb					*15100	13850	*11600	8860	*10050	6080	*8990	4300	(29.8)
1.5 m	kg					*8540	5750	*6120	3760	*4980	2630	4030	1910	9.08
(5 ft)	lb					*18830	12680	*13490	8290	*10980	5800	8880	4210	(29.8)
Ground	kg			*9080	*9080	*9520	5470	*6760	3580	*5310	2540	4220	2000	8.79
Line	lb			*20020	*20020	*20990	12060	*14900	7890	*11710	5600	9300	4410	(28.8)
-1.5 m	kg	*9930	*9930	*13780	10400	*9710	5400	*6990	3510			*4670	2280	8.16
(-5 ft)	lb	*21890	*21890	*30380	22930	*21410	11900	*15410	7740			*10300	5030	(26.8)
-3.0 m	kg	*14320	*14320	*13400	10600	*9170	5470	*6630	3550			*4750	2940	7.09
(-10 ft)	lb	*31570	*31570	*29540	23370	*20220	12060	*14620	7830			*10470	6480	(23.3)
-4.5 m	kg			*10790	*10790	*7470	5710							
(-15 ft)	lb			*23790	*23790	*16470	12590							

• : Rating over-front · E: Rating over-side or 360 degree

- (3) 5.65 m (18' 6") boom, 2.92 m (9' 7") arm equipped with 0.87 m³ (SAE heaped) bucket and 500 mm (20") triple grouser shoe.
 - •

🖞 : Rating over-front · 🛋 : Rating over-side or 360 degree

						Load	radius					Atı	max. rea	ach
Load po	oint	1.5 m	(5 ft)	3.0 m (10 ft)		4.5 m (15 ft)		6.0 m (20 ft)		7.5 m (25 ft)		Capacity		Reach
height		ŀ		ľ		ľ		ŀ		ŀ	⋳ ⋕⋼	ľ		m (ft)
7.5 m (25 ft)	kg Ib											*3350 *7390	2890 6370	7.76 (25.5)
6.0 m (20 ft)	kg Ib									*2140 *4720	*2140 *4720	*3440 *7580	2250 4960	8.73 (28.6)
4.5 m	kg							*3970	*3970	*3810	2900	*3580	1920	9.30
(15 ft)	lb							*8750	*8750	*8400	6390	*7890	4230	(30.5)
3.0 m	kg			*9630	*9630	*6090	*6090	*4810	4060	*4210	2770	3730	1750	9.58
(10 ft)	lb			*21230	*21230	*13430	*13430	*10600	8950	*9280	6110	8220	3860	(31.4)
1.5 m	kg			*9210	*9210	*7920	5830	*5730	3780	*4700	2630	3680	1710	9.57
(5 ft)	lb			*20300	*20300	*17460	12850	*12630	8330	*10360	5800	8110	3770	(31.4)
Ground	kg			*9810	*9810	*9160	5460	*6490	3560	*5120	2510	3830	1780	9.29
Line	lb			*21630	*21630	*20190	12040	*14310	7850	*11290	5530	8440	3920	(30.5)
-1.5 m	kg	*8950	*8950	*12850	10220	*9630	5320	*6880	3450	5250	2450	4250	2000	8.71
(-5 ft)	lb	*19730	*19730	*28330	22530	*21230	11730	*15170	7610	11570	5400	9370	4410	(28.6)
-3.0 m	kg	*12340	*12340	*14120	10360	*9380	5340	*6770	3450			*4490	2490	7.73
(-10 ft)	lb	*27210	*27210	*31130	22840	*20680	11770	*14930	7610			*9900	5490	(25.4)
-4.5 m	kg			*12010	10690	*8180	5510					*4360	3750	6.14
(-15 ft)	lb			*26480	23570	*18030	12150					*9610	8270	(20.1)

(4) 5.65 m (18' 6") Adjustable boom, 2.00 m (6' 7") arm equipped with 0.87 m³ (SAE heaped) bucket 500 mm (20") triple grouser shoe. and

					Load r	adius				At	max. rea	ch
Load po	oint	3.0 m ((10.0 ft)	4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		Capacity		Reach
height		ŀ	⋳ ⋣ ⋑	ŀ	╔╼╋╸	ŀ	╔╋╋		⋳⋣⋑		╔╋╋	m (ft)
10.5 m (35.0 ft)	kg Ib									*6200 *13670	*6200 *13670	4.64 (15.2)
9.0 m (30.0 ft)	kg Ib									*6560 *14460	*6560 *14460	4.60 (15.1)
7.5 m (25.0 ft)	kg Ib			*6750 *14880	*6750 *14880					*5330 *11750	3710 8180	6.66 (21.9)
6.0 m (20.0 ft)	kg Ib			*6910 *15230	*6910 *15230	*5910 *13030	4340 9570			*4920 *10850	2720 6000	7.79 (25.6)
4.5 m (15.0 ft)	kg Ib	*11400 *25130	*11400 *25130	*7810	6710 14790	*6200 *13670	4190 9240			4680 10320	2270 5000	8.45 (27.7)
3.0 m (10.0 ft)	kg Ib	20100	20100	*9020 *19890	6090 13430	*6670 *14700	3930 8660	*5380 *11860	2700 5950	4350 9590	2060 4540	8.75 (28.7)
1.5 m (5 ft)	kg Ib			*9720 *21430	5600 12350	*6990 *15410	3690 8140	*5410 *11930	2590 5710	4300 9480	2020 4450	8.75 (28.7)
Ground	kg Ib			*9430 *20790	5390 11880	*6900	3540 7800	*5130 *11310	2520 5560	*4020	2140 4720	8.43 (27.7)
-1.5 m (-5 ft)	kg Ib	*10050 *22160	*10050 *22160	*8270 *18230	5380 11860	*6170	3500 7720	11010	0000	*3440 *7580	2490 5490	7.77 (25.5)
-3.0 m (-10 ft)	kg Ib			*6160 *13580	5520 12170	*4350 *9590	3610 7960				0.00	(20.0)

· 🕑 : Rating over-front · 🖙 : Rating over-side or 360 degree

- (5) 5.65 m (18' 6") Adjustable boom, 2.40 m (7' 10") arm equipped with 0.87 m³ (SAE heaped) bucket and 500 mm (20") triple grouser shoe.

· 💾 : Rating over-front · 🛋 : Rating over-side or 360 degree

					Load	radius				At	max. rea	ch
Load po	oint	3.0 m (10.0 ft)	4.5 m (15.0 ft)		6.0 m (20.0 ft)		7.5 m (25.0 ft)		Capacity		Reach
height		F	╔╋╋	ŀ	╔╋╋	ŀ	⋳⋣⋑		⋳⋕⋣	ŀ		m (ft)
9.0 m (30.0 ft)	kg Ib									*5730 *12630	5470 12060	5.39 (17.7)
7.5 m (25.0 ft)	kg Ib			*5870 *12940	*5870 *12940					*4900 *10800	3260 7190	7.18 (23.6)
6.0 m (20.0 ft)	kg Ib			*6440 *14200	*6440 *14200	*5570 *12280	4420 9740			*4570 *10080	2460 5420	8.23 (27.0)
4.5 m (15.0 ft)	kg Ib	*10330 *22770	*10330 *22770	*7350 *16200	6840 15080	*5920 *13050	4240 9350	*4360 *9610	2820 6220	4330 9550	2070 4560	8.84 (29.0)
3.0 m (10.0 ft)	kg Ib			*8630 *19030	6210 13690	*6450 *14220	3960 8730	*5240 *11550	2710 5970	4040 8910	1890 4170	9.13 (30.0)
1.5 m (5.0 ft)	kg Ib			*9550 *21050	5650 12460	*6870 *15150	3700 8160	*5360 *11820	2580 5690	3990 8800	1850 4080	9.13 (30.0)
Ground Line	kg Ib	*8600 *18960	*8600 *18960	*9560 *21080	5370 11840	*6920 *15260	3510 7740	*5230 *11530	2490 5490	*3840 *8470	1950 4300	8.83 (29.0)
-1.5 m (-5.0 ft)	kg Ib	*11450 *25240	10280 22660	*8660 *19090	5310 11710	*6390 *14090	3450 7610	*4540 *10010	2470 5450	*3390 *7470	2230 4920	2.21 (26.9)
-3.0 m (-10.0 ft)	kg Ib			*6840 *15080	5400 11900	*4980 *10980	3510 7740					


(6) 5.65 m (18' 6") Adjustable boom, 2.92 m (9' 7") arm equipped with 0.87 m $_3$ (SAE heaped) bucket 500 mm (20") triple grouser shoe. and

					Load r	adius				At	max. rea	ch
Load po	bint	3.0 m ((10.0 ft)	4.5 m (15.0 ft)		6.0 m (6.0 m (20.0 ft)		25.0 ft)	Capacity		Reach
height		ŀ		ŀ	╔╋╋	ŀ		ŀ	⋳⋕⋣			m (ft)
9.0 m (30.0 ft)	kg Ib			*3290 *7250	*3290 *7250					*4600 *10140	4260 9390	6.28 (20.6)
7.5 m (25.0 ft)	kg Ib					*3530 *7780	*3530 *7780			*4030 *8880	2800 6170	7.83 (25.7)
6.0 m (20.0 ft)	kg Ib			*5170 *11400	*5170 *11400	*4870 *10740	4510 9940	*2440 *5380	*2440 *5380	*3800 *8380	2170 4780	8.78 (28.8)
4.5 m (15.0 ft)	kg Ib			*6720 *14820	*6720 *14820	*5540 *12210	4310 9500	*4390 *9680	2860 6310	*3740 *8250	1850 4080	9.36 (30.7)
3.0 m (10.0 ft)	kg Ib	*12710 *28020	12080 26630	*8080	6370 14040	*6130 *13510	4020 8860	*5040 *11110	2720 6000	3690 8140	1690 3730	9.63 (31.6)
1.5 m (5.0 ft)	kg Ib	*8700 *19180	*8700	*9240 *20370	5740 12650	*6660 *14680	3720 8200	*5240 *11550	2570 5670	3640 8020	1650 3640	9.63 (31.6)
Ground	kg Ib	*9390 *20700	*9390 *20700	*9580 *21120	5360 11820	*6880 *15170	3490 7690	*5260 *11600	2450 5400	*3610 *7960	1720 3790	9.35 (30.7)
-1.5 m (-5.0 ft)	kg Ib	*12500 *27560	10070 22200	*9020 *19890	5230 11530	*6570 *14480	3380 7450	*4860 *10710	2400 5290	*3270 *7210	1950 4300	8.77 (28.8)
-3.0 m (-10.0 ft)	kg Ib	*10150 *22380	*10150 *22380	*7560 *16670	5270 11620	*5530 *12190	3400 7500					

· 🗄 : Rating over-front · 🛋 : Rating over-side or 360 degree

6. BUCKET SELECTION GUIDE

1) GENERAL BUCKET

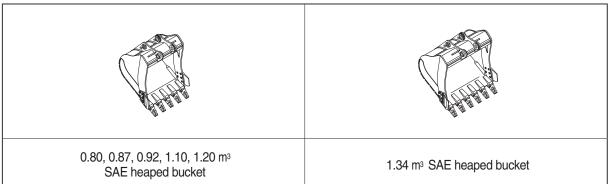

					Recommendation					
Capacity		Width		Weight	5.65 m (18' 6") Mono boom		5.65 m (18' 6") Adjustable Boom			
SAE heaped	CECE heaped	Without side cutter	With side cutter		2.0 m arm (6' 7")	2.4 m arm (7' 10")	2.92 m arm (9' 7")	2.0 m arm (6' 7")	2.4 m arm (7' 10")	2.92 m arm (9' 7")
0.80 m ³ (1.05 yd ³)	0.70 m ³ (0.92 yd ³)	1070 mm (42.1")	1160 mm (45.7")	770 kg (1700 lb)	0	0	0	0	0	۲
0.87 m³ (1.14 yd³)	0.76 m³ (0.99 yd³)	1140 mm (44.9")	1230 mm (48.4")	800 kg (1760 lb)	0	0	0	0	0	۲
0.92 m ³ (1.20 yd ³)	0.80 m³ (1.05 yd³)	1190 mm (46.9")	1280 mm (50.4")	820 kg (1810 lb)	0	0	۲	0	0	•
1.10 m ³ (1.44 yd ³)	0.96 m ³ (1.26 yd ³)	1375 mm (54.1")	1465 mm (57.7")	890 kg (1960 lb)	0	۲	•	۲	۲	•
1.20 m ³ (1.57 yd ³)	1.05 m³ (1.37 yd³)	1390 mm (54.7")	1480 mm (58.3")	920 kg (2030 lb)	0	۲		۲	•	
1.34 m³ (1.75 yd³)	1.17 m³ (1.53 yd³)	1525 mm (60.0")	1615 mm (63.6")	990 kg (2180 lb)	۲	•		•		

Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less

Output Applicable 1

Applicable for materials with density of 1600 kg/m $_{\rm 3}$ (2700 lb/yd $_{\rm 3}) or less$

Applicable for materials with density of 1100 kg/m3 (1850 lb/yd3) or less

$\ensuremath{\overset{\scriptstyle \times}{_{\scriptstyle -}}}$ These recommendations are for general conditions and average use.

Work tools and ground conditions have effects on machine performance.

Select an optimum combination according to the working conditions and the type of work that is being done.

Consult your Hyundai dealer for information on selecting the correct boom-arm-bucket combination.

2) HEAVY DUTY AND ROCK-HEAVY DUTY BUCKET

Heavy duty bucket	Rock-Heavy duty bucket
 0.90, 1.05 m³ SAE heaped bucket 	 ● 0.87 m³ SAE heaped bucket

					Recommendation					
Capacity		Width		Weight	5.65 m (18' 6") boom			5.65 m (18' 6") Adjustable boom		
SAE heaped	CECE heaped	Without side cutter	With side cutter	Ũ	2.0 m arm (6' 7")	2.4 m arm (7' 10")	2.92 m arm (9' 7")	2.0 m arm (6' 7")	2.4 m arm (7' 10")	2.92 m arm (9' 7")
0.90m ³ (1.18 yd ³)	0.79 m³ (1.03 yd³)	1210 mm (47.6")	-	880 kg (1940 lb)	0	0	۲	\bigcirc	0	•
1.05 m³(1.37 yd³)	0.92 m³ (1.2 yd³)	1355 mm (53.3")	-	940 kg (2070 lb)	0	۲	•	۲	۲	•
♦0.87 m ³ (1.14 yd ³)	0.77 m ³ (1.01 yd ³)	1195 mm (47.0")	-	940 kg (2070 lb)	0	0	۲	0	0	•

♦ : Heavy duty bucket • • : Rock-Heavy duty bucket



Applicable for materials with density of 2000 kg/m³ (3370 lb/yd³) or less

Applicable for materials with density of 1600 kg/m³ (2700 lb/yd³) or less

• Applicable for materials with density of 1100 kg/m³ (1850 lb/yd³) or less

7. UNDERCARRIAGE

1) TRACKS

X-leg type center frame is integrally welded with reinforced box-section track frames. The design includes dry tracks, lubricated rollers, idlers, sprockets, hydraulic track adjusters with shock absorbing springs and assembled track-type tractor shoes with triple grousers.

2) TYPES OF SHOES

	Shapes		Triple grouser			
Model						
	Shoe width	mm (in)	500 (20)	600 (24)	700 (28)	
HX220 NL	Operating weight	kg (lb)	22300 (49160)	22400 (49380)	22870 (50420)	
MONO BOOM	Ground pressure	kgf/cm² (psi)	0.57 (8.11)	0.48 (6.83)	0.42 (5.97)	
	Overall width	mm (ft-in)	2500 (8' 2")	2600 (8' 6")	2700 (8'10")	
	Shoe width	mm (in)	500 (20)	600 (24)	-	
HX220 NL	Operating weight	kg (lb)	23000 (50710)	23100 (50930)	-	
ADJUST BOOM	Ground pressure	kgf/cm² (psi)	0.59 (8.39)	0.49 (6.97)	-	
	Overall width	mm (ft-in)	2500 (8' 2")	2600 (8' 6")	-	

3) NUMBER OF ROLLERS AND SHOES ON EACH SIDE

Item	Quantity		
Carrier rollers	2 EA		
Track rollers	9 EA		
Track shoes	49 EA		

4) SELECTION OF TRACK SHOE

Suitable track shoes should be selected according to operating conditions.

Method of selecting shoes

Confirm the category from the list of applications in **table 2**, then use **table 1** to select the shoe. Wide shoes (categories B and C) have limitations on applications. Before using wide shoes, check the precautions, then investigate and study the operating conditions to confirm if these shoes are suitable.

Select the narrowest shoe possible to meet the required flotation and ground pressure. Application of wider shoes than recommendations will cause unexpected problem such as bending of shoes, crack of link, breakage of pin, loosening of shoe bolts and the other various problems.

X Table 1

Track shoe	Specification	Category
500 mm triple grouser	Standard	А
600 mm triple grouser	Option	В
700 mm triple grouser	Option	С

X Table 2

Category	Applications	Precautions
A	Rocky ground, river beds, normal soil	 Travel at low speed on rough ground with large obstacles such as boul- ders or fallen trees
В	Normal soil, soft ground	 These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees Travel at high speed only on flat ground Travel slowly at low speed if it is impossible to avoid going over obstacles
С	Extremely soft ground (swampy ground)	 Use the shoes only in the conditions that the machine sinks and it is impossible to use the shoes of category A or B These shoes cannot be used on rough ground with large obstacles such as boulders or fallen trees Travel at high speed only on flat ground Travel slowly at low speed if it is impossible to avoid going over obstacles cles

8. SPECIFICATIONS FOR MAJOR COMPONENTS

1) ENGINE

Item	Specification
Model	Cummins QSB6.7
Туре	4-cycle turbocharged, charger air cooled diesel engine
Cooling method	Water cooling
Number of cylinders and arrangement	6 cylinders, in-line
Firing order	1-5-3-6-2-4
Combustion chamber type	Direct injection type
Cylinder bore $ imes$ stroke	107×124 mm (4.2"×4.9")
Piston displacement	6700 cc (409cu in)
Compression ratio	17.3 : 1
Rated net horse power (SAE J1349)	173 Hp at 1950 rpm (129 kW at 1950 rpm)
Rated gross horse power (SAE J1995)	182.6 Hp at 1950 rpm (136 kW at 1950 rpm)
Maximum torque at 1500 rpm	85.7 kgf · m (620 lbf · ft)
Engine oil quantity	23.7 ℓ (6.26 U.S. gal)
Wet weight	520 kg (1146 lb)
High idling speed	1900±50 rpm
Low idling speed	850±100 rpm
Rated fuel consumption	158 g/Hp · hr at 1950 rpm
Starting motor	Denso (24 V-4.8 kW)
Alternator	Denso (24 V-95 A)
Battery	2×12 V \times 100 Ah

2) MAIN PUMP

Item	Specification	
Туре	Variable displacement tandem axis piston pumps	
Capacity	2 × 117cc/rev	
Maximum pressure	350kgf/cm ² (4980psi) [380 kgf/cm ² (5400 psi)]	
Rated oil flow	2 × 228.15 ℓ /min (60.3U.S. gpm/ 50.2U.K. gpm)	
Rated speed	1950 rpm	

[]: Power boost

3) GEAR PUMP

Item	Specification		
Туре	Fixed displacement gear pump single stage		
Capacity	15 cc/rev		
Maximum pressure	40 kgf/cm ² (570 psi)		
Rated oil flow	29.3 ℓ /min (7.7 U.S. gpm/6.4 U.K. gpm)		

4) MAIN CONTROL VALVE

ltom	Specification		
Item	HX220 NL	HX220 NL Long reach	
Туре	9 spools two-block		
Operating method	Hydraulic pilot system		
Main relief valve pressure	350 kgf/cm ² (4980 psi) [380 kgf/cm ² (5400 psi)]		
Overload relief valve pressure	400 kgf/cm ² (5690 psi)		

[]: Power boost

5) SWING MOTOR

Item	Specification
Туре	Two fixed displacement axial piston motor
Capacity	142.8 cc/rev
Relief pressure	265 kgf/cm ² (3770 psi)
Braking system	Automatic, spring applied hydraulic released
Braking torque	63.3 kgf.m (458 ibf.ft)
Brake release pressure	20.9~35.5 kgf/cm ² (297~505 psi)
Reduction gear type	2 - stage planetary

6) TRAVEL MOTOR

Item	Specification			
Туре	Variable displacement axial piston motor			
Relief pressure	350 kgf/cm ² (4980 psi)			
Reduction gear type	2-stage planetary			
Braking system	Automatic, spring applied hydraulic released			
Brake release pressure	16.1 kgf/cm ² (229 psi)			
Braking torque	68.8 kgf · m (498 lbf · ft)			

7) REMOTE CONTROL VALVE

Item		Specification		
Туре		Pressure reducting type		
	Minimum	6.5 kgf/cm ² (92 psi)		
Operating pressure	Maximum	25 kgf/cm ² (360 psi)		
Single operation stroke	Lever(1, 3 port)	90 mm (3.5 in)		
	Pedal(2, 4 port)	130 mm (4.4 in)		

8) CYLINDER

	Specification				
Boom cylinder		Bore dia $ imes$ Rod dia $ imes$ Stroke	\emptyset 120 \times \emptyset 85 \times 1290 mm		
		Cushion	Extend only		
Arm cylinder		Bore dia $ imes$ Rod dia $ imes$ Stroke	\emptyset 140 \times \emptyset 100 \times 1510 mm		
Ann cynnder		Cushion	Extend and retract		
Pueket evlinder		Bore dia $ imes$ Rod dia $ imes$ Stroke	\varnothing 120 \times \varnothing 85 \times 1055 mm		
Bucket cylinder		Cushion	Extend only		
	1st	Bore dia $ imes$ Rod dia $ imes$ Stroke	\varnothing 120 \times \varnothing 85 \times 1290 mm		
Adjust boom cylinder	151	Cushion	Extend only		
	Orad	Bore dia $ imes$ Rod dia $ imes$ Stroke	\varnothing 160 \times \varnothing 100 \times 1060 mm		
	2nd	Cushion	-		

* Discoloration of cylinder rod can occur when the friction reduction additive of lubrication oil spreads on the rod surface.

* Discoloration does not cause any harmful effect on the cylinder performance.

9) SHOE

Item		Width	Ground pressure	Link quantity	Overall width
HX220 NL MONO BOOM	Standard	500 mm (20")	0.57 kgf/cm ² (8.11 psi)	49	2500 mm (8' 2")
	Ontion	600 mm (24")	0.48 kgf/cm ² (6.83 psi)	49	2600 mm (8' 6")
	Option	700 mm (28")	0.42 kgf/cm ² (5.97 psi)	49	2700 mm (8' 10")
HX220 NL Standard		500 mm (20")	0.59 kgf/cm ² (8.39 psi)	49	2500 mm (8' 2")
ADJUST BOOM	Option	600 mm (24")	0.49 kgf/cm ² (6. 97psi)	49	2600 mm (8' 6")

10) BUCKET

Item	Capa	acity	Tooth	Width			
	SAE heaped CECE heaped		quantity	Without side cutter	With side cutter		
	0.80 m³ (1.05 yd³)	0.70 m ³ (0.92 yd ³)	5	1070 mm (42.1")	1160 mm (45.7")		
	0.87 m ³ (1.14 yd ³)	0.76 m³ (0.99 yd³)	5	1140 mm (44.9")	1230 mm (48.4")		
HX220 NL	0.92 m ³ (1.20 yd ³)	0.80 m³ (1.05 yd³)	5	1190 mm (46.9")	1280 mm (50.4")		
	1.10 m ³ (1.44 yd ³)	10 m ³ (1.44 yd ³) 0.96 m ³ (1.26 yd ³)		1375 mm (54.1")	1465 mm (57.7")		
	1.20 m ³ (1.57 yd ³)	1.05 m³ (1.37 yd³)	5	1390 mm (54.7")	1480 mm (58.3")		
	1.34 m³ (1.75 yd³)	1.17 m³ (1.53 yd³)	6	1525 mm (60.0")	1615 mm (63.6")		
	♦0.90 m ³ (1.18 yd ³)	0.79 m³ (1.03 yd³)	5	1210 mm (47.6")	_		
	♦1.05 m³(1.37 yd³)	0.92 m³ (1.20 yd³)	5	1355 mm (53.3")	_		
	•0.87 m ³ (1.14 yd ³)	0.77 m³(1.01 yd³)	5	1195 mm (47.0")	_		

Heavy duty bucket

• : Rock-heavy duty bucket

9. RECOMMENDED OILS

HYUNDAI genuine lubricating oils have been developed to offer the best performance and service life for your equipment. These oils have been tested according to the specifications of HYUNDAI and, therefore, will meet the highest safety and quality requirements.

We recommend that you use only HYUNDAI genuine lubricating oils and grease officially approved by HYUNDAI.

Service		Capacity	Ambient temperature °C(°F)									
noint	Kind of fluid	ℓ (US gal)		-30	-20	-1	-	-	10	20	30	40
point		(())	(-58) (-22)	(-4)	(1	4) (32) (50) ((68)	(86)	(104)
			★SAE 5W-40									
									 	\E 30		
Engine							1014					
oil pan	Engine oil	23.7 (6.3)				SAE	10W		_			
				SAE 10W-30								
								SAE	15W-40	_		
/					_							
DEF/ AdBlue®	Mixture of urea and deionized	27 (7.1)	1	$S \cap 222$	/1 Li	ab-pu	rity uroa	+ deioni	zod wate	or (32 5	67 5	
tank	water	27 (7.1)	1	00 222	+1,11	yn-pu	illy ulea				.07.5	
Swing	Wator											
drive	O s s s s il	6.2 (1.2)		,	★ SAE	E 75W	-90					
Final	Gear oil	4.5×2						SAF	30W-90			
drive		(1.2×2)										
		Tank : 165 (43.6) System : 340		-	★I	SO V	G 15					
						10	SO VG :	32				
Hydraulic tank	Hydraulic oil					IV.			1			
lank							ISO VO	6 46, HBI	HO VG 4	6*3		
		(89.8)							ISO VG	68		
				* ASTN			1					
Fuel tank	Diesel fuel ^{*1}	310 (81.9)				5110.			M D975			
								ASI		0 NO.2		
Fitting		As required			,	★NLG	INO.1		1			
(grease	Grease							NI G	I NO.2			
nipple)								NLG	110.2			
Radiator	Mixture of				Eth	vlene (alvcol ba	ase perm	anent tv	ne (50	. 50)	
(reservoir		antifreeze 40 (10.6)									. 00)	
tank) and	and soπ water* ²	and solt		ne glycol ba	ase perm	nanent ty	pe (60 : 40)					

- SAE : Society of Automotive Engineers
- API : American Petroleum Institute
- **ISO** : International Organization for Standardization
- NLGI : National Lubricating Grease Institute
- **ASTM** : American Society of Testing and Material
- UTTO : Universal Tractor Transmission Oil
- DEF : Diesel Exhaust Fluid, DEF compatible with AdBlue®
- ★ : Cold region
 Russia, CIS, Mongolia
- *1 : Ultra low sulfur diesel
 - sulfur content \leq 15 ppm
- *2 : Soft water City water or distilled water
- *3 : Hyundai Bio Hydraulic Oil
- For more information, contact HYUNDAI dealers.
- * Using any lubricating oils other than HYUNDAI genuine products may lead to a deterioration of performance and cause damage to major components.
- ※ Do not mix HYUNDAI genuine oil with any other lubricating oil as it may result in damage to the systems of major components.
- * Do not use any engine oil other than that specified above, as it may clog the diesel particulate filter(DPF).
- * For HYUNDAI genuine lubricating oils and grease for use in regions with extremely low temperatures, please contact HYUNDAI dealers.