
# **GROUP 2 MAJOR COMPONENT**

### **1. MAIN PUMP**

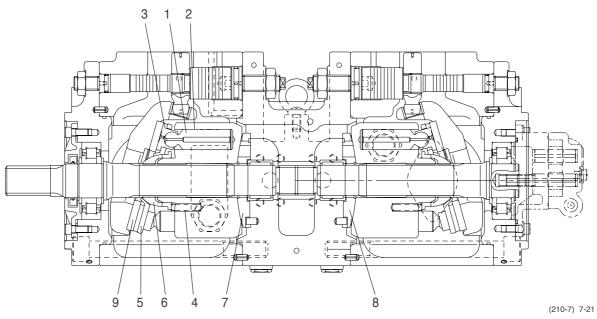

Part name & inspection item		Standard dimension	Recommended replacement value	Counter measures	
Clearance between piston(1) & cylinder bore(2) (D-d)		0.039	0.067	Replace piston or cylinder.	
Play between piston(1) & shoe caulking section(3) ( )		0-0.1	0.3	Replace	
Thickness of shoe (t)		4.9	4.7	assembly of piston & shoe.	
Free height of cylinder spring(4) (L)		41.1	40.3	Replace cylinder spring.	
Combined height of set plate(5) & spherical bushing(6) (H-h)	h H	23.0	22.0	Replace retainer or set plate.	
Surface roughness for valve plate(Sliding face)(7,8),	Surface roughness necessary to be corrected	3	Bz	Lopping	
swash plate (shoe plate area)(9), & cylinder(2)(Sliding face)	Standard surface roughness (Corrected value)	0.4z c	or lower	Lapping	

### 2. MAIN CONTROL VALVE

Part name	Inspection item	Criteria & measure
Casing	Existence of scratch, rusting or corrosion.	In case of damage in following section, replace part.
		<ul> <li>Sliding sections of casing fore and spool, especially land sections applied with holded pressure.</li> <li>Seal pocket section where spool is inserted.</li> <li>Seal section of port where O-ring contacts.</li> <li>Seal section of each relief valve for main, travel, and port.</li> <li>Other damages that may damage normal functions.</li> </ul>
Spool	<ul> <li>Existence of scratch, gnawing, rusting or corrosion.</li> </ul>	Replacement when its outside sliding section has scratch(Especially on seals- contacting section).
	· O-ring seal sections at both ends.	Replacement when its sliding section has scratch.
	<ul> <li>Insert spool in casing hole, rotate and reciprocate it.</li> </ul>	<ul> <li>Correction or replacement when O-ring is damaged or when spool does not move smoothly.</li> </ul>
Poppet	Damage of poppet or spring	Correction or replacement when sealing is incomplete.
	<ul> <li>Insert poppet into casing and function it.</li> </ul>	<ul> <li>Normal when it can function lightly without being caught.</li> </ul>
Around spring	Rusting, corrosion, deformation or breaking of spring, spring seat, plug or cover.	Replacement for significant damage.
Around seal	· External oil leakage.	Correction or replacement.
for spool	<ul> <li>Rusting, corrosion or deformation of seal plate.</li> </ul>	Correction or replacement.
Main relief valve,	· External rusting or damage.	· Replacement.
port relief valve & negative control	Contacting face of valve seat.	Replacement when damaged.
relief valve	Contacting face of poppet.	Replacement when damaged.
	Abnormal spring.	· Replacement.
	· O-rings, back up rings and seals.	100% replacement in general.

### 3. SWING DEVICE

Part name	Inspection item	Remedy
Balance plate	<ul> <li>Worn less than 0.03mm</li> <li>Worn more than 0.03mm</li> <li>Sliding surface has a seizure(Even through small).</li> </ul>	<ul> <li>Lapping</li> <li>Replacement</li> </ul>
Shoe of piston assembly	<ul> <li>Sliding surface has a damage.</li> <li>Sliding surface depression() dimension less than 0.45mm or has a large damage.</li> </ul>	<ul> <li>Replacement</li> <li>Lapping</li> <li>Replace parts or motor</li> </ul>
Piston of piston assembly	<ul> <li>Sliding surface has a seizure(Even though small).</li> </ul>	Replace motor
Piston hole of cylinder assembly	<ul> <li>Sliding surface has a seizure.</li> <li>Sliding surface has a damage.</li> </ul>	Replace motor     Replace motor
Taper roller bearing Needle bearing Roller bearing	<ul> <li>In case 3000hour operation.</li> <li>Rolling surface has a damage.</li> </ul>	Replacement     Replacement

### 4. TRAVEL DEVICE

Disassembling and inspection of the motor must be done in strict accordance with the servicing standards described here. During servicing, handle each part very carefully not to damage them, especially for their movable or sliding sections.

#### 1) SEALS

Once the seals(O-rings, oil seals, and floating seals) have been disassembled, they must be replaced with new ones even if no damage is observed.

#### 2) TABLE OF MAINTENANCE STANDARD

- (1) Replace all parts having a seriously damaged appearance.
- (2) Replace the part if any one of the states(Symptoms) listed in the table below is observed.

ltem No.	Part name	Situation	Standard dimension	Maximum allowable value(Criteria)
2 8 17	Spindle kit · Spindle assembly · · Spindle · · Coupling gear · Pin	<ul> <li>Seriously damaged in appearance.</li> <li>Galling or other forms of excessive wear are observed.</li> </ul>	-	-
3 6 9 14 25 34	<b>Carrier assembly</b> Carrier Cluster gear Shaft Thrust collar Needle bearing Dowel pin	<ul> <li>The tooth surface of the cluster gear(6) is nonuniformly worn out and damaged.</li> <li>The cluster gear(6) does not move smoothly.</li> </ul>	-	-
4	Ring gear A	The tooth surface is nonuniformly worn out and damaged.	-	-
5	Ring gear B	The tooth surface is nonuniformly worn out and damaged.	-	-
7	Sun gear	<ul> <li>The tooth surface is nonuniformly worn out and damaged.</li> <li>The spline section is worn.</li> </ul>	-	-
8	Coupling gear	Excessive wear or pitching is observed on the tooth surface.	-	-
19	Coupling	The spline section is worn.	-	-
20	Thrust bearing	• Worn out.	Axial clearance between coupling gear(8) and cover(13) : 0.3 to 0.6m	Clearance : 0.8mm

ltem No.	Part name	Situation	Standard dimension	Maximum allowable value(Criteria)
22	Distance piece	The sliding surface is damaged.     The sliding surface is excessively worn out.	-	-
24	Ball bearing	<ul> <li>Dents are present.</li> <li>Flaking develops.</li> <li>Nonuniform wear is present.</li> </ul>	ing develops.	
101	<b>Rear flange kit</b> Rear flange Spool	<ul> <li>The movable section contacting the spool(123) is damaged.</li> <li>The clearance against the spool (123) is too large.</li> <li>The surface contacting the valve (127) is damaged.</li> <li>The depth to the surface contacting the valve (127) is too large.</li> <li>The outer surface is damaged.</li> <li>The outer surface is nonuniformly worn out.</li> </ul>	Linear clearance : 10 to 20 µ	Linear clearance : 20 µ
102	Shaft	The surface contacting the oil seal(132) is worn out.     The spline section is worn out.	-	-
103	Swash plate	Seizure is observed.		
104	Cylinder block	<ul> <li>The spline section is worn out.</li> <li>The bore inner surface is worn out too much.</li> <li>The sliding surface that contacts the timing plate(109) is damaged or nonuniformly worn out.</li> </ul>	-	-
105 106	Piston assembly Piston shoe	<ul> <li>An axial clearance is present between the piston(105) and the shoe(106).</li> <li>The shoe is excessively worn out.</li> <li>The shoe is nonuniformly worn out.</li> </ul>	Clearance : 0.05mm	Clearance : 0.15mm
107	Retainer plate	The peripheral edge is nonuniformly worn out.	-	-

ltem No.	Part name	Situation	Standard dimension	Maximum allowable value(Criteria)
108	Thrust ball	The spherical sliding section that contacts the retainer plate(107) is nonuniformly worn out.	-	-
109	Timing plate	The sliding surface has the traces of seizure or nonuniformly wear.		
115	Friction plate	Both edges are nonuniformly worn out.	Braking torque 49.3kgf · m or more	Braking torque 49.3kgf ⋅ m or less
116	Mating plate	The required torque cannot be achieved.		
		$\cdot$ The traces of seizure are present.		
118	Valve seat	The seat surface is damaged.	-	-
119	Valve	The outer surface is damaged.		
		The seat surface is damaged.	-	-
	Body kit			
136	Body	The sliding section that contacts the spool(137) is damaged.	Linear clearance : 7 to 15 $\mu$	Linear clearance : 20 µ
		The clearance against the spool(137) is too large.		
137	Spool	The outer surface is damaged.		
		The outer surface is nonuniformly worn out.		
149	Roller bearing	Dents are present.		
150	Ball bearing	Flaking develops.	-	-
		Nonuniform wear is observed.		
163	Valve	· The outer surface is damaged.		
		The seat surface is damaged.	-	-
164	Stopper	The seat surface is damaged.		
142	Valve	· The outer surface is damaged.		
		$\cdot$ The seat surface is damaged.	-	-
172	Valve seat	The seat surface is damaged.	-	-

### 5. RCV LEVER

Maintenance check item	Criteria	Remark
Leakage	The valve is to be replaced when the leakage becomes more than 1000cc/m at neutral handle position, or more than 2000cc/m during operation.	Conditions : Primary pressure : 30kgf/cm <sup>2</sup> Oil viscosity : 23cSt
Spool	This is to be replaced when the sliding surface has worn more than 10 µm, compared with the non-sliding surface. The leakage at the left condition estimated to be nearly equal to above leakage.	
Push rod		
	This is to be replaced when the top end has worn more than 1mm.	
Play at operating section	The pin, shaft, and joint of the operating section are to be replaced when their plays become more than 2mm due to wears or so on.	When a play is due to looseness of a tightened section, adjust it.
Operation stability	When abnormal noises, hunting, primary pressure drop, etc. are generated during operation, and these cannot be remedied, referring to section 6. Troubleshooting, replace the related parts.	

Notes 1. It is desirable to replace seal materials, such as O-rings, every disassembling. However, they may be reused, after being confirmed to be free of damage.

2. When loosening the hexagon socket head cap screw(125), replace the seal washers(121) without fail.

# 6. RCV PEDAL

Maintenance check item	Criteria	Remark
Leakage	The valve is to be replaced when the leakage effect to the system. For example, the primary pressure drop.	Conditions : Primary pressure : 30kgf/cm <sup>2</sup> Oil viscosity : 23cSt
Spool	This is to be replaced when the sliding surface has worn more than 10 $\mu m$ , compared with the non-sliding surface.	The leakage at the left condition is estimated to be nearly equal to the above leakage.
Push rod		
	This is to be replaced when the top end has worn more than 1mm.	
Play at operating section	The pin, shaft, and joint of the operating section are to be replaced when their plays become more than 2mm due to wears or so on.	When a play is due to looseness of a tightened section, adjust it.
Operation stability	When abnormal noises, hunting, primary pressure drop, etc. are generated during operation, and these cannot be remedied, referring to section 6. Troubleshooting, replace the related parts.	

Notes 1. It is desirable to replace seal materials, such as O-rings, every disassembling. However, they may be reused, after being confirmed to be free of damage.

### 7. TURNING JOINT

Part name		Maintenance standards	Remedy	
	Sliding surface with sealing sections.	Plating worn or peeled due to seizure or contamination.	Replace	
	Sliding surface between body and	Worn abnormality or damaged more than 0.1mm (0.0039in) in depth due to seizure contamination.	Replace	
Body, Stem	stem other than sealing section.	Damaged more than 0.1mm(0.0039in) in depth.	Smooth with oilstone.	
	Sliding surface	• Worn more than 0.5mm(0.02in) or abnormality.	Replace	
	with thrust plate.	· Worn less than 0.5mm(0.02in).	Smooth	
		Damage due to seizure or contamination remediable within wear limit (0.5mm)(0.02in).	Smooth	
	Sliding surface	• Worn more than 0.5mm(0.02in) or abnormality.	Replace	
Cover	with thrust plate.	• Worn less than 0.5mm(0.02in).	Smooth	
		Damage due to seizure or contamination remediable within wear limit (0.5mm)(0.02in).	Replace	
Seal set	-	Extruded excessively from seal groove square ring.	Replace	
	-	Slipper ring 1.5mm(0.059in) narrower than seal groove, or narrower than back ring.	Replace	
	-	• Worn more than 0.5mm(0.02in) ~ 1.5mm(MAX.) (0.059in)	Replace	

# 8. CYLINDER

Part name	Inspecting section	Inspection item	Remedy
Piston rod	Neck of rod pin	Presence of crack	· Replace
	• Weld on rod hub	Presence of crack	· Replace
	Stepped part to which piston is attached.	Presence of crack	· Replace
	· Threads	Presence of crack	Recondition or replace
	· Plated surface	Plating is not worn off to base metal.	Replace or replate
		Rust is not present on plating.	Replace or replate
		<ul> <li>Scratches are not present.</li> </ul>	Recondition, replate or replace
	· Rod	· Wear of O.D.	Recondition, replate or replace
	· Bushing at mounting part	· Wear of I.D.	· Replace
Cylinder tube	Weld on bottom	Presence of crack	· Replace
	• Weld on head	Presence of crack	· Replace
	• Weld on hub	Presence of crack	· Replace
	Tube interior	Presence of faults	Replace if oil leak is seen
	Bushing at mounting part	• Wear on inner surface	· Replace
Gland	· Bushing	Flaw on inner surface	Replace if flaw is deeper than coating