

SECTION 7 MAINTENANCE STANDARD

Group 1	Operational Performance Test	7-1
Group 2	Major Components	7-20
Group 3	Track and Work Equipment	7-28

SECTION 7 MAINTENANCE STANDARD

GROUP 1 OPERATIONAL PERFORMANCE TEST

1. PURPOSE

Performance tests are used to check:

1) OPERATIONAL PERFORMANCE OF A NEW MACHINE

Whenever a new machine is delivered in parts and reassembled at a customer's site, it must be tested to confirm that the operational performance of the machine meets **Hyundai spec**.


2) OPERATIONAL PERFORMANCE OF A WORKING MACHINE

With the passage of time, the machine's operational performance deteriorates, so that the machine needs to be serviced periodically to restore it to its original performance level.

Before servicing the machine, conduct performance tests to check the extent of deterioration, and to decide what kind of service needs to be done (by referring to the "Service Limits" in this manual).

3) OPERATIONAL PERFORMANCE OF A REPAIRED MACHINE

After the machine is repaired or serviced, it must be tested to confirm that its operational performance was restored by the repair and/or service work done.

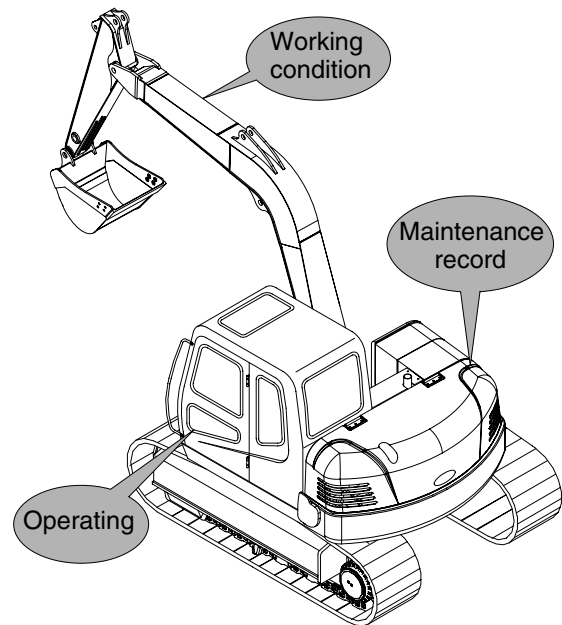


7077MS01

2. TERMINOLOGY

1) STANDARD


Specifications applied to the brand-new machine, components and parts.

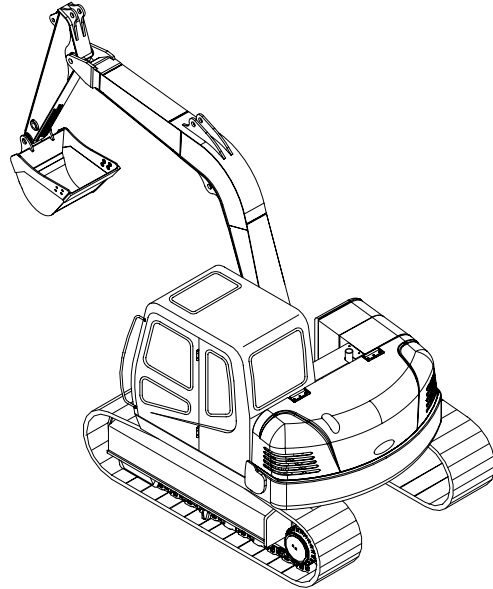

7077MS02

2) SERVICE LIMIT

The lowest acceptable performance level. When the performance level of the machine falls below this level, the machine must be removed from work and repaired. Necessary parts and components must be replaced.

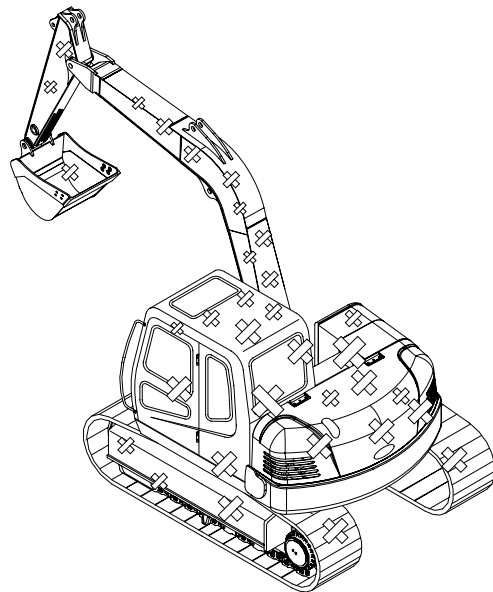

7077MS03

3. OPERATION FOR PERFORMANCE TESTS

- 1) Observe the following rules in order to carry out performance tests accurately and safely.

(1) The machine

Repair any defects and damage found, such as oil or water leaks, loose bolts, cracks and so on, before starting to test.

(2) Test area


- ① Select a hard, flat surface.
- ② Secure enough space to allow the machine to run straight more than 20m, and to make a full swing with the front attachment extended.
- ③ If required, rope off the test area and provide signboards to keep unauthorized personnel away.

(3) Precautions

- ① Before starting to test, agree upon the signals to be employed for communication among coworkers. Once the test is started, be sure to communicate with each other using these signals, and to follow them without fail.
- ② Operate the machine carefully and always give first priority to safety.
- ③ While testing, always take care to avoid accidents due to landslides or contact with high voltage power lines. Always confirm that there is sufficient space for full swings.
- ④ Avoid polluting the machine and the ground with leaking oil. Use oil pans to catch escaping oil. Pay special attention to this when removing hydraulic pipings.

(4) Make precise measurements

- ① Accurately calibrate test instruments in advance to obtain correct data.
- ② Carry out tests under the exact test conditions prescribed for each test item.
- ③ Repeat the same test and confirm that the test data obtained can be procured repeatedly. Use mean values of measurements if necessary.

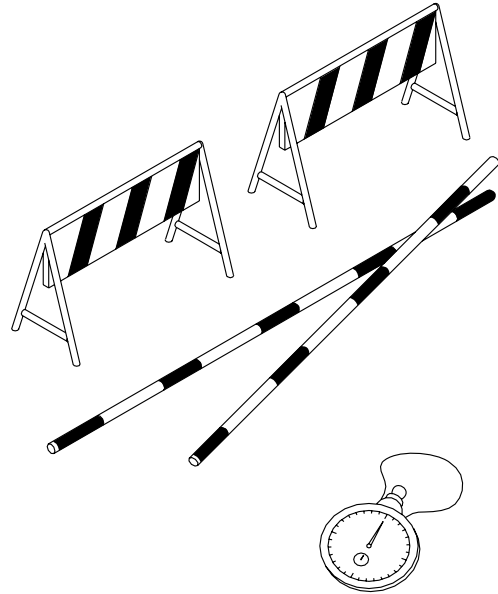

140LC-7 기타 7-3

2) ENGINE SPEED

(1) Measure the engine speed at each power mode

- ※ The engine speed at each power mode must meet standard RPM; if not, all other operational performance data will be unreliable. It is essential to perform this test first.

(2) Preparation

- ① Warm up the machine, until the engine coolant temperature reaches 50°C or more, and the hydraulic oil is 50±5°C.
- ② Set the accel dial at 10(Max) position.
- ③ Push the H-mode switch and confirm that the fuel injection pump governor lever comes into contact with the high-idle stopper.
- ④ Measure the engine RPM.

(3) Measurement

- ① Start the engine. The engine will run at start idle speed. Measure engine speed with a tachometer.
- ② Measure and record the engine speed at each mode(H, S, L).
- ③ Select the H-mode.
- ④ Lightly operate the bucket control lever a few times, then return the control lever to neutral. Select one touch decel ON.
- ⑤ Measure and record the auto deceleration speed.

(4) Evaluation

The measured speeds should meet the following specifications.

Unit : rpm

Model	Engine speed	Standard	Remarks
R80-7	Start/one touch idle	1050±100	One touch decel
	H mode	2200±50	
	S mode	2050±50	
	L mode	1900±50	


Condition : Set the accel dial at 10(Max) position.

3) TRAVEL SPEED

(1) Measure the time required for the excavator to travel a 20m test track.

(2) Preparation


- ① Adjust the tension of both tracks to be equal.
- ② Prepare a flat and solid test track 20m in length, with extra length of 3 to 5m on both ends for machine acceleration and deceleration.
- ③ Hold the bucket 0.3 to 0.5m above the ground with the arm and bucket rolled in.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

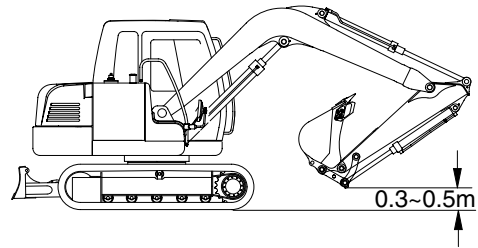

7077MS04

(3) Measurement

- ① Measure both the low and high speeds of the machine.
- ② Before starting either the low or high speed tests, adjust the travel mode switch to the speed to be tested, then select the following switch positions.
 - Mode selector : H mode
- ③ Start traveling the machine in the acceleration zone with the travel levers at full stroke.
- ④ Measure the time required to travel 20m.
- ⑤ After measuring the forward travel speed, turn the upperstructure 180° and measure the reverse travel speed.
- ⑥ Repeat steps ④ and ⑤ three times in each direction and calculate the average values.

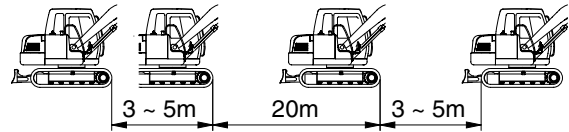

7077MS05

(4) Evaluation

The average measured time should meet the following specifications.

Unit : Seconds / 20m


Model	Travel speed	Standard	Maximum allowable	Remarks
R80-7	1 Speed	25.7 ± 2.0	32.1	Steel track
	2 Speed	15.7 ± 1.0	19.6	Steel track

4) TRACK REVOLUTION SPEED

(1) Measure the track revolution cycle time with the track raised off ground.

(2) Preparation

- ① Adjust the tension of both side tracks to be equal.
- ② On the track to be measured, mark one shoe with chalk.
- ③ Swing the upperstructure 90° and lower the bucket to raise the track off ground. Keep the boom-arm angle between 90 to 110° as shown. Place blocks under machine frame.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^\circ\text{C}$.

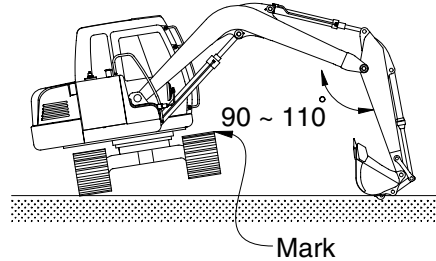

(3) Measurement

- ① Select the following switch positions.
 - Travel mode switch : 1 or 2 speed
 - Mode selector : H mode
- ② Operate the travel control lever of the raised track in full forward and reverse.
- ③ Rotate 1 turn, then measure time taken for next 3 revolutions.
- ④ Raise the other side of machine and repeat the procedure.
- ⑤ Repeat steps ③ and ④ three times and calculate the average values.

7078DA99

(4) Evaluation

The revolution cycle time of each track should meet the following specifications.

Unit : Seconds / 3 revolutions


Model	Travel speed	Standard	Maximum allowable	Remarks
R80-7	1 Speed	22.6 ± 2.0	28.3	Steel track
	2 Speed	13.7 ± 1.0	17.1	Steel track

5) TRAVEL DEVIATION

(1) Measure the deviation by the tracks from a 20m straight line.

(2) Preparation


- ① Adjust the tension of both tracks to be equal.
- ② Provide a flat, solid test yard 20m in length, with extra length of 3 to 5m on both ends for machine acceleration and deceleration.
- ③ Hold the bucket 0.3 to 0.5m above the ground with the arm and bucket rolled in.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

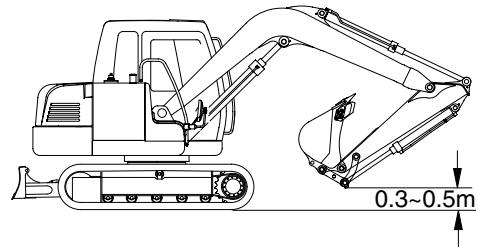

7077MS04

(3) Measurement

- ① Measure the amount of mistracking at high and low travel speeds.
- ② Before beginning each test, select the following switch positions.
 - Mode selector : H mode
- ③ Start traveling the machine in the acceleration zone with the travel levers at full stroke.
- ④ Measure the distance between a straight 20m line and the track made by the machine. (Dimension a)
- ⑤ After measuring the tracking in forward travel, turn the upperstructure 180° and measure that in reverse travel.
- ⑥ Repeat steps ④ and ⑤ three times and calculate the average values.

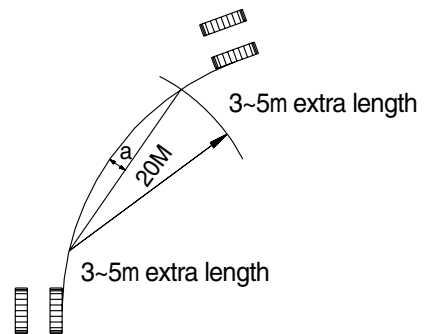

140LC-7기타 7-7(2)

(4) Evaluation

Mistrack should be within the following specifications.

Unit : mm / 20m


Model	Standard	Maximum allowable	Remarks
R80-7	200 below	240	

6) SWING SPEED

(1) Measure the time required to swing three complete turns.

(2) Preparation

- ① Check the lubrication of the swing gear and swing bearing.
- ② Place the machine on flat, solid ground with ample space for swinging. Do not conduct this test on slopes.
- ③ With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin is the same as the boom foot pin. The bucket must be empty.
- ④ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

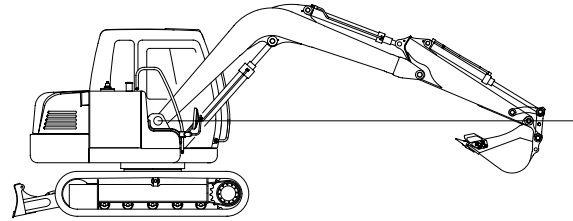

7077MS07

(3) Measurement

- ① Select the following switch positions.
 - Mode selector : H mode
- ② Operate swing control lever fully.
- ③ Swing 1 turn and measure time taken to swing next 3 revolutions.
- ④ Repeat steps ② and ③ three times and calculate the average values.

(4) Evaluation

The time required for 3 swings should meet the following specifications.

Unit : Seconds / 3 revolutions


Model	Standard	Maximum allowable	Remark
R80-7	15.8 ± 1.5	19.8	

7) SWING FUNCTION DRIFT CHECK

- (1) Measure the swing drift on the bearing outer circumference when stopping after a 360° full speed swing.

(2) Preparation


- ① Check the lubrication of the swing gear and swing bearing.
- ② Place the machine on flat, solid ground with ample space for swinging. Do not conduct this test on slopes.
- ③ With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin is the same as the boom foot pin. The bucket must be empty.
- ④ Make two chalk marks: one on the swing bearing and one directly below it on the track frame.
- ⑤ Swing the upperstructure 360°.
- ⑥ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

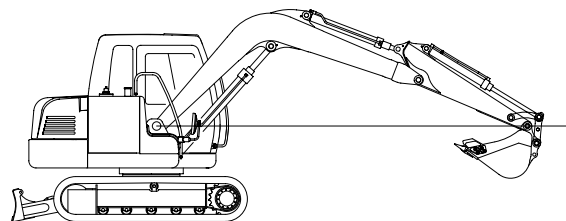

7077MS07

(3) Measurement

- ① Conduct this test in the H mode.
- ② Select the following switch positions.
 - Mode selector : H mode
- ③ Operate the swing control lever fully and return it to the neutral position when the mark on the upperstructure aligns with that on track frame after swinging 360°
- ④ Measure the distance between the two marks.
- ⑤ Align the marks again, swing 360°, then test the opposite direction.
- ⑥ Repeat steps ④ and ⑤ three times each and calculate the average values.

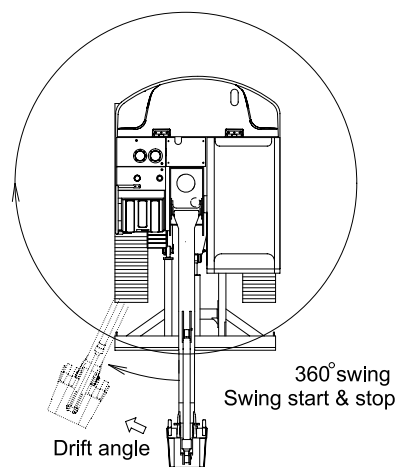

7077MS08

(4) Evaluation

The measured drift angle should be within the following specifications.

Unit : Degree


Model	Mode select switch	Standard	Maximum allowable	Remarks
R80-7	H mode	90 below	157.5	

8) SWING BEARING PLAY

- (1) Measure the swing bearing play using a dial gauge to check the wear of bearing races and balls.

(2) Preparation

- ① Check swing bearing mounting cap screws for loosening.
- ② Check the lubrication of the swing bearing. Confirm that bearing rotation is smooth and without noise.
- ③ Install a dial gauge on the track frame as shown, using a magnetic base.
- ④ Position the upperstructure so that the boom aligns with the tracks facing towards the front idlers.
- ⑤ Position the dial gauge so that its needle point comes into contact with the bottom face of the bearing outer race.
- ⑥ Bucket should be empty.

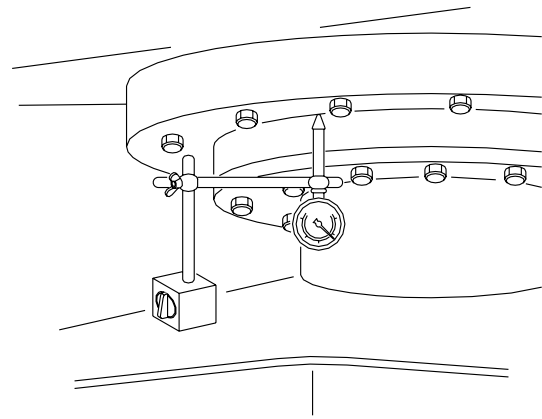


140LC-7 기타 7-10(1)

(3) Measurement


- ① With the arm rolled out and bucket rolled in, hold the bottom face of the bucket to the same height of the boom foot pin. Record the dial gauge reading(h1).
- ② Lower the bucket to the ground and use it to raise the front idler 50cm. Record the dial gauge reading(h2).
- ③ Calculate bearing play(H) from this data(h1 and h2) as follows.

$$H = h2 - h1$$

Measurement : (h1)

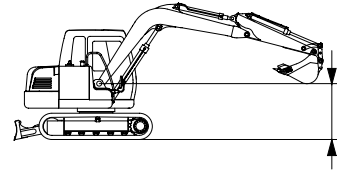

Measurement : (h2)

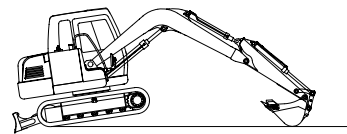

7077MS09

(4) Evaluation

The measured drift should be within the following specifications.

Unit : mm

Model	Standard	Maximum allowable	Remarks
R80-7	0.5 ~ 1.5	3.0	

9) HYDRAULIC CYLINDER CYCLE TIME

- (1) Measure the cycle time of the boom, standard arm, and standard bucket cylinders.

(2) Preparation

- ① To measure the cycle time of the boom cylinders:

With the arm rolled out and the empty bucket rolled out, lower the bucket to the ground, as shown.

- ② To measure the cycle time of the arm cylinder.

With the empty bucket rolled in, position the arm so that it is vertical to the ground. Lower the boom until the bucket is 0.5m above the ground.

- ③ To measure the cycle time of the bucket cylinder.

The empty bucket should be positioned at midstroke between roll-in and roll-out, so that the sideplate edges are vertical to the ground.

- ④ Keep the hydraulic oil temperature at $50 \pm 5^\circ\text{C}$.

(3) Measurement

- ① Select the following switch positions.

- Mode selector : H mode

- ② To measure cylinder cycle times.


- Boom cylinders.

Measure the time it takes to raise the boom, and the time it takes to lower the boom. To do so, position the boom at one stroke end then move the control lever to the other stroke end as quickly as possible.


- Arm cylinder.

Measure the time it takes to roll in the arm, and the time it takes to roll out the arm. To do so, position the bucket at one stroke end, then move the control lever to the other stroke end as quickly as possible.


Boom cylinder

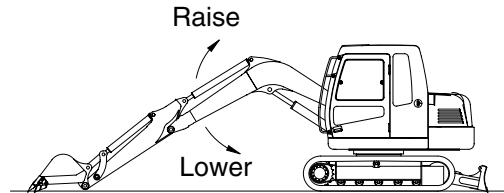

Arm cylinder

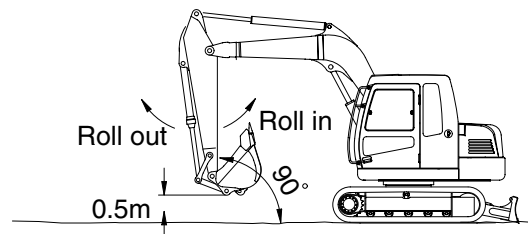

Bucket cylinder

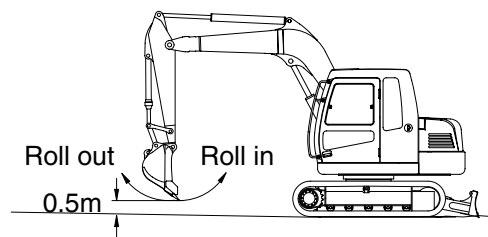

7077MS10

-Bucket cylinders

Measure the time it takes to roll in the bucket, and the time it takes to roll out the bucket. To do so, position the bucket at one stroke end, then move the control lever to the other stroke end as quickly as possible.

-Repeat each measurement 3 times and calculate the average values.

(4) Evaluation

The average measured time should meet the following specifications.

Unit : Seconds

Model	Function	Standard	Maximum allowable	Remarks
R80-7	Boom raise	3.1 ± 0.4	3.9	
	Boom lower	3.8 ± 0.4	4.6	
	Arm in	2.6 ± 0.4	3.3	
	Arm out	2.2 ± 0.3	3.0	
	Bucket load	3.2 ± 0.4	3.8	
	Bucket dump	2.1 ± 0.3	2.5	
	Dozer up	1.2 ± 0.3	1.8	
	Dozer down	1.5 ± 0.3	2.1	

10) DIG FUNCTION DRIFT CHECK

- (1) Measure dig function drift, which can be caused by oil leakage in the control valve and boom, standard arm, and standard bucket cylinders, with the loaded bucket. When testing the dig function drift just after cylinder replacement, slowly operate each cylinder to its stroke end to purge air.

(2) Preparation

- ① Load bucket fully. Instead of loading the bucket, weight(W) of the following specification can be used.


$$W = M^3 \times 1.5$$

Where :

$$M^3 = \text{Bucket heaped capacity}(m^3)$$

$$1.5 = \text{Soil specific gravity}$$

- ② Position the arm cylinder with the rod 20 to 30mm extended from the fully retracted position.
- ③ Position the bucket cylinder with the rod 20 to 30mm retracted from the fully extended position.
- ④ With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin is the same as the boom foot pin.
- ⑤ Keep the hydraulic oil temperature at $50 \pm 5^\circ\text{C}$.

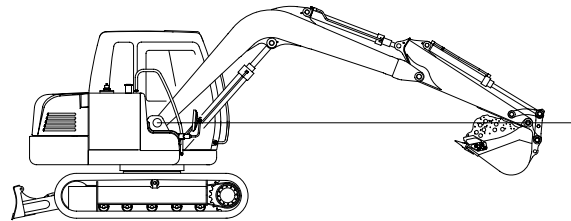

7077MS11

(3) Measurement

- ① Stop the engine.
- ② Five minutes after the engine has been stopped, measure the changes in the positions of the boom, arm and bucket cylinders.
- ③ Repeat step ② three times and calculate the average values.

- (4) The measured drift should be within the following specifications.

Unit : mm / 5min

Model	Drift to be measured	Standard	Maximum allowable	Remarks
R80-7	Boom cylinder	10 below	20	
	Arm cylinder	10 below	20	
	Bucket cylinder	40 below	50	

11) CONTROL LEVER OPERATING FORCE

(1) Use a spring scale to measure the maximum resistance of each control lever at the middle of the grip.

(2) Preparation

- ① Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

(3) Measurement

- ① Start the engine.
- ② Select the following switch positions.
 - Mode selector : H mode
- ③ Operate each boom, arm, bucket and swing lever at full stroke and measure the maximum operating force for each.
- ④ Lower the bucket to the ground to raise one track off the ground. Operate the travel lever at full stroke and measure the maximum operating force required. When finished, lower the track and then jack-up the other track.
- ⑤ Repeat steps ③ and ④ three times and calculate the average values.

(4) Evaluation

The measured operating force should be within the following specifications.

Unit : kgf

Model	Kind of lever	Standard	Maximum allowable	Remarks
R80-7	Boom lever	1.6 or below	2.0	
	Arm lever	1.6 or below	2.0	
	Bucket lever	1.6 or below	2.0	
	Swing lever	1.6 or below	2.0	
	Travel lever	2.1 or below	3.15	

12) CONTROL LEVER STROKE

(1) Measure each lever stroke at the lever top using a ruler.

※ When the lever has play, take a half of this value and add it to the measured stroke.

(2) Preparation

Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

(3) Measurement

- ① Stop the engine.
- ② Measure each lever stroke at the lever top from neutral to the stroke end using a ruler.
- ③ Repeat step ② three times and calculate the average values.

(4) Evaluation

The measured drift should be within the following specifications.


Unit : mm

Model	Kind of lever	Standard	Maximum allowable	Remarks
R80-7	Boom lever	87 ± 10	109	
	Arm lever	87 ± 10	109	
	Bucket lever	87 ± 10	109	
	Swing lever	87 ± 10	109	
	Travel lever	142 ± 10	178	

13) PILOT PRIMARY PRESSURE

(1) Preparation

- ① Stop the engine.
- ② Push the pressure release button to bleed air.
- ③ Loosen and remove plug on the pilot pump delivery port and connect pressure gauge.
- ④ Start the engine and check for oil leakage from the port.
- ⑤ Keep the hydraulic oil temperature at $50 \pm 5^\circ\text{C}$.

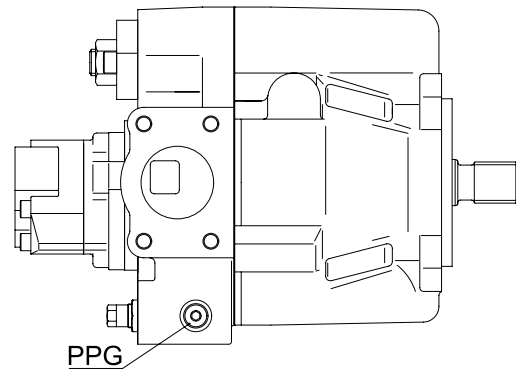

(2) Measurement

- ① Select the following switch positions.
 - Engine rpm : 2100rpm
- ② Measure the primary pilot pressure in the H mode.

7077MS12

(3) Evaluation

The average measured pressure should meet the following specifications:


Unit : kgf / cm^2

Model	Engine speed	Standard	Allowable limits	Remarks
R80-7	2100rpm	35 ± 5	-	

15) SWING PARKING BRAKE RELEASING PRESSURE

(1) Preparation

- ① Stop the engine.
- ② Push the pressure release button to bleed air.
- ③ Install a connector and pressure gauge assembly to swing motor SH port, as shown.
- ④ Start the engine and check for oil leakage from the adapter.
- ⑤ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

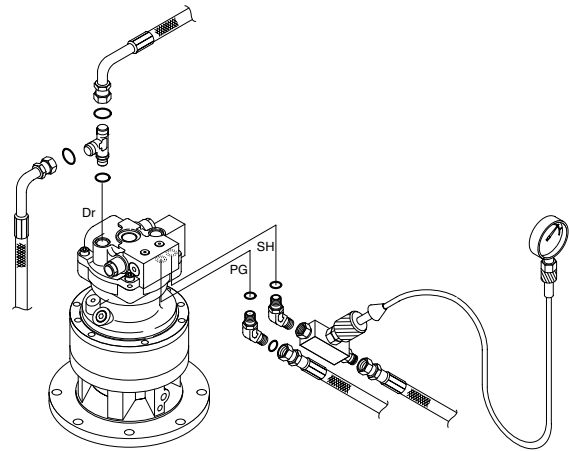

(2) Measurement

- ① Select the following switch positions.
 - Mode selector : H mode
- ② Operate the swing function or arm roll in function and measure the swing brake control pressure with the brake disengaged. Release the control lever to return to neutral and measure the control pressure when the brake is applied.

Repeat step ② three times and calculate the average values.

7077MS14

(3) Evaluation

The average measured pressure should be within the following specifications.


Unit : kgf / cm²

Model	Description	Standard	Allowable limits	Remarks
R80-7	Brake disengaged	35	20~40	
	Brake applied	0	-	

16) SYSTEM PRESSURE RELIEF SETTING

(1) Preparation

- ① Stop the engine.
- ② Push the pressure release button to bleed air.
- ③ To measure the system relief pressure.
Install a connector and pressure gauge assembly main pump gauge port, as shown.
- ④ Start the engine and check for oil leakage from the port.
- ⑤ Keep the hydraulic oil temperature at $50 \pm 5^{\circ}\text{C}$.

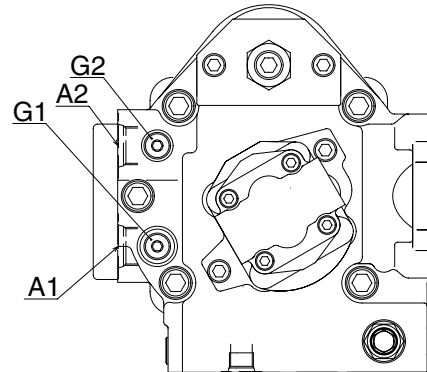

(2) Measurement

- ① Select the following switch positions.
 - Mode selector : H mode
- ② Slowly operate each control lever of boom, arm and bucket functions at full stroke over relief and measure the pressure.
- ③ In the swing function, place bucket against an immovable object and measure the relief pressure.
- ④ In the travel function, lock undercarriage with an immovable object and measure the relief pressure.

7077MS13

(3) Evaluation

The average measured pressure should be within the following specifications.

Unit : kgf / cm²

Model	Function to be tested	Standard	Port relief seting
R80-7	Boom, Arm, Bucket	280 ± 10	310 ± 10
	Travel	280 ± 10	-
	Swing	210 ± 10	-

GROUP 2 MAJOR COMPONENT

1. MAIN PUMP

Before inspection, wash the parts well and dry them completely.

Inspect the principal parts with care and replace them with new parts when any abnormal wear exceeding the allowable limit or damage considered harmful is found.

Replace the seal also when any remarkable deformation and damage are found.


1) PISTON ASSEMBLY AND CYLINDER BLOCK

- (1) Check the appearance visually.

No damage, scouring, abnormal wear (Particularly, in the slide portion) should be found.

- (2) Check the clearance between the piston outside dia and cylinder block inside dia.

$$D-d \leq 0.060\text{mm}$$

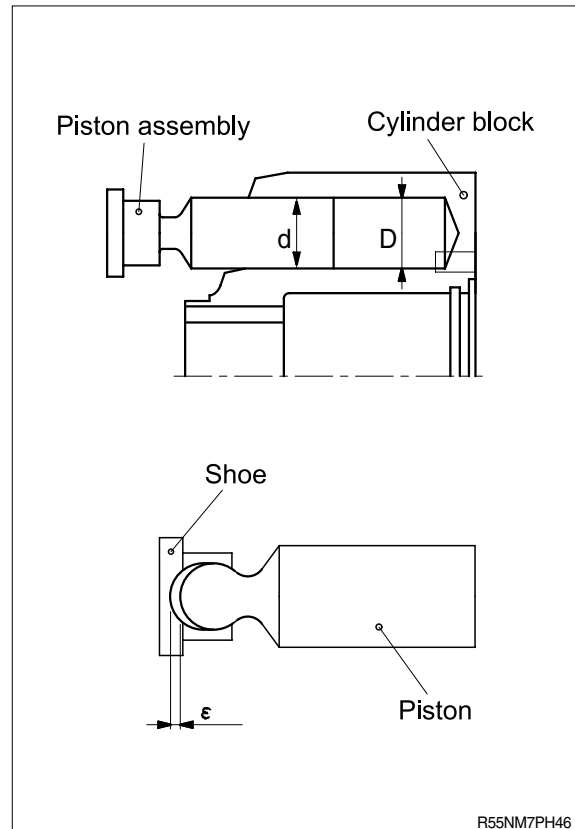

2) PISTON SHOE AND PISTON


- (1) Check the axial play of the piston and piston shoe.

$$\epsilon \leq 0.2\text{mm}$$

3) SHAFT


- (1) Check the wear amount of the oil seal mounting section.

$$\text{Wear amount} \leq 0.025\text{mm}$$

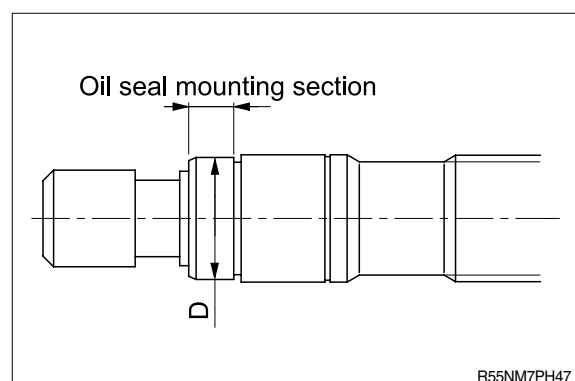


4) CONTROL PLATE

- (1) Check the slide surface for any damage.
When the damage is large, replace the plate with new one.

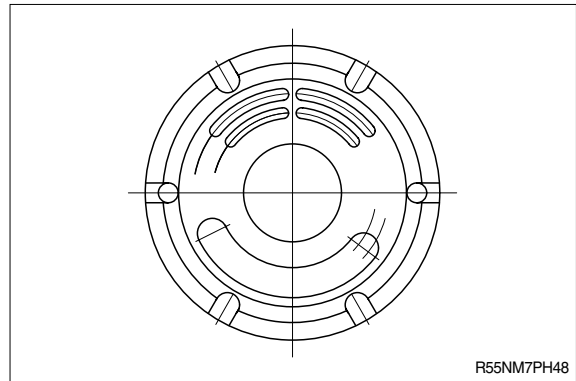

5) GUIDE AND RETAINER


- (1) Check for scouring or stepped wear.
If this can not be corrected, replace the guide and retainer with new full-set.
- (2) Fine scouring or damage can be corrected with lapping.
Carry out thorough washing after lapping.

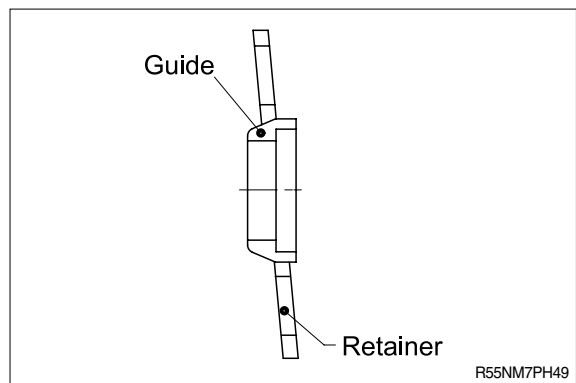






2. MAIN CONTROL VALVE


Part name	Inspection item	Criteria & measure
Switching section	<ul style="list-style-type: none"> • Existence of scratch, rust and corrosion. 	<ul style="list-style-type: none"> • Replace it when there is flaw on the following section. <ul style="list-style-type: none"> - Sliding section against the spool, especially land section where the hold pressure is borne. - Seal pocket section where the spool is placed in or flange section. - Seat section of relief valve and overload relief valve. - Failure it may cause malfunction, etc.
Spool	<ul style="list-style-type: none"> • Existence of scratch, rust and corrosion. • Insert spool in the hole of the switching section, stroke it while rotating. 	<ul style="list-style-type: none"> • Replace it when there is scratch on the peripheral sliding surface • In case the spool is not smooth, repair or replace it.
Load check valve	<ul style="list-style-type: none"> • Damage of load check valve and spring. • Insert load check valve in plug and experimentally operate it. 	<ul style="list-style-type: none"> • In case there are flaws and scratches on the seat section, repair or replace it. • When it moves smoothly, normal but if it moves unsmoothly, replace it.
Around spring	<ul style="list-style-type: none"> • Rust, corrosion, deformation and breakage of spring, spring seat, plug, and cover. 	<ul style="list-style-type: none"> • Replace it when the movement is unsmooth or there is damage causing poor durability.
Around of seal of spool	<ul style="list-style-type: none"> • Hardenig, deformation and flaw of O-ring. 	<ul style="list-style-type: none"> • Exchange • Replace.
Main relief valve Overload relief valve	<ul style="list-style-type: none"> • Rust on outer surface. • Contact surface of valve seat. • Spring in abnormal condition. • O-ring, back-up ring. 	<ul style="list-style-type: none"> • In case there are flaw and dent, replace it. • Replace. • Replace all parts, as a general rule.

3. SWING DEVICE




Part name	Inspection item	Remedy
Shoe of piston assembly	<ul style="list-style-type: none"> • Sliding surface has a damage. • Sliding surface depression() dimension less than 0.45mm or has a large damage. 	<ul style="list-style-type: none"> • Lapping • Replace parts or motor
Piston of piston assembly	<ul style="list-style-type: none"> • Sliding surface has a seizure(Even though small). 	<ul style="list-style-type: none"> • Replace motor
Piston hole of cylinder assembly	<ul style="list-style-type: none"> • Sliding surface has a seizure. • Sliding surface has a damage. 	<ul style="list-style-type: none"> • Replace motor • Replace motor
Taper roller bearing Needle bearing Roller bearing	<ul style="list-style-type: none"> • In case 3000hour operation. • Rolling surface has a damage. 	<ul style="list-style-type: none"> • Replace • Replace

4. TRAVEL DEVICE

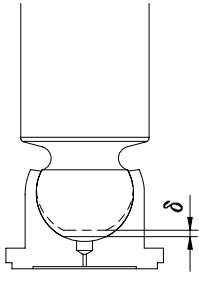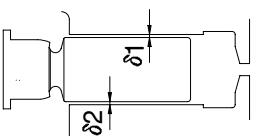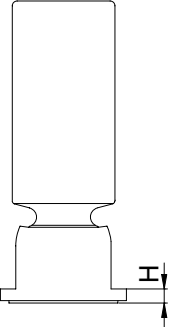Part name	Check point	Standard dimension	Maximum allowable value (Criteria)	Remedy
Piston assy(7) 	Play between piston and slipper	$\delta = 0.1\text{mm}$	$\delta < 0.5\text{mm}$	Replace 9 sets of piston assy
Piston assy(7) and cylinder barrel (3) 	Clearance/diameter between piston diameter and cylinder bore ($\delta 1 + \delta 2$)	0.03mm	$< 0.07\text{mm}$	Replace the set of 1 cylinder barrel and 9 piston assys
Slipper(7-2) 	Height of the plate	Height H 5mm	Height $H < 4.6\text{mm}$	Replace 9 sets of piston assy
Retainer(5) 	Wear		Wear depth $\delta < 0.2\text{mm}$	Replace
Cam(6) 	Condition of sliding surface	Roughness $< \text{Ra } 0.2\mu\text{ m}$	Roughness $< \text{Ra } 1.6\mu\text{ m}$	Replace

Part name	Check point	Standard dimension	Maximum allowable value (Criteria)	Remedy
Shaft(2) 	Spline sections(connected to cylinder barrel, and bear part)	-	No abnormality such as crack, chipping, nonuniformly wear-ing out, etc.	Replace
Bearings(1-3), (1-8), (1-13), (11), (12)	Rolling surface	-	No flaking or other abnormal damage on the rolling surface	Replace
Oil seal(13)	Seal lip	-	No damage or partial wear	Replace
O-rings, Back-up rings	-	-	-	In reassembling, they should be replaced with new ones even if no abnormality is detected.
Cylinder barrel(3)	Condition of the surface sliding with valve plate	Roughness < Ra 0.2 μ m	Roughness < Ra 0.8 μ m	Replace the set of cylinder barrel and valve plate
Valve plate(8)	Condition of sliding surface	Roughness < Ra 0.4 μ m	Roughness < Ra 1.6 μ m	Replace the set of cylinder barrel and valve plate

5. TURNING JOINT

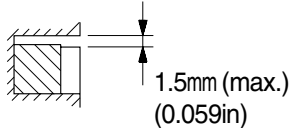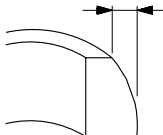Part name		Maintenance standards	Remedy
Body, Stem	Sliding surface with sealing sections.	Plating worn or peeled due to seizure or contamination.	Replace
	Sliding surface between body and stem other than sealing section.	• Worn abnormality or damaged more than 0.1mm (0.0039in) in depth due to seizure contamination.	Replace
		• Damaged more than 0.1mm(0.0039in) in depth.	Smooth with oilstone.
	Sliding surface with thrust plate.	• Worn more than 0.5mm(0.02in) or abnormality.	Replace
• Worn less than 0.5mm(0.02in).		Smooth	
• Damage due to seizure or contamination remediable within wear limit (0.5mm)(0.02in).		Smooth	
Cover	Sliding surface with thrust plate.	• Worn more than 0.5mm(0.02in) or abnormality.	Replace
		• Worn less than 0.5mm(0.02in).	Smooth
		• Damage due to seizure or contamination remediable within wear limit (0.5mm)(0.02in).	Replace
Seal set	-	<ul style="list-style-type: none"> • Extruded excessively from seal groove square ring. 	Replace
	-	<ul style="list-style-type: none"> • Slipper ring 1.5mm(0.059in) narrower than seal groove, or narrower than back ring. 	Replace
	-	<ul style="list-style-type: none"> • Worn more than 0.5mm(0.02in) ~ 1.5mm(MAX.) (0.059in) 	Replace


6. CYLINDER

Part name	Inspecting section	Inspection item	Remedy
Piston rod	• Neck of rod pin	• Presence of crack	• Replace
	• Weld on rod hub	• Presence of crack	• Replace
	• Stepped part to which piston is attached.	• Presence of crack	• Replace
	• Threads	• Presence of crack	• Recondition or replace
	• Plated surface	• Plating is not worn off to base metal. • Rust is not present on plating. • Scratches are not present.	• Replace or replate • Replace or replate • Recondition, replate or replace
	• Rod	• Wear of O.D.	• Recondition, replate or replace
	• Bushing at mounting part	• Wear of I.D.	• Replace
Cylinder tube	• Weld on bottom	• Presence of crack	• Replace
	• Weld on head	• Presence of crack	• Replace
	• Weld on hub	• Presence of crack	• Replace
	• Tube interior	• Presence of faults	• Replace if oil leak is seen
	• Bushing at mounting part	• Wear on inner surface	• Replace
Gland	• Bushing	• Flaw on inner surface	• Replace if flaw is deeper than coating

GROUP 3 TRACK AND WORK EQUIPMENT

1. TRACK

1) TRACK ROLLER

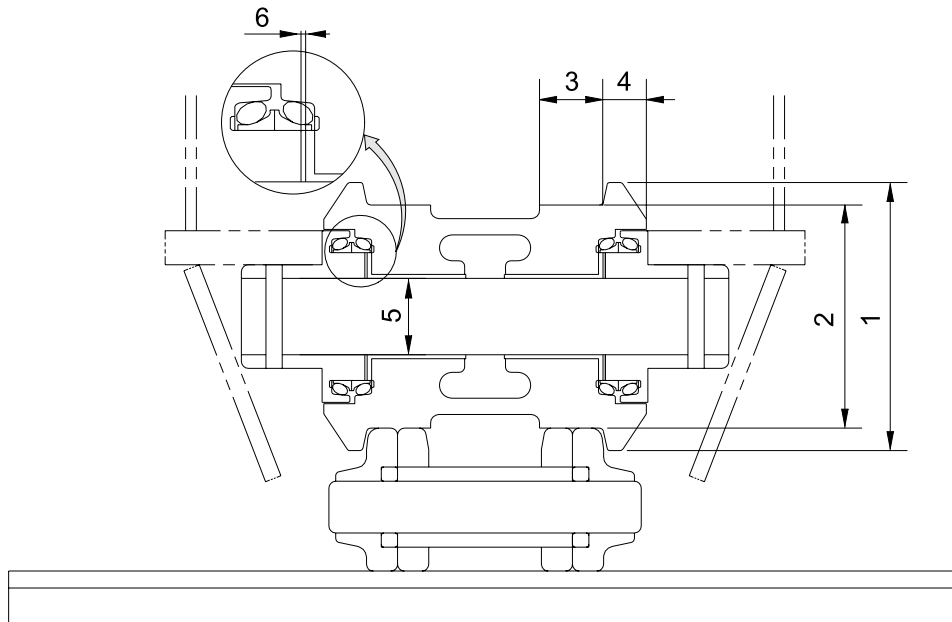


7077MS15

Unit : mm

No.	Check item	Criteria			Remedy
		Standard size		Repair limit	
1	Outside diameter of flange	Standard size		Repair limit	Rebuild or replace
		ø 149		-	
2	Outside diameter of tread	ø 125		ø 115	
3	Width of tread	35		40	
4	Width of flange	13		-	
5	Clearance between shaft and bushing	Standard size & tolerance		Standard clearance	Clearance limit
		Shaft	bushing		
		ø 40 $\begin{matrix} 0 \\ -0.03 \end{matrix}$	ø 40 $\begin{matrix} +0.3 \\ +0.25 \end{matrix}$		
6	Side clearance of roller (Both side)	Standard clearance		Clearance limit	
		0.3-0.9		2.0	

2) CARRIER ROLLER

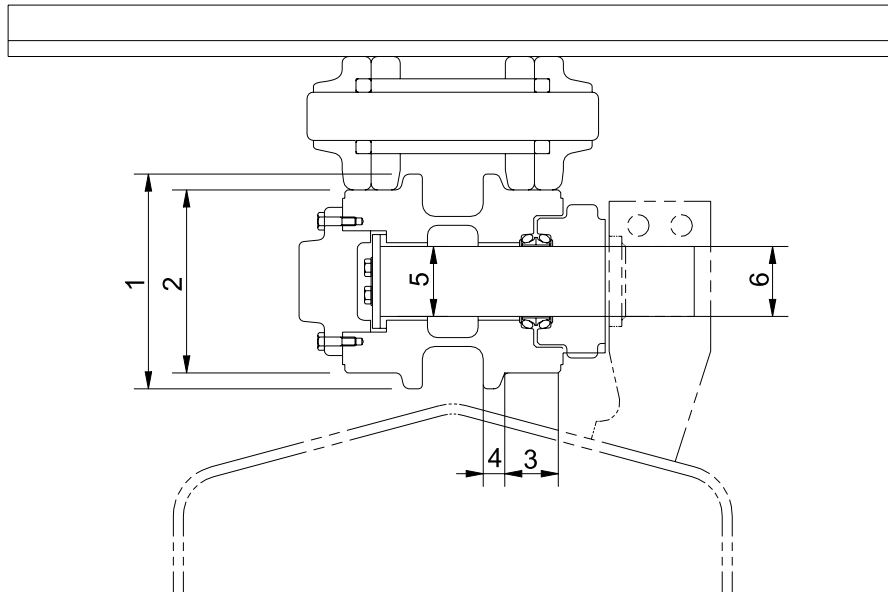


32077MS02

Unit : mm

No.	Check item	Criteria		Remedy	
		Standard size	Repair limit		
1	Outside diameter of flange	$\phi 115$	-	Rebuild or replace	
2	Outside diameter of tread	$\phi 95$	$\phi 85$		
3	Width of tread	31	35		
4	Width of flange	11	-		
5	Clearance between shaft and bushing	Standard size & Tolerance		Standard clearance 0.3 ~ 0.38	Clearance limit 2.0
		Shaft $\phi 38 \begin{matrix} 0 \\ -0.03 \end{matrix}$	Bushing $\phi 38 \begin{matrix} +0.35 \\ +0.3 \end{matrix}$		
6	Clearance between shaft and support	Standard size & Tolerance		0.3 ~ 0.6	1.2
		Shaft $\phi 38 \begin{matrix} -0.2 \\ -0.3 \end{matrix}$	Support $\phi 38 \begin{matrix} +0.3 \\ +0.1 \end{matrix}$		

3) IDLER

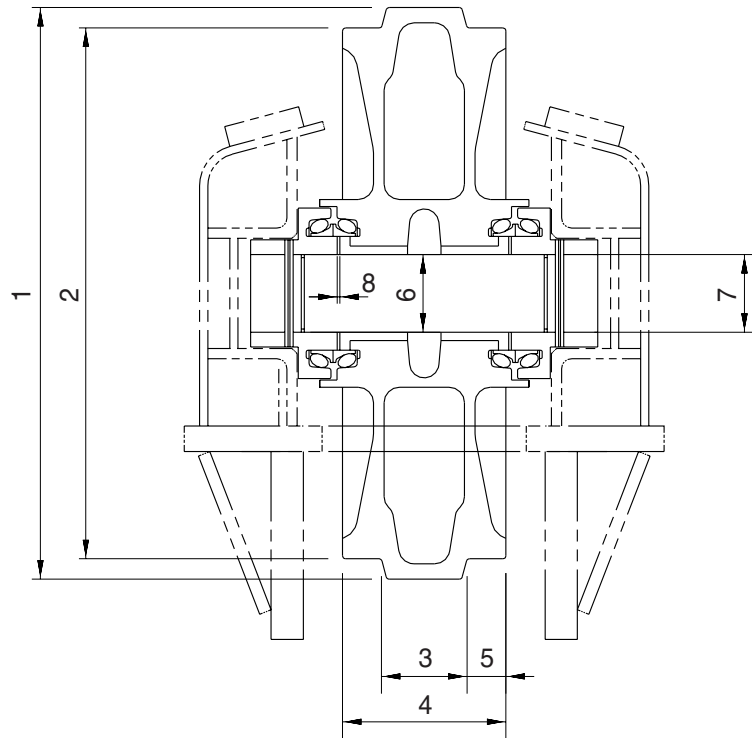


21037MS03

Unit : mm

No.	Check item	Criteria		Remedy		
		Standard size	Repair limit			
1	Outside diameter of protrusion	ø 440	-	Rebuild or replace		
2	Outside diameter of tread	ø 410	ø 400			
3	Width of protrusion	40	-			
4	Total width	100	-			
5	Width of tread	30	35			
6	Clearance between shaft and bushing	Standard size & tolerance		Standard clearance	Clearance limit	Replace bushing
		Shaft	Bushing			
		ø 60 ⁰ _{-0.03}	ø 60.3 ^{+0.08} _{+0.03}	0.33~ 0.41	2.0	
7	Clearance between shaft and support	Standard size & tolerance		Standard clearance	Clearance limit	Rebuild or Replace
		Shaft	Support			
		ø 60 ⁰ _{-0.03}	ø 60 ^{+0.07} _{+0.03}	0.03 ~ 0.1	1.2	
8	Side clearance of idler (Both side)	Standard clearance		Clearance limit		Replace bushing
		0.35~1.3		2.0		

4) TRACK
 (1) Steel track

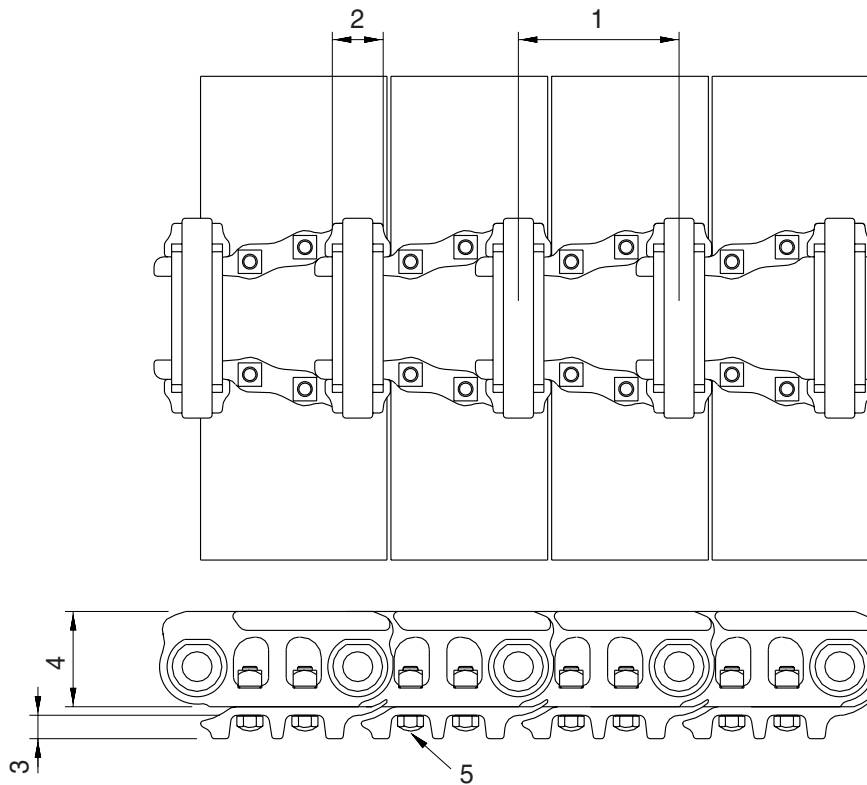


21037MS04

Unit : mm

No.	Check item	Criteria		Remedy
		Standard size	Repair limit	
1	Link pitch	154	158.3	Turn or replace
2	Outside diameter of bushing	∅ 41.26	∅ 34.26	
3	Height of grouser	20	10	Rebuild or replace
4	Height of link	74	66	
5	Tightening torque	Initial tightening torque : $25.5 \pm 2.5 \text{ kgf} \cdot \text{m}$		Retighten

(2) Rubber shoe spec


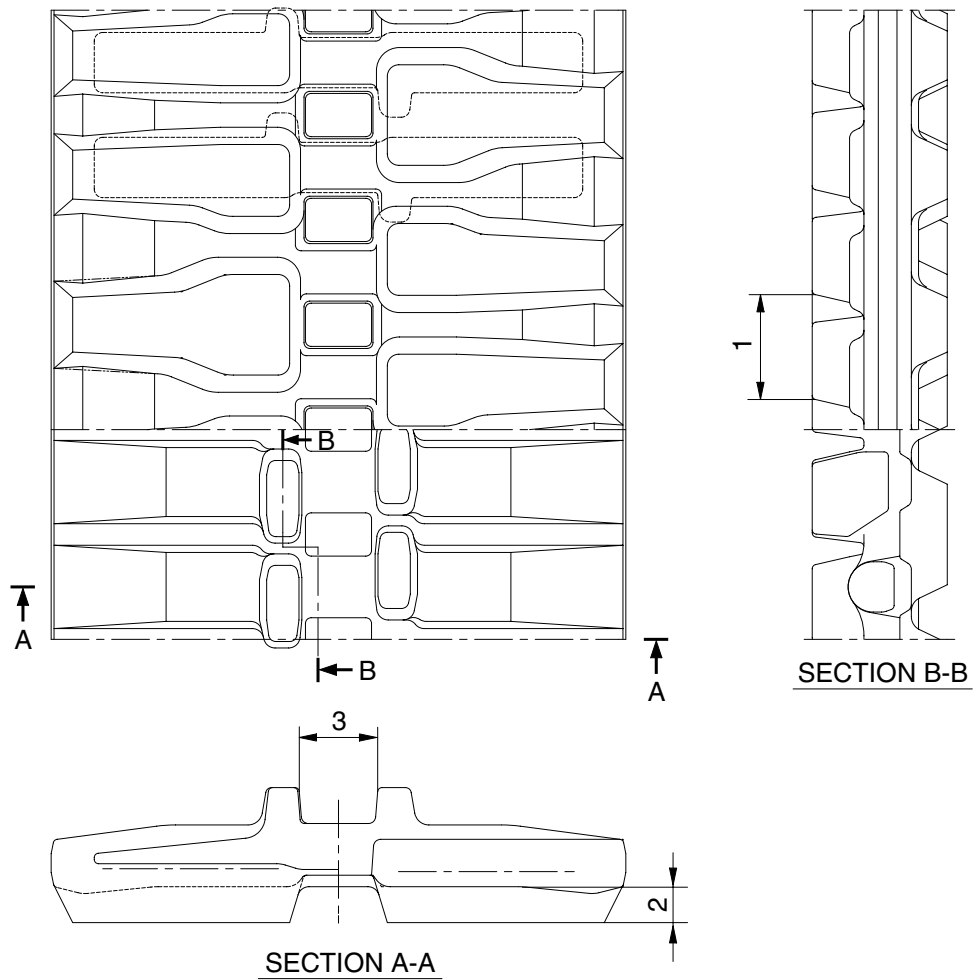


R5576MC17

Unit : mm

No	Check item	Criteria			Remedy
		Standard size	Tolerance	Repair limit	
1	Link pitch	83.5	± 1.0	87	Replace
2	Height of grouser	30	-	5	
3	Width of link	52	-	70	

5) TRACK FRAME AND RECOIL SPRING

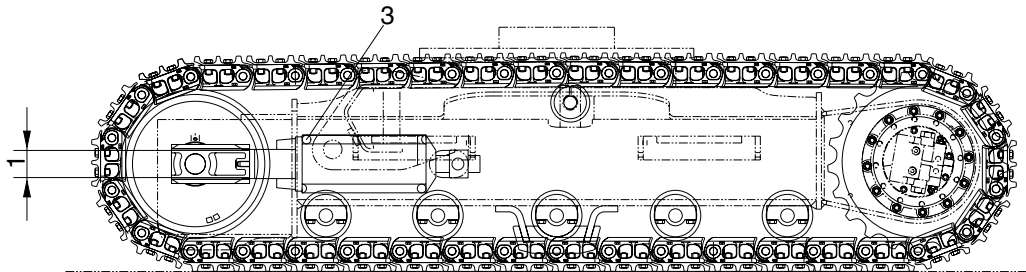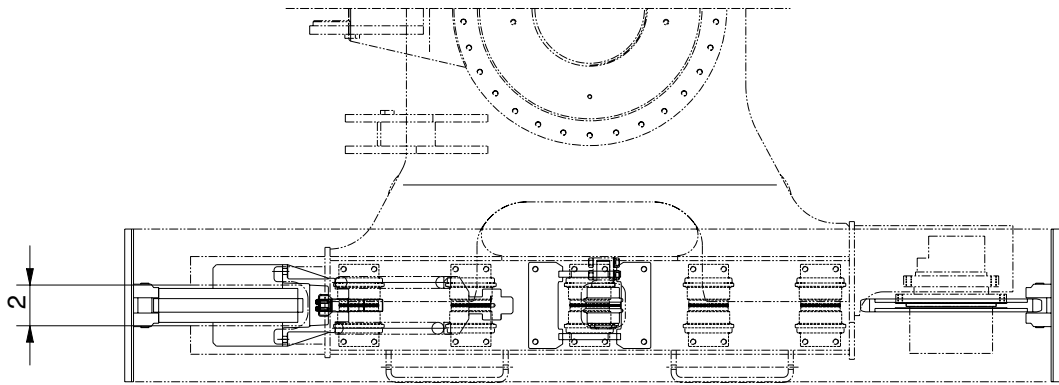


7077MS20

Unit : mm

No.	Check item	Criteria				Remedy	
			Standard size	Tolerance	Repair limit		
1	Vertical width of idler guide	Track frame	92	+2 0	96	Rebuild or replace	
		Idler support	90	-0 -1.5	87		
2	Horizontal width of idler guide	Track frame	172	+2 0	176	Rebuild or replace	
		Idler support	170	-	168		
3	Recoil spring	Standard size		Repair limit		Replace	
		Free length	Installation length	Installation load	Free length		Installation load
		∅ 170×370	320	5,083kg	-		4,174kg

2. WORK EQUIPMENT

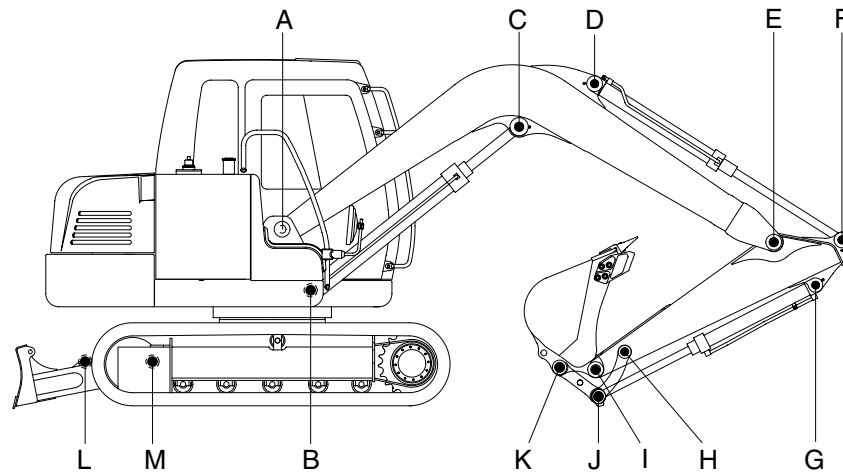

7077MS16

Unit : mm

Mark	Measuring point (Pin and Bushing)	Normal value	Pin		Bushing		Remedy & Remark
			Recomm. service limit	Limit of use	Recomm. service limit	Limit of use	
A	Boom Rear	65	64	63.5	65.5	66	Replace
B	Boom Cylinder Head	65	64	63.5	65.5	66	"
C	Boom Cylinder Rod	65	64	63.5	65.5	66	"
D	Arm Cylinder Head	65	64	63.5	65.5	66	"
E	Boom Front	65	64	63.5	65.5	66	"
F	Arm Cylinder Rod	65	64	63.5	65.5	66	"
G	Bucket Cylinder Head	50	49	48.5	50.5	51	"
H	Arm Link	55	54	53.5	55.5	56	"
I	Bucket and Arm Link	55	54	53.5	55.5	56	"
J	Bucket Cylinder Rod	55	54	53.5	55.5	56	"
K	Bucket Link	55	54	53.5	55.5	56	"
L	Dozer cylinder	65	64	63.5	65.5	66	"
M	Dozer and frame	55	54	53.5	55.5	56	"